



SiME332106E

R-410A

Service Manual

VRV



**RXYMQ-A Series
Heat Pump 50/60 Hz**

Introduction	1
1. Safety Cautions	2
1.1 Warnings and Cautions Regarding Safety of Workers	2
1.2 Warnings and Cautions Regarding Safety of Users	4
2. Icons Used	6
3. Revision History	7
Part 1 General Information	8
1. Model Names	9
1.1 Outdoor Unit	9
1.2 VRV Indoor Unit	9
2. External Appearance	10
2.1 Outdoor Unit	10
2.2 VRV Indoor Unit	10
3. Capacity Range	11
3.1 Connection Ratio	11
3.2 Outdoor Unit Combinations	11
4. Specifications	12
Part 2 Refrigerant Circuit	14
1. Refrigerant Circuit (Piping Diagrams)	15
1.1 Outdoor Unit	15
1.2 VRV Indoor Unit	18
2. Functional Parts Layout	20
2.1 RXYMQ4AVMK	20
2.2 RXYMQ4/5/6AYFK	22
Part 3 Remote Controller	24
1. Applicable Models	25
2. Names and Functions	27
2.1 BRC1E63	27
2.2 BRC1H81 Series	29
2.3 BRC4M Series	31
3. Main/Sub Setting	34
3.1 Wired Remote Controller (BRC1E63)	34
3.2 Wired Remote Controller (BRC1H81 Series)	35
3.3 When Wireless Remote Controller is Used Together	36
4. Address Setting for Wireless Remote Controller	37
4.1 Setting for Signal Receiver PCB	37
4.2 Setting for BRC4M Series	38
4.3 Multiple Settings A/b	39
5. Centralized Control Group No. Setting	40
5.1 BRC1E63	40
5.2 BRC1H81 Series	42
5.3 Group No. Setting Example	43
6. Service Settings Menu, Maintenance Menu	44
6.1 BRC1E63	44
6.2 BRC1H81 Series	48

Part 4 Functions and Control 49

1. Operation Flowchart.....	50
2. Stop Control	51
2.1 Abnormal Shutdown	51
2.2 When System is in Stop Control.....	51
3. Standby Control	52
3.1 Restart Standby.....	52
3.2 Crankcase Heater Control	52
4. Startup Control	53
4.1 Cooling Startup Control	53
4.2 Heating Startup Control	53
5. Normal Control	54
5.1 List of Functions in Normal Control	54
5.2 Compressor Control	55
5.3 Compressor Capacity Control	56
5.4 Compressor Step Control.....	57
5.5 Electronic Expansion Valve Control	58
5.6 Step Control of Outdoor Fans	58
6. Protection Control	59
6.1 High Pressure Protection Control.....	59
6.2 Low Pressure Protection Control.....	60
6.3 Discharge Pipe Protection Control	60
6.4 Inverter Protection Control	61
6.5 Heating Operation Prohibition	64
6.6 Overload Protection Control	64
7. Special Control.....	65
7.1 Pump Down Residual Control	65
7.2 Oil Return Control.....	65
7.3 Defrost Control	67
8. Outline of Control (Indoor Unit)	68
8.1 Set Temperature and Control Target Temperature.....	68
8.2 Thermostat Control.....	69
8.3 Automatic Airflow Rate Control	72
8.4 Airflow Direction Control.....	73
8.5 Auto Draft Reducing Control (FXFSQ-AR only)	74
8.6 Eco Full Automatic Control (FXFSQ-AR only).....	74
8.7 Drain Pump Control.....	75
8.8 Freeze-Up Prevention Control.....	77
8.9 Dew Condensation Prevention Control	78
8.10 Electronic Expansion Valve Control	79
8.11 Circulation Airflow (FXFSQ-AR only)	80
8.12 Hot Start Control (In Heating Operation Only).....	81
8.13 Heater Control (Optional PCB KRP1B series is required.).....	82

Part 5 Field Settings and Test Operation 83

1. Field Settings for Indoor Unit.....	84
1.1 Field Settings with Remote Controller	84
1.2 List of Field Settings for Indoor Unit	90
1.3 Applicable Field Settings	92
1.4 Details of Field Settings for Indoor Unit.....	93

1.5	Operation Control Mode	106
2.	Field Settings for Outdoor Unit	108
2.1	Function Setting	108
2.2	Settings by DIP Switches	109
2.3	Settings by BS Buttons.....	112
2.4	Normal Mode.....	114
2.5	Monitor Mode (Mode 1)	115
2.6	Setting Mode (Mode 2).....	118
2.7	Eco Mode Setting	130
2.8	Night-Time Low Noise Operation and Demand Operation	131
3.	Test Operation	135
3.1	Checks before Test Operation	135
3.2	Checkpoints.....	135
3.3	Test Operation Procedure	136
3.4	Turn Power ON	138

Part 6 Service Diagnosis 139

1.	Servicing Items to be Confirmed	142
1.1	Troubleshooting.....	142
1.2	Precautions for Maintenance.....	142
1.3	Refrigerant Properties (R-410A).....	143
2.	Symptom-based Troubleshooting	144
2.1	With Optional Infrared Presence/Floor Sensor.....	147
2.2	For All Outdoor Units.....	148
3.	Error Code via Remote Controller	149
3.1	BRC1E63	149
3.2	BRC1H81 Series	150
3.3	BRC4M Series.....	151
4.	Error Code via Outdoor Unit PCB	152
5.	Troubleshooting by Error Code	153
5.1	Error Codes and Descriptions	153
5.2	Error Codes (Sub Codes).....	155
5.3	External Protection Device Abnormality	160
5.4	Indoor Unit PCB Abnormality	161
5.5	Drain Level Control System Abnormality.....	162
5.6	Indoor Fan Motor Lock, Overload.....	164
5.7	Indoor Fan Motor Abnormality	166
5.8	Power Supply Voltage Abnormality	172
5.9	Electronic Expansion Valve Coil Abnormality, Dust Clogging	175
5.10	Humidifier System Abnormality	176
5.11	Auto Grille Unit Error	177
5.12	Defective Capacity Setting	178
5.13	Transmission Abnormality (between Indoor Unit PCB and Fan PCB).....	179
5.14	Transmission Error	181
5.15	Transmission Error (between Indoor Unit PCB and Auto Grille Control PCB)	182
5.16	Thermistor Abnormality	184
5.17	Combination Abnormality (between Indoor Unit PCB and Fan PCB)...	185
5.18	Capacity Setting Abnormality	186
5.19	Indoor Unit PCB Abnormality	187

5.20 Infrared Presence/Floor Sensor Error	188
5.21 Remote Controller Thermistor Abnormality	193
5.22 Outdoor Unit Main PCB Abnormality	194
5.23 Current Leakage Detection	195
5.24 Missing of Leakage Detection Core	196
5.25 Activation of High Pressure Switch	197
5.26 Activation of Low Pressure Sensor	199
5.27 Compressor Motor Lock	200
5.28 Outdoor Fan Motor Abnormality	202
5.29 Electronic Expansion Valve Coil Abnormality	205
5.30 Discharge Pipe Temperature Abnormality	206
5.31 Wet Alarm	208
5.32 Refrigerant Overcharged	210
5.33 Harness Abnormality (between Outdoor Unit Main PCB and Inverter PCB)	211
5.34 OL Activation (Compressor Overload)	212
5.35 Outdoor Fan PCB Abnormality	214
5.36 Thermistor Abnormality	215
5.37 High Pressure Sensor Abnormality	217
5.38 Low Pressure Sensor Abnormality	218
5.39 Inverter Circuit Abnormality	219
5.40 Momentary Power Failure during Test Operation	221
5.41 Inverter Radiation Fin Temperature Rise Abnormality	222
5.42 Compressor Instantaneous Overcurrent	224
5.43 Compressor Overcurrent	226
5.44 Compressor Startup Abnormality	228
5.45 Transmission Error between Microcomputers on Outdoor Unit Main PCB	230
5.46 Transmission Error between Inverter PCB and Outdoor Unit Main PCB	231
5.47 Inverter Circuit Capacitor High Voltage	233
5.48 Power Supply Voltage Imbalance	234
5.49 Reactor Temperature Abnormality	236
5.50 Inverter Radiation Fin Temperature Abnormality	237
5.51 Field Setting after Replacing Outdoor Unit Main PCB Abnormality or Combination of PCB Abnormality	239
5.52 Refrigerant Shortage Warning (Cooling)	240
5.53 Refrigerant Shortage Warning (Heating)	241
5.54 Refrigerant Shortage Abnormality (Heating Only)	243
5.55 Open Phase	246
5.56 Power Supply Insufficient or Instantaneous Abnormality	247
5.57 Check Operation Not Executed	251
5.58 Transmission Error between Indoor Units and Outdoor Units	252
5.59 Transmission Error between Remote Controller and Indoor Unit	255
5.60 Transmission Error between Outdoor Units	256
5.61 Transmission Error between Main and Sub Remote Controllers	260
5.62 Other Indoor Units and Outdoor Unit Abnormality	261
5.63 Improper Combination of Indoor Unit and Outdoor Unit, Indoor Unit and Remote Controller	262
5.64 Address Duplication of Centralized Controller	265
5.65 Transmission Error between Centralized Controller and Indoor Unit	266
5.66 System Not Set Yet	269
5.67 System Abnormality, Refrigerant System Address Undefined	270

6. Check	271
6.1 High Pressure Check	271
6.2 Low Pressure Check	272
6.3 Superheat Operation Check	273
6.4 Power Transistor Check	275
6.5 Refrigerant Overcharge Check	278
6.6 Refrigerant Shortage Check	279
6.7 Vacuuming and Dehydration Procedure	280
6.8 Thermistor Check	281
6.9 Pressure Sensor Check	284
6.10 Broken Wire Check of the Relay Wires	285
6.11 Fan Motor Connector Check (Power Supply Cable)	285
6.12 Fan Motor Connector Check (Signal Cable)	287
6.13 Electronic Expansion Valve Coil Check	288

Part 7 Appendix 290


1. Wiring Diagrams	291
1.1 Outdoor Unit	291
1.2 VRV Indoor Unit	293

Introduction

1. Safety Cautions	2
1.1 Warnings and Cautions Regarding Safety of Workers	2
1.2 Warnings and Cautions Regarding Safety of Users	4
2. Icons Used	6
3. Revision History	7

1. Safety Cautions

Be sure to read the following safety cautions before conducting repair work.
After the repair work is complete, be sure to conduct a test operation to ensure that the equipment operates normally, and explain the cautions for operating the product to the customer.

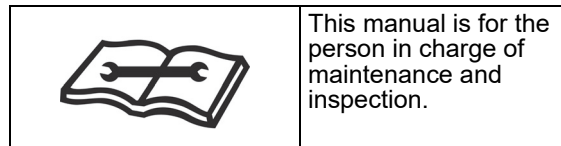








Caution Items






The caution items are classified into **Warning** and **Caution**. The **Warning** items are especially important since death or serious injury can result if they are not followed closely. The **Caution** items can also lead to serious accidents under some conditions if they are not followed. Therefore, be sure to observe all the safety caution items described below.









Pictograms

- △ This symbol indicates an item for which caution must be exercised.
The pictogram shows the item to which attention must be paid.
- This symbol indicates a prohibited action.
The prohibited item or action is shown in the illustration or near the symbol.
- This symbol indicates an action that must be taken, or an instruction.
The instruction is shown in the illustration or near the symbol.













1.1 Warnings and Cautions Regarding Safety of Workers




 Warning	
Do not store equipment in a room with fire sources (e.g., naked flames, gas appliances, electric heaters).	
Be sure to disconnect the power cable from the socket before disassembling equipment for repair. Working on equipment that is connected to the power supply may cause an electrical shock. If it is necessary to supply power to the equipment to conduct the repair or inspect the circuits, do not touch any electrically charged sections of the equipment.	
If refrigerant gas is discharged during repair work, do not touch the discharged refrigerant gas. Refrigerant gas may cause frostbite.	
When disconnecting the suction or discharge pipe of the compressor at the welded section, evacuate the refrigerant gas completely at a well-ventilated place first. If there is gas remaining inside the compressor, the refrigerant gas or refrigerating machine oil discharges when the pipe is disconnected, and it may cause injury.	
If refrigerant gas leaks during repair work, ventilate the area. Refrigerant gas may generate toxic gases when it contacts flames.	
Be sure to discharge the capacitor completely before conducting repair work. The step-up capacitor supplies high-voltage electricity to the electrical components of the outdoor unit. A charged capacitor may cause an electrical shock.	










 Warning	
Do not turn the air conditioner on or off by plugging in or unplugging the power cable. Plugging in or unplugging the power cable to operate the equipment may cause an electrical shock or fire.	
Be sure to wear a safety helmet, gloves, and a safety belt when working in a high place (more than 2 m). Insufficient safety measures may cause a fall.	
In case of R-32 / R-410A refrigerant models, be sure to use pipes, flare nuts and tools intended for the exclusive use with the R-32 / R-410A refrigerant. The use of materials for R-22 refrigerant models may cause a serious accident, such as a damage of refrigerant cycle or equipment failure.	
Do not mix air or gas other than the specified refrigerant (R-32 / R-410A / R-22) in the refrigerant system. If air enters the refrigerant system, an excessively high pressure results, causing equipment damage and injury.	

 Caution	
Do not repair electrical components with wet hands. Working on the equipment with wet hands may cause an electrical shock.	
Do not clean the air conditioner with water. Washing the unit with water may cause an electrical shock.	
Be sure to provide an earth / grounding when repairing the equipment in a humid or wet place, to avoid electrical shocks.	
Be sure to turn off the power switch and unplug the power cable when cleaning the equipment. The internal fan rotates at a high speed, and may cause injury.	
Be sure to conduct repair work with appropriate tools. The use of inappropriate tools may cause injury.	
Be sure to check that the refrigerating cycle section has cooled down enough before conducting repair work. Working on the unit when the refrigerating cycle section is hot may cause burns.	
Conduct welding work in a well-ventilated place. Using the welder in an enclosed room may cause oxygen deficiency.	

1.2 Warnings and Cautions Regarding Safety of Users





 Warning	
Do not store the equipment in a room with fire sources (e.g., naked flames, gas appliances, electric heaters).	
Be sure to use parts listed in the service parts list of the applicable model and appropriate tools to conduct repair work. Never attempt to modify the equipment. The use of inappropriate parts or tools may cause an electrical shock, excessive heat generation or fire.	
If the power cable and lead wires are scratched or have deteriorated, be sure to replace them. Damaged cable and wires may cause an electrical shock, excessive heat generation or fire.	
Do not use a joined power cable or extension cable, or share the same power outlet with other electrical appliances, since it may cause an electrical shock, excessive heat generation or fire.	
Be sure to use an exclusive power circuit for the equipment, and follow the local technical standards related to the electrical equipment, the internal wiring regulations, and the instruction manual for installation when conducting electrical work. Insufficient power circuit capacity and improper electrical work may cause an electrical shock or fire.	
Be sure to use the specified cable for wiring between the indoor and outdoor units. Make the connections securely and route the cable properly so that there is no force pulling the cable at the connection terminals. Improper connections may cause excessive heat generation or fire.	
When wiring between the indoor and outdoor units, make sure that the terminal cover does not lift off or dismount because of the cable. If the cover is not mounted properly, the terminal connection section may cause an electrical shock, excessive heat generation or fire.	
Do not damage or modify the power cable. Damaged or modified power cables may cause an electrical shock or fire. Placing heavy items on the power cable, or heating or pulling the power cable may damage it.	
Do not mix air or gas other than the specified refrigerant (R-32 / R-410A / R-22) in the refrigerant system. If air enters the refrigerant system, an excessively high pressure results, causing equipment damage and injury.	
If the refrigerant gas leaks, be sure to locate the leaking point and repair it before charging the refrigerant. After charging the refrigerant, make sure that there is no leak. If the leaking point cannot be located and the repair work must be stopped, be sure to pump-down, and close the service valve, to prevent refrigerant gas from leaking into the room. Refrigerant gas itself is harmless, but it may generate toxic gases when it contacts flames, such as those from fan type and other heaters, stoves and ranges.	
When relocating the equipment, make sure that the new installation site has sufficient strength to withstand the weight of the equipment. If the installation site does not have sufficient strength or the installation work is not conducted securely, the equipment may fall and cause injury.	

 Warning	
Check to make sure that the power cable plug is not dirty or loose, then insert the plug into a power outlet securely. If the plug is dusty or has a loose connection, it may cause an electrical shock or fire.	
When replacing the coin battery in the remote controller, be sure to dispose of the old battery to prevent children from swallowing it. If a child swallows the coin battery, see a doctor immediately.	

 Caution	
Installation of a leakage breaker is necessary in some cases depending on the conditions of the installation site, to prevent electrical shocks.	
Do not install the equipment in a place where there is a possibility of combustible gas leaks. If combustible gas leaks and remains around the unit, it may cause a fire.	
Check to see if parts and wires are mounted and connected properly, and if connections at the soldered or crimped terminals are secure. Improper installation and connections may cause excessive heat generation, fire or an electrical shock.	
If the installation platform or frame has corroded, replace it. A corroded installation platform or frame may cause the unit to fall, resulting in injury.	
Check the earth / grounding, and repair it if the equipment is not properly earthed / grounded. Improper earth / grounding may cause an electrical shock.	
Be sure to measure insulation resistance after the repair, and make sure that the resistance is 1 MΩ or higher. Faulty insulation may cause an electrical shock.	
Be sure to check the drainage of the indoor unit after the repair. Faulty drainage may cause water to enter the room and wet the furniture and floor.	
Do not tilt the unit when removing it. The water inside the unit may spill and wet the furniture and floor.	

2. Icons Used

The following icons are used to attract the attention of the reader to specific information.

Icon	Type of Information	Description
 Warning	Warning	Warning is used when there is danger of personal injury.
 Caution	Caution	Caution is used when there is danger that the reader, through incorrect manipulation, may damage equipment, lose data, get an unexpected result or have to restart (part of) a procedure.
 Note	Note	Note provides information that is not indispensable, but may nevertheless be valuable to the reader, such as tips and tricks.
 Reference	Reference	Reference guides the reader to other places in this binder or in this manual, where he/she will find additional information on a specific topic.

3. Revision History

Month / Year	Version	Revised contents
09 / 2021	SiME332106E	First edition

Part 1

General Information

1. Model Names	9
1.1 Outdoor Unit	9
1.2 VRV Indoor Unit	9
2. External Appearance.....	10
2.1 Outdoor Unit	10
2.2 VRV Indoor Unit	10
3. Capacity Range.....	11
3.1 Connection Ratio.....	11
3.2 Outdoor Unit Combinations	11
4. Specifications	12

1. Model Names

1.1 Outdoor Unit

Capacity range	HP	4	5	6	Power supply, Standard
	kW	11.3	14.1	16.0	
Capacity index		100	125	150	
Heat Pump	RXYMQ	4A	—	—	VMK
		4A	5A	6A	YFK

VMK: 1 phase, 220-240 V, 50/60 Hz (for Middle East)

YFK: 3 phase, 380-415/400 V, 50/60 Hz (for Middle East)

1.2 VRV Indoor Unit

Capacity range		kW	2.2	2.8	3.6	4.5	5.6	7.1	9.0	11.2	14.0	16.0	Power supply, Standard
		HP	0.8	1	1.25	1.6	2	2.5	3.2	4	5	6	
Capacity index			20	25	31.25	40	50	62.5	80	100	125	140	
Ceiling mounted cassette	Round flow cassette with sensing	FXFSQ	—	25AR	32AR	40AR	50AR	63AR	80AR	100AR	125AR	140AR	V1
Ceiling concealed duct	Slim duct (Standard type) with drain pump	FXDQ	20PD	25PD	32PD	—	—	—	—	—	—	—	VM
			—	—	—	40ND	50ND	63ND	—	—	—	—	
	Middle-high static pressure duct	FXMQ	—	—	—	40PB	50PB	63PB	80PB	100PB	125PB	140PB	V1
Wall mounted		FXAQ	20AR	25AR	32AR	40AR	50AR	63AR	—	—	—	—	VM

Power supply and standard symbols

V1, VM: 1 phase, 220-240 V, 50/60 Hz

2. External Appearance

2.1 Outdoor Unit

4, 5, 6 HP



RXYMQ4AVMK
RXYMQ4AYFK RXYMQ5AYFK RXYMQ6AYFK

2.2 VRV Indoor Unit


Ceiling mounted cassette

Round flow cassette with sensing
FXFSQ-AR



Ceiling concealed duct

Slim duct (Standard type)
FXDQ-PD
FXDQ-ND

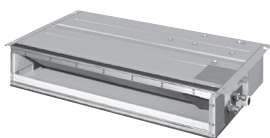


Middle-high static pressure duct
FXMQ-PB
FXMQ-AR



Wall mounted

Wall mounted
FXAQ-AR

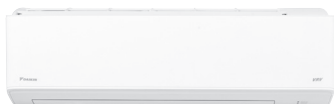

3. Capacity Range

3.1 Connection Ratio

$$\text{Connection ratio} = \frac{\text{Total capacity index of the indoor units}}{\text{Capacity index of the outdoor units}}$$

Type	Min. connection ratio	Max. connection ratio
Single outdoor units	50%	130%

3.2 Outdoor Unit Combinations

Model			RXYMQ4AVMK RXYMQ4AYFK	RXYMQ5AYFK	RXYMQ6AYFK
kW			11.3	14.1	16.0
HP			4	5	6
Capacity index			100	125	150
Total capacity index of connectable indoor units	Combination (%)	50%	50	62.5	75
		100%	100	125	150
		130%	130	162.5	195
Maximum number of connectable indoor units			6	8	9

4. Specifications

Model name				RXYMQ4AVMK		RXYMQ4AYFK	
Power supply				1 phase, 220-240 V, 50/60 Hz		3 phase, 380-415/400 V, 50/60 Hz	
Cooling capacity at T1 ⁽¹⁾ *1		Capacity	kW	11.3		11.3	
		Capacity	Btu/h	38,500		38,500	
		EER	kW/kW	4.10		4.07	
		EER	Btu/W·h	14.00		13.90	
		PI	kW	2.75		2.77	
Cooling capacity at T1 ⁽²⁾ *1		Capacity	kW	11.3		11.3	
		Capacity	Btu/h	38,500		38,500	
		EER	kW/kW	4.13		4.09	
		EER	Btu/W·h	14.10		13.95	
		PI	kW	2.73		2.76	
Cooling capacity at T3 *1		Capacity	kW	10.4		10.6	
		Capacity	Btu/h	35,400		36,200	
		EER	kW/kW	3.14		3.14	
		EER	Btu/W·h	10.70		10.70	
		PI	kW	3.31		3.38	
		CSPF *3	W/W	5.80		5.70	
		Power factor		0.9		0.9	
Cooling capacity at T4 *1		Capacity	kW	10.1		10.1	
		Capacity	Btu/h	34,400		34,400	
		EER	kW/kW	2.96		2.97	
		EER	Btu/W·h	10.10		10.15	
		PI	kW	3.41		3.39	
Heating capacity at H1 *1		Capacity	kW	12.6		12.6	
		Capacity	Btu/h	43,000		43,000	
		COP	kW/kW	4.70		4.50	
		COP	Btu/W·h	16.04		15.37	
		PI	kW	2.68		2.80	
Allowed indoor capacity index connection		Nom.		100		100	
		Min.		50		50	
		Max.		130		130	
Dimensions (H×W×D)	Unit		mm	870×1,100×460		870×1,100×460	
	Packed unit		mm	1,010×1,190×560		1,010×1,190×560	
Mass	Unit		kg	100		120	
	Packed unit		kg	114		134	
Heat exchanger	Type			Cross fin coil		Cross fin coil	
Fan	Type			Propeller		Propeller	
	Discharge direction			Side		Side	
	Motor	Quantity		1		1	
		Model		Brushless DC		Brushless DC	
		Output/pcs	W	234		600	
	Airflow rate	Cooling	m³/min	87		123	
		Heating	m³/min	94		145	
Compressor	Quantity			1		1	
	Motor	Quantity		1		1	
		Model		Inverter		Inverter	
		Type		Hermetically sealed swing type		Hermetically sealed swing type	
Refrigerant	Refrigerant name			R-410A		R-410A	
	Charge		kg	4.2		4.95	
Piping connections	Liquid	Type		Flare connection		Flare connection	
		Diameter (OD)		9.5		9.5	
	Gas	Type		Flare connection		Brazing connection	
		Diameter (OD)		15.9		15.9	
Safety devices				High pressure switch, Fan driver overload protector, Inverter overload protector, Fuse, Bimetal thermostat (external overload relay)		High pressure switch, Fan driver overload protector, Inverter overload protector, Fuse, Bimetal thermostat (external overload relay), Over/under voltage protection PCB	
Standard accessories				Installation manuals, Operation manual, Ferrite core, etc.		Installation manuals, Operation manual, Auxiliary pipe, etc.	
Drawing No.				C: 2D135391B		C: 2D135391B	

Notes:

*1. The above data are based on the following conditions.

Condition	Indoor DB (°C)	Indoor WB (°C)	Outdoor DB (°C)	Outdoor WB (°C)	Reference standard
T ₁ ⁽¹⁾	27.0	19.0	35.0	—	ISO 15042:2011
T ₁ ⁽²⁾	26.6	19.4	35.0	—	AHRI-1230
T ₃	29.0	19.0	46.0	—	ISO 15042:2011
T ₄	26.6	19.4	48.0	—	AHRI-1230
H ₁	20.0	—	7.0	6.0	ISO 15042:2011

*2. For detailed contents, see installation/operational manual.

*3. Cooling seasonal performance factor for hot climates at T₃ condition as per ISO 16358-1:2013/AMD 1:2019

Model name				RXYMQ5AYFK	RXYMQ6AYFK
Power supply				3 phase, 380-415/400 V, 50/60 Hz	3 phase, 380-415/400 V, 50/60 Hz
Cooling capacity at T ₁ ⁽¹⁾ *1	Capacity	kW		14.1	16.0
	Capacity	Btu/h		48,000	54,500
	EER	kW/kW		3.91	3.90
	EER	Btu/W·h		13.35	13.30
	PI	kW		3.60	4.10
Cooling capacity at T ₁ ⁽²⁾ *1	Capacity	kW		14.1	16.0
	Capacity	Btu/h		48,000	54,500
	EER	kW/kW		3.94	3.94
	EER	Btu/W·h		13.45	13.45
	PI	kW		3.57	4.05
Cooling capacity at T ₃ *1	Capacity	kW		12.7	14.5
	Capacity	Btu/h		43,500	49,500
	EER	kW/kW		2.97	2.96
	EER	Btu/W·h		10.15	10.10
	PI	kW		4.29	4.90
	CSPF *3	W/W		5.40	5.35
	Power factor			0.9	0.9
Cooling capacity at T ₄ *1	Capacity	kW		11.7	12.9
	Capacity	Btu/h		40,000	44,000
	EER	kW/kW		2.99	3.00
	EER	Btu/W·h		10.20	10.25
	PI	kW		3.92	4.29
Heating capacity at H ₁ *1	Capacity	kW		16.0	18.0
	Capacity	Btu/h		54,500	61,500
	COP	kW/kW		4.35	4.25
	COP	Btu/W·h		14.85	14.50
	PI	kW		3.67	4.24
Allowed indoor capacity index connection	Nom.			125	150
	Min.			62.5	75
	Max.			162.5	195
Dimensions (H×W×D)	Unit	mm		870×1,100×460	870×1,100×460
	Packed unit	mm		1,010×1,190×560	1,010×1,190×560
Mass	Unit	kg		120	120
	Packed unit	kg		134	134
Heat exchanger	Type			Cross fin coil	Cross fin coil
Fan	Type			Propeller	Propeller
	Discharge direction			Side	Side
	Motor	Quantity		1	1
		Model		Brushless DC	Brushless DC
		Output/pcs	W	600	600
	Airflow rate	Cooling	m ³ /min	123	123
		Heating	m ³ /min	145	145
Compressor	Quantity			1	1
	Motor	Quantity		1	1
		Model		Inverter	Inverter
		Type		Hermetically sealed swing type	Hermetically sealed swing type
Refrigerant	Refrigerant name			R-410A	R-410A
	Charge	kg		5.4	5.4
Piping connections	Liquid	Type		Flare connection	Flare connection
		Diameter (OD)	mm	9.5	9.5
	Gas	Type		Brazing connection	Brazing connection
		Diameter (OD)	mm	15.9	19.1
Safety devices				High pressure switch, Fan driver overload protector, Inverter overload protector, Fuse, Bimetal thermostat (external overload relay), Over/under voltage protection PCB	High pressure switch, Fan driver overload protector, Inverter overload protector, Fuse, Bimetal thermostat (external overload relay), Over/under voltage protection PCB
Standard accessories				Installation manuals, Operation manual, Auxiliary pipe, etc.	Installation manuals, Operation manual, Auxiliary pipe, etc.
Drawing No.				C: 2D135391B	C: 2D135391B

Notes:

*1. The above data are based on the following conditions.

Condition	Indoor DB (°C)	Indoor WB (°C)	Outdoor DB (°C)	Outdoor WB (°C)	Reference standard
T ₁ ⁽¹⁾	27.0	19.0	35.0	—	ISO 15042:2011
T ₁ ⁽²⁾	26.6	19.4	35.0	—	AHRI-1230
T ₃	29.0	19.0	46.0	—	ISO 15042:2011
T ₄	26.6	19.4	48.0	—	AHRI-1230
H ₁	20.0	—	7.0	6.0	ISO 15042:2011

*2. For detailed contents, see installation/operational manual.

*3. Cooling seasonal performance factor for hot climates at T₃ condition as per ISO 16358-1:2013/AMD 1:2019

Part 2

Refrigerant Circuit


1. Refrigerant Circuit (Piping Diagrams)	15
1.1 Outdoor Unit	15
1.2 VRV Indoor Unit	18
2. Functional Parts Layout	20
2.1 RXYMQ4AVMK	20
2.2 RXYMQ4/5/6AYFK	22

1. Refrigerant Circuit (Piping Diagrams)

1.1 Outdoor Unit


No. in piping diagram	Electric symbol	Name	Function
(1)	M1C	Compressor motor	Compressor is operated in multi-steps according to Te.
(2)	M1F	Fan motor	The fan rotation speed is varied by using the inverter.
(3)	Y1E	Electronic expansion valve (Main)	Fully open during cooling operation.
(4)	Y2E	Electronic expansion valve (Injection)	PI control is applied to keep the outlet superheating degree of subcooling heat exchanger constant.
(5)	Y3E	Electronic expansion valve (Refrigerant jacket)	Used in heating operation to control inverter fin temperature by adjusting the refrigerant flow.
(6)	Y4E	Electronic expansion valve (Refrigerant auto charge)	Used to control refrigerant charging speed during refrigerant auto charge operation and to stop refrigerant charge automatically.
(7)	Y1S	Solenoid valve (Four way valve)	Used to switch the operation mode between cooling and heating.
(8)	S1NPH	High pressure sensor	Used to detect high pressure.
(9)	S1NPL	Low pressure sensor	Used to detect low pressure.
(10)	S1PH	High pressure switch	In order to prevent the increase of high pressure when an error occurs, this switch is activated at high pressure of 4.0 MPa or more to stop the compressor operation.
(11)	—	Pressure regulating valve	This valve opens at a pressure of 4.0 MPa for prevention of pressure increase, thus resulting in no damage of functional parts due to the increase of pressure in transportation or storage.
(12)	—	Double tube heat exchanger (Subcooling heat exchanger)	Used to subcool liquid refrigerant from the electronic expansion valve.
(13)	R1T	Thermistor (Outdoor air: Ta)	Used to detect outdoor air temperature, correct discharge pipe temperature, and for other purposes.
(14)	R21T	Thermistor (Discharge pipe: Tdi1)	Used to detect discharge pipe temperature, make the temperature protection control of compressor, and for other purposes.
(15)	R3T	Thermistor (Suction pipe: Ts)	Used to detect suction pipe temperature, and for other purposes.
(16)	R4T	Thermistor (Heat exchanger liquid pipe: T _{fl})	This detects temperature of liquid pipe between the air heat exchanger and main electronic expansion valve. Used to make judgments on the recover or discharge refrigerants to the refrigerant regulator.
(17)	R5T	Thermistor (Subcooling heat exchanger liquid pipe: T _{sc})	This detects temperature of liquid pipe after subcooling heat exchanger.
(18)	R6T	Thermistor (Subcooling heat exchanger gas pipe: T _{sh})	This detects temperature of gas pipe on the evaporation side of subcooling heat exchanger. Used to exercise the constant control of superheating degree at the outlet of subcooling heat exchanger.
(19)	R7T	Thermistor (Heat exchanger deicer: T _b)	Used to detect liquid pipe temperature of air heat exchanger.

RXYSMQ4AVMK

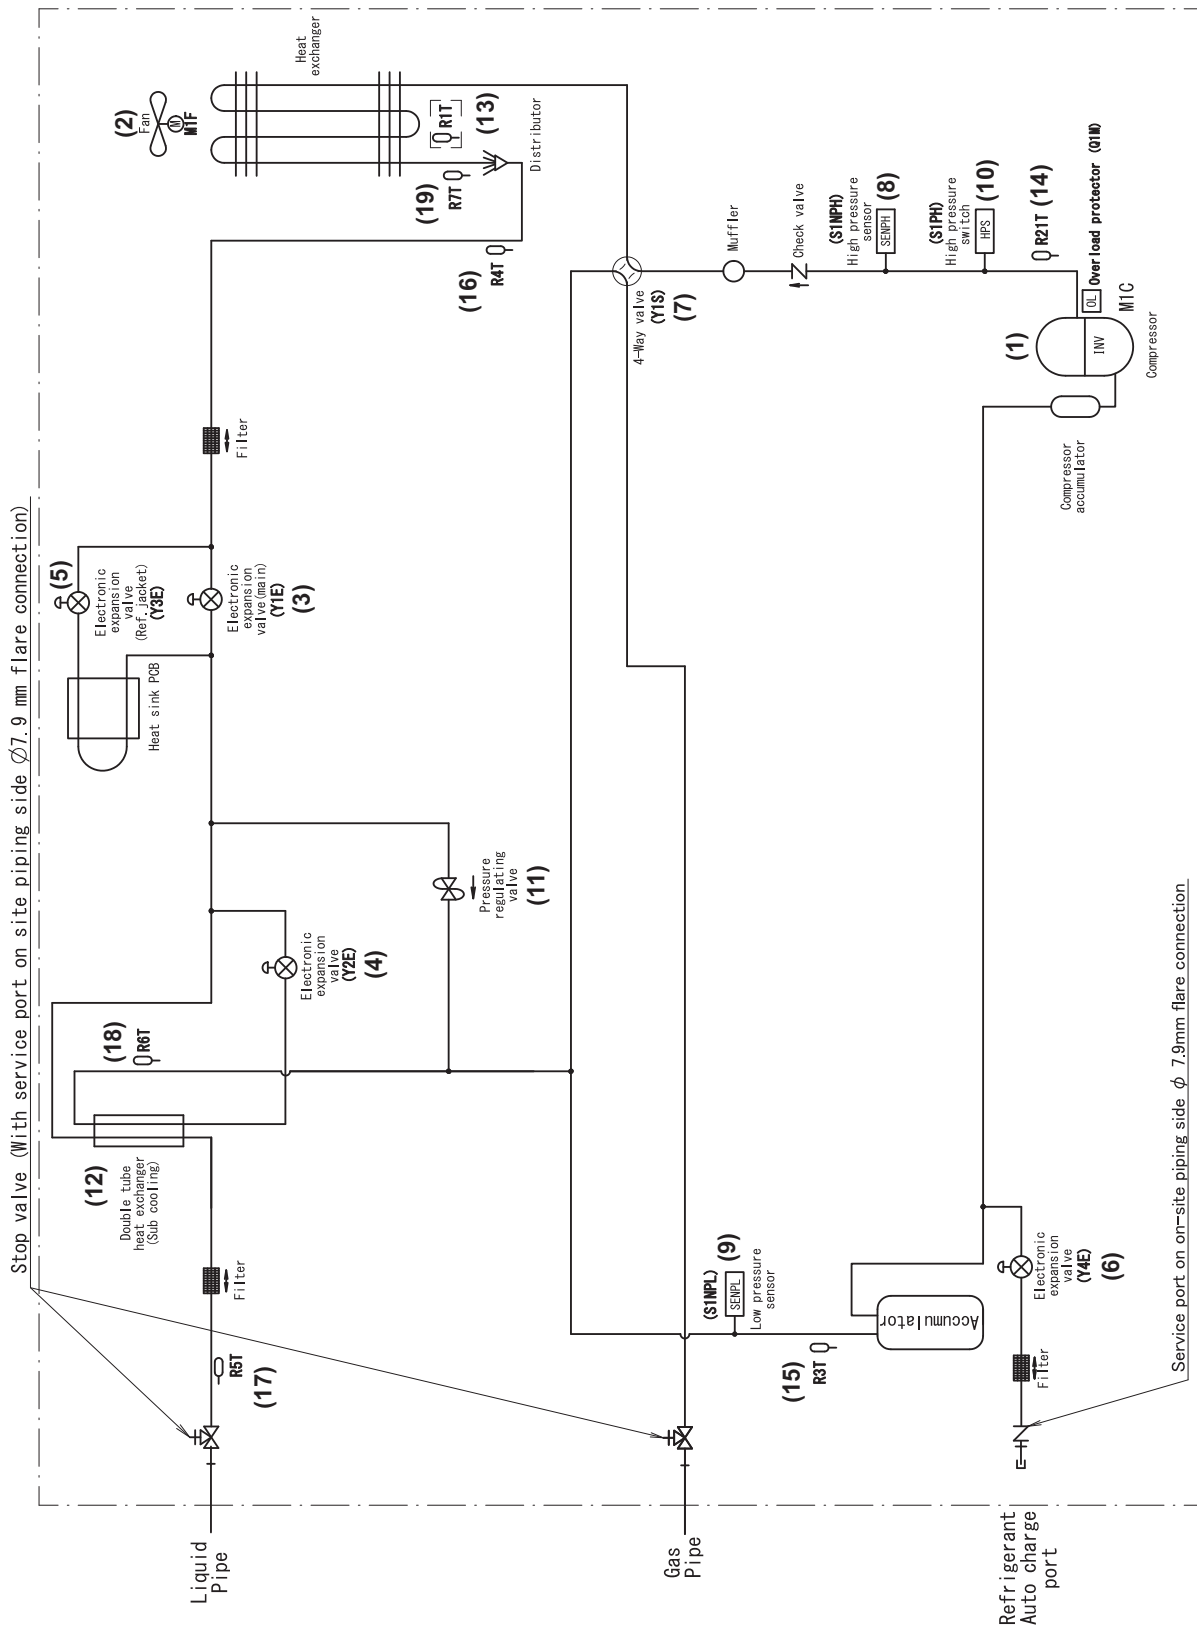

C: 3D132648A

RXVMQ4/5/6AYFK

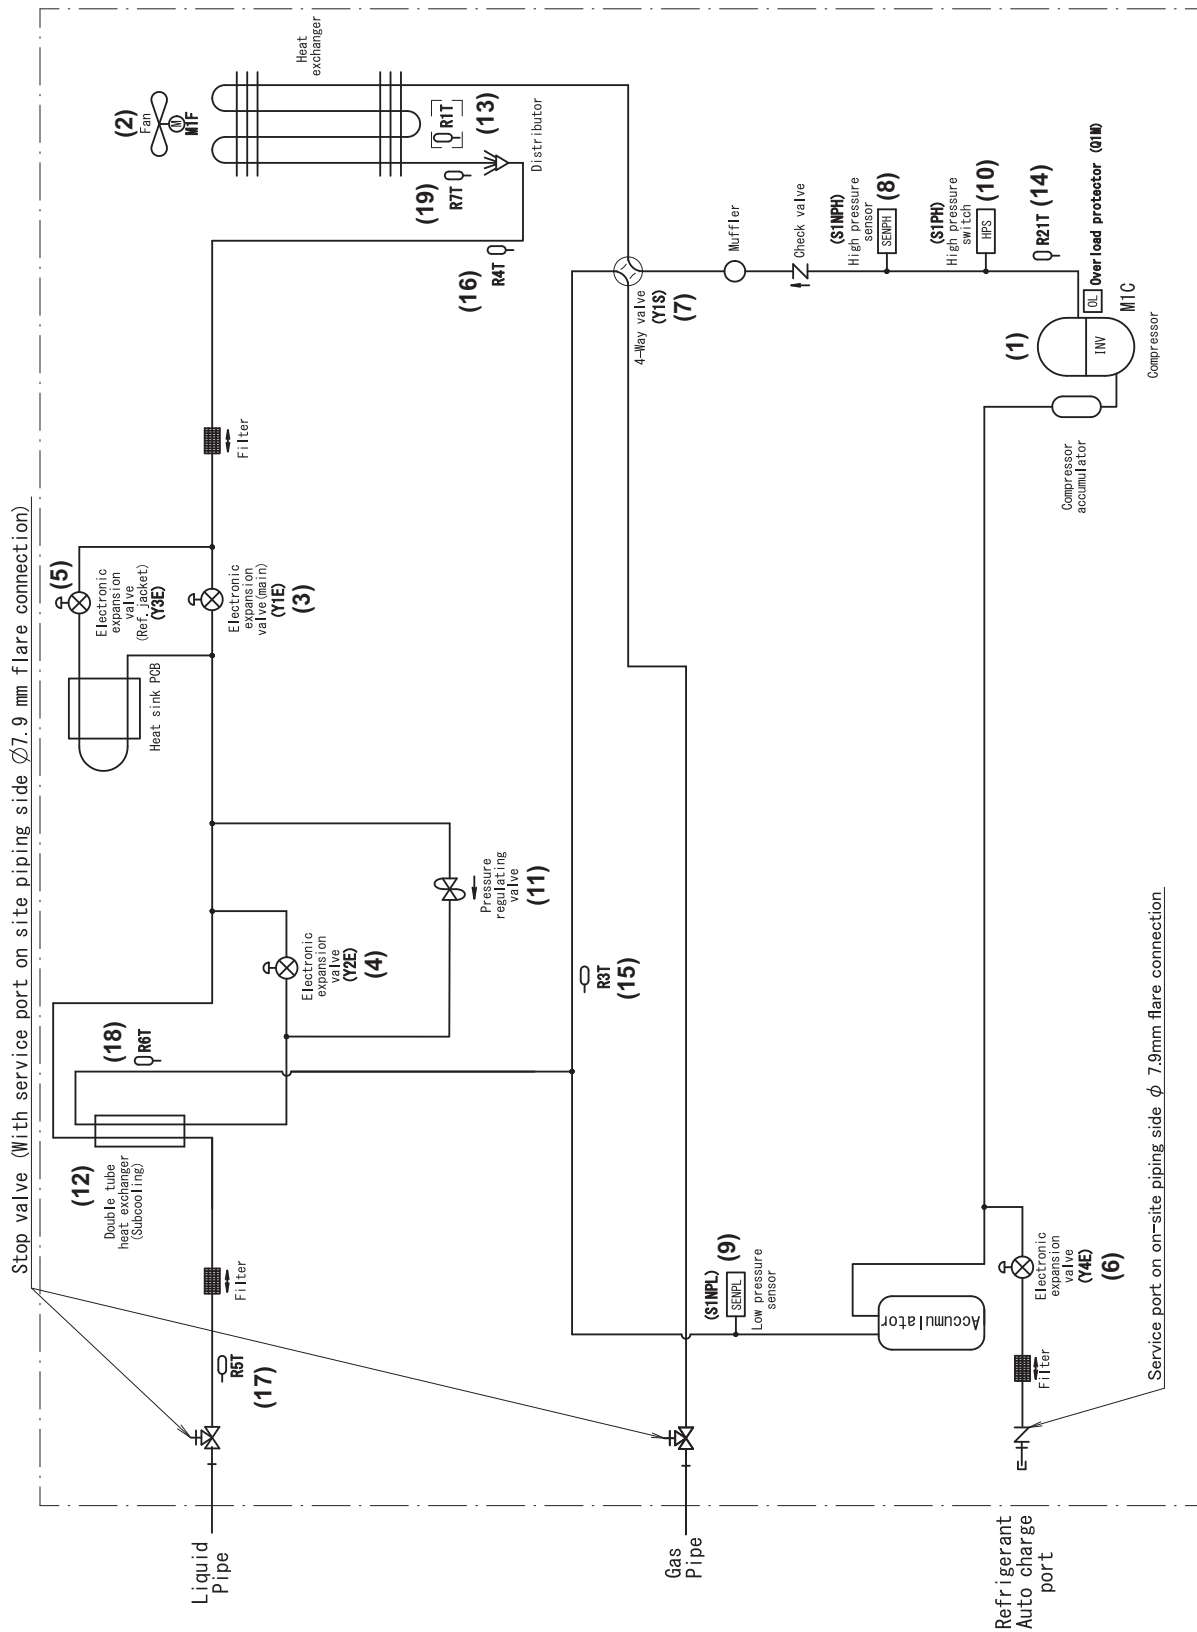


C: 3D132707A

1.2 VRV Indoor Unit


No. in piping diagram	Name	Electric symbol	Applicable model	Function
(1)	Electronic expansion valve	Y1E	All indoor units	Used for gas superheating degree control while in cooling or subcooling degree control while in heating.
(2)	Suction air thermistor	R1T	All indoor units	Used for thermostat control.
(3)	Indoor liquid pipe thermistor	R2T	All indoor units	Used for gas superheating degree control while in cooling or subcooling degree control while in heating.
(4)	Indoor gas pipe thermistor	R3T	All indoor units	Used for gas superheating degree control while in cooling.

■ FXFSQ-AR

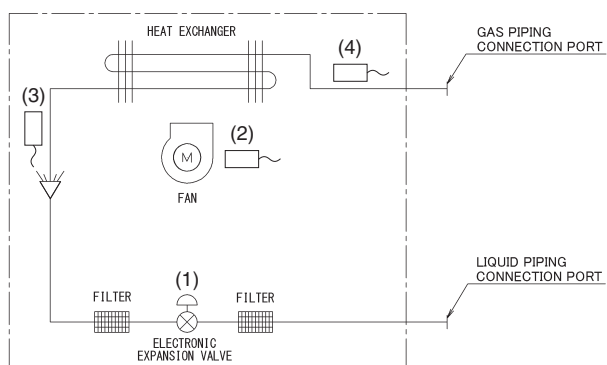


C: 4D121746

■ FXDQ-PD, FXDQ-ND

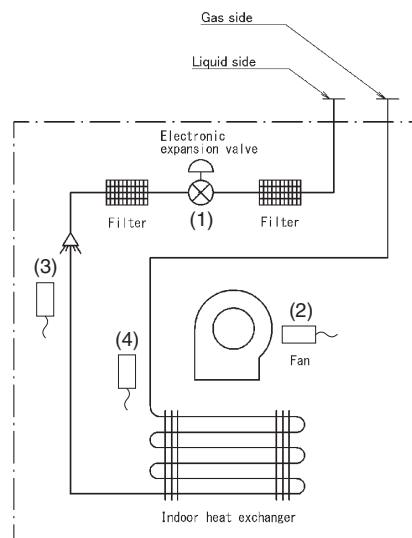


C: 4D115598B

■ FXMQ-PB

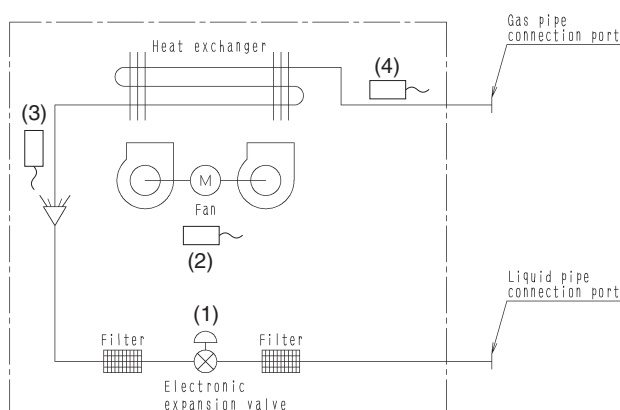


C: 4D110285

■ FXMQ-AR

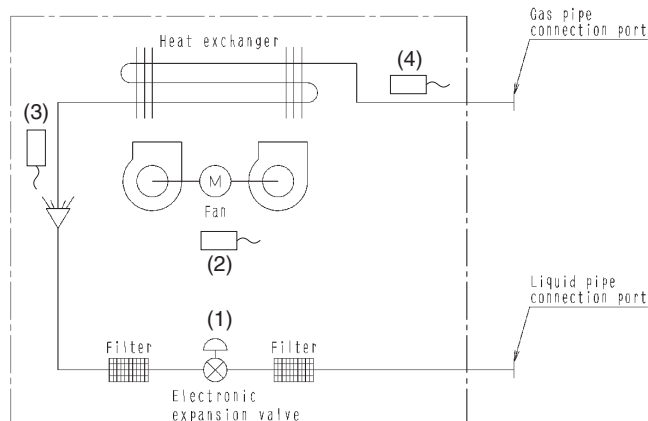


C: 4D097585B

■ FXAQ20/25/32/40/50AR

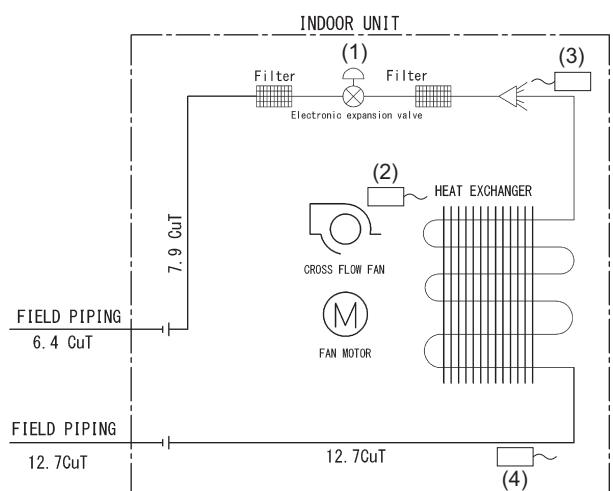

C: 4D121516A

■ FXAQ63AR

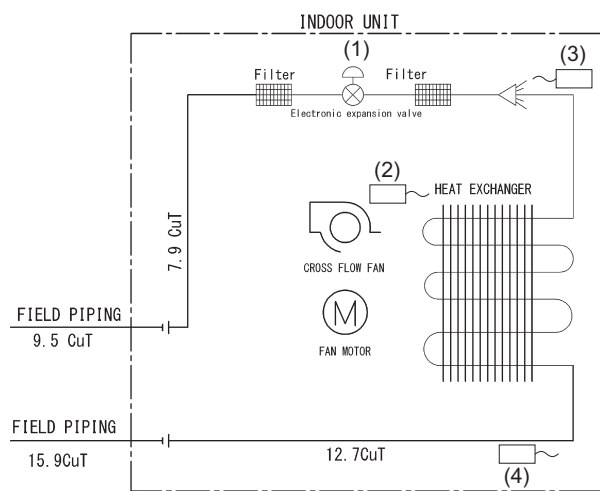


C: 4D122027A


2. Functional Parts Layout

2.1 RXYMQ4AVMK

Top View

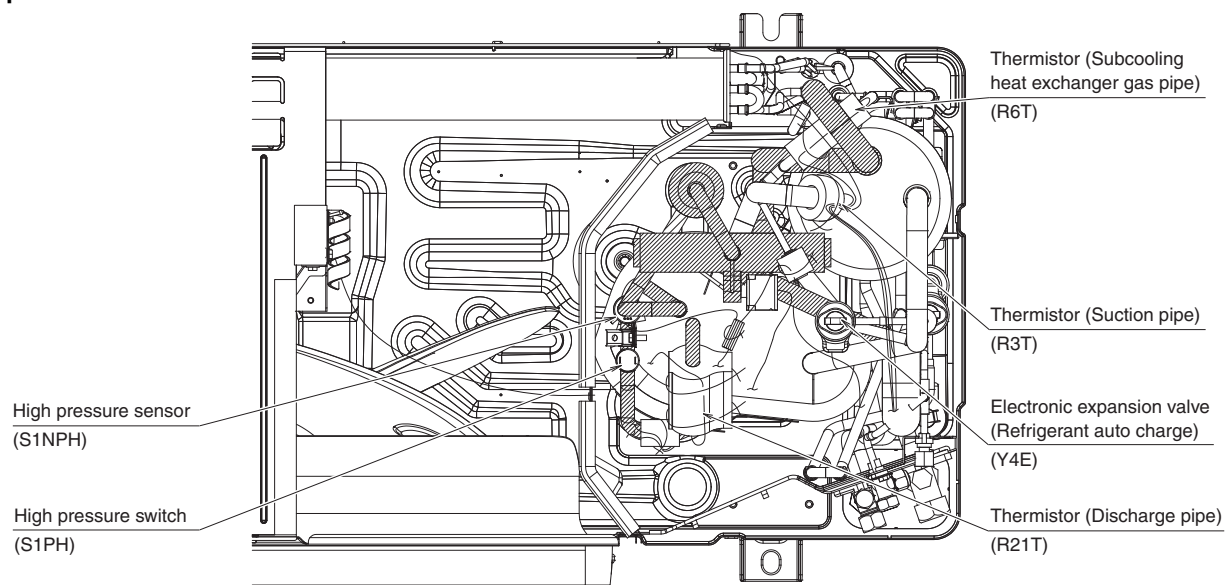


Side View

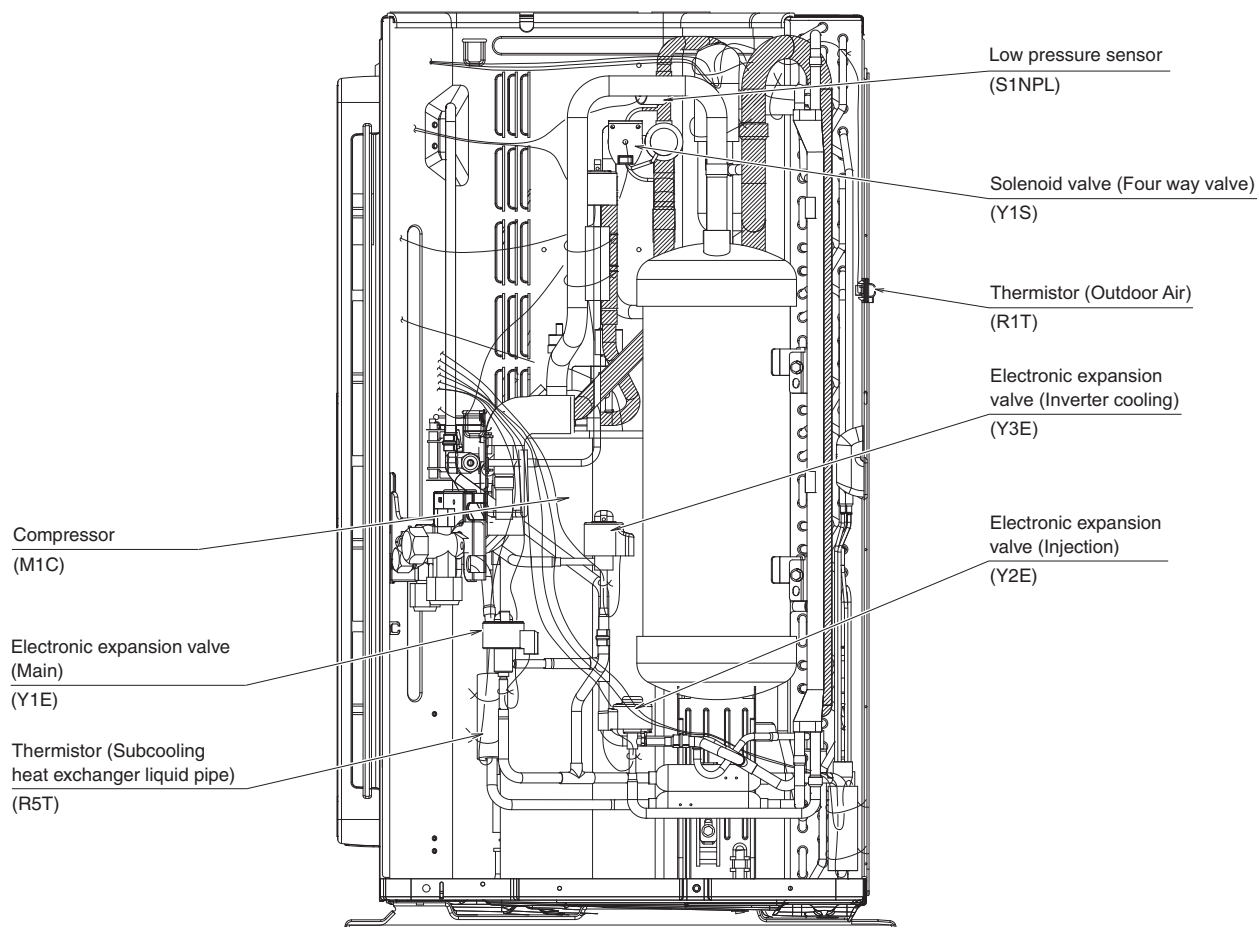

C: 1P627964E


Back view

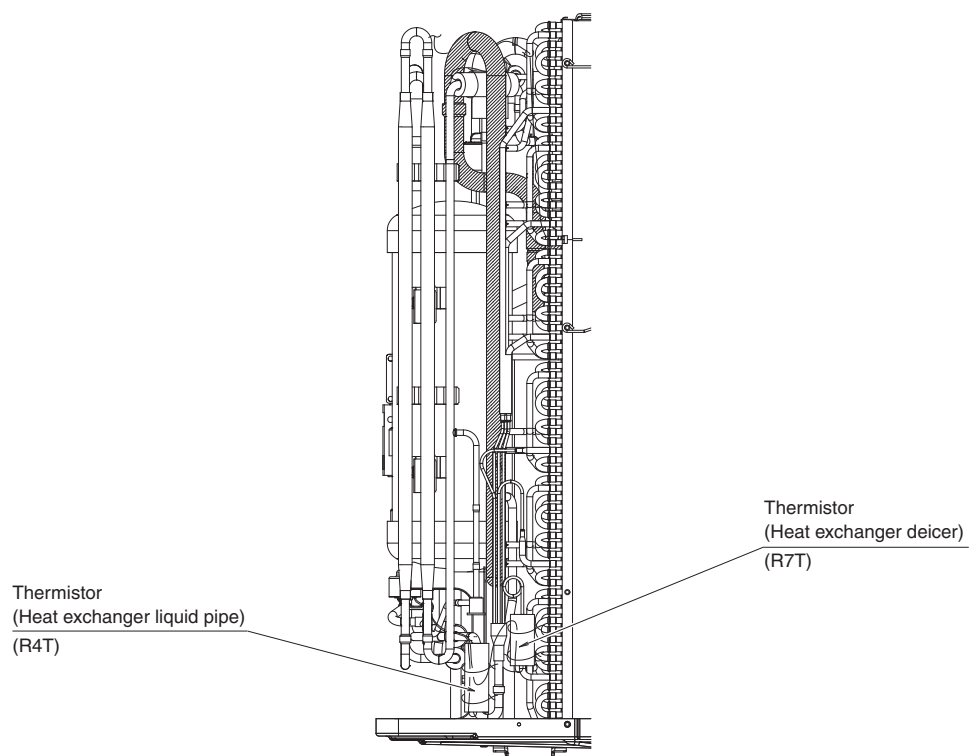


C: 1P627964E

2.2 RXYMQ4/5/6AYFK

Top View

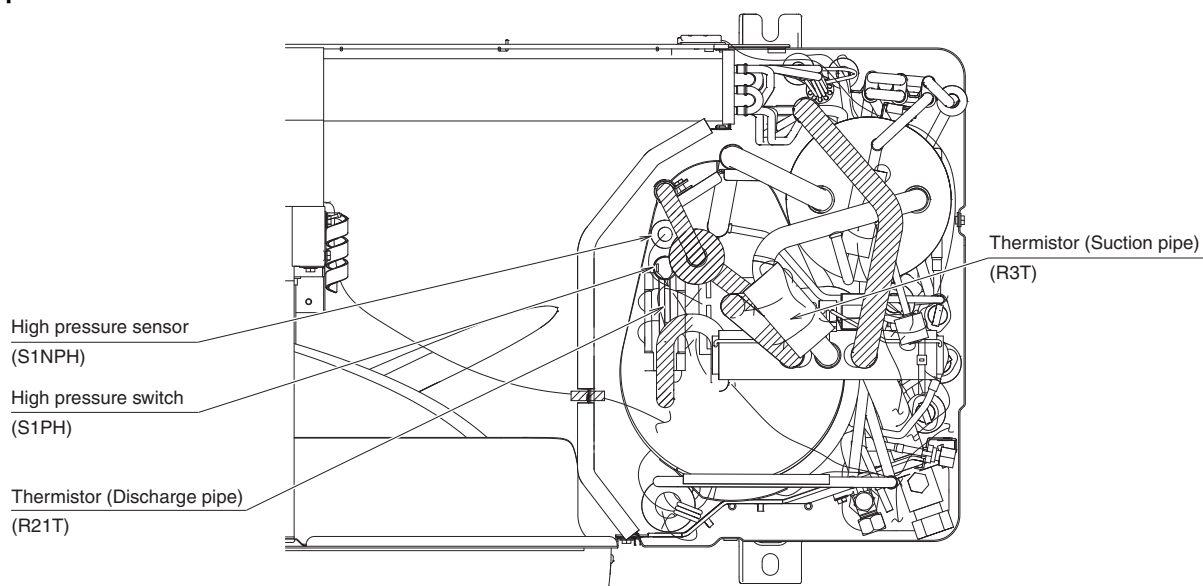


Side View

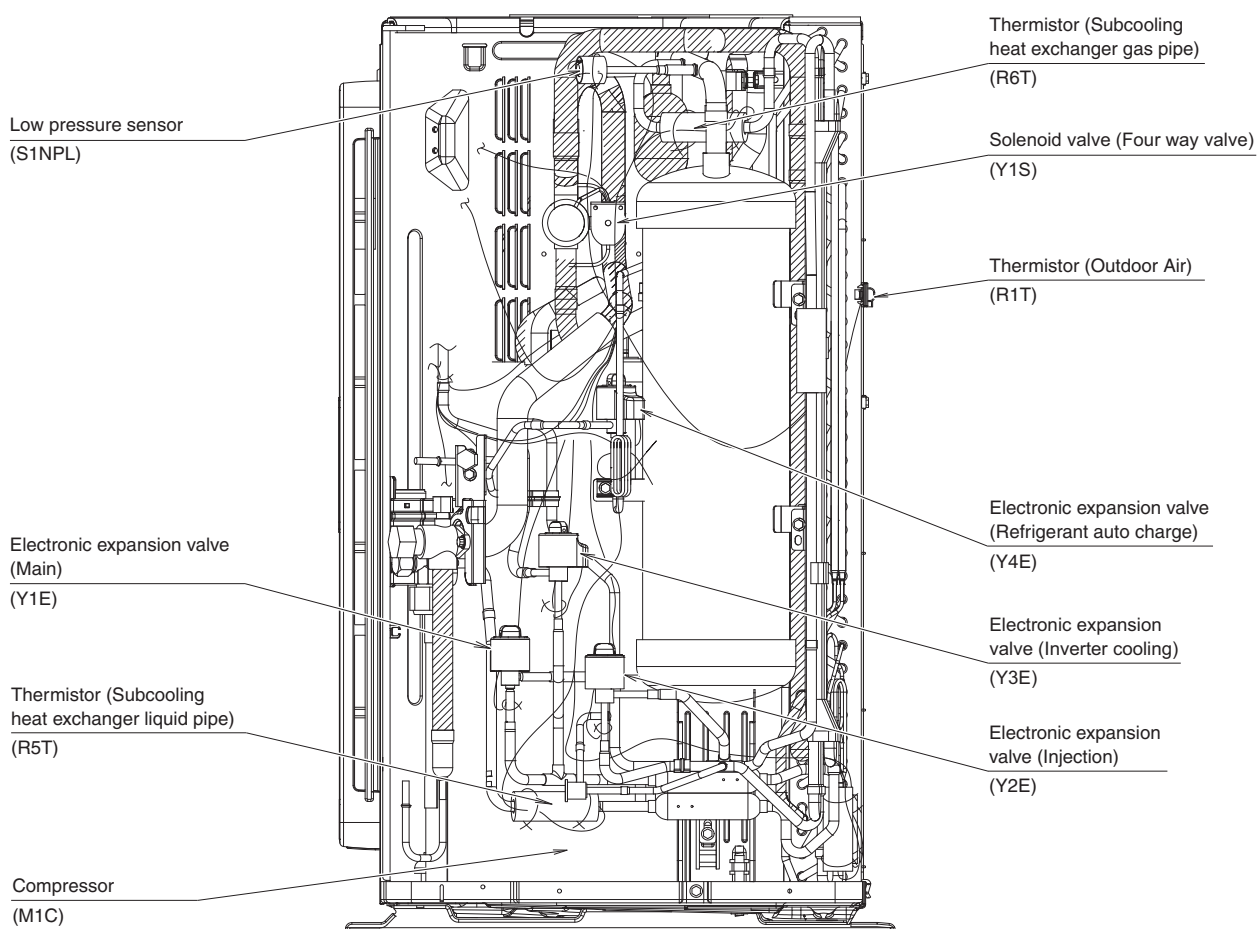

C: 1P642649E

Back view

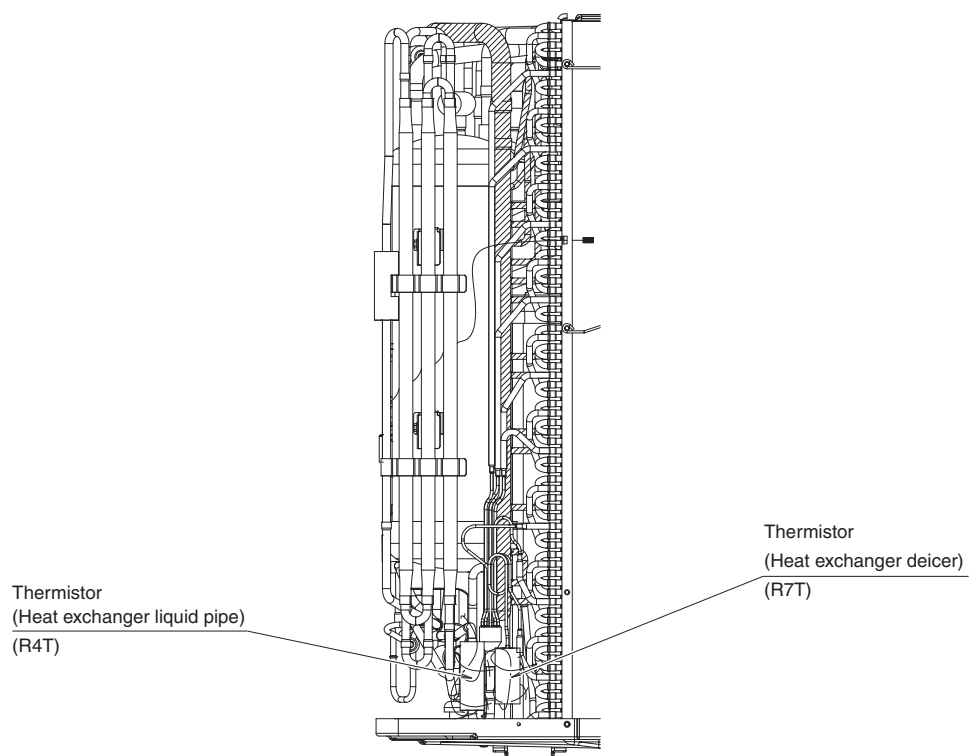

C: 1P642649E

Part 3

Remote Controller

1. Applicable Models	25
2. Names and Functions	27
2.1 BRC1E63	27
2.2 BRC1H81 Series	29
2.3 BRC4M Series.....	31
3. Main/Sub Setting	34
3.1 Wired Remote Controller (BRC1E63)	34
3.2 Wired Remote Controller (BRC1H81 Series)	35
3.3 When Wireless Remote Controller is Used Together	36
4. Address Setting for Wireless Remote Controller.....	37
4.1 Setting for Signal Receiver PCB	37
4.2 Setting for BRC4M Series	38
4.3 Multiple Settings A/b.....	39
5. Centralized Control Group No. Setting.....	40
5.1 BRC1E63	40
5.2 BRC1H81 Series	42
5.3 Group No. Setting Example.....	43
6. Service Settings Menu, Maintenance Menu.....	44
6.1 BRC1E63	44
6.2 BRC1H81 Series	48

1. Applicable Models

Series	Wired remote controller		Wireless remote controller	
	Navigation	Madoka	Remote controller	Receiver
FXFSQ-AR (*1)	BRC1E63	BRC1H81W7 BRC1H81S7	BRC4M150W16	BRC7M632F-6
FXDQ-PD				BRC4M61-6
FXDQ-ND				
FXMQ-PB				
FXMQ-AR				
FXAQ-AR				BRC7N618-6



Note(s)

*1. Some functions are not available depending on the remote controller type. Refer to page 26 for details.

Function list


Category	Function	FXFSQ-AR	
		BRC1E63	BRC4M150
Basic performance	ON/OFF operation	●	●
	Operation mode switching	●	●
	Setting temperature	●	●
	Swing pattern selection	●	●
	Switchable fan speed (Ventilation amount)	●	●
	Display switching function	●	—
	Backlight function	●	●
	Display automatic OFF	●	—
	Multilingual correspond	●	●
	Timer function (Time schedule display)	●	—
	Key lock function	●	—
	Contrast adjustment	●	—
Energy saving function	Automatic Eco airflow rate	●	●
	Eco infrared floor temperature sensor	●	—
	Sensing sensor stop mode	●	—
	Sensing sensor low mode	●	—
	Setpoint range set	●	—
	Setback	●	—
	OFF timer (programmed)	●	—
	Weekly schedule timer	●	—
	ON/OFF timer	—	●
	Setting temperature automatic recovery	●	—
	VRTsmart control	●	—
	VRT control	●	—
Comfortable function	Active circulation airflow	●	—
	Forced cooling ON operation	●	—
	Automatic cooling/heating changeover	●	—
	Independent up-and-down airflow	●	—
	Automatic direct air (when human sensing)	●	—
	Hot start function	●	●
	Draft prevention	●	—
	Two selectable temperature sensors	●	—
	Application for high ceiling	●	—
	Service contact display	●	—
	Model name display (indoor/outdoor)	●	—
	Filter sign/reset	●	●
	Operation time accumulation time display	●	—
	Operation data display	●	—

●: Available

—: Not available

2. Names and Functions

2.1 BRC1E63

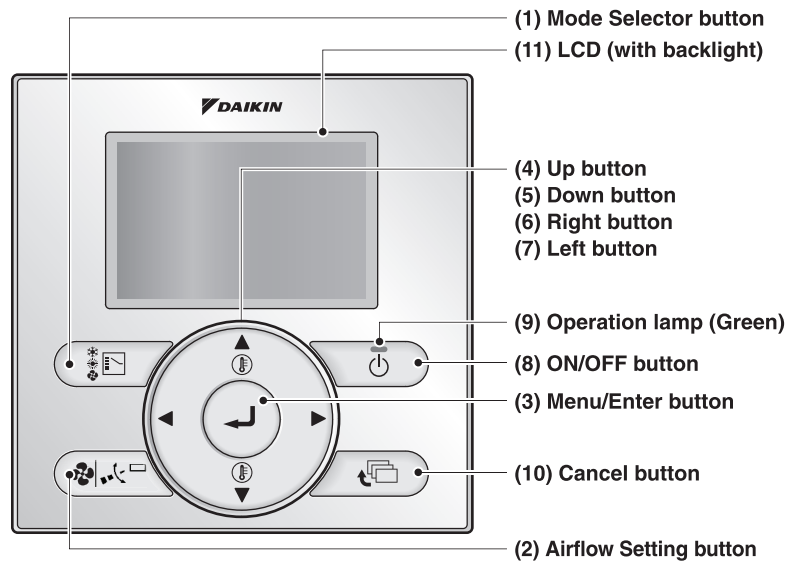

(1) Mode Selector button

Used to select the operation mode.

(2) Airflow Setting button

Used to indicate the Airflow Rate (Air Volume / Fan Speed) / Airflow Direction screen.

(3) Menu/Enter button

- Used to indicate the Main menu.
(For details of Main menu, refer to the operation manual.)
- Used to enter the selected item.

(4) Up button ▲

- Used to increase the set temperature.
- Used to highlight the item above the current selection.
(The highlighted items will be scrolled through when the button is pressed continuously.)
- Used to change the selected item.

(5) Down button ▼

- Used to decrease the set temperature.
- Used to highlight the item below the current selection.
(The highlighted items will be scrolled through when the button is pressed continuously.)
- Used to change the selected item.

(6) Right button ►

- Used to highlight the next items on the right-hand side.
- Display contents are changed to next screen per page.

(7) Left button ◀

- Used to highlight the next items on the left-hand side.
- Display contents are changed to previous screen per page.

(8) ON/OFF button

- Press to start the system.
- Press this button again to stop the system.

(9) Operation lamp (Green)

This lamp lights up during operation. The lamp blinks if an error occurs.

(10) Cancel button

- Used to return to the previous screen.
- Press and hold this button for 4 seconds or longer to display Service Settings menu.


(11) LCD (with backlight)

The backlight will be lit for about 30 seconds by pressing any button.


Mode Access Operation

On power-up, the message **Checking the connection. Please stand by.** will be displayed on the remote controller screen. Then that message will disappear and the basic screen will be displayed. To access a mode from the basic screen, refer to the figure below.

When any of the operation buttons is pressed, the backlight will come on and remains lit for about 30 seconds. Be sure to press a button while the backlight is on (this does not apply to the **On/Off** button.)

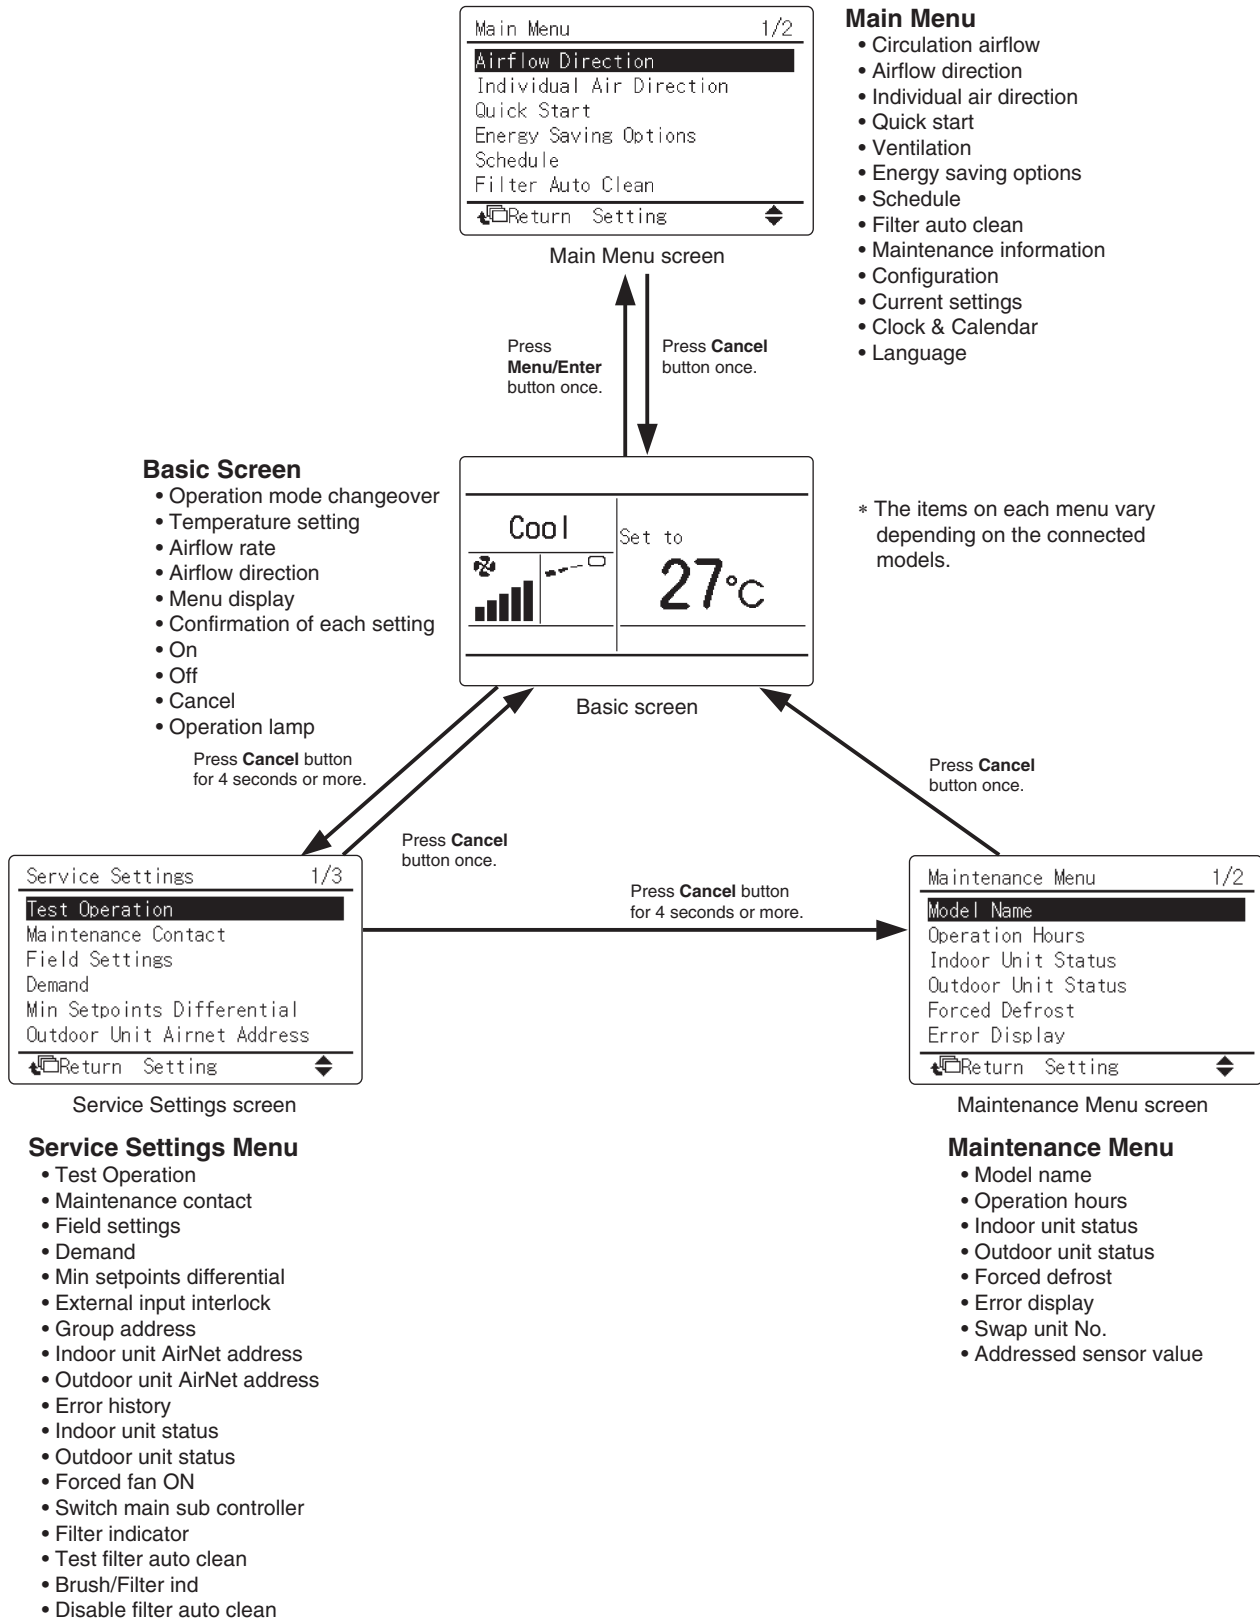

2.2 BRC1H81 Series

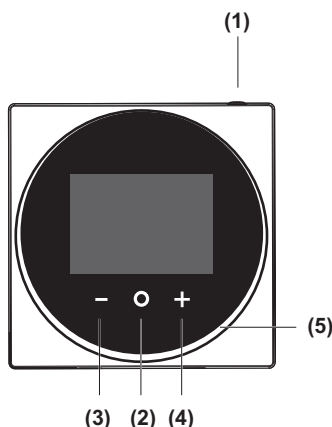

(1) ON/OFF

- When OFF, press to turn ON the system. As a result, the status indicator (5) will turn ON too.
- When ON, press to turn OFF the system. As a result, the status indicator (5) will turn OFF too.

(2) ENTER/ACTIVATE/SET

- From the home screen, enter the main menu.
- From the main menu, enter one of the submenus.
- From their respective submenu, activate an operation/ventilation mode.
- In one of the submenus, confirm a setting.

(3) CYCLE/ADJUST

- Cycle left.
- Adjust a setting (default: decrease).

(4) CYCLE/ADJUST

- Cycle right.
- Adjust a setting (default: increase).



Note(s)

For a full description of the behavior of the status indicator, see the installer and user reference guide.

Home screens

Depending on installer configuration, the controller either has a standard or a detailed home screen. In most cases, the standard home screen gives you only the active operation mode, messages (if any), and the setpoint temperature (in case of Cooling, Heating, or Auto operation mode). The detailed home screen gives you all kinds of information through status icons.

Standard	Detailed

(1) Messages

(2) Active operation mode










(3) Setpoint temperature













Note(s)

The controller is equipped with a power saving function that causes the screen to go blank after a period of inactivity. To make the screen light up again, press one of the buttons.

Status icons


Icon	Description
	System operation. Indicates that the system is operating.
	Bluetooth. Indicates that the controller is communicating with a mobile device, for use with the Daikin Control Assistant app.
	Centralized control. Indicates that the system is controlled by central control equipment (optional accessory) and that control of the system by the controller is limited.
	Changeover under centralized control. Indicates that the cooling/heating changeover is under centralized control by another indoor unit, or by an optional cool/ heat selector that is connected to the outdoor unit.
	Defrost/Hot start. Indicates that the defrost/hot start mode is active.
	Timer. Indicates that the schedule timer or OFF timer is enabled.
	Clock not set. Indicates that controller's clock is not set.
	Self-cleaning filter operation. Indicates that self-cleaning filter operation is active.
	Inspection. Indicates that the indoor or outdoor unit is being inspected.

Icon	Description
	Periodic inspection. Indicates that the indoor or outdoor unit is being inspected.
	Backup. Indicates that in the system an indoor unit is set as backup indoor unit.
	Individual airflow direction. Indicates that the individual airflow direction setting is enabled.
	Information. Indicates that the system has a message to convey. To see the message, go to the information screen.
	Warning. Indicates that an error occurred, or that an indoor unit component needs to be maintained.
	Demand control. Indicates that the system's energy consumption is being limited, and that it is running with restricted capacity.
	End of demand control. Indicates that the system's energy consumption is no longer being limited, and that it is no longer running with restricted capacity.
	Rotation. Indicates that Rotation mode is active.
	Setback. Indicates that the indoor unit is operating under setback conditions.
	Ventilation. Indicates that a heat reclaim ventilation unit is connected.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and use of such marks by Daikin Europe N.V. is under license. Other trademarks and trade names are those of their respective owners.

2.3 BRC4M Series

2.3.1 Remote Controller

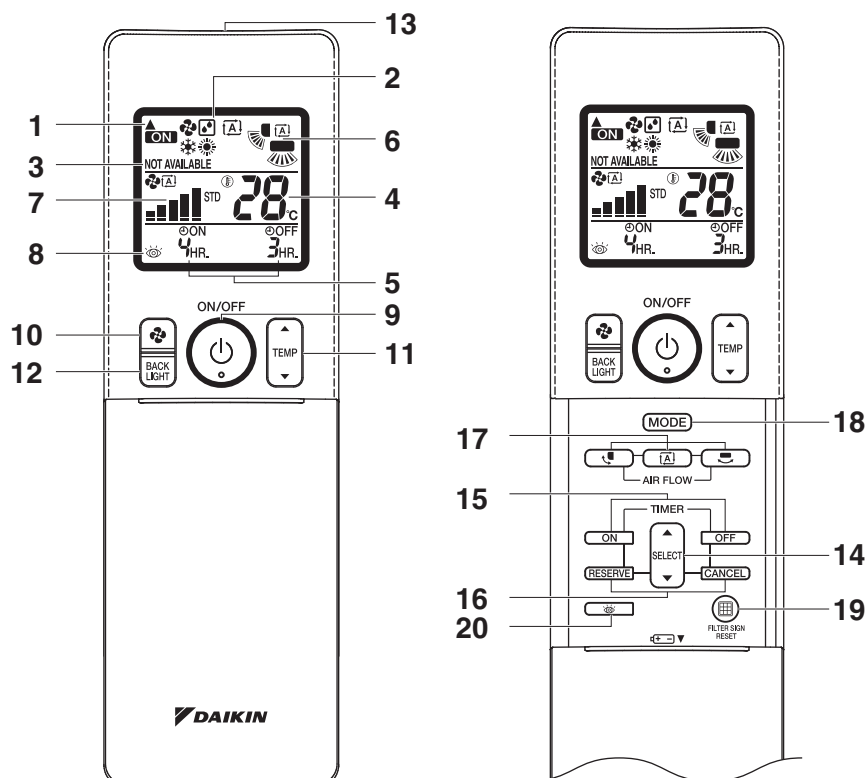


1	DISPLAY ▲ (SIGNAL TRANSMISSION) This blinks when a signal is being transmitted.
2	DISPLAY [FAN] [SUN] [SNOWFLAKE] (OPERATION MODE) This display shows the current OPERATION MODE. Operation modes supported depend on the model that is connected.
3	DISPLAY NOT AVAILABLE (displayed when operation is not supported) When a button for a function that is not supported on the connected model is pressed, this displays for 2 seconds.
4	DISPLAY 28°C (SET TEMPERATURE) This display shows the set temperature.
5	DISPLAY 4^{ON} 3^{OFF} HR. (PROGRAMMED TIME) This display shows PROGRAMMED TIME of the air conditioner start or stop.
6	DISPLAY [FAN] (AIRFLOW BLADE)
7	DISPLAY [4 BARS] (FAN SPEED) The display shows the set fan speed.
8	DISPLAY [EYE] (INSPECTION) When the INSPECTION BUTTON is pressed, the display shows the system mode is in. Do not operate this button during normal use.
9	ON/OFF BUTTON Press the button and the air conditioner will start. Press the button again and the air conditioner will stop.

10	FAN SPEED CONTROL BUTTON Press this button to select the fan speed.
11	TEMPERATURE SETTING BUTTON Use this button for SETTING TEMPERATURE.
12	BACKLIGHT BUTTON Press this button to turn the backlight on or off.
13	SIGNAL TRANSMITTER This sends the signals to the indoor unit.
14	PROGRAMMING TIMER BUTTON Use this button for programming "START and/or STOP" time.
15	TIMER MODE ON/OFF BUTTON
16	TIMER RESERVE/CANCEL BUTTON
17	AIRFLOW DIRECTION ADJUST BUTTON
18	OPERATION MODE SELECTOR BUTTON Press this button to select OPERATION MODE. [SNOWFLAKE] (COOLING), [SUN] (HEATING), [FAN] (AUTOMATIC), [FAN] (FAN), [PROGRAM DRY] (PROGRAM DRY).
19	FILTER SIGN RESET BUTTON Refer to the section of MAINTENANCE in the operation manual attached to the indoor unit.
20	INSPECTION BUTTON This button is used only by qualified service persons for maintenance purposes. Do not operate this button during normal use.


2.3.2 Signal Receiver Unit

	EMERGENCY OPERATION SWITCH
21	This switch is readily used if the remote controller does not work.
	RECEIVER
22	This receives the signals from the remote controller.
	OPERATING INDICATOR LAMP (Red)
23	This lamp stays lit while the air conditioner runs. It flashes when the air conditioner is in trouble.
	TIMER INDICATOR LAMP (Green)
24	This lamp stays lit while the timer is set.
	AIR FILTER CLEANING TIME INDICATOR LAMP (Red)
25	Lights up when it is time to clean the air filter.
	DEFROST OPERATION LAMP (Orange)
26	Lights up when the defrost control has started.


FXFSQ-AR (BRC7M632F-6)

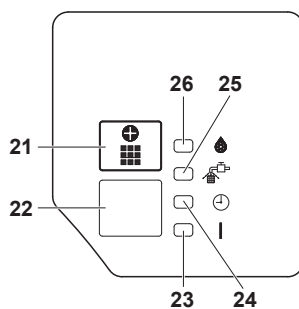

FXDQ-PD/ND, FXMQ-PB/AR (BRC4M61-6)

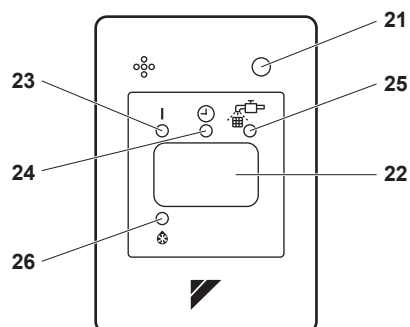


FXAQ-AR (BRC7N618-6)

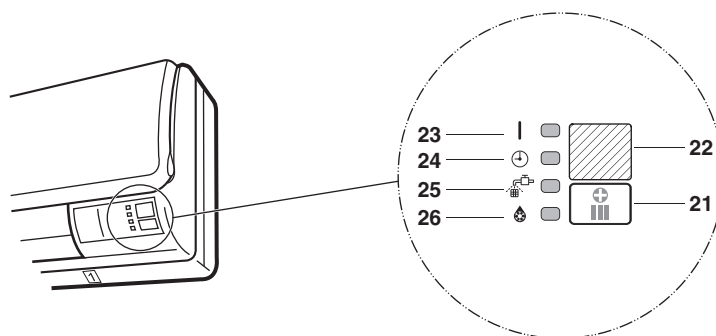

2.3.3 How to Check Initial Set Value

Press the **INSPECTION** button to check the initial set value.

Press the **INSPECTION** button twice to return to the normal mode.

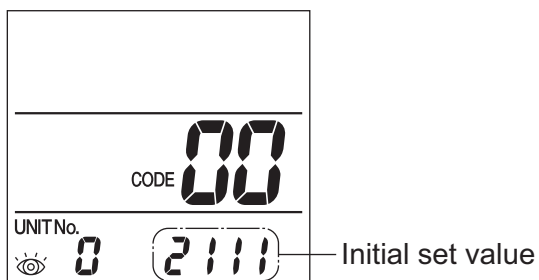

Indoor unit model type		Initial set value
Round flow cassette with sensing	FXFSQ-AR	2111
Slim duct (Standard type)	FXDQ-PD FXDQ-ND	2000
Middle-high static pressure duct	FXMQ-PB FXMQ-AR	2000
Wall mounted	FXAQ-AR	1010


3. Main/Sub Setting

Main/Sub setting is necessary when 1 indoor unit is controlled by 2 remote controllers. The remote controllers are set at factory to Main, so you have to change one remote controller from Main to Sub. To change a remote controller from Main to Sub, proceed as follows:

3.1 Wired Remote Controller (BRC1E63)

3.1.1 Field Settings

The designation of the main and sub remote controllers can be swapped. Note that this change requires turning the power OFF and then ON again.

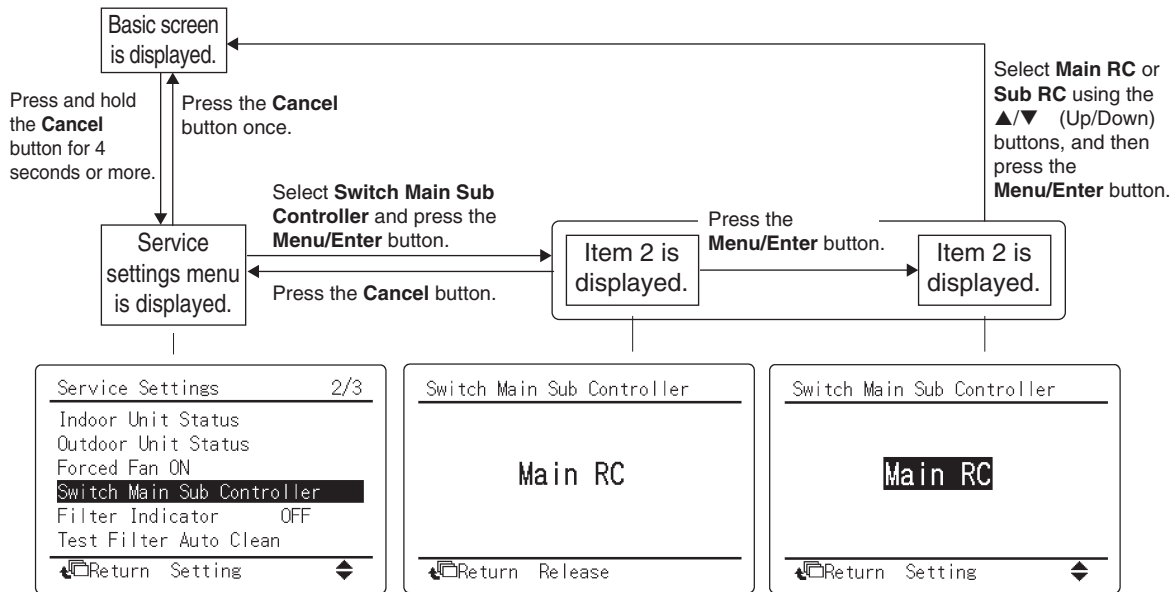

3.1.2 When an Error Occurred

U5: there are 2 main remote controllers when power is turned ON


→Change the setting from Main to Sub on the remote controller you want to be Sub.

U8: there are 2 sub remote controllers when power is turned ON

→Change the setting from Sub to Main on the remote controller you want to be Main.


How to confirm Main/Sub setting

The Main/Sub setting of the remote controller is displayed on the bottom of the screen while **Checking the connection. Please stand by.** is displayed.

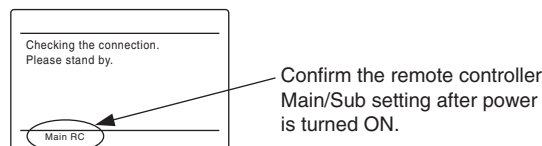

How to change Main/Sub setting

You may change the Main/Sub setting of the remote controller while **Checking the connection. Please stand by.** is displayed by pressing and holding the **Mode Selector** button for 4 seconds or longer.

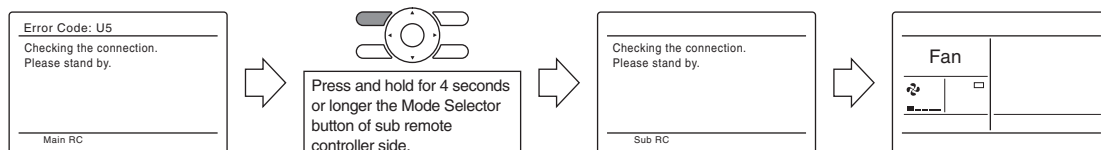

Note(s)

1. It is not possible to change the Main/Sub setting from Main to Sub when only one remote controller is connected.


2. When 2 remote controllers are being used, it is not possible to change the setting from Main to Sub if one of the remote controllers is already set as Main.

3.2 Wired Remote Controller (BRC1H81 Series)

When using 1 remote controller


Once the controller is powered, it will automatically start up:

If it is the first and only controller that is connected to the indoor unit, it will automatically get designated as master controller.

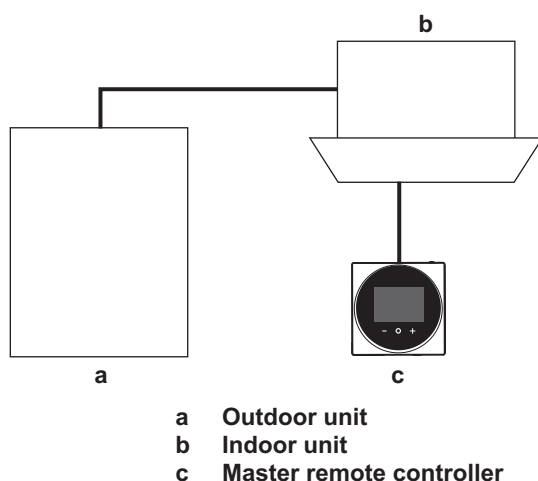

When using 2 remote controller


For a second controller to get designated as slave controller, manual action is required.

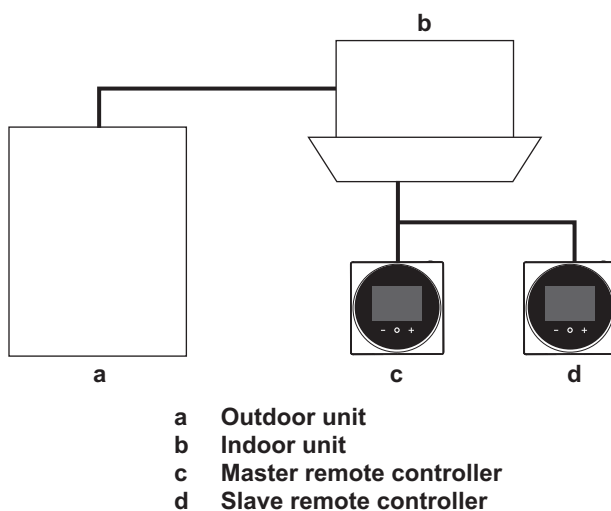


1. Connect a second controller.



Result: It will start up automatically.

2. Wait for a **U5** or **U8** error to appear on the screen.
3. When the **U5** or **U8** error appears, press  and keep it pressed until "2" appears on the screen.

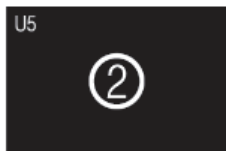

Result: The controller is now designated as slave.



Note(s)



The following functions are not available for slave controllers:

- ♦ Auto operation mode
- ♦ Individual airflow direction
- ♦ Filter auto clean
- ♦ Setback temperature setpoints
- ♦ Draft prevention
- ♦ Duty rotation

3.3 When Wireless Remote Controller is Used Together

When using both a wired and a wireless remote controller for 1 indoor unit, the wired controller should be set to Main. Therefore, the Main/Sub switch (SS1) of the signal receiver PCB must be set to Sub.

Main/Sub	Main	Sub
Main/Sub switch (SS1)		

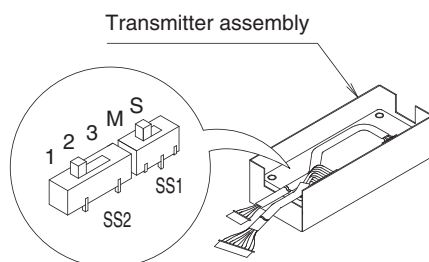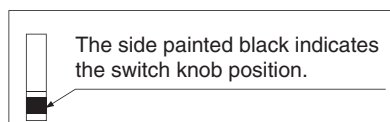

4. Address Setting for Wireless Remote Controller




If setting multiple wireless remote controllers to operate in one room, perform address setting for the receiver and the wireless remote controller.



(This includes an individual remote controller control using the group operation.)

(For the wiring for the group operation, please refer to the installation manual attached to the indoor unit and technical guide.)

4.1 Setting for Signal Receiver PCB

The address for the receiver is set to 1 at the factory. To change the setting, set the wireless address switch (SS2) on the signal receiver PCB according to the table below.

Unit No.	No. 1	No. 2	No. 3
Wireless address switch (SS2)			

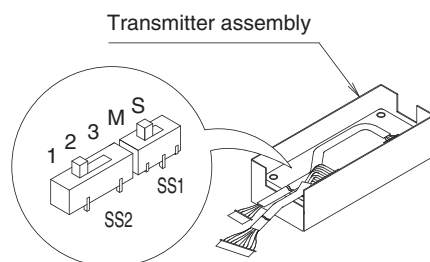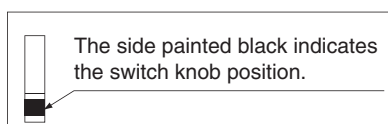

4.2 Setting for BRC4M Series


The address for the wireless remote controller is set to 1 at the factory. To change the setting, proceed as follows:

1. Hold down the **FILTER SIGN RESET** button and the **INSPECTION** button for at least 4 seconds to get the Field Setting mode.
(Indicated in the display area in the figure.)
2. Press the **SELECT** button and select a multiple setting (**A/b**). Each time the button is pressed the display switches between **A** and **b**.
3. Press the **TEMP** buttons to set the address.

1 → 2 → 3 → 4 → 5 → 6

Address can be set from 1 to 6, but set it to 1-3 and to same address as the receiver. (The receiver does not work with address 4-6.)

4. When the **RESERVE** button is pressed, the setting is confirmed and the usual display returns.

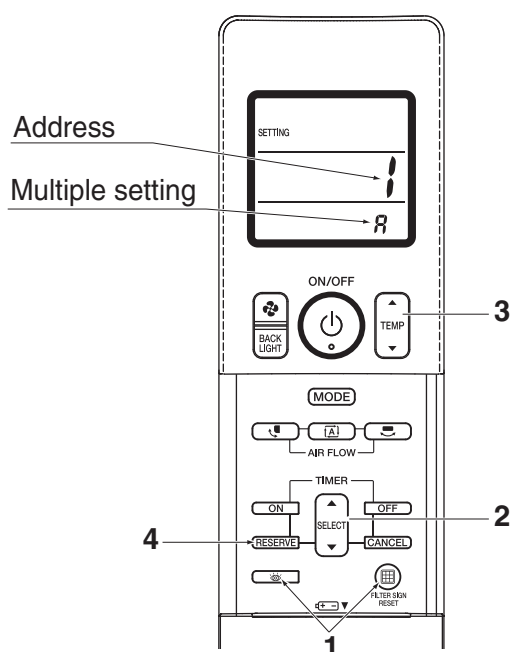

4.3 Multiple Settings A/b

The command such as operation mode or temperature setting by this remote controller will be rejected when the target indoor unit operation is restricted as by an external control such as centralized control.


Since the setting acceptance is hard to discriminate with such circumstances there are two setting options provided to enable discriminating by a beeping sound according to the operation: “**A**: Standard” or “**b**: Multi System”. Set the setting according to the customer's intention.

Remote Controller		Indoor Unit	
Multiple setting	Display on remote controller	Behavior to the remote controller operation when the functions are restricted as by an external control.	Other than the left
A : Standard (factory set)	All items displayed.	Accepts the functions except restricted. (Sounds one long beep or three short beeps) There may be a difference from the indoor unit status with remote controller display.	Accepts all items transmitted (Sounds two short beeps) The remote controller display agrees with the indoor unit status.
b : Multi System	Display only items transmitted for a while.	<p><When some restricted functions are included in the transmitted items> Accepts the functions except restricted. (Sounds one long beep or three short beeps) There may be a difference from the indoor unit status with remote controller display.</p> <p><When no restricted function is included> Accepts all items transmitted (Sounds two short beeps) The remote controller display agrees with the indoor unit status.</p>	


5. Centralized Control Group No. Setting

5.1 BRC1E63

Group No. Setting (Group)

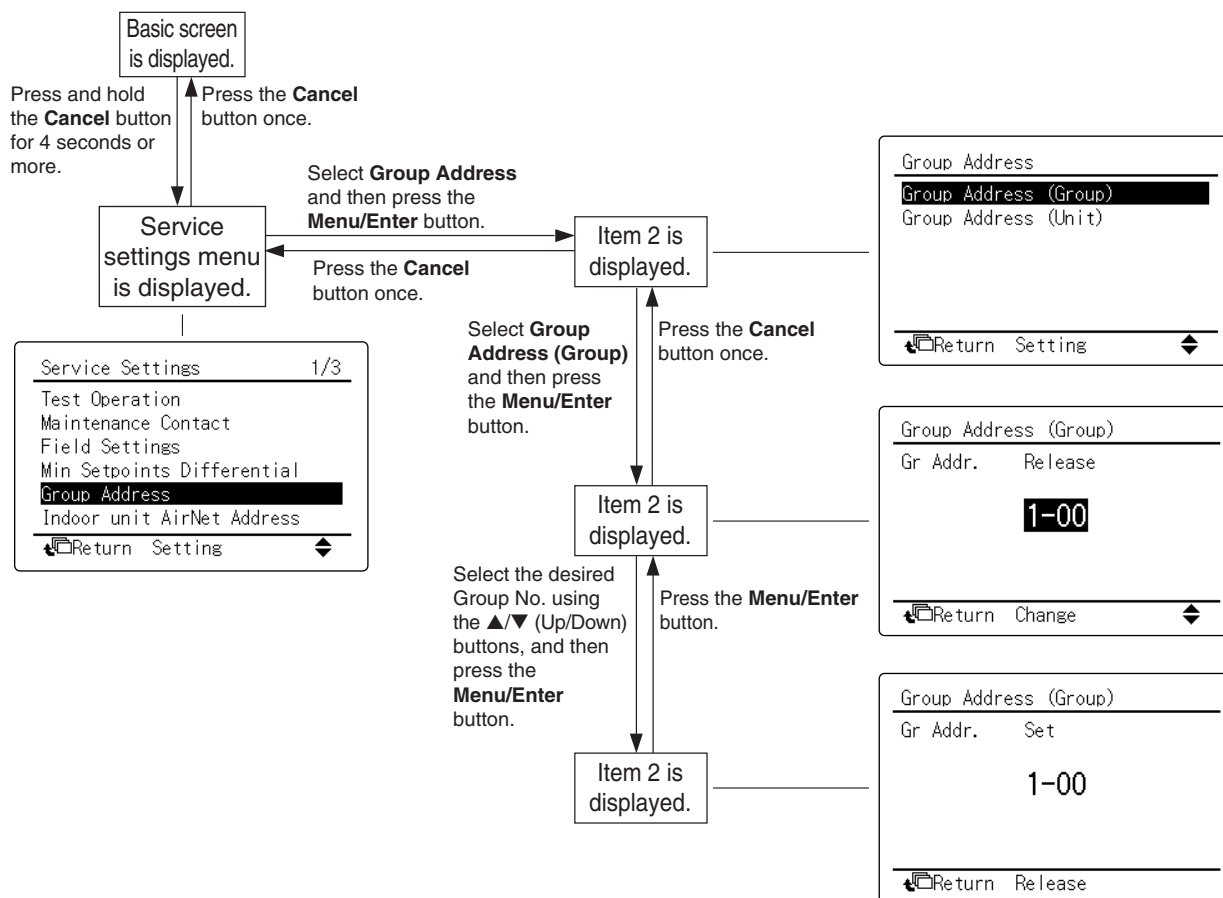

Group No. Setting (Unit)

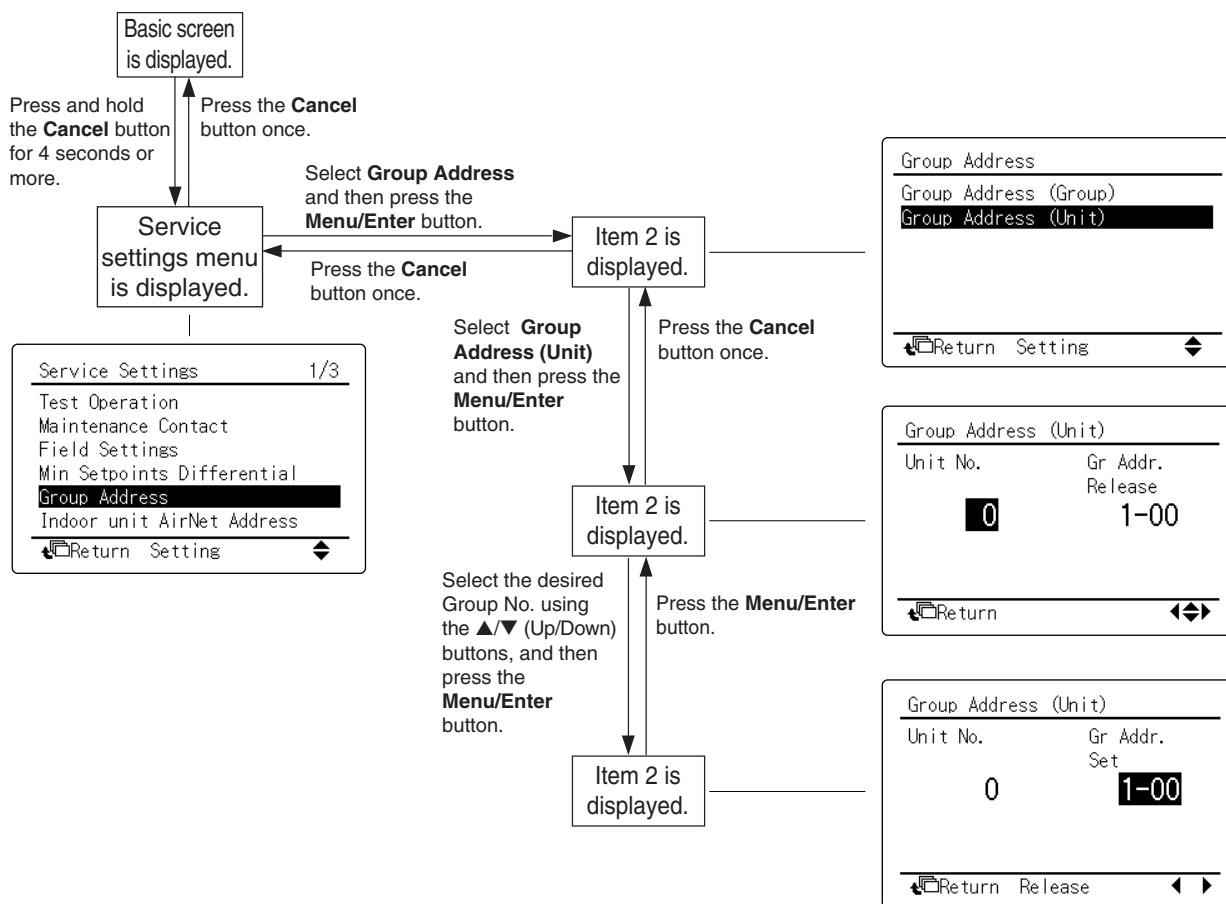




5.2 BRC1H81 Series





Group address

To control the system with central control equipment, you need to set addresses for:


- ♦ Groups (Group) and/or
- ♦ Units (Group (Unit)).

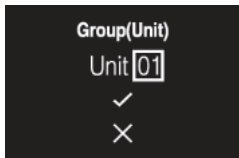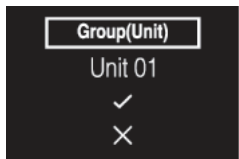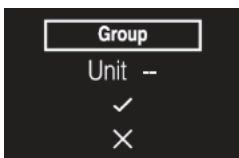The Group address menu has two levels. You define groups and/or units in the first level, and set or release addresses for those groups and/or units in the second.

First level	
	Group (Group): A group is a group of indoor units.
	Unit (Group (Unit)): A unit is an individual indoor unit.
	Define the indoor unit for which you want to set an address.

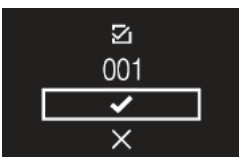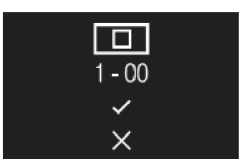Second level	
	Define an address for the indoor unit.
	To SET an address, make sure <input checked="" type="checkbox"/> is selected
	Apply settings.
	To RELEASE an address that was previously set, change <input checked="" type="checkbox"/> to <input type="checkbox"/> and then apply settings.

5.3 Group No. Setting Example

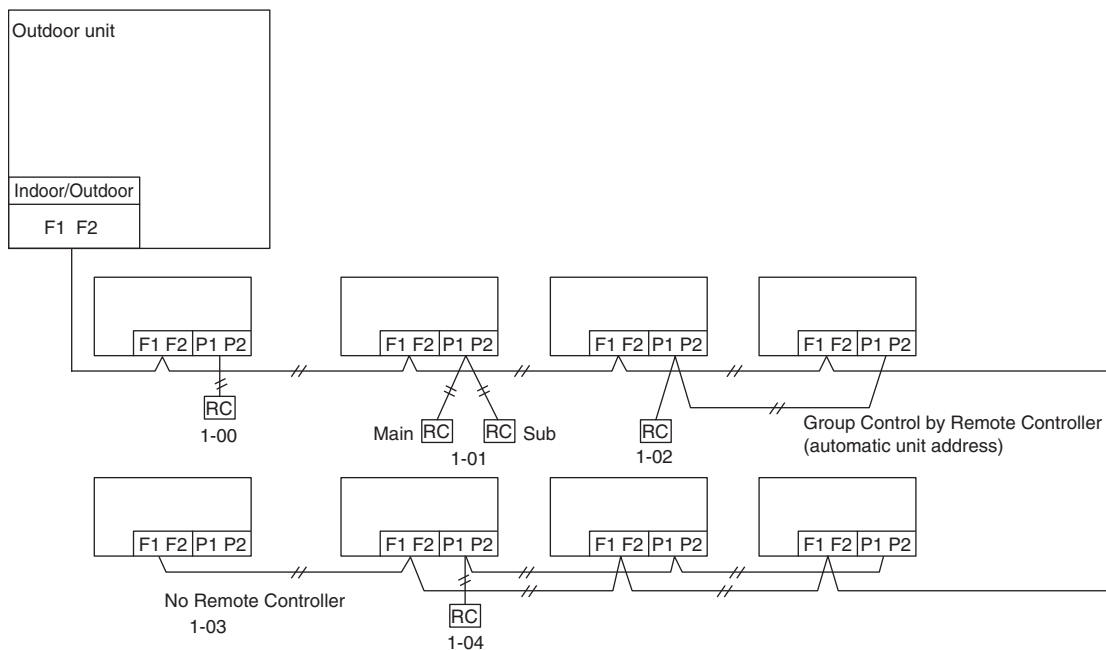


Caution

When turning the power supply on, the unit may often not accept any operation after all indications were displayed once for about 1 minute on the liquid crystal display. This is not an operative fault.

6. Service Settings Menu, Maintenance Menu

6.1 BRC1E63

Operating the remote controller allows service data to be acquired and various services to be set.

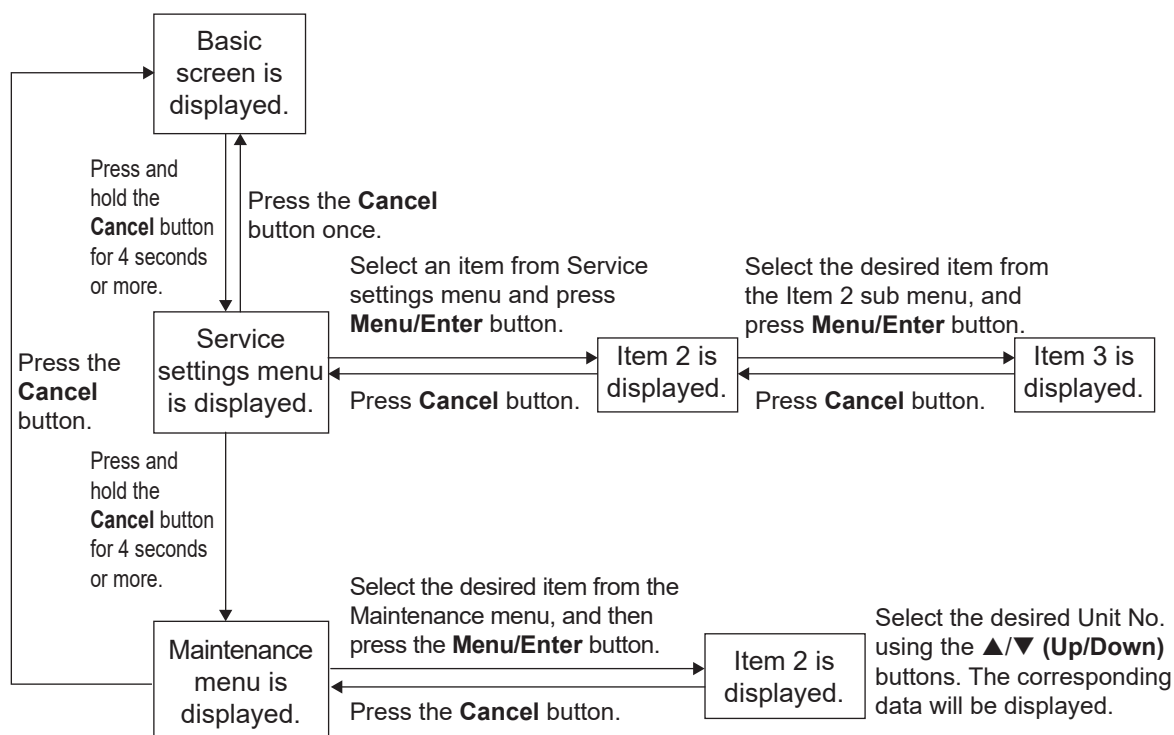

6.1.1 Service Settings Menu

Service settings menu	Item 2	Remarks
Test Operation	—	—
Maintenance Contact	None	—
	Maintenance Contact	—, 0 to 9 (in order)
Field Settings	Indoor Unit No.	—
	Mode No.	—
	First Code No.	—
	Second Code No.	—
Demand	Enable/Disable	Enable, Disable
	Settings	40%, 70%
		Start time (by the unit of 30 minutes)
		Ending time (by the unit of 30 minutes)
Min setpoints Differential	None, Single SP, 0 to 8°C	—
Group Address	Group Address (Group)	Gr Addr. Set
	Group Address (Unit)	Unit No., Gr Addr. Set
Indoor unit Airnet Address	Unit No., Address Set	—
Outdoor unit Airnet Address	Unit No., Address Set	—
Error History	RC Error History	Unit No., Error, Date, Time (Up to 10 errors received by the remote controller can be displayed.)
	Indoor Unit Error History	Unit No., Error, Date, Time (Up to 5 errors from the indoor unit error record can be displayed.)
Indoor Unit Status	Unit No.	—
	Th1	Suction air thermistor
	Th2	Heat exchanger liquid pipe thermistor
	Th3	Heat exchanger gas pipe thermistor
	Th4	Discharge air thermistor
	Th5	—
	Th6	—
Outdoor Unit Status	Unit No.	—
	Th1	Outdoor air thermistor
	Th2	Heat exchanger thermistor
	Th3	Discharge pipe thermistor
	Th4	—
	Th5	—
	Th6	—
Forced Fan ON	Unit No.	—
Switch Main Sub controller	—	—
Filter Indicator	—	—
Test Filter Auto Clean	—	—
Brush / Filter Ind	—	—
Disable Filter Auto Clean	No, Yes	—

6.1.2 Maintenance Menu

Maintenance Menu	Item 2	Remarks
Model Name	Unit No.	Select the unit number you want to check.
	Indoor unit	The model names are displayed. (A model code may be displayed instead, depending on the particular model.)
	Outdoor unit	
	R-32 mark display	BRC1E63 only
Operation Hours	Unit No.	Select the unit number you want to check.
	Indoor unit operation hours	All of these are displayed in hours.
	Indoor fan operation hours	
	Indoor unit energized hours	
	Outdoor unit operation hours	
	Outdoor fan 1 operation hours	
	Outdoor fan 2 operation hours	
	Outdoor compressor 1 operation hours	
	Outdoor compressor 2 operation hours	
Indoor Unit Status	Unit No.	Select the unit number you want to check.
	FAN	Fan tap
	Speed	Fan speed (rpm)
	FLAP	Airflow direction
	EV	Degree that electronic expansion valve is open (pulse)
	MP	Drain pump ON/OFF
	EH	Electric heater ON/OFF
	Hu	Humidifier ON/OFF
	TBF	Anti-freezing control ON/OFF
	FLOAT	FLOAT SWITCH ON/OFF
	T1/T2	T1/T2 input from outside ON/OFF
	Th1	Suction air thermistor *1
	Th2	Indoor liquid pipe thermistor
	Th3	Indoor gas pipe thermistor
	Th4	Discharge air thermistor *2
	Th5	Infrared floor sensor *3
	Th6	Control temperature *4
Outdoor Unit Status	Unit No.	Select the Unit No. you want to check.
	FAN step	Fan tap
	COMP	Compressor power supply frequency (Hz)
	EV1	Degree that electronic expansion valve is open (pulse)
	SV1	Solenoid valve ON/OFF
	Pe	Low pressure (MPa), BRC1E63 only
	Pc	High pressure (MPa), BRC1E63 only
	Th1	—
	Th2	—
	Th3	—
	Th4	—
	Th5	—
	Th6	—
Error Display	Display error ON	Displays the error on the screen.
	Display error OFF	Displays neither errors nor warnings.
	Display warning ON	Displays a warning on the screen if an error occurs.
	Display warning OFF	No warning is displayed.
Swap Unit No.	Current Unit No.	A unit No. can be transferred to another.
	Transfer Unit No.	

Maintenance Menu	Item 2	Remarks
Addressed Sensor Value	Unit No.: 0 - 15	Select the unit number you want to check.
	Code	Remote controller thermistor (°C)
	00:	Suction air thermistor (°C) *5
	01:	Heat exchanger liquid pipe thermistor (°C)
	02:	Heat exchanger gas pipe thermistor (°C)
	03:	Indoor unit address No.
	04:	Outdoor unit address No.
	05:	BS unit address No.
	06:	Zone control address No.
	07:	Cooling/Heating batch address No.
	08:	Demand/low-noise address No.
	09:	Displays human presence detection rate (%) (see *7) in Area 1 (see *6). Display value × 10%. Displays 15 for units with no sensing type mounted.
	22:	Displays human presence detection rate (%) (see *7) in Area 2 (see *6). Display value × 10%. Displays 15 for units with no sensing type mounted.
	23:	Displays human presence detection rate (%) (see *7) in Area 3 (see *6). Display value × 10%. Displays 15 for units with no sensing type mounted.
	24:	Displays human presence detection rate (%) (see *7) in Area 4 (see *6). Display value × 10%. Displays 15 for units with no sensing type mounted.
	25:	Displays human presence detection rate (%) (see *7) in Area 4 (see *6). Display value × 10%. Displays 15 for units with no sensing type mounted.
	26:	Infrared sensor (°C) (See *8). Displays – for units with no sensing type mounted.
	Data	The corresponding data will be displayed, based on the Unit No. and Code selected.

*1: Displays suction air temperature after correction for all models.

*2: Displays temperature only for applicable models.


*3: Displays floor temperature used for control (including correction) when the sensor kit is connected.

*4: Displays control temperature (temperature near the person when the sensor kit is connected).

*5: Displays suction air temperature after correction when the sensor kit is connected.

*6: Areas mean four areas shown on the below.

*7: For human presence detection rate (%), human motion is recognized by digital output ranging from 0 to 5 V. (5 V is output when no human presence is detected, and 0 V is output when human presence is detected.)

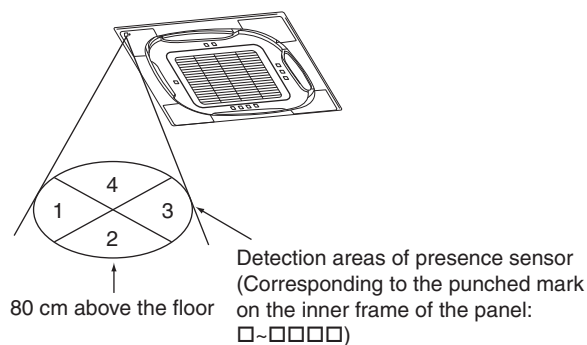

Reference

(1) 0% detection rate: Human presence is not detected at all.

(2) 25% detection rate: Human presence is detected, but the sensor does not recognize human presence.

(3) 50% detection rate: The sensor recognizes human presence (small human motion).


(4) 75% detection rate: The sensor recognized human presence (large human motion).


(5) 100% detection rate: The sensor constantly outputs 0 V. Continuing this condition will display an error.

*8: Directly displays a measured value sent from the adaptor PCB.


6.2 BRC1H81 Series

6.2.1 To enter the installer menu

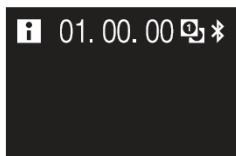











Press  and keep it pressed until the information screen appears. The presence of icons on the information screen depends on operation status. The controller may display more or less icons than are indicated here.



From the information screen, press  and  simultaneously and keep them pressed until you enter the installer menu.

6.2.2 Installer menu

Category	Icon	Settings	Category	Icon	settings
Screen settings		Brightness	Miscellaneous settings		Group address and Airtel address
		Contrast			Extremal input interlock
Status indicator settings		Intensity			Force fan ON
Field settings		Indoor unit field settings			Switch Cooking/ Heating master
		Remote controller field settings			Information


Part 4

Functions and Control

1. Operation Flowchart.....	50
2. Stop Control	51
2.1 Abnormal Shutdown	51
2.2 When System is in Stop Control.....	51
3. Standby Control	52
3.1 Restart Standby.....	52
3.2 Crankcase Heater Control.....	52
4. Startup Control	53
4.1 Cooling Startup Control	53
4.2 Heating Startup Control.....	53
5. Normal Control	54
5.1 List of Functions in Normal Control	54
5.2 Compressor Control	55
5.3 Compressor Capacity Control	56
5.4 Compressor Step Control.....	57
5.5 Electronic Expansion Valve Control	58
5.6 Step Control of Outdoor Fans	58
6. Protection Control	59
6.1 High Pressure Protection Control.....	59
6.2 Low Pressure Protection Control.....	60
6.3 Discharge Pipe Protection Control	60
6.4 Inverter Protection Control	61
6.5 Heating Operation Prohibition	64
6.6 Overload Protection Control	64
7. Special Control.....	65
7.1 Pump Down Residual Control	65
7.2 Oil Return Control.....	65
7.3 Defrost Control	67
8. Outline of Control (Indoor Unit)	68
8.1 Set Temperature and Control Target Temperature.....	68
8.2 Thermostat Control.....	69
8.3 Automatic Airflow Rate Control	72
8.4 Airflow Direction Control.....	73
8.5 Auto Draft Reducing Control (FXFSQ-AR only)	74
8.6 Eco Full Automatic Control (FXFSQ-AR only).....	74
8.7 Drain Pump Control.....	75
8.8 Freeze-Up Prevention Control.....	77
8.9 Dew Condensation Prevention Control	78
8.10 Electronic Expansion Valve Control	79
8.11 Circulation Airflow (FXFSQ-AR only)	80
8.12 Hot Start Control (In Heating Operation Only).....	81
8.13 Heater Control (Optional PCB KRP1B series is required.).....	82

1. Operation Flowchart

For detailed description of each function in the flow below, refer to the details on related function on the following pages.

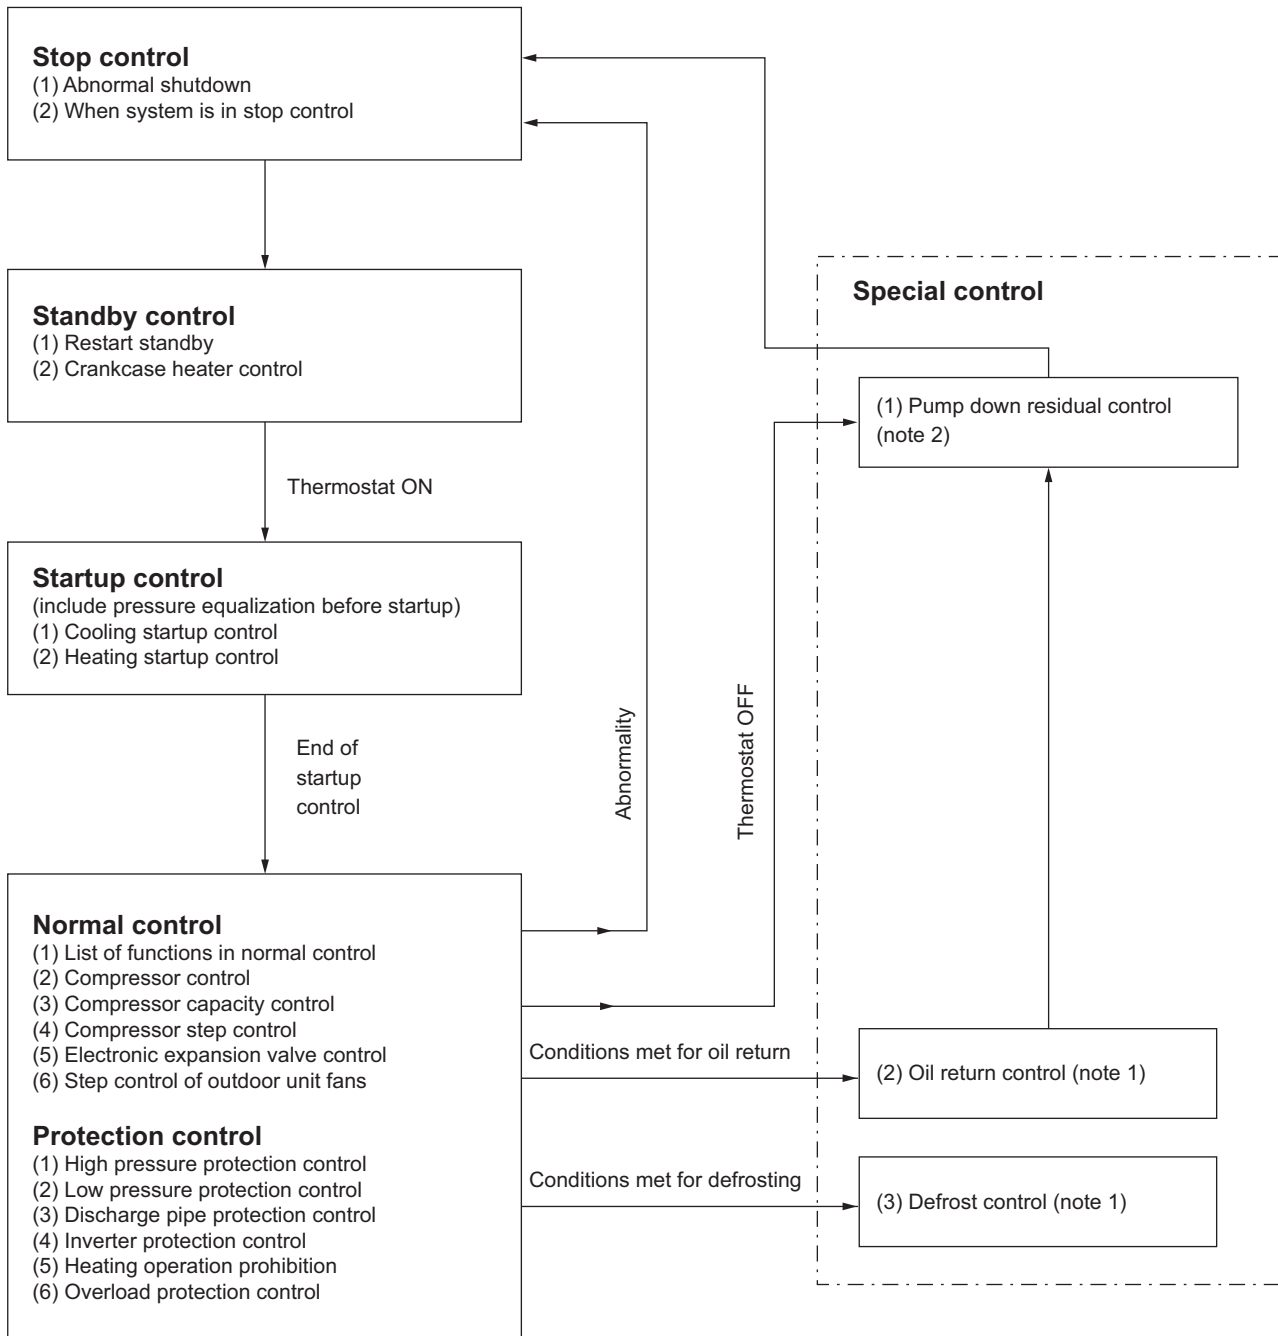

Note(s)

1. If the indoor unit stops or the thermostat turns OFF while in oil return control or defrost control, pump down residual operation is performed on completion of the oil return operation or defrost control.
2. Not performed during cooling mode.

2. Stop Control

2.1 Abnormal Shutdown

In order to protect compressors, if any of the abnormal state occurs, the system will make "stop with thermostat OFF" and the error will be determined according to the number of retry times. (Refer to **Error Codes and Descriptions** on page 153 for the items to determine the error.)

2.2 When System is in Stop Control

The four way valve retains the condition before it was stopped.

3. Standby Control


3.1 Restart Standby

Used to forcibly stop the compressor for a period of 5 minutes, in order to prevent the frequent ON/OFF of the compressor and equalize the pressure within the refrigerant system.

In addition, the outdoor fan carry out the residual operation for a while to accelerate pressure equalizing and to suppress melting of the refrigerant to the evaporator.

3.2 Crankcase Heater Control

In order to prevent the refrigerant from melting in the compressor oil in the stopped mode, this mode is used to control the crankcase heater.

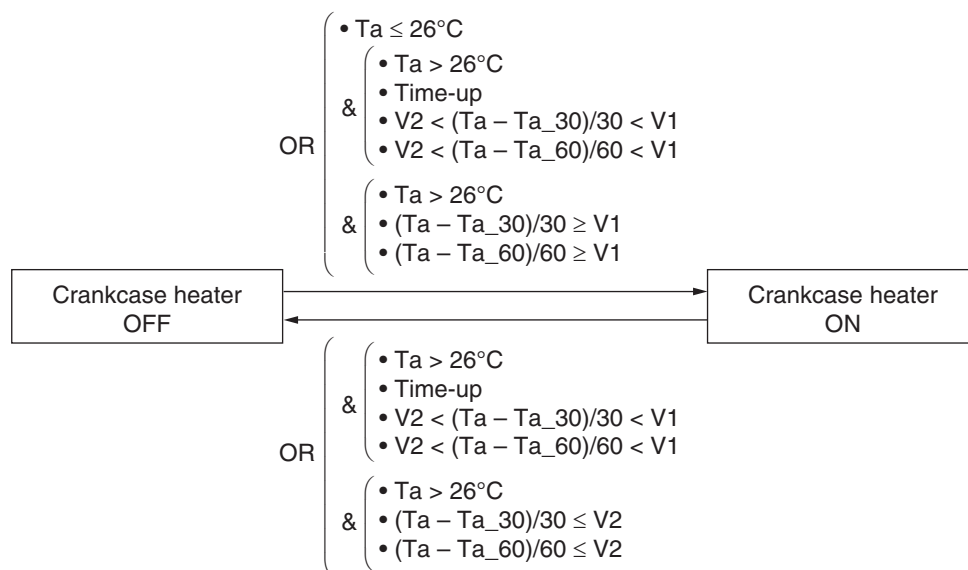

* T_{a_30} , T_{a_60} : Outdoor air temperature 30 minutes before and 60 minutes before, respectively.

	V1	V2
2Y350	0.05664	-0.15151
2Y420	0.03021	-0.08081

4. Startup Control

This control is used to equalize the pressure in the front and back of the compressor prior to the startup of the compressor, thus reducing startup loads. Furthermore, the inverter is turned ON to charge the capacitor.

To avoid stresses to the compressor due to oil return or else after the startup, the following control is made and the position of the four way valve is also determined.

Pc : High pressure sensor detection value


Pe : Low pressure sensor detection value

Ta : Outdoor air temperature


Te : Low pressure equivalent saturation temperature

Td : Discharge temperature

4.1 Cooling Startup Control

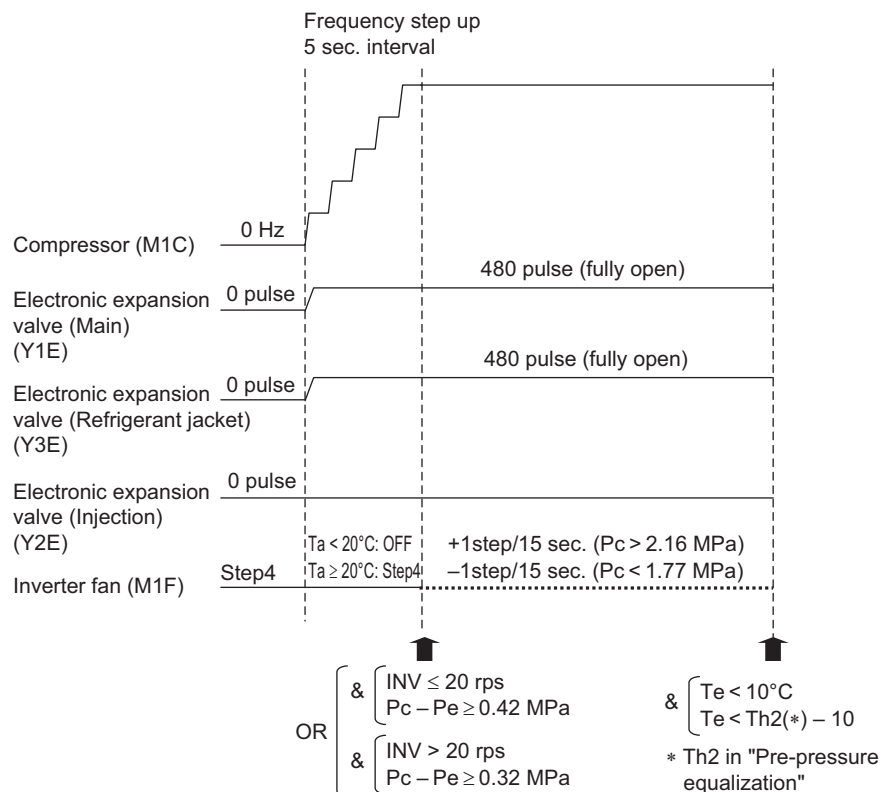

4.2 Heating Startup Control

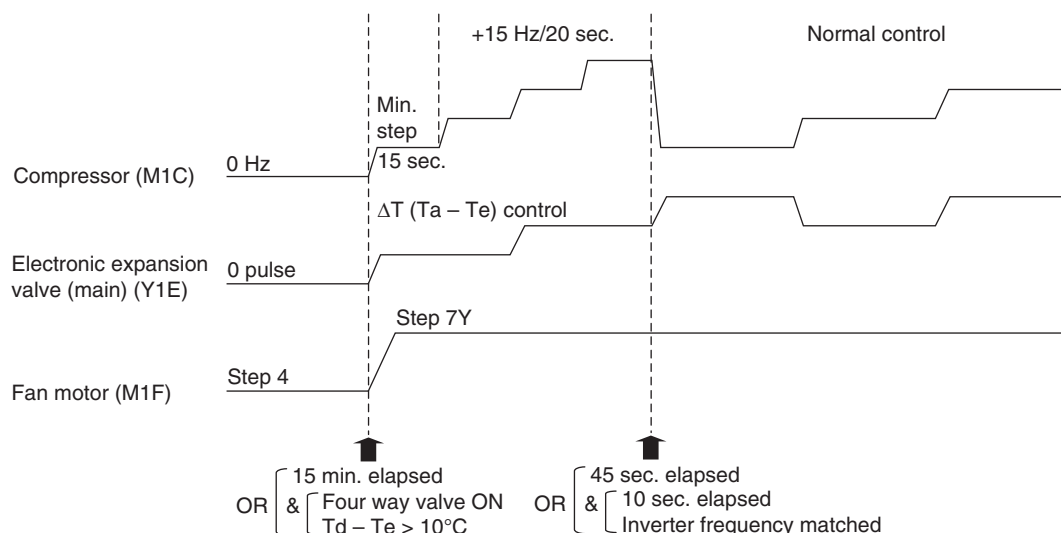

5. Normal Control

5.1 List of Functions in Normal Control

Pc : High pressure sensor detection value

Pe : Low pressure sensor detection value

Tc : High pressure equivalent saturation temperature

Te : Low pressure equivalent saturation temperature

Cooling

Part Name	Electric Symbol	RXYMQ-A	Function
Compressor motor	M1C	●	PI control by Te target.
Fan motor	M1F	●	Fan speed 9 steps to keep minimum Tc target 41°C.
Electronic expansion valve (Main)	Y1E	●	0 pulse: closed (thermostat OFF) 0-480 pulses: open (thermostat ON)
Electronic expansion valve (Injection)	Y2E	●	0-480 pulse at compressor ON
Electronic expansion valve (Refrigerant jacket)	Y3E	●	480 pulse
Electronic expansion valve (Refrigerant auto charge)	Y4E	●	Minimum pulse
Four way valve	Y1S	●	OFF

●: equipped

—: not equipped

Heating

Part Name	Electric Symbol	RXYMQ-A	Function
Compressor motor	M1C	●	PI control by Tc target.
Fan motor	M1F	●	Fan step 7Y (normal Tc & Te) or Fan step 8 (high load).
Electronic expansion valve (Main)	Y1E	●	0 pulse: closed (thermostat OFF), 0-480 pulses: SH control 5K
Electronic expansion valve (Injection)	Y2E	●	0-480 pulses at compressor ON: based on indoor demand.
Electronic expansion valve (Refrigerant jacket)	Y3E	●	0 pulse: closed 0-480 pulse: open (when fin temperature increases)
Electronic expansion valve (Refrigerant auto charge)	Y4E	●	Minimum pulse
Four way valve	Y1S	●	ON

●: equipped

—: not equipped

5.2 Compressor Control

In order to provide a steady capacity, the compressor capacity is controlled to achieve temperature T_e (or T_c) during cooling (or heating) operation.

During cooling (or heating) operation

The compressor capacity is controlled so T_e (or T_c) approaches T_{eS} (or T_{cS}) (target value of temperature).

1. VRTsmart Control

■ When all the connected indoor units are VRTsmart control applicable models

* Applicable models: FXFSQ-AR, FXDQ-PD, FXDQ-ND, FXMQ-PB, FXAQ-AR

The required capacity is calculated based on the operation condition of each individual indoor unit and this data is transmitted to the outdoor unit. The outdoor unit adjusts the refrigerant temperature of the whole system to an adequate value according to the indoor unit that needs the most capacity.

In case of target evaporation (or condensation) temperature adjustment, first the capacity is adjusted by changing the indoor unit airflow to L tap. If the capacity is still too much, the target evaporation (or condensation) temperature is elevated further to adjust.

2. VRT Control

■ When one or more of the connected indoor units are not VRTsmart control applicable models

If the required capacity becomes low (or high) in all indoor units (Room temperature $Th1$ - set temperature), the target evaporation (or condensation) temperature is elevated further to adjust. In the outdoor unit, the difference of temperature (ΔT) in all indoor units is checked and the set temperature is changed. Unlike VRTsmart control, there is no airflow control of the indoor units.

3. T_e fix Control (for cooling)

The target evaporation temperature is not changed.

T_e value (Set in mode 2-8)

Standard (Factory setting)	High				
6	7	8	9	10	11

T_e : Low pressure equivalent saturation temperature ($^{\circ}\text{C}$)

T_{eS} : T_e target value (varies according to T_e setting, compressor operation frequency, etc.)

4. T_c fix Control (for heating)

The target condensation temperature is not changed.

T_c value (Set in mode 2-9)

Low	Standard	High (Factory setting)
41	43	46

T_c : High pressure equivalent saturation temperature

T_{cS} : T_c target value (varies according to T_c setting)

5.3 Compressor Capacity Control

Tc : High pressure equivalent saturation temperature

Te : Low pressure equivalent saturation temperature

Capacity steps

The compressor rotation speed is changed according to the control pressure.

- Cooling: suction pressure sensor value is converted into evaporation saturated temperature (relation between pressure and evaporating temperature based on characteristics of refrigerant R-410A). For detailed explanation refer to chapter field settings (**Details of Setting Mode (Mode 2)** on page 122 and installation manual outdoor chapter Energy saving and optimum operation).
 - Initial selection is made between Automatic, Fixed or High sensible.
 - During operation, the outdoor target evaporating temperature can be changed based on the selected sub function, taking indoor load into account.
- Heating: discharge pressure sensor value is converted into condensing saturation temperature.
 - Initial selection is made between Automatic, Fixed, or High sensible.
 - During operation, the outdoor target condensing temperature can be changed based on the selected sub function, taking indoor load into account.
- The initial target saturated temperature can be changed. For details refer to **Details of Setting Mode (Mode 2)** on page 122 for Cooling: Te set based on field setting 2-8, for heating: Tc set based on field setting 2-9.
- During operation, outdoor control will take into account the pressure drop so that at indoor units, the preset target temperature is reached (average). The estimated pressure drop is calculated based on:
 - Pressure drop characteristics found during test-operation outdoor (step 7). At several evaporating temperatures, outdoor control stores difference between outdoor evaporating temperature and average of indoor heat exchanger (indoor evaporating temperature).
 - To have judgment of gas speed in main suction pipe, control takes the capacity step of the outdoor unit into account. In function of pressure drop characteristics at the different compressor capacity steps, control concludes the category of system pipe lay out (long, medium, short).
- Target Te outdoor (cooling) = Te set – estimated pressure drop – **A**.
- Target Tc outdoor (heating) = Tc set + estimated pressure drop + **A**.
- Correction factor **A** depends on the absolute value of the difference between indoor air inlet temperature and a set temperature after startup period.

5.4 Compressor Step Control

- The actual rotation speed per second of the compressor (rps) depends on the type of compressor.
- The control can skip a number of steps to reach faster the target saturation temperature.

RXYMQ4AVMK

Step No.	Frequency (Hz)	
	Cooling	Heating
1	27.0	27.0
2	27.6	27.6
3	28.1	28.1
4	28.8	28.8
5	29.7	29.7
6	30.6	30.6
7	31.5	31.5
8	32.3	32.3
9	32.8	32.8
10	33.5	33.5
11	34.2	34.2
12	35.1	35.1
13	36.0	36.0
14	36.9	36.9
15	37.7	37.7
16	38.2	38.2
17	38.6	38.6
18	39.1	39.1
19	39.6	39.6
20	40.4	40.4
21	41.3	41.3
22	42.2	42.2
23	43.2	43.2
24	44.3	44.3
25	45.6	45.6
26	46.8	46.8
27	47.9	47.9
28	49.0	49.0
29	50.1	50.1
30	51.3	51.3
31	52.8	52.8
32	54.2	54.2
33	55.8	55.8
34	57.5	57.5
35	58.9	58.9
36	60.3	60.3
37	62.0	62.0
38	63.8	63.8
39	65.7	65.7
40	67.5	67.5
41	69.3	69.3
42	71.1	71.1
43	72.9	72.9
44	74.7	74.7
45	76.5	76.5
46	78.3	78.3
47	80.1	80.1
48	81.9	81.9
49	83.7	83.7
50	85.5	85.5
51	87.3	87.3
52	89.1	89.1
53	90.9	90.9
54	92.7	92.7
55	94.5	94.5
56	96.3	96.3
57	98.1	98.1
58	100.1	100.1
59	102.3	102.3
60	104.4	104.4
61	106.4	106.4
62	108.2	108.2
63	109.8	109.8
64	111.5	111.5
65	113.3	113.3
66	115.2	115.2

Step No.	Frequency (Hz)	
	Cooling	Heating
67	117.2	117.2
68	119.4	119.4
69	121.5	121.5
70	123.5	123.5
71	125.7	125.7
72	127.8	127.8
73	130.2	130.2
74	132.5	132.5
75	135.0	135.0
76	137.4	137.4
77	139.7	139.7
78	142.2	142.2
79	144.8	144.8
80	147.5	147.5
81	150.3	150.3
82	153.0	153.0
83	155.7	155.7
84	158.4	158.4
85	161.3	161.3
86	164.4	164.4
87	—	167.4
88	—	170.3
89	—	173.4
90	—	176.4

RXYMQ4-6AYFK


Step No.	Frequency (Hz)	
	Cooling	Heating
1	22.4	22.4
2	23.1	23.1
3	23.8	23.8
4	24.7	24.7
5	25.8	25.8
6	26.9	26.9
7	28.0	28.0
8	29.4	29.4
9	30.7	30.7
10	32.1	32.1
11	33.6	33.6
12	35.0	35.0
13	36.1	36.1
14	37.0	37.0
15	38.1	38.1
16	39.2	39.2
17	40.1	40.1
18	40.8	40.8
19	41.7	41.7
20	42.6	42.6
21	43.7	43.7
22	44.8	44.8
23	46.0	46.0
24	46.9	46.9
25	47.5	47.5
26	48.0	48.0
27	48.7	48.7
28	49.3	49.3
29	50.2	50.2
30	51.3	51.3
31	52.5	52.5
32	53.8	53.8
33	55.2	55.2
34	56.7	56.7
35	58.3	58.3
36	59.6	59.6
37	61.0	61.0
38	62.3	62.3
39	63.9	63.9
40	65.7	65.7
41	67.5	67.5
42	69.5	69.5
43	71.5	71.5
44	73.3	73.3
45	75.1	75.1
46	77.1	77.1
47	79.3	79.3
48	81.8	81.8
49	84.0	84.0
50	86.3	86.3
51	88.5	88.5
52	90.8	90.8
53	93.0	93.0
54	95.2	95.2
55	97.5	97.5
56	99.7	99.7
57	102.0	102.0
58	104.2	104.2
59	106.4	106.4
60	108.7	108.7
61	110.9	110.9
62	113.2	113.2
63	115.4	115.4
64	117.6	117.6
65	119.9	119.9
66	122.1	122.1

Step No.	Frequency (Hz)	
	Cooling	Heating
67	124.6	124.6
68	127.3	127.3
69	130.0	130.0
70	132.4	132.4
71	134.7	134.7
72	136.7	136.7
73	138.7	138.7
74	140.9	140.9
75	143.4	143.4
76	145.9	145.9
77	148.6	148.6
78	151.2	151.2
79	153.7	153.7
80	156.4	156.4
81	159.1	159.1
82	162.0	162.0
83	164.9	164.9
84	168.0	168.0
85	171.0	171.0
86	173.9	173.9
87	177.0	177.0
88	180.1	180.1
89	183.5	183.5
90	187.1	187.1
91	190.4	190.4
92	193.8	193.8
93	197.2	197.2
94	200.8	200.8
95	204.6	204.6
96	208.4	208.4
97	212.0	212.0
98	215.8	215.8
99	219.6	219.6
100	223.2	223.2
101	227.0	227.0
102	231.0	231.0
103	235.2	235.2
104	239.7	239.7
105	244.2	244.2
106	248.5	248.5
107	252.5	252.5
108	—	256.3
109	—	260.3
110	—	264.6
111	—	268.8


5.5 Electronic Expansion Valve Control

Electronic expansion valve Y1E

- Cooling: electronic expansion valve is used only at fully closed or fully open condition:
 - Compressor(s) OFF: fully closed (0 pulse).
 - Compressor ON:
 - ◆ Fully open (480 pulses)
 - ◆ Normally, the control is used to reduce the PCB temperature.

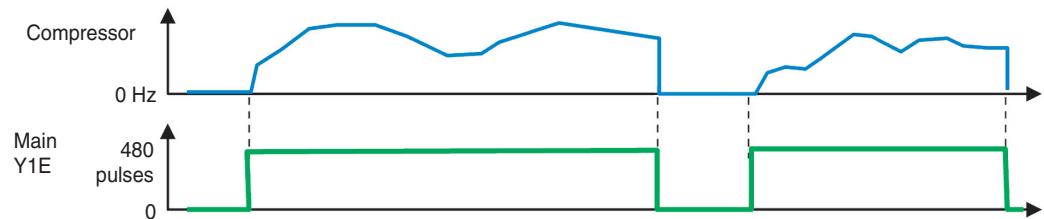

- Heating: electronic expansion valve is used in PID control suction superheat:
 - Compressor(s) OFF: fully closed (0 pulse).
 - Compressor ON:
 - ◆ At startup: closed (check suction pressure drops)
 - ◆ Modulated opening by:
 - Suction superheat = accumulator inlet °C – evaporating temperature.
 - Discharge superheat = discharge compressor °C – condensing temperature.
 - Preventive change when compressor capacity step changes.
 - Limited opening when condensing temperature exceeds target condensing.

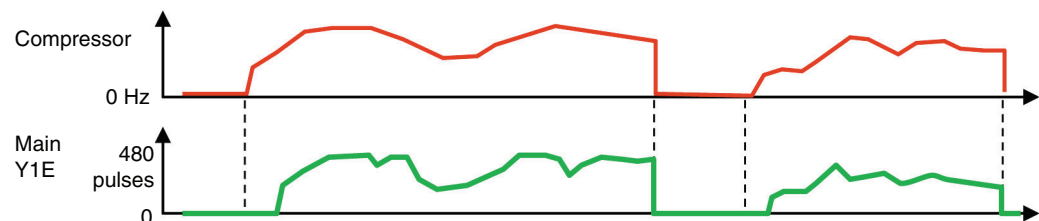

5.6 Step Control of Outdoor Fans

Used to control the revolutions of outdoor fans in the steps listed in table below, according to condition changes.

Step No.	Fan revolutions (rpm)			
	RXYMQ4AVMK		RXYMQ4-6AYFK	
	Cooling	Heating	Cooling	Heating
0	0	0	0	0
1	200	200	440	440
2	250	250	440	440
3	300	300	440	440
4	360	370	440	440
5	420	440	480	550
6	490	515	550	660
7Y	560	590	650	780
7X	630	670	830	940
8	700	750	960*	1,060

* When the system detects that outdoor air temperature (Ta) reaches 41°C or more, the control of fan revolutions will be changed to 1,060 rpm automatically.



Note(s)

- Table shown above is for external static pressure level 0. In case of high external static pressure, the unit will re-adjust fan revolutions automatically and values may differ.
- When capacity priority mode is set, values may differ.


6. Protection Control

6.1 High Pressure Protection Control

This high pressure protection control is used to prevent the activation of protection devices due to abnormal increase of high pressure and to protect compressors against the transient increase of high pressure.


Cooling

The following control is performed in the entire system.

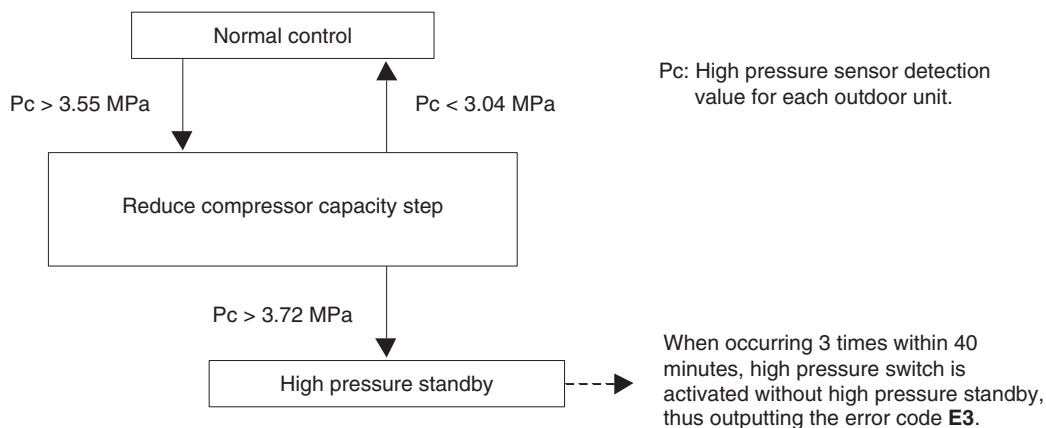

Heating

The following control is performed in the entire system.

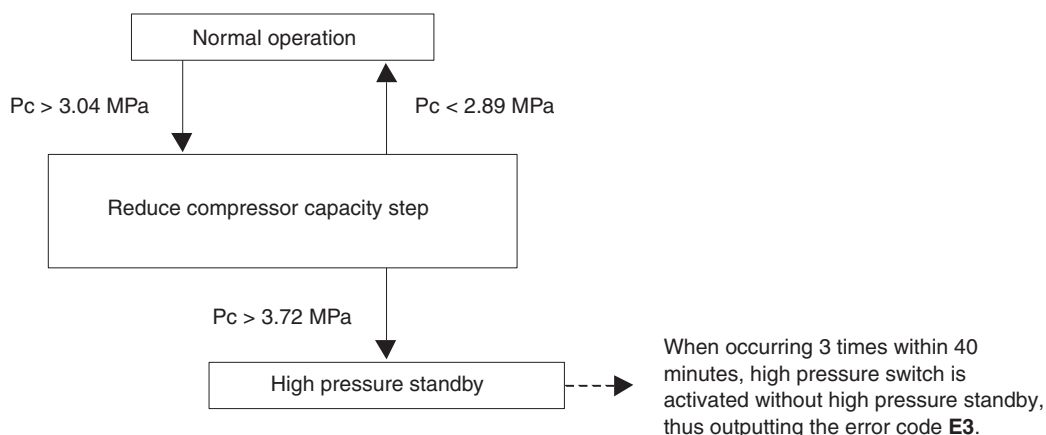


6.2 Low Pressure Protection Control

This low pressure protection control is used to protect compressors against the transient decrease of low pressure.


Cooling

Because of common low pressure, the following control is performed in the system.

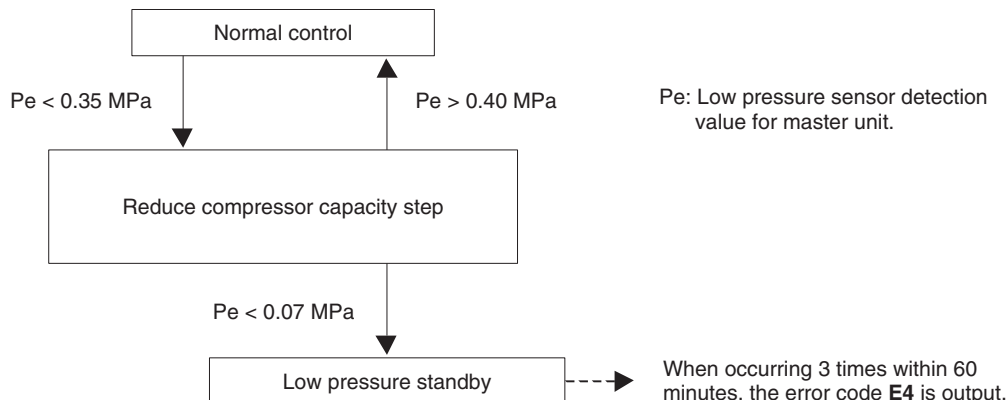


Heating

The following control is performed in the system.

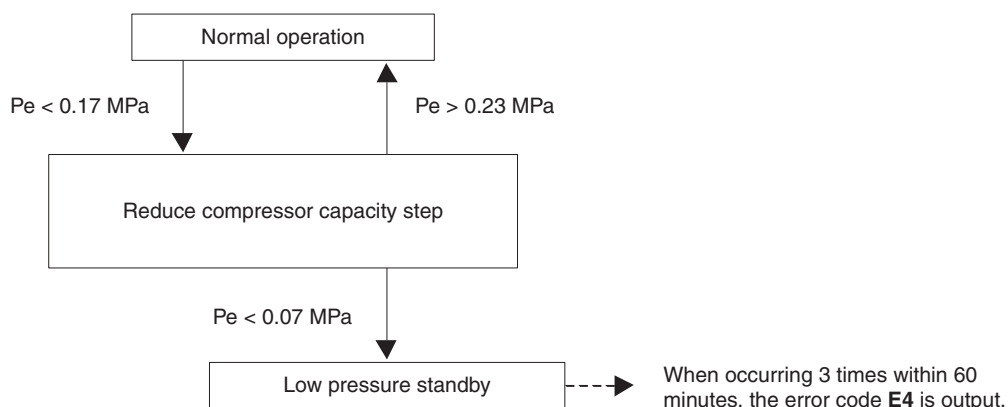

6.3 Discharge Pipe Protection Control


This discharge pipe protection control is used to protect the compressor internal temperature against an error or transient increase of discharge pipe temperature.

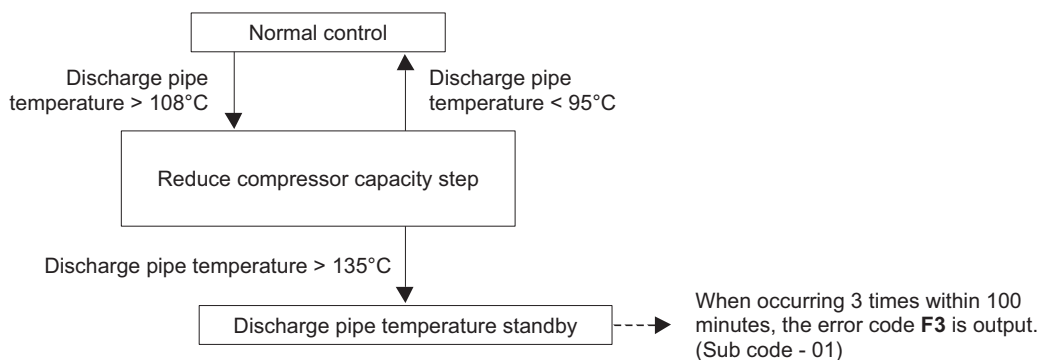

6.4 Inverter Protection Control

Inverter current protection control and radiation fin temperature control are performed to prevent tripping due to an abnormality, or transient inverter overcurrent, and fin temperature increase.

Inverter overcurrent protection control by primary current [CTi1]

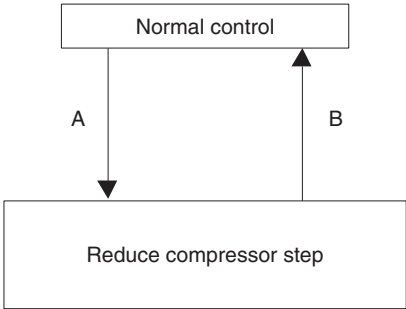


Cooling


Condition	Primary current [CTi1] (A)	
	Ta < 43 °C	Ta ≥ 43 °C
A	> 27.0	> CTi1 in graph A
B	≤ 25.0	≤ CTi1 in graph B

Heating


Condition	Primary current [CTi1] (A)
A	> 26.5
B	≤ 24.5

Graph A

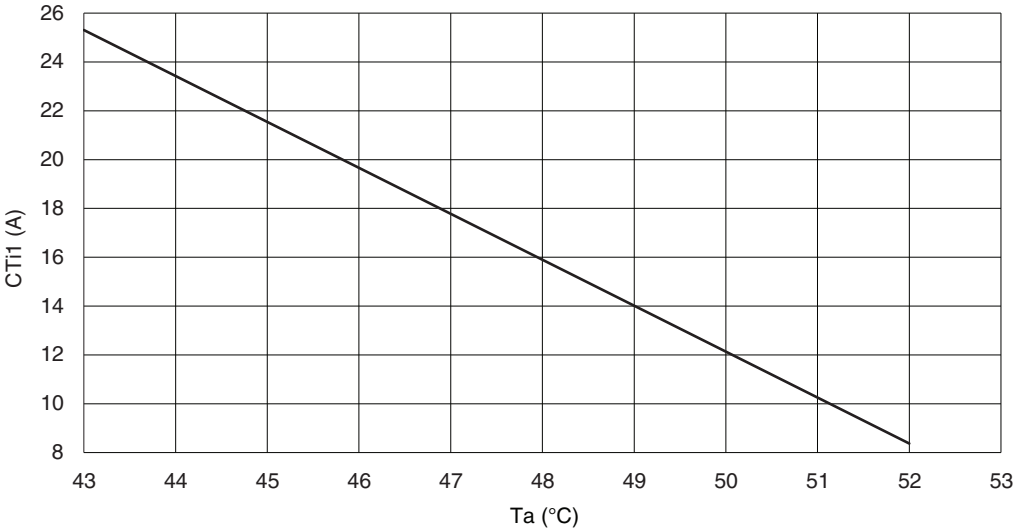

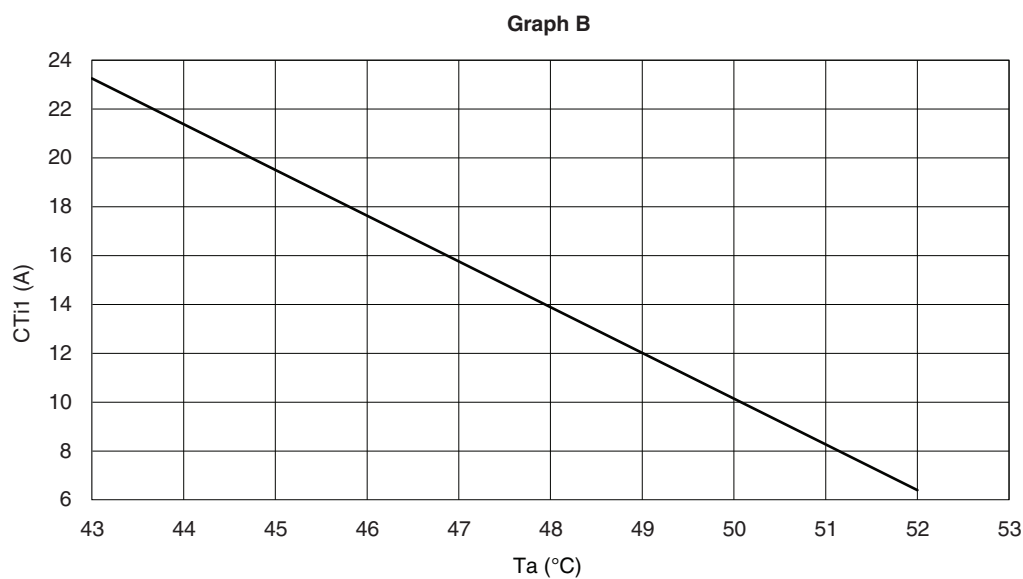

Inverter overcurrent protection control by secondary current [CTi2]

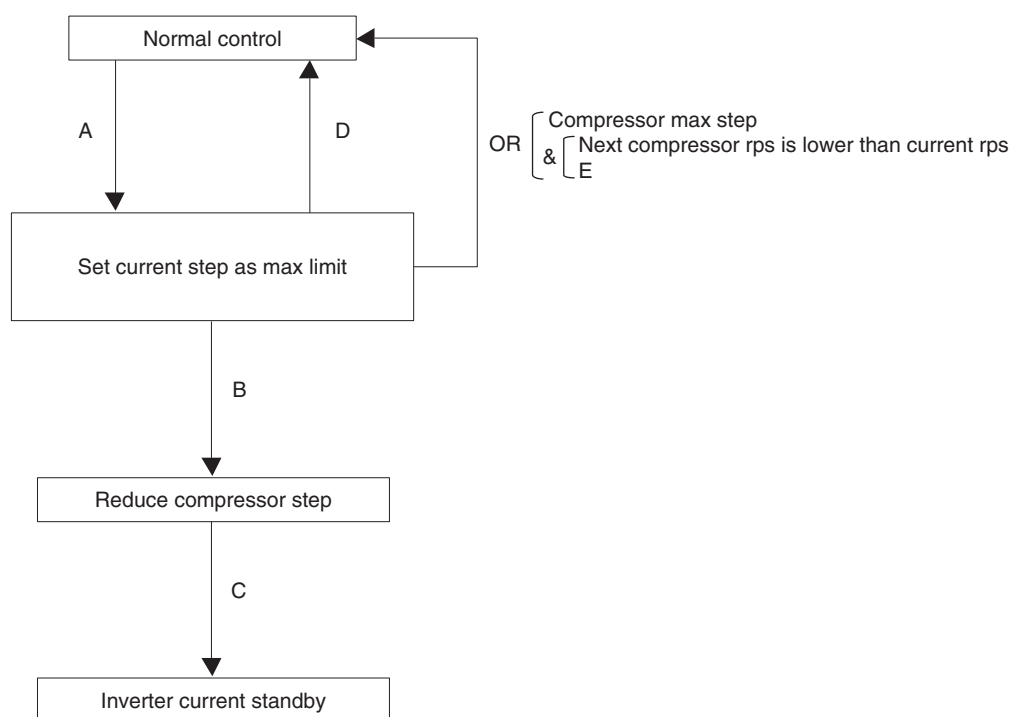

Cooling


Condition	Secondary current [CTi2] (A)
A	> 17.5 (90 sec) or > 18.0
B	> 18.5 (90 sec) or > 19.0
C	> 22.1
D	≤ 14.5
E	≤ 18.5

Heating

Condition	Secondary current [CTi2] (A)
A	> 18.0 (90 sec) or > 18.5
B	> 19.0 (90 sec) or > 19.5
C	> 22.1
D	≤ 15.0
E	≤ 19.0

Radiation fin temperature control

This control is performed for each compressor.

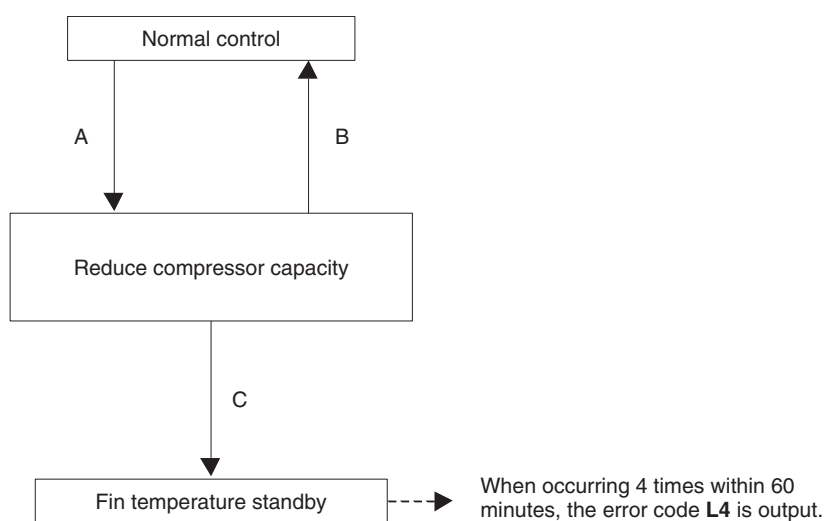**Cooling**

Condition	All compressors
A	more than 91 °C
B	less than 89 °C
C	more than 110 °C

Heating


Condition	All compressors
A	more than 86.5 °C
B	less than 83.5 °C
C	more than 110 °C

6.5 Heating Operation Prohibition

- When outdoor air temperature becomes high, outdoor unit cannot perform heating because:
 - Low pressure sensor can give pressure value above upper limit of sensor: error **JC**.
 - Mechanical internal load on compressor increases.
 - Low compression ratio can result in insufficient compressor internal oil lubrication.
- Heating is disabled when outdoor air temperature rises above 27°C.
 - Forced thermostat-OFF indoor units.
 - Outdoor fan operates at step 1.
- Heating returns available when outdoor air temperature drops below 25°C.

6.6 Overload Protection Control

Prevent ignition due to abnormal heating of the compressor when it becomes damaged or abnormal operation.

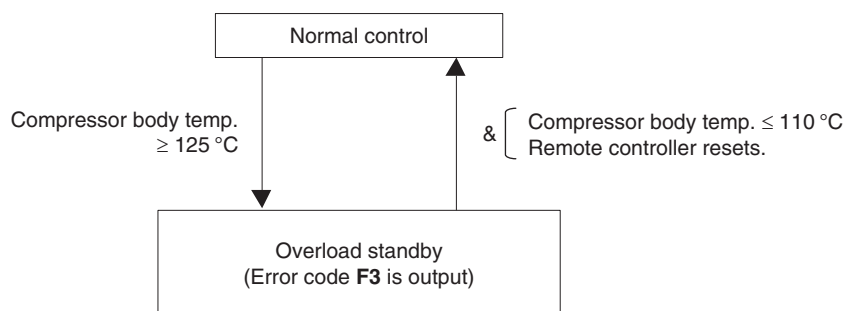

7. Special Control

7.1 Pump Down Residual Control

Pc : High pressure sensor detection value

Pe : Low pressure sensor detection value

To avoid refrigerant emigration when outdoor unit stops operation (thermostat or safety), all electronic expansion valves are closed.

7.2 Oil Return Control

In order to prevent the compressor from running out of oil, the oil return control is conducted to recover oil that has flowed out from the compressor to the system side.

Tc : High pressure equivalent saturation temperature

Te : Low pressure equivalent saturation temperature

Ts1: Suction pipe temperature detected by thermistor R3T

Starting conditions

- Oil return control is not conducted before 2 hours have elapsed from the activation of power supply.
- After 2 hours have elapsed, oil return control starts when the following item meets the reference value.
 - Total amount of oil discharged from the compressor
(The total amount of oil discharged from the compressor is computed from Tc, Te, and compressor loads.)
- Oil return control starts every 8 hours of cumulative operation of the compressor, even if the reference value is not met.

7.2.1 Oil Return Control in Cooling Operation

Part Name	Electric Symbol	RXYMQ-A	Function
Compressor motor	M1C	●	Capacity step PI control
Fan motor	M1F	●	TC control
Electronic expansion valve (Main)	Y1E	●	480 pulse
Electronic expansion valve (Injection)	Y2E	●	0 pulse
Electronic expansion valve (Refrigerant jacket)	Y3E	●	480 pulse
Electronic expansion valve (Refrigerant auto charge)	Y4E	●	480 pulse
Four way valve	Y1S	●	ON
Ending conditions			$\begin{array}{l} \text{& } \left(\begin{array}{l} \cdot \text{ A lapse of 3 minutes.} \\ \text{OR} \left(\begin{array}{l} \cdot \text{ Ts1-Te} < 3^{\circ}\text{C} \\ \cdot \text{ A lapse of 6 minutes} \\ \text{while the frequency} \\ \text{is more than that of} \\ \text{oil return control.} \end{array} \right. \end{array} \right. \end{array}$

Indoor unit actuator		Cooling oil return control
Fan	Thermostat ON unit	Remote controller setting
	Non-operating unit	OFF
	Thermostat OFF unit	Remote controller setting
Electronic expansion valve	Thermostat ON unit	Normal control
	Non-operating unit	224 pulse
	Thermostat OFF unit	Normal control with forced thermostat ON

7.2.2 Oil Return Control in Heating Operation

Part Name	Electric Symbol	RXYMQ-A	Function
Compressor motor	M1C	●	RXYMQ4AVMK: 70 rps RXYMQ4-6AYFK: 79 rps
Fan motor	M1F	●	With high pressure OFF ↔ Step 4 ↔ Step 6
Electronic expansion valve (Main)	Y1E	●	480 pulses
Electronic expansion valve (Injection)	Y2E	●	0 pulse
Electronic expansion valve (Refrigerant jacket)	Y3E	●	480 pulse (0-480 pulse, when radiation fin temperature increases)
Electronic expansion valve (Refrigerant auto charge)	Y4E	●	480 pulse
Four way valve	Y1S	●	OFF
Ending conditions			OR (<ul style="list-style-type: none"> • A lapse of 6 min. • $T_s - T_e < 3^{\circ}\text{C}$

Indoor unit actuator		Heating oil return control
Fan	Thermostat ON unit	OFF
	Stopping unit	OFF
	Thermostat OFF unit	OFF
Electronic expansion valve	Thermostat ON unit	Oil return EV opening degree
	Stopping unit	Oil return EV opening degree
	Thermostat OFF unit	Oil return EV opening degree

7.3 Defrost Control

To defrost the outdoor heat exchanger while in evaporator, the defrost control is conducted to recover the heating capacity.

Tc : High pressure equivalent saturation temperature

Te : Low pressure equivalent saturation temperature

Starting conditions

- Defrost control is not conducted before 40 minutes have elapsed from the start of heating operation.
- After 40 minutes have elapsed, defrost control starts when the following items meet the reference values.
 - Heat transfer coefficient of the outdoor heat exchanger
(The heat transfer coefficient of the outdoor heat exchanger is computed from Tc, Te, and compressor loads.)
 - Outdoor heat exchanger deicer temperature (Tb)
- Defrost control starts every 2 hours, even if the reference values are not met.

Part Name	Electric Symbol	RXYMQ-A	Function
Compressor motor	M1C	●	RXYMQ4AVMK: 70 rps RXYMQ4-6AYFK: 79 rps
Fan motor	M1F	●	With high pressure OFF ↔ Step 4 ↔ Step 6
Electronic expansion valve (Main)	Y1E	●	480 pulses
Electronic expansion valve (Injection)	Y2E	●	0 pulse
Electronic expansion valve (Refrigerant jacket)	Y3E	●	0 pulse: closed 0-480 pulse: open (when fin temperature increases)
Electronic expansion valve (Refrigerant auto charge)	Y4E	●	Minimum pulse
Four way valve	Y1S	●	OFF
Ending conditions			OR (<ul style="list-style-type: none"> • A lapse of 15 minutes • Tb > 11°C continues for 30 seconds or more

Indoor unit actuator		During defrost
Fan	Thermostat ON unit	OFF
	Stopping unit	OFF
	Thermostat OFF unit	OFF
Electronic expansion valve	Thermostat ON unit	Defrost EV opening degree
	Stopping unit	Defrost EV opening degree
	Thermostat OFF unit	Defrost EV opening degree

8. Outline of Control (Indoor Unit)

8.1 Set Temperature and Control Target Temperature

8.1.1 Without Optional Infrared Floor Sensor

The relationship between remote controller set temperature and control target temperature is described below.

- When the suction air thermistor is used for controlling (Factory setting), the control target temperature is determined as follows to prevent insufficient heating in heating operation.
Control target temperature = remote controller set temperature + 2°C.
- The temperature difference for cooling ↔ heating mode switching is 5°C.
- The above also applies to automatic operation.

■ When setting the suction air thermistor (Factory setting)

Temperature		14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	°C	
Cooling	Remote controller set temperature																								
	Control target temperature																								
Heating	Remote controller set temperature																								
	Control target temperature																								

■ When using the remote controller thermistor (Field setting is required)

Temperature		14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35°C
Cooling	Remote controller set temperature																						
	Control target temperature																						
Heating	Remote controller set temperature																						
	Control target temperature																						

Examples are given to illustrate a control target temperature that satisfies the remote controller set temperature.

8.1.2 With Optional Infrared Presence/Floor Sensor

The relationship between remote controller set temperature and control target temperature is described below.

- The temperature difference for cooling ↔ heating mode switching is 5°C.
- When using the floor temperature as the control target, the remote controller set temperature is equal to the actual control target temperature in heating operation.
- The above also applies to automatic operation.

■ When setting the suction air thermistor (Factory setting)

Temperature		14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	°C
Cooling	Remote controller set temperature																								
	Control target temperature																								
Heating	Remote controller set temperature																								
	Control target temperature																								

■ When using the remote controller thermistor (Field setting is required)

Temperature		14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	°C
Cooling	Remote controller set temperature																								
	Control target temperature																								
Heating	Remote controller set temperature																								
	Control target temperature																								

Examples are given to illustrate a control target temperature that satisfies the remote controller set temperature.

Regarding control target temperature

When using the infrared presence/floor sensor, the temperature around people will be treated as the control target temperature for operation.

What is the temperature around people?


The temperature around people refers to the temperature of the living space, obtained from the temperature around the ceiling and the temperature underfoot. The temperature is calculated using the detected values of the suction air thermistor and the infrared presence/floor sensor. It is difficult to use only suction air temperature control for underfoot air conditioning.

8.2 Thermostat Control


8.2.1 Without Optional Infrared Presence/Floor Sensor

The thermostat ON/OFF condition is determined by the difference between the remote controller set temperature and the actual detected room temperature (*1).


- Normal operation
- ◆ Cooling operation

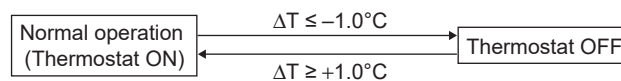


- ◆ Heating operation

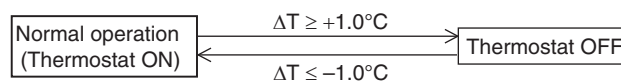

- Dry operation
- ◆ When $T_{ro} \leq 24.5^{\circ}\text{C}$

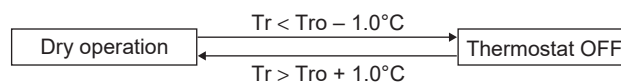

- ◆ When $T_{ro} > 24.5^{\circ}\text{C}$

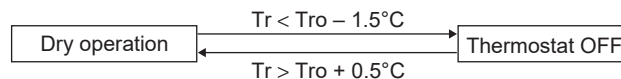

*: Description of symbols

ΔT = Detected room temperature – Remote controller set temperature

T_{ro} : Detected room temperature at the start of dry operation

T_r : Determined by the room temperature detected by the thermistor


**Note(s)**

*1: The thermistor used to detect room temperature is according to the field setting 10(20)-2.


8.2.2 With Optional Infrared Presence/Floor Sensor

The thermostat ON/OFF condition is determined by the difference between the remote controller set temperature and the detected temperature around people.


- Normal operation
- ◆ Cooling operation

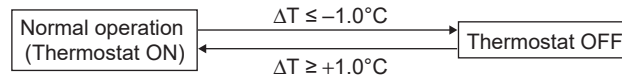


- ◆ Heating operation

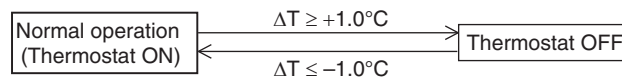

- Dry operation
- ◆ When $T_{ro} \leq 24.5^{\circ}\text{C}$

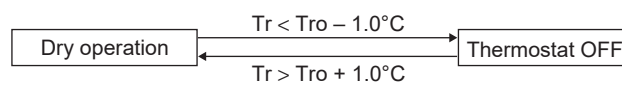

- ◆ When $T_{ro} > 24.5^{\circ}\text{C}$

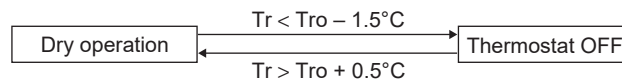

*: Description of symbols

ΔT = Detected room temperature – Remote controller set temperature

T_{ro} : Detected room temperature at the start of dry operation

T_r : Determined by the room temperature detected by the thermistor

Control range of temperature around people

When the floor temperature is very low, operation using the temperature around people may cause the suction air temperature to operate outside of use range.

To avoid the above condition, a limit based on the suction air temperature is set for the use range of the temperature around people.

- Cooling operation
 - ◆ When the floor temperature is lower than suction air thermistor detection temperature (R1T), R1T will be treated as the control target temperature for operation.
 - ◆ When the temperature around people is 15°C or lower, R1T will be treated as the control temperature for operation.
- Heating operation
 - ◆ When the floor temperature is higher than suction air thermistor detection temperature (R1T), R1T will be treated as the control target temperature in operation.
 - ◆ When the temperature around people is 33°C or higher, R1T will be treated as the control temperature for operation.


8.2.3 Thermostat Control with Operation Mode Set to "AUTO"

When the operation mode is set to "AUTO" on the remote controller, the system will conduct the temperature control shown below.

Furthermore, setting changes of the differential value ($D^{\circ}\text{C}$) can be made according to information in the **Field Settings from Remote Controller** on page 84 and later.


Mode No.	First code No.	Description	Second code No.							
			01★	02	03	04	05	06	07	08
12 (22)	4	Automatic mode differential	0°C★	1°C	2°C	3°C	4°C	5°C	6°C	7°C

★: Factory setting

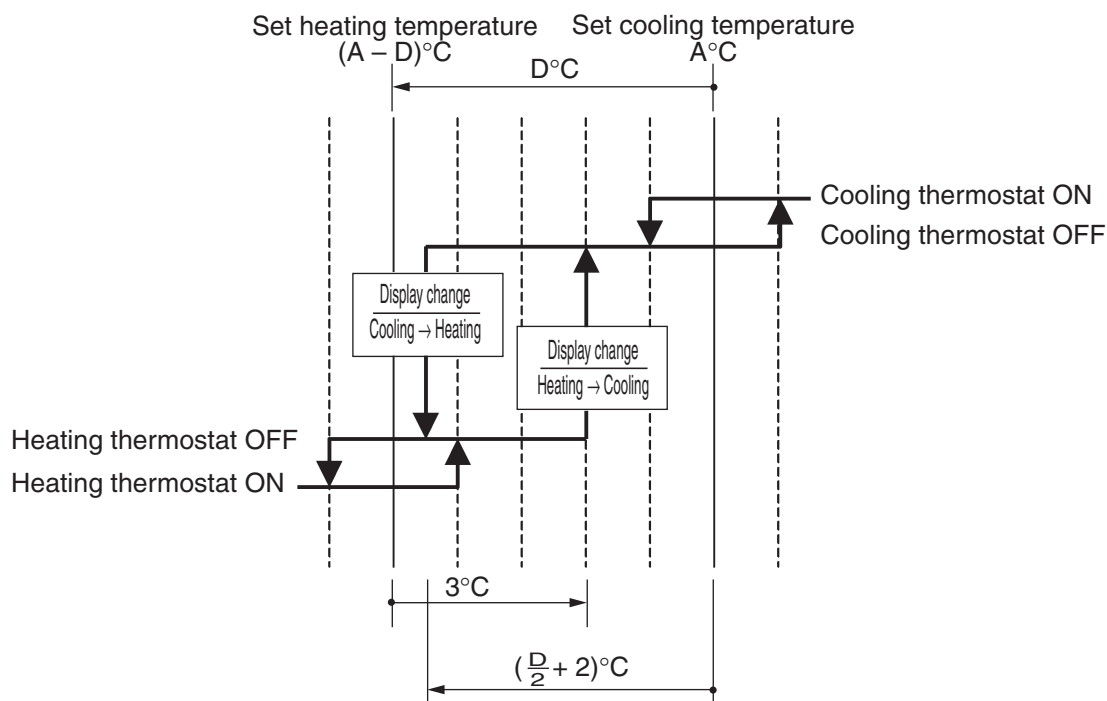


(Ex.) When automatic cooling temperature is set to 27°C :


Differential value: 0°C

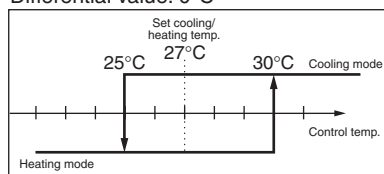


Differential value set to 4°C

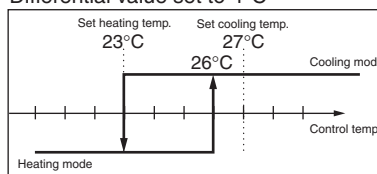


Differential value set to 1°C

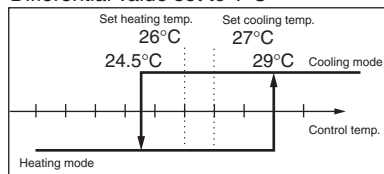


Differential value set to 5°C

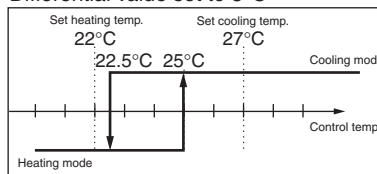


Differential value set to 2°C

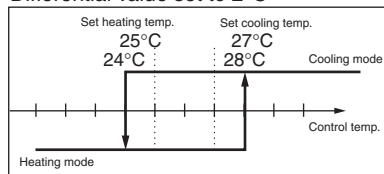


Differential value set to 6°C

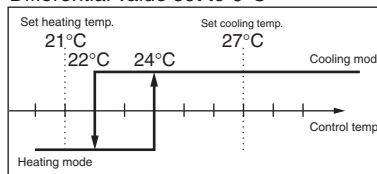

Differential value set to 3°C

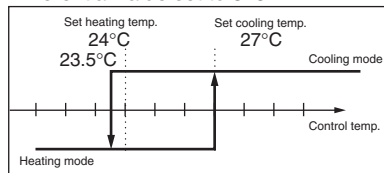

Differential value set to 7°C

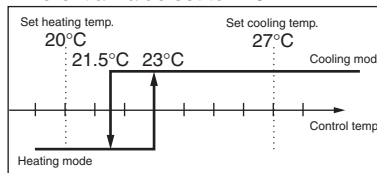


8.3 Automatic Airflow Rate Control

The automatic airflow rate control (Five steps from H to L) is based on the difference between control target temperature and set temperature.

Conditions		When airflow rate is set	Automatic airflow rate
Cooling	Thermostat ON	Set	The fan tap is determined by the difference between control target temperature and set temperature.
	Thermostat OFF	Set (*1)	The fan keeps rotating at the speed as just before the thermostat off (*1)
Heating	Thermostat ON	Set	The fan tap is determined by the difference between control target temperature and set temperature.
	Thermostat OFF	LL	LL
Program dry	Thermostat ON	L	L
	Thermostat OFF	OFF	OFF
Fan		Set	M
Stop		OFF	OFF

*1. LL airflow for FXFSQ-AR

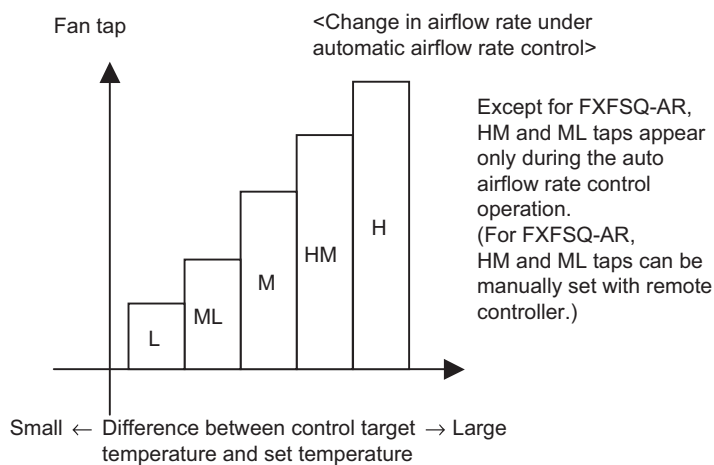

8.4 Airflow Direction Control

8.4.1 Without Optional Infrared Floor Sensor

Refer to the table below for controlling the horizontal flap (or the vertical flap) for airflow direction adjustment.


Conditions			FXAQ-AR
Cooling	Direction set	Thermostat ON	Set
		Thermostat OFF	Set
	Swing set	Thermostat ON	Swing
		Thermostat OFF	Swing
Program dry	Direction set	Thermostat ON	Set
		Thermostat OFF	Set
	Swing set	Thermostat ON	Swing
		Thermostat OFF	Swing
Heating	Direction set	Thermostat ON	Set
		Thermostat OFF	Horizontal (P0)
	Swing set	Thermostat ON	Swing
		Thermostat OFF	Horizontal (P0)
Fan	Direction set		Set
	Swing set		Swing

8.4.2 With Optional Infrared Floor Sensor


The model can control airflow direction automatically by the difference between suction air temperature and floor temperature.


Conditions			FXFSQ-AR	
			When airflow direction is set	Automatic airflow rate and eco full automatic control
Cooling	Direction set	Thermostat ON	Set	Automatic (P0 or P1)
		Thermostat OFF	Set	Automatic (P0 or P1)
	Swing set	Thermostat ON	Swing	—
		Thermostat OFF	Swing	—
Program dry	Direction set	Thermostat ON	Set	Automatic (P0 or P1)
		Thermostat OFF	Set	Automatic (P0 or P1)
	Swing set	Thermostat ON	Swing	—
		Thermostat OFF	Swing	—
Heating	Direction set	Thermostat ON	Set	Automatic (P3 or P4)
		Thermostat OFF	Horizontal (P0)	Horizontal (P0)
	Swing set	Thermostat ON	Swing	—
		Thermostat OFF	Horizontal (P0)	—
Fan	Direction set		Set	Horizontal (P0)
	Swing set		Swing	—

Operation in auto airflow direction control when cooling

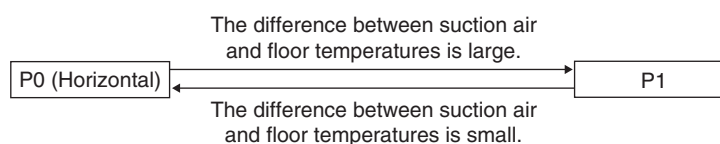

Operation in auto airflow direction control when heating

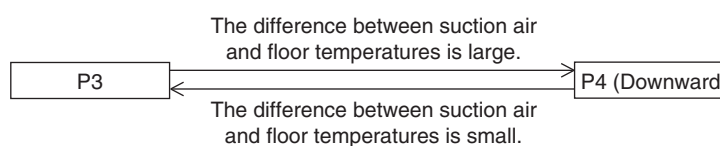

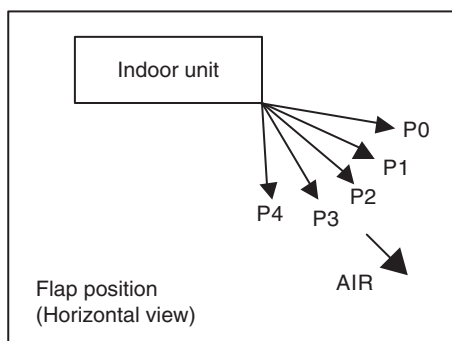


8.5 Auto Draft Reducing Control (FXFSQ-AR only)

In the case where both this control is activated and auto airflow direction control (eco full automatic control) is set, when human presence is detected, the airflow direction is automatically set to horizontal (P0) to reduce discomfort by direct airflow.

This control works for each airflow outlet individually.

Note: This function is inoperative for the airflow outlet where an individual airflow direction is set.

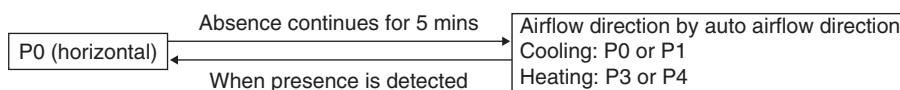


8.6 Eco Full Automatic Control (FXFSQ-AR only)

This is a generic term for the setting where both fan speed and airflow direction are set to "Auto". For detailed control contents, refer to **Automatic Airflow Rate Control** and **Airflow Direction Control**.


8.7 Drain Pump Control

8.7.1 Normal Operation

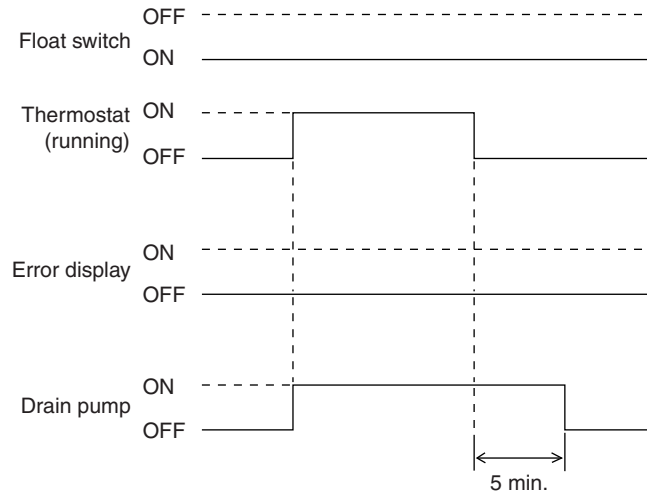


- The float switch is ON in normal operation.
- When cooling operation starts (thermostat ON), the drain pump turns ON simultaneously.
- After the thermostat turns OFF, the drain pump continues to operate for another 5 minutes.
- The aim of residual operation after thermostat OFF is to eliminate the dew that condenses on the indoor heat exchanger during cooling operation.

8.7.2 If the Float Switch is OFF with the Thermostat ON in Cooling Operation

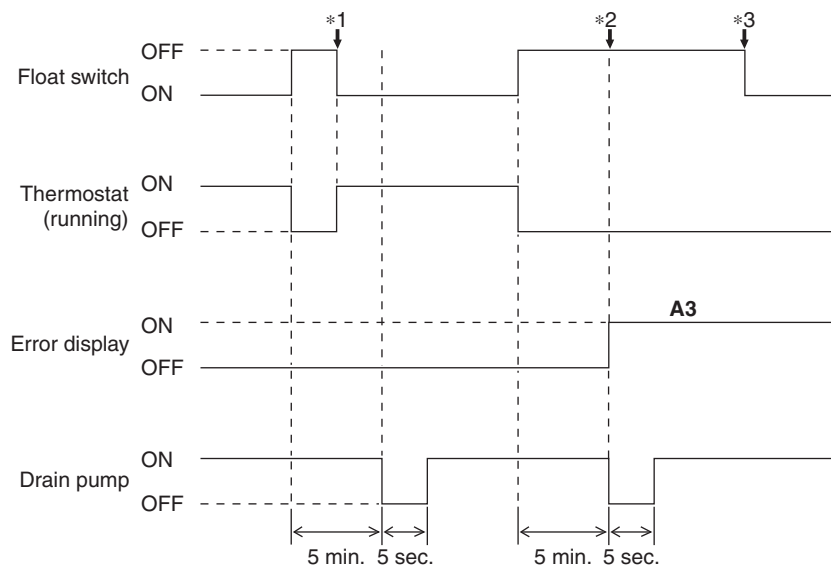


- When the float switch turns OFF, the thermostat turns OFF simultaneously.
 - After the thermostat turns OFF, the drain pump continues to operate for another 5 minutes.
- *1: If the float switch turns ON again during the residual operation of the drain pump, cooling operation also turns on again (thermostat ON).
- *2: If the float switch remains OFF even after the residual operation of the drain pump has ended, the error code **A3** is displayed on the remote controller. The drain pump turns OFF once residual operation has ended, then turns ON again after 5 seconds.
- *3: After **A3** is displayed and the unit comes to an abnormal stop, the thermostat will remain OFF even if the float switch turns ON again.

8.7.3 If the Float Switch is OFF with the Thermostat OFF in Cooling Operation

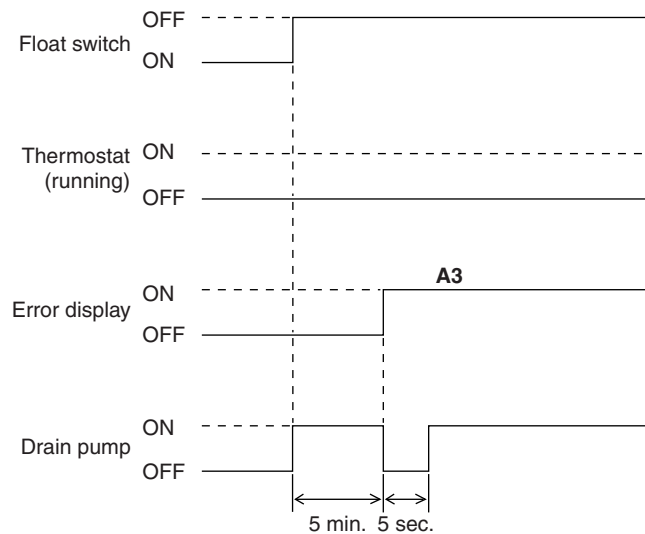

- When the float switch turns OFF, the drain pump turns ON simultaneously.
- If the float switch remains OFF even after residual operation of the drain pump has ended, the error code **A3** is displayed on the remote controller.
- The drain pump turns OFF once residual operation has ended, then turns ON again after 5 seconds.

8.7.4 If the Float Switch Turns OFF and ON Continuously, or the Float Switch Turns OFF While AF Displayed

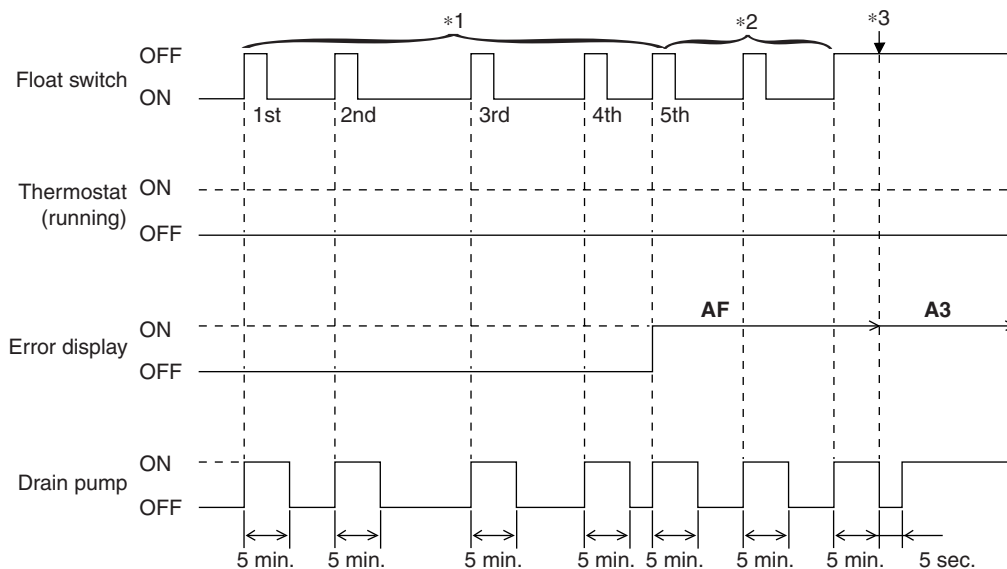

- When the float switch turns OFF, the drain pump turns ON simultaneously.
- *1: If the float switch continues to turn OFF and ON 5 times consecutively, it is judged as a drain system error and the error code **AF** is displayed on the remote controller.
- *2: The drain pump continues to turn ON/OFF in accordance with the float switch ON/OFF even after **AF** is displayed on the remote controller.
- *3: While the error code **AF** is displayed, if the float switch remains OFF even after the residual operation of the drain pump has ended, the error code **A3** will be displayed on the remote controller.

8.8 Freeze-Up Prevention Control

Freeze-Up Prevention by Off Cycle (Indoor Unit Individual Control)

When the temperature detected by liquid pipe temperature thermistor of the indoor heat exchanger drops too low, the unit enters freeze-up prevention control in accordance with the following conditions, and is also set in accordance with the conditions given below. (Thermostat OFF)

When freeze-up prevention is activated, the airflow rate is fixed to L tap. When the following conditions for cancelling are satisfied, it will reset.

Conditions for starting:


Liquid pipe temperature $\leq -1^{\circ}\text{C}$ (for total of 40 minutes)

or

Liquid pipe temperature $\leq -5^{\circ}\text{C}$ (for total of 10 minutes)

Condition for cancelling:

Liquid pipe temperature $\geq +7^{\circ}\text{C}$ (for 10 minutes continuously)

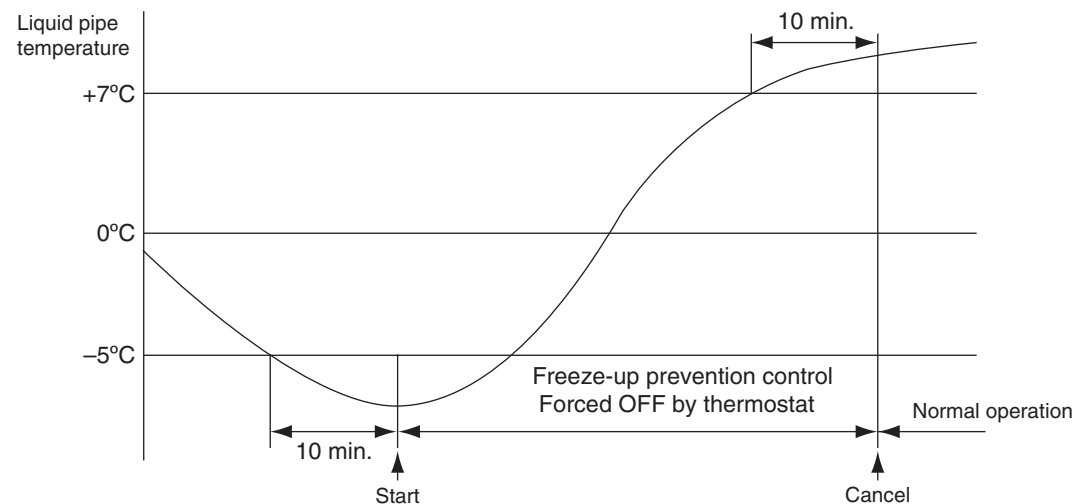

Concept of freeze-up prevention control

System avoids freeze-up

- ♦ For comfort, system avoids unnecessary thermostat ON/OFF
- ♦ For ensuring compressor reliability, system avoids unnecessary compressor ON/OFF

When freeze-up prevention control starts, system makes sure the frost is completely removed.

- ♦ System avoids water leakage.



Note(s)

When the indoor unit is a round flow or multi flow type, if the air outlet is set as dual-directional or tri-directional, the starting conditions will be changed as follows.

Liquid pipe temperature $\leq 1^{\circ}\text{C}$ (for total of 15 minutes)

or

Liquid pipe temperature $\leq 0^{\circ}\text{C}$ (for 1 minute continuously)


During freeze-up prevention control, the airflow rate is fixed to LL.

(The cancelling conditions are same as the standard.)


8.9 Dew Condensation Prevention Control

8.9.1 FXFSQ-AR Models

Indoor operation under a certain condition will limit the swing range of the flaps.

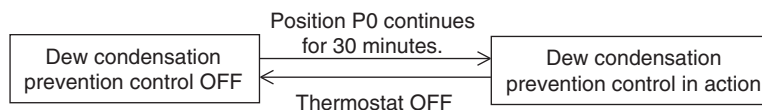

Refer to the table below for flap action under this control.

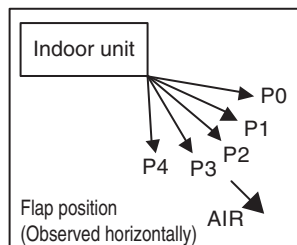

	Dew condensation prevention control	
Flap setting	OFF	In action
P0	P0	P1
P1	P1	P1
P2	P2	P2
P3	P3	P3
P4	P4	P4
Swing	P0 – P4	P1 – P4

8.9.2 FXAQ-AR Models


In cooling and dry operation, the following control is carried out in order to prevent dew condensation when the horizontal blade blows air downward.

Starting condition

- & {
- Horizontal blade is set to downward flow (Position **A**)
 - Cooling operation (compressor operation) continues for **B** minutes.

Dew condensation prevention control

Dry operation with horizontal airflow (Position **C**) is carried out for 1 hour.

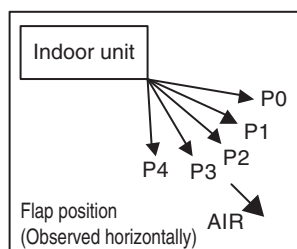

	FXAQ-AR
Position A	P4
B (minutes)	20
Position C	P3



Note(s)

When there is any change to fan operation, airflow direction and operation ON/OFF state during dew condensation prevention control, this control is canceled.

8.10 Electronic Expansion Valve Control

Electronic expansion valves in indoor units have the functions of conducting superheating degree control in cooling operation and subcooling degree control in heating operation. However, if the indoor units receive any control command such as a protection control command or a special control command from the outdoor unit, the units will give a priority to the control command.

● Superheating degree control in cooling operation

This function is used to adjust the opening of the electronic expansion valve so that superheating degree (SH), which is calculated from the detection temperature (Tg) of the gas pipe thermistor (R3T) and the detection temperature (TI) of the liquid temperature thermistor (R2T) of the indoor unit, will come close to a target superheating degree (SHS). At that time, correction to the superheating degree is made according to the differences (ΔT) between set temperature and suction air temperature.

$$SH = T_g - T_I$$

Where,

SH: Evaporator outlet superheating degree (°C)

Tg: Indoor unit gas pipe temperature (R3T)

TI: Indoor unit liquid pipe temperature (R2T)

SHS (Target superheating degree)

- ◆ Normally 5°C.
- ◆ As ΔT (Remote controller set temp. – Suction air temp.) becomes larger, SHS becomes lower.
- ◆ As ΔT (Remote controller set temp. – Suction air temp.) becomes lower, SHS becomes larger.

● Subcooling degree control in heating operation

This function is used to adjust the opening of the electronic expansion valve so that the high pressure equivalent saturated temperature (Tc), which is converted from the detected pressure of the high pressure sensor in the outdoor unit, and the subcooling degree (SC), which is calculated from the detected temperature (TI) of the liquid temperature thermistor (R2T) in the indoor unit, will come close to the target subcooling degree (SCS).

At that time, corrections to the subcooling degree are made according to differences (ΔT) between set temperature and suction air temperatures.

$$SC = T_c - T_I$$

Where,

SC: Condenser outlet subcooling degree (°C)

Tc: High pressure equivalent saturated temperature detected by the high pressure sensor (S1NPH)

TI: Indoor unit liquid pipe temperature (R2T)

SCS (Target subcooling degree)

- ◆ Normally 5°C.
- ◆ As ΔT (Remote controller set temp. – Suction air temp.) becomes larger, SCS becomes lower.
- ◆ As ΔT (Remote controller set temp. – Suction air temp.) becomes lower, SCS becomes larger.

8.11 Circulation Airflow (FXFSQ-AR only)

Unevenness of room temperature and the startup time are improved by repeating 2-direction horizontal blow-off and swing alternately.


8.11.1 Initiation Conditions of Circulation Operation

When operation starts (in the startup state)

Circulation airflow operation is performed.

During normal operation

The unit automatically determines operation based on the room temperature condition and time to switch circulation airflow operation and the normal auto airflow rate and direction (eco full automatic control).

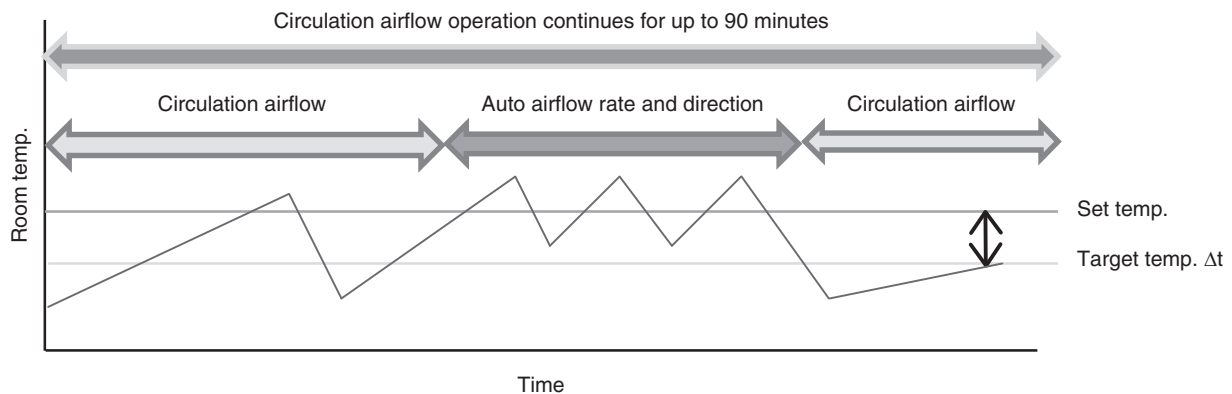

8.11.2 Operational Concept (Standard Panel)

Cooling

★: Factory setting

Movement pattern		(a)	(b)	(c)	(d)
Appearance Time (seconds) 13 (23)-14	01: Pattern 1★	120★	600★	120★	600★
	02: Pattern 2	120	600	0	0
	03: Pattern 3	0	0	120	600
	04: Pattern 4	120	600	120	600

⊖ Indicates the horizontal flap is in the position of reducing airflow volume (the flap is inverted).

Heating

★: Factory setting





Movement pattern		(a)	(b)	(c)	(d)
Appearance Time (seconds) 13 (23)-14	01: Pattern 1★	120★	120★	120★	120★
	02: Pattern 2	120	120	0	0
	03: Pattern 3	0	0	120	120
	04: Pattern 4	120	0	120	0


⊖ Indicates the horizontal flap is in the position of reducing airflow volume (the flap is inverted).

8.11.3 Operational Concept (Designer Panel)

Cooling





★: Factory setting

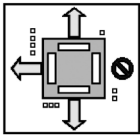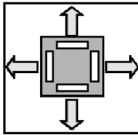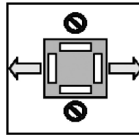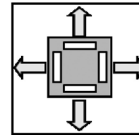Movement pattern		(a)	(b)	(c)	(d)
					
Appearance Time (seconds) 13 (23)-14	01: Pattern 1 ★	120★	600★	120★	600★
	02: Pattern 2	120	600	0	0
	03: Pattern 3	0	0	120	600
	04: Pattern 4	120	600	120	600

 Indicates the horizontal flap is in the position of reducing airflow volume (the flap is inverted).

Heating

★: Factory setting

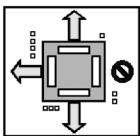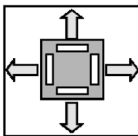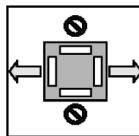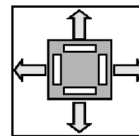Movement pattern		(a)	(b)	(c)	(d)
					
Appearance Time (seconds) 13 (23)-14	01: Pattern 1 ★	120★	120★	120★	120★
	02: Pattern 2	120	120	0	0
	03: Pattern 3	0	0	120	120
	04: Pattern 4	120	0	120	0


 Indicates the horizontal flap is in the position of reducing airflow volume (the flap is inverted).

8.12 Hot Start Control (In Heating Operation Only)

At startup with thermostat ON or after the completion of defrosting in heating operation, the indoor fan is controlled to prevent cold air from blasting out and ensure startup capacity.

TH2 : Temperature detected with the gas thermistor

Tc : High pressure equivalent saturated temperature

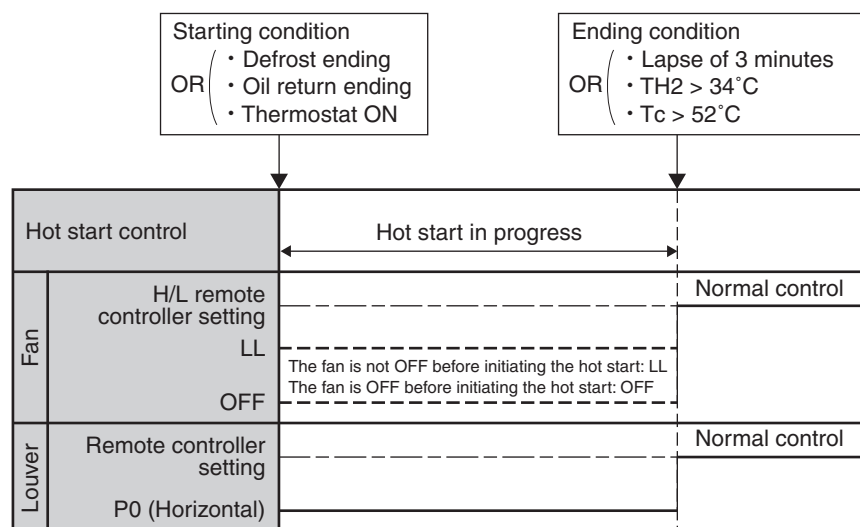


8.13 Heater Control (Optional PCB KRP1B series is required.)

The heater control is conducted in the following manner.

Normal control


While in heating operation, the heater control (ON/OFF) is conducted as shown below.

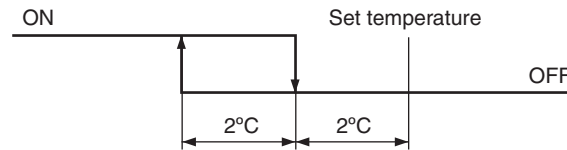


Overload control

When the system is overloaded in heating operation, the heater will be turned OFF in the following two manners.

1. The heater control (ON/OFF) is conducted through the liquid pipe temperature (R2T) of the indoor unit.

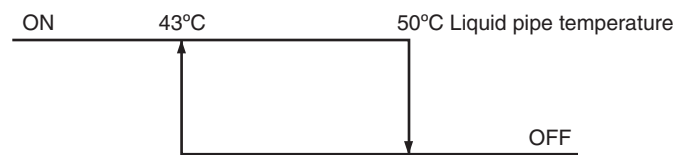

2. The heater control (ON/OFF) is conducted by converting the heater temperature into the condensing pressure equivalent saturated temperature (Tc) according to the temperature detection through the high pressure sensor (S1NPH) of the outdoor unit.

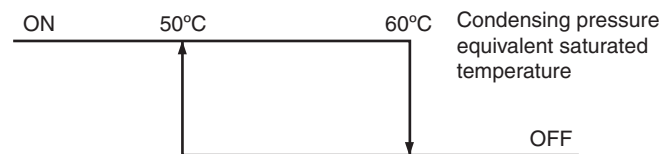

Fan residual operation

While the heater turns OFF, in order to prevent the activation of the thermal protector, the fan conducts residual operation for a given period of time after the heater turns OFF. (This operation is conducted regardless of with or without heater equipped.)

Residual operation time = 100 seconds on ceiling suspended type or 60 seconds on other types

Part 5

Field Settings and Test Operation

1. Field Settings for Indoor Unit.....	84
1.1 Field Settings with Remote Controller	84
1.2 List of Field Settings for Indoor Unit	90
1.3 Applicable Field Settings	92
1.4 Details of Field Settings for Indoor Unit.....	93
1.5 Operation Control Mode	106
2. Field Settings for Outdoor Unit.....	108
2.1 Function Setting	108
2.2 Settings by DIP Switches	109
2.3 Settings by BS Buttons.....	112
2.4 Normal Mode.....	114
2.5 Monitor Mode (Mode 1)	115
2.6 Setting Mode (Mode 2).....	118
2.7 Eco Mode Setting	130
2.8 Night-Time Low Noise Operation and Demand Operation.....	131
3. Test Operation	135
3.1 Checks before Test Operation	135
3.2 Checkpoints.....	135
3.3 Test Operation Procedure	136
3.4 Turn Power ON	138

1. Field Settings for Indoor Unit


1.1 Field Settings with Remote Controller

Individual function of indoor unit can be changed from the remote controller. At the time of installation or after service inspection / repair, make the field setting in accordance with the following description.

Wrong setting may cause error.

(When optional accessory is mounted on the indoor unit, setting for the indoor unit may be required to change.)

1.1.1 BRC1E63

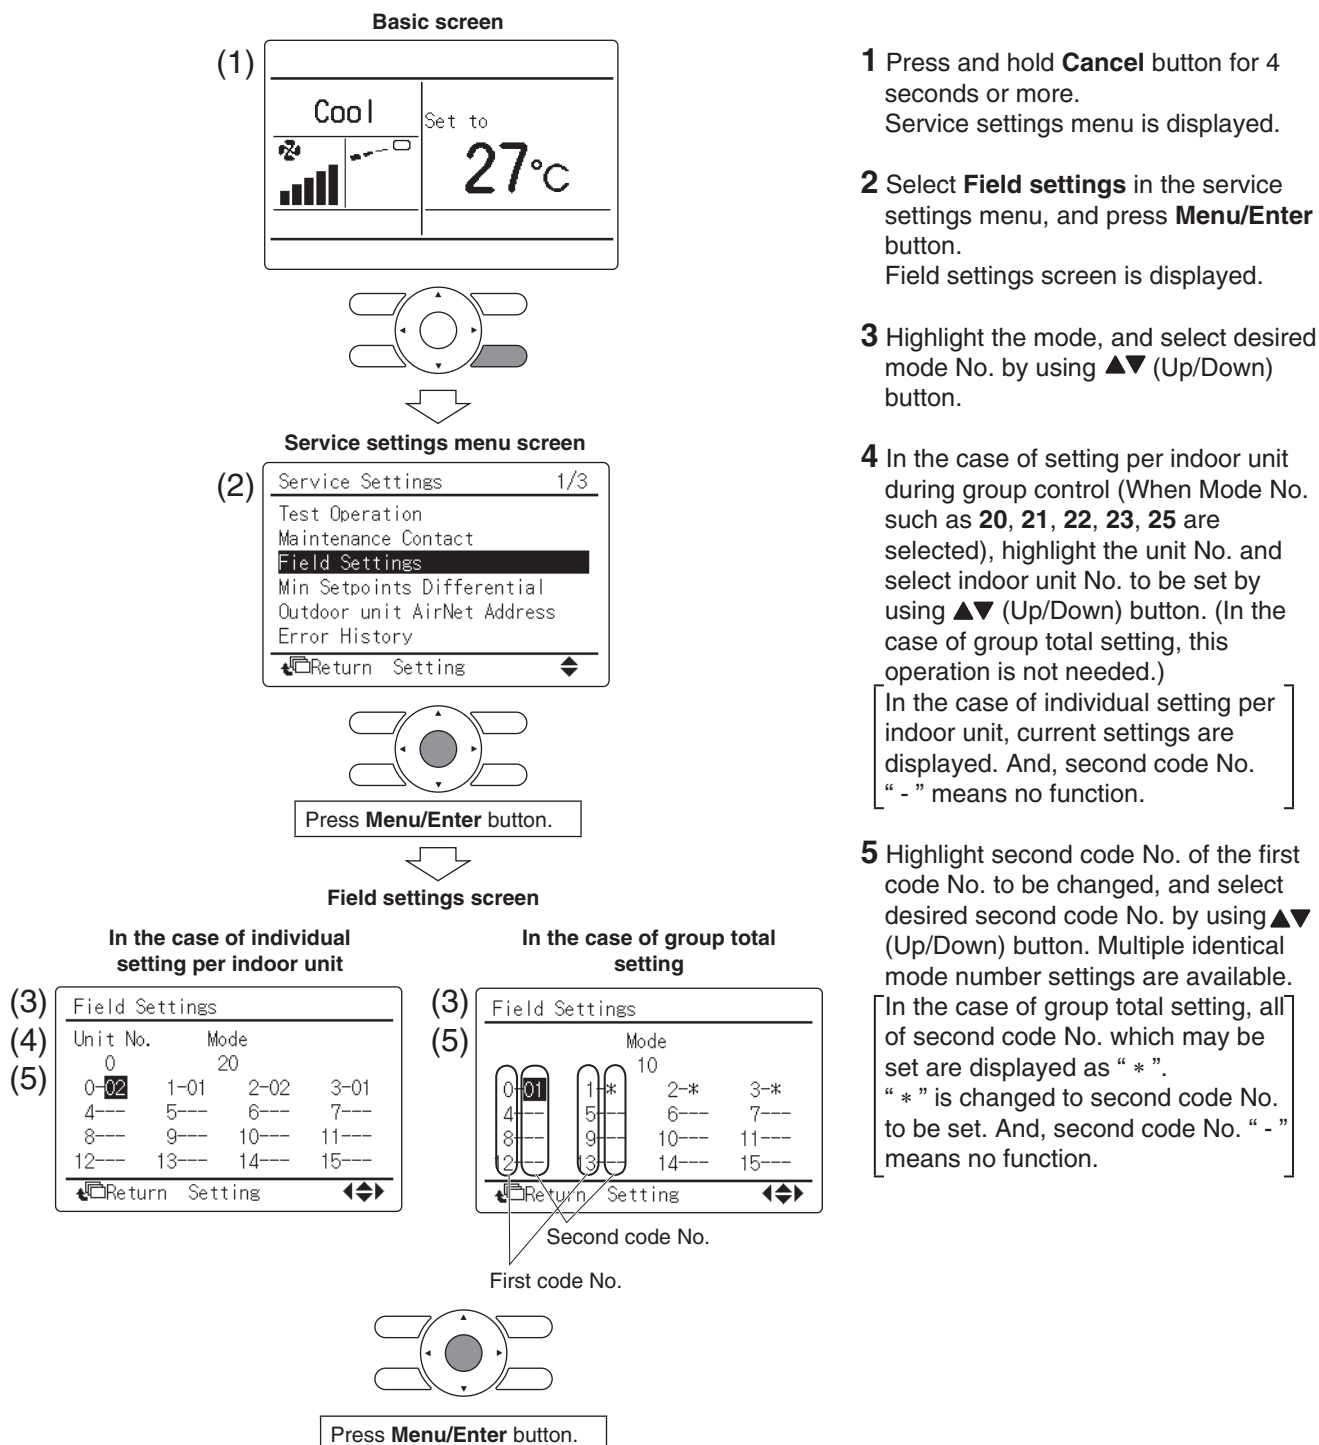

1 Press and hold **Cancel** button for 4 seconds or more.
Service settings menu is displayed.

2 Select **Field settings** in the service settings menu, and press **Menu/Enter** button.
Field settings screen is displayed.


3 Highlight the mode, and select desired mode No. by using **▲▼** (Up/Down) button.

4 In the case of setting per indoor unit during group control (When Mode No. such as **20, 21, 22, 23, 25** are selected), highlight the unit No. and select indoor unit No. to be set by using **▲▼** (Up/Down) button. (In the case of group total setting, this operation is not needed.)

[In the case of individual setting per indoor unit, current settings are displayed. And, second code No. " - " means no function.]

5 Highlight second code No. of the first code No. to be changed, and select desired second code No. by using **▲▼** (Up/Down) button. Multiple identical mode number settings are available.

[In the case of group total setting, all of second code No. which may be set are displayed as " * ".
" * " is changed to second code No. to be set. And, second code No. " - " means no function.]

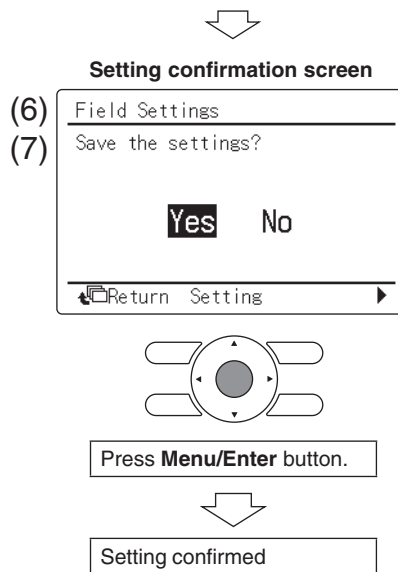

6 Press **Menu/Enter** button. Setting confirmation screen is displayed.

7 Select **Yes** and press **Menu/Enter** button. Setting details are determined and field settings screen returns.

8 In the case of multiple setting changes, repeat **(3)** to **(7)**.

9 After all setting changes are completed, press **Cancel** button twice.


10 Backlight goes out, and **Checking the connection. Please standby.** is displayed for initialization. After the initialization, the basic screen returns.

⚠ CAUTION


- When an optional accessory is installed on the indoor unit, settings of the indoor unit may be changed. See the manual of the optional accessory.
- For field setting details of the outdoor unit, see installation manual attached to the outdoor unit.

1.1.2 BRC1H81 Series (Remote Controller)


The controller allows for making field settings related to the indoor unit, and to the controller itself.

Screen	Field settings	
	Indoor unit	<ul style="list-style-type: none">▪ Define a mode by setting a Mode number▪ Define the unit to which the setting will apply by setting a Unit number▪ Define the setting by setting a SW number

Field settings are composed of the following components.

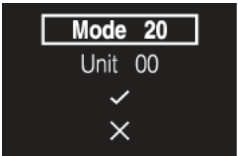

1. Modes (Mode),

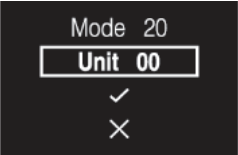

2. Units (Unit),



3. Settings (SW),




4. Values for those settings.

1.1.3 BRC1H81 Series (Smartphone Application)


Set as Installer Mode

In order to retrieve the field settings, the Madoka Assistance app has to be set as installer mode. If already set as installer mode, skip to Making Field Settings.

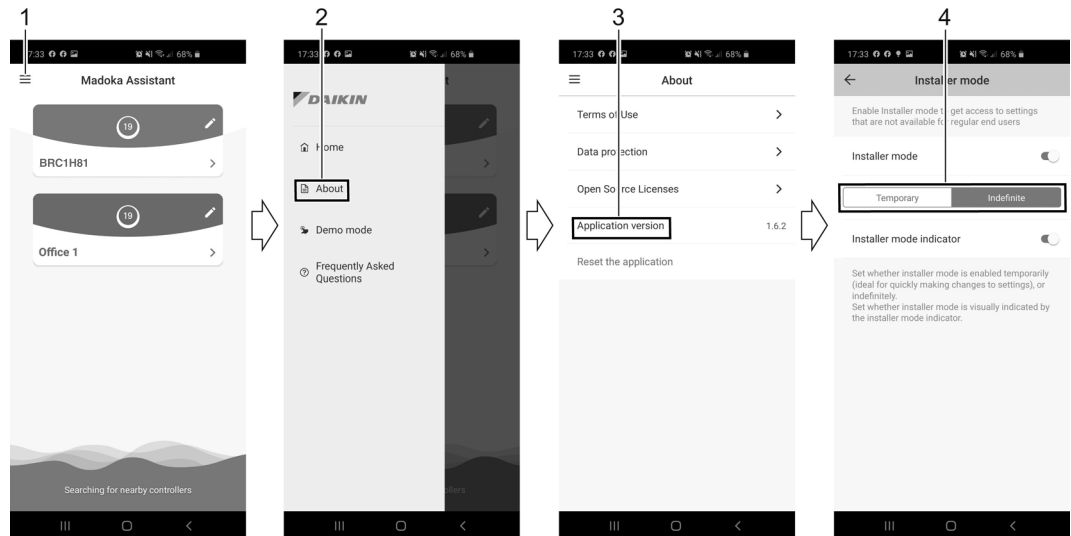

1. Tap the menu icon.
2. Tap "About".
3. Tap "Application version" 5 times. Installer mode screen is displayed.
4. Select (tap) the length of time the Madoka Assistance app is set as installer mode: "Temporary" for 30 minutes and "Indefinite" for unlimited time.

Making Field Settings

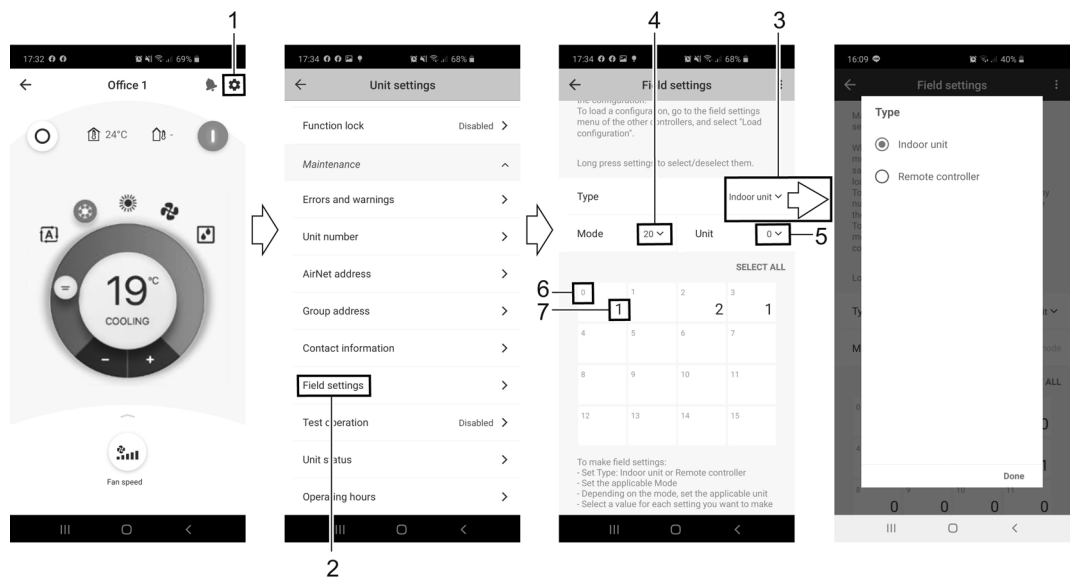

1. Tap the settings icon. The "Unit settings" screen appears.
2. Tap "Field settings". The "Field settings" screen appears.
3. Tap and select the type ("Indoor unit" or "Remote controller") for which you want to set the field settings.
4. Tap and select the desired "Mode No" from the drop down list.
5. In the case of setting per indoor unit during group control (When Mode No. such as 20, 21, 22, 23, 25 are selected), tap and select the "Indoor unit No." which is required to be set. (In the case of group total setting, this operation is not needed.)
In the case of individual setting per indoor unit, current settings are displayed. And, Second Code No. "-" means no function.
6. Tap the Second Code No. of the First Code No. to be changed.


7. Select desired "Second Code No.. Multiple identical mode number settings are available. In the case of group total setting, all of Second Code No. which may be set are displayed as "★".
- "★" is changed to Second Code No. to be set. And, Second Code No. "-" means no function.



Note(s)


In case of multiple setting changes, repeat steps 4 through 7.

Applying Field Settings

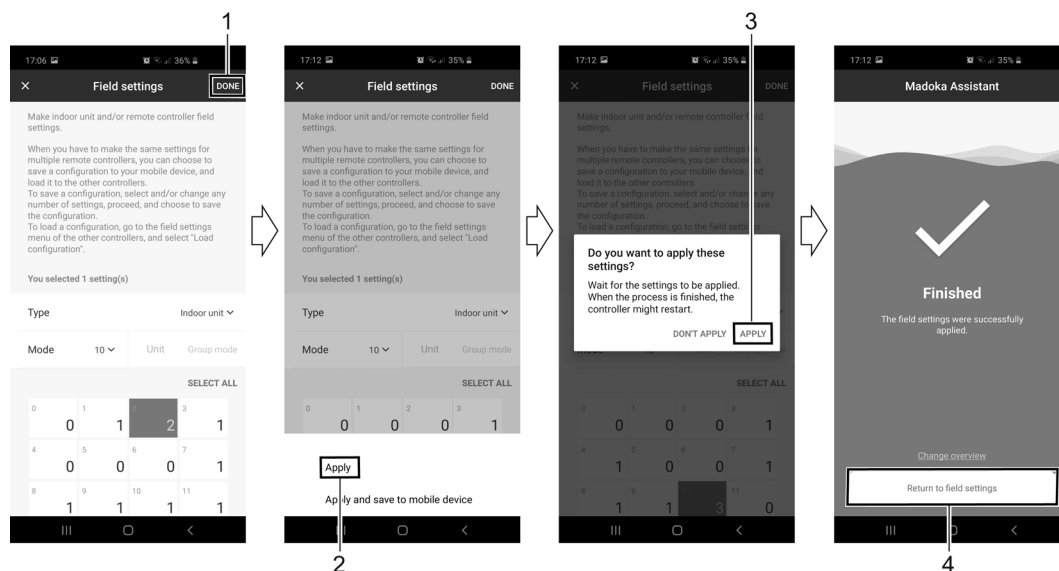

1. After finishing the setting(s), tap the "DONE" icon.
2. Tap "Apply" to apply the set field settings.
3. Tap "Apply" to confirm.
4. Tap "Return to field settings" to end the settings.

1.1.4 BRC4M Series

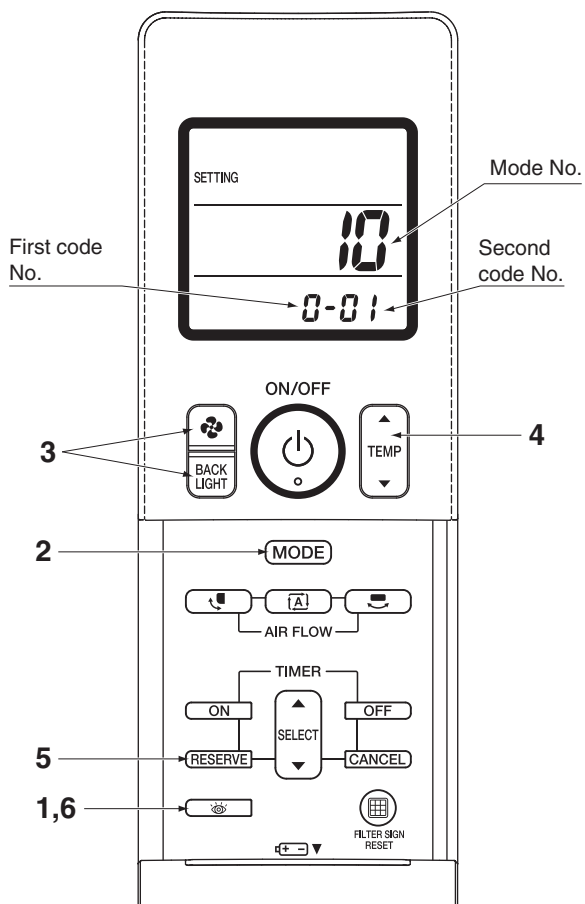

Setting

To set the field settings, you have to change:

- Mode No.
- First code No.
- Second code No.

To change the field settings, proceed as follows:

1. Hold down the **INSPECTION** button for at least 4 seconds during normal mode to enter the field setting mode.
2. Press the **MODE** button to select the desired mode No.
3. Press the **FAN** or **BACK LIGHT** button to select the first code No.
4. Press the **TEMP** button to select the second code No.
5. Press the **RESERVE** button to set the present settings.
6. Press the **INSPECTION** button to return to the normal mode.

1.2 List of Field Settings for Indoor Unit

★: Factory setting

Mode No. (*2)	First Code No.	Description		Second Code No.				Reference Page		
				01	02	03	04			
10 (20)	0	Filter cleaning sign interval	Ultra long life filter	<u>Light</u> ★	<u>Approx. 10,000 hrs.★</u>	Heavy	Approx. 5,000 hrs.	—	—	93
		Long life filter	<u>Approx. 2,500 hrs.★</u>		Approx. 1,250 hrs.					
		Standard filter	<u>Approx. 200 hrs.★</u>		Approx. 100 hrs.					
	1	Filter type		<u>Long life filter★</u>		Ultra long life filter		—	—	93
	2	Remote controller thermistor		<u>Remote controller thermistor + Suction air thermistor★</u>		Only suction air thermistor		Only remote controller thermistor	—	93
	3	Filter cleaning sign		<u>Displayed★</u>		Not displayed		—	—	95
	5	Information for intelligent Touch Manager / intelligent Touch Controller		Refer to the page on the right for details.						95
	6	Remote controller thermistor control during group control		<u>Not permitted★</u>		Permitted		—	—	93
	7	Time for absence area detection		<u>30 minutes★</u>		60 minutes		—	—	95
10	Dry operation time during VRTsmart control		<u>30 minutes★</u>		60 minutes		90 minutes	Continuous (notreturning to cooling)	96	
11	Low airflow setting when thermostat OFF during VRTsmart control		Disabled		<u>Enabled★</u>		—	—	96	
11 (21)	2	Indoor fan settings during cooling/heating thermostat OFF		<u>Normal★</u>		Fan OFF		—	—	96
	3	Setting of airflow rate when heating		<u>Standard★</u>		Slightly increased		Increased	—	96
	6	Setting the rate of human detection		High sensitivity		Low sensitivity		<u>Standard sensitivity★</u>	Infrared presence sensor disabled	97
	7	Automatic airflow adjustment		<u>OFF★</u>		Completion of airflow adjustment		Start of airflow adjustment	—	97
	8	Compensating the temperature around people		Suction air temperature only		Priority given on the suction air temperature		<u>Standard★</u>	Priority given on the floor temperature	98
	9	Compensating the floor temperature when heating		-4℃		-2℃		<u>0℃★</u>	2℃	98
12 (22)	0	Optional accessories output selection		<u>Indoor unit turned ON by thermostat★</u>		—		Operation output	Error output	98
	1	External ON/OFF input		<u>Forced OFF★</u>		ON/OFF control		External protection device input	—	99
	2	Thermostat differential changeover		<u>1℃★</u>		0.5℃		—	—	99
	3	Airflow setting when heating thermostat is OFF		<u>LL tap★</u>		Set fan speed		—	—	99
	4	Automatic mode differential		Refer to the page on the right for details.						99
	5	Auto restart after power failure		OFF		<u>ON★</u>		—	—	100
	6	Airflow setting when cooling thermostat is OFF		LL tap		<u>Set fan speed★</u>		—	—	100
11	Compensating the floor temperature when cooling		4℃		2℃		<u>0℃★</u>	-2℃	100	

Mode No. (*2)	First Code No.	Description	Second Code No.				Reference Page
			01	02	03	04	
13 (23)	0	Ceiling height setting, Setting of normal airflow	Refer to the page on the right for details.				101
	1	Airflow direction setting	4-way airflow★	3-way airflow	2-way airflow	—	101
	2	Swing pattern settings	All direction synchronized swing	—	Facing swing★	—	102
	3 (*5)	Airflow function setting	Equipped	Not equipped	—	—	—
	4	Airflow direction adjustment range	Refer to the page on the right for details.				102
	5	Setting of static pressure selection	Standard★	High static pressure	—	—	102
	6	External static pressure settings	Refer to the page on the right for details.				103
	7	Setting of swing patterns when cooling thermostat is OFF	Refer to the page on the right for details.				103
	13	Setting of circulation airflow	Disabled	Enabled★	—	—	103
	14	Circulation airflow patterns	Pattern 1★	Pattern 2	Pattern 3	Pattern 4	104
	15	Switching panel type	Standard panel★	Designer panel	—	—	104
15 (25)	1	Humidification when heating thermostat is OFF	Not equipped★	Equipped	—	—	104
	2	Direct duct connection	Not equipped★	Equipped	—	—	105
	3	Drain pump and humidifier interlock selection	Not interlocked★	Interlocked	—	—	105
	5	Individual ventilation setting	Normal★	Individual	—	—	105
1b	4	Display of error codes on the remote controller	—	Two-digit display	—	Four-digit display★	105
	14	Setting restricted/permitted of airflow block	Refer to the page on the right for details.				106
1c	0	Room temperature display	Not displayed	Displayed★	—	—	106
	01 (*5)	Thermostat sensor	Indoor unit thermistor	Controller thermistor	—	—	—
	12 (*5)	Window contact B1	Do not use	Use	—	—	—
	13 (*5)	Key card contact B2	Do not use	Use	—	—	—
1e (*5)	02	Setback function	No Setback	Heating only	Cooling only	Heating and Cooling	—
	07	Rotation overlap time	30 minutes	15 minutes	10 minutes	5 minutes	—
1B (*5)	08	Daylight saving time	Disable	Automatic changeover	Manual changeover	Centralized control	—

**Note(s)**

- Settings are made simultaneously for the entire group, however, if you select the mode No. inside parentheses, you can also set by each individual unit. Setting changes however cannot be checked except in the individual mode for those in parentheses.
- The mode numbers inside parentheses cannot be used by wireless remote controllers, so they cannot be set individually. Setting changes also cannot be checked.
- Do not make settings other than those described above. Nothing is displayed for functions the indoor unit is not equipped with.
- 88 or Checking the connection. Please stand by.** may be displayed to indicate the remote controller is resetting when returning to normal mode.
- *5. BRC1H81 series only

1.3 Applicable Field Settings

Mode No.	First Code No.	Setting Contents	FXFSQ-AR	FXDQ-PD FXDQ-ND	FXMQ-PB	FXMQ-AR	FXAQ-AR
10 (20)	0	Filter cleaning sign interval	●	●	●	●	●
	1	Filter type	●	●	●	●	—
	2	Remote controller thermistor	●	●	●	●	●
	3	Filter cleaning sign	●	●	●	●	●
	5	Information for intelligent Touch Manager / intelligent Touch Controller	●	●	●	●	●
	6	Remote controller thermistor control during group control	●	●	●	●	●
	7	Time for absence area detection	●	—	—	—	—
	10	Dry operation time during VRTsmart	●	●	●	—	—
	11	Low airflow setting when thermostat OFF during VRTsmart	●	●	●	—	—
11 (21)	2	Indoor fan settings during cooling/heating thermostat OFF	●	●	●	—	●
	3	Setting of airflow rate when heating	●	●	●	—	●
	6	Setting the rate of human detection	●	—	—	—	—
	7	Automatic airflow adjustment	—	—	●*1	—	—
	8	Compensating the temperature around people	●	—	—	—	—
12 (22)	9	Compensating the floor temperature when heating	●	—	—	—	—
	0	Optional accessories output selection	●	●	●	●	●
	1	External ON/OFF input	●	●	●	●	●
	2	Thermostat differential changeover	●	●	●	●	●
	3	Airflow setting when heating thermostat is OFF	●	●	●	●	●
	4	Automatic mode differential	●	●	●	●	●
	5	Auto restart after power failure	●	●	●	●	●
	6	Airflow setting when cooling thermostat is OFF	●	●	●	●	●
13 (23)	11	Compensating the floor temperature when cooling	●	—	—	—	—
	0	Ceiling height setting, Setting of normal airflow	●	—	—	—	●
	1	Airflow direction setting	●	—	—	—	—
	2	Swing pattern settings	●	—	—	—	—
	3	Airflow function setting	●	—	—	—	—
	4	Airflow direction adjustment range	●	—	—	—	●
	5	Setting of static pressure selection	—	●	—	—	—
	6	External static pressure settings	—	—	●	—	—
	7	Setting of swing patterns when cooling thermostat is OFF	●	—	—	—	●
	13	Setting of circulation airflow	●	—	—	—	—
	14	Circulation airflow patterns	●	—	—	—	—
15 (25)	15	Switching panel type	●	—	—	—	—
	1	Humidification setting ON/OFF when heating thermostat is OFF	●	●	●	●	●
	2	Direct duct connection	●	—	—	—	●
	3	Drain pump and humidifier interlock selection	●	●	●	●	●
1b	5	Individual ventilation setting	●	●	●	●	●
	4	Display of error codes on the remote controller	●	●	●	●	●
1c	14	Setting restricted/permitted for airflow block	●	—	—	—	—
	0	Room temperature display	●	●	●	●	●
	01	Thermostat sensor	●	●	●	●	●
	12	Window contact B1	●	●	●	●	●
1e	13	Key card contact B2	●	●	●	●	●
	02	Setback function	●	●	●	●	●
1B	07	Rotation overlap time	●	●	●	●	●
	08	Daylight saving time	●	●	●	●	●

● : Available

— : Not available

*1: Except FXMQ140PB

1.4 Details of Field Settings for Indoor Unit

1.4.1 Filter Cleaning Sign Interval, Filter Type

When the setting 10 (20)-3 is set to **01** (Displayed), filter cleaning sign is displayed on the remote controller after a certain period of operation time. This setting is used to change the display interval of filter cleaning sign when the filter contamination is heavy.

The filter cleaning sign interval is determined as follows depending on the combination of Mode No. 10 (20)-0 and 10 (20)-1.

Filter cleaning sign interval

★: Factory setting

Setting	10 (20)-1	01: Long life filter★		02: Ultra long life filter	
	Filter contamination heavy/light 10 (20)-0	Light 01★	Heavy 02	Light 01	Heavy 02
Model	FXFSQ-AR	2,500 hrs.★	1,250 hrs.	10,000 hrs.	5,000 hrs.
	FXDQ-PD				
	FXDQ-ND				
	FXMQ-PB				
	FXMQ-AR				
	FXAQ-AR	200 hrs.★	100 hrs.	200 hrs.	100 hrs.

1.4.2 Remote Controller Thermistor


Select a thermistor to control the room temperature.

■ When the unit is not equipped with an infrared floor sensor:

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
10 (20)	2	01★	Remote controller thermistor and suction air thermistor in indoor unit★
		02	Suction air thermistor
		03	Remote controller thermistor

The factory setting for the Second code No. is **01** and room temperature is controlled by the suction air thermistor for indoor unit and remote controller thermistor. When the Second code No. is set to **02**, room temperature is controlled by the suction air thermistor. When the Second code No. is set to **03**, room temperature is controlled by the remote controller thermistor.

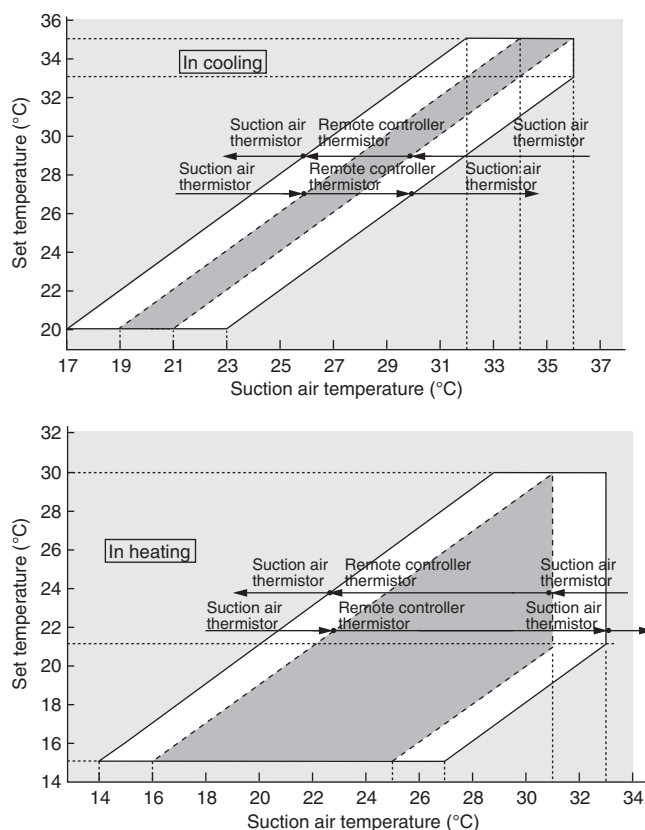

■ When the unit is equipped with an infrared presence/floor sensor:

★: Factory setting

Mode No.	First Code No.	Second Code No.					
10 (20)	2	01	02	02	<u>02</u> ★	02	03
11 (21)	8	01	01	02	<u>03</u> ★	04	01
The thermistor to be used		↓	↓	↓	↓	↓	↓
Remote controller thermistor		●	—	—	—	—	●
Suction air thermistor		●	●	●	●	●	—
Infrared floor sensor		—	—	●	●	●	—
		↓	↓	↓	↓	↓	↓
		The infrared floor sensor is not used		Priority given to the suction air temperature (*)		Priority given to the floor temperature (*)	
		↓		↓		↓	
		Only the suction air thermistor is used		Standard setting (Factory setting)		Only the remote controller thermistor is used	

*Refer to **Compensating the temperature around people** on page 98.

Note that the control is automatically switched to the one performed only by the suction air thermistor for indoor unit when the Second code No. is **01** during the group control.

To use the remote controller thermistor control during group control, select the Second code No. **02** in First code No. **6**.

Mode No.	First Code No.	Second Code No.	Contents
10 (20)	6	<u>01</u> ★	Remote controller thermistor control is not permitted during group control★
		02	Remote controller thermistor control is permitted during group control

1.4.3 Filter Cleaning Sign

Whether or not to display the sign after operation of a certain duration can be selected.

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
10 (20)	3	01★	Displayed★
		02	Not displayed

1.4.4 Information for intelligent Touch Manager / intelligent Touch Controller

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
10 (20)	5	01★	<u>Only indoor unit sensor value (or remote controller sensor value, if installed.)★</u>
		02	Sensor values according to 10 (20)-2 and 10 (20)-6.

* When field setting 10 (20)-6-02 is set at the same time as 10 (20)-2-01,02,03, field setting 10 (20)-2 has priority. When field setting 10 (20)-6-01 is set at the same time as 10 (20)-2-01,02,03, field setting 10 (20)-6 has priority for group connection, and 10 (20)-2 has priority for individual connection.


1.4.5 Time for Absence Area Detection

By selecting the energy-saving operation mode when absent, the target temperature is shifted to the energy-saving end by 1°C (maximum 2°C) after the state of absence continues for a certain period of time.

Absent time defined for detection can be selected as follows:

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
10 (20)	7	01★	30 minutes★
		02	60 minutes

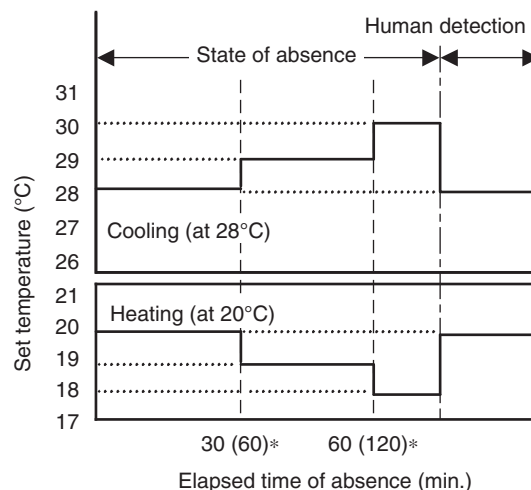

* The values in parentheses represent the time when Second code No. is 02.

- The set temperature displayed on the remote controller remains the same even if the target temperature is shifted.
- As soon as people are detected while the temperature is shifted, this control will be cancelled (reset).

1.4.6 Dry Operation Time during VRTsmart Control

- If you switch the operation mode to "Dry" while VRTsmart is enabled, the mode will automatically switch to "Cooling" after a certain period of time is elapsed.
If you want to increase the duration of dry operation, change the Second code No. as indicated in the following table.

Note 1) Increasing duration of dry operation degrades the energy efficiency

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
10 (20)	10	01★	30 minutes★
		02	60 minutes
		03	90 minutes
		04	Continuous (not returning to cooling)

Note 2) When group control is enabled, all indoor units in the same group have a same set value for duration of dry operation.

1.4.7 Low Airflow Setting when Thermostat OFF during VRTsmart Control

This setting changes the airflow volume to LL in coordination with the VRTsmart control when cooling thermostat OFF is set. Also, the airflow direction is changed to horizontal.

When disabled:

12 (22)-6 (the airflow volume setting when cooling thermostat OFF is enabled)

13 (23)-7 (the swing setting when cooling thermostat OFF is enabled) is as set

When enabled: LL when $T_e \geq 7^\circ\text{C}$

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
10 (20)	11	01	Disabled
		02★	Enabled★

1.4.8 Indoor Fan Settings during Cooling/Heating Thermostat OFF

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
11 (21)	2	01★	Normal★
		02	Fan OFF

1.4.9 Setting of Airflow Rate when Heating

The fan revolution is changed to maintain the sufficient distance for warm air to reach during the heating operation. The setting should be changed depending on the installation condition of the unit.

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
11 (21)	3	01★	Standard★
		02	Slightly increased
		03	Increased

Note that this setting is effective only during the heating operation.

1.4.10 Setting the Rate of Human Detection

Set the sensitivity of the infrared presence/floor sensor.

■ The infrared presence/floor sensor can be disabled by selecting the Second code No. **04**. When the infrared presence/floor sensor is disabled, the remote controller menu does not display some functions such as the automatic draft reduction, energy-saving operation in absence and halt in absence.

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
11 (21)	6	01	High sensitivity
		02	Low sensitivity
		03★	Standard sensitivity★
		04	Infrared presence/floor sensor disabled

1.4.11 Automatic Airflow Adjustment

Make external static pressure setting automatically using automatic airflow adjustment (11 (21)-7), or manually using external static pressure settings (13 (23)-6).

The volume of blow-off air is automatically adjusted to the rated quantity.

Make settings before performing the test operation of the outdoor unit.

Setting procedure

1. Make sure that electric wiring and duct construction have been completed. In particular, if the closing damper is installed on the way of the duct, make sure that it is open. In addition, make sure that a field-supplied air filter is installed within the air passageway on the suction port side.
2. If there are multiple blow-off and suction ports, adjust the throttle part so that the airflow volume ratio of each suction/blow-off port conforms to the designed airflow volume ratio. In that case, operate the unit with the operation mode "fan". When you want to change the airflow rate, adjust it by pressing the airflow rate control button to select High, Middle or Low.
3. Make settings to adjust the airflow rate automatically. After setting the operation mode to "fan", enter the field setting mode while operation is stopped and then select the Mode No. "(21) (11 for batch setting)", set the First Code No. to 7 and the Second Code No. to **03**. After setting, return to the basic screen (to the normal mode in the case of a wireless remote controller) and press the ON/OFF button. Fan operation for automatic airflow adjustment will start with the operation lamp turned ON. Do not adjust the throttle part of the suction and blow-off ports during automatic adjustment. After operation for approximately one to fifteen minutes, airflow adjustment automatically stops with the operation lamp turned OFF.
4. After operation stopped, make sure that the Second Code No. is set to **02** as in the following table by indoor unit with the Mode No. of (21). If operation does not stop automatically or the Second Code No. is not set to **02**, return to the step 3. above to make settings again.

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
11 (21)	7	01★	OFF★
		02	Completion of airflow adjustment
		03	Start of airflow adjustment



Note(s)

1. Make sure that the external static pressure is within the range of specifications before making settings. If it is outside the range, automatic adjustment fails, which may cause an insufficient airflow volume or leakage of water.
2. If the air passageway including duct or blow-off ports is changed after automatic adjustment, make sure to perform automatic airflow adjustment again.

1.4.12 Compensating the Temperature around People

Change the ratio between the suction air temperature and floor temperature used to calculate the temperature around people.

The temperature around people is calculated using the values of the suction air thermistor and the infrared floor sensor. The factory setting is "Normal" (the average value of the suction air temperature and the floor temperature is applied). However, the rate at which the suction air thermistor and the infrared floor sensor affect the temperature around people can be changed with this setting.

- To reflect the effect of the temperature around the ceiling, select the "Priorities given on the suction air temperature" (the Second code No. **02**).
- To reflect the effect of the temperature around the floor, select the "Priorities given on the floor temperature" (the Second code No. **04**).
- The infrared floor sensor can be disabled by selecting "Suction air temperature only" (the Second code No. **01**).

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
11 (21)	8	01	Suction air temperature only
		02	Priority given on the suction air temperature
		03★	Standard★
		04	Priority given on the floor temperature

1.4.13 Compensating the Floor Temperature when Heating

Offset the detected value of the infrared floor sensor with a certain temperature. This setting should be used to have the actual floor temperature detected when, for example, the unit is installed close to a wall.

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
11 (21)	9	01	−4°C
		02	−2°C
		03★	0°C★
		04	2°C

Actual procedure to use the setting

Although the standard setting is normally used with no problem, the setting should be changed in the following cases:

Environment	Operation Mode	Problem	Setting Value
- The unit is installed close to a wall or a window. - High thermal capacity of the floor (such as concrete, etc.). - There are many heat sources including PC. - There is a non-negligible heat source such as floor heating.	Heating	Excessive heating	2°C
		Insufficient heating	−2°C or −4°C

1.4.14 Optional Accessories Output Selection


Using this setting, "operation output signal" and "abnormal output signal" can be provided. Output signal is output between terminals X1 and X2 of "adaptor for wiring", an optional accessory.

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
12 (22)	0	01★	Indoor unit thermostat ON/OFF signal is provided.★
		02	—
		03	Output linked with ON/OFF of remote controller is provided.
		04	In case of Error Display appears on the remote controller, output is provided.

1.4.15 External ON/OFF Input

This input is used for "ON/OFF operation" and "Protection device input" from the outside. The input is performed from the T1-T2 terminal of the operation terminal block in the electrical component box.

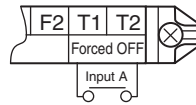

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
12 (22)	1	01★	ON: Forced OFF (prohibition of using the remote controller) OFF: Permission of using the remote controller★
		02	OFF → ON: Operation ON → OFF: Stop
		03	ON: Operation OFF: The system stops, then the applicable unit indicates A0 . The other indoor units indicate U9 .

1.4.16 Thermostat Differential Changeover

Set when remote sensor is to be used.

Differential value during thermostat ON/OFF control can be changed.

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
12 (22)	2	01★	1°C★
		02	0.5°C

1.4.17 Airflow Setting when Heating Thermostat is OFF

This setting is used to set airflow when heating thermostat is OFF.

* When thermostat OFF airflow volume up mode is used, careful consideration is required before deciding installation location.

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
12 (22)	3	01★	LL tap★
		02	Set fan speed

1.4.18 Automatic Mode Differential

This setting makes it possible to change differential values for mode selection while in automatic operation mode.

★: Factory setting

Mode No.	First Code No.	Second Code No.							
		01★	02	03	04	05	06	07	08
12 (22)	4	0°C★	1°C	2°C	3°C	4°C	5°C	6°C	7°C

The automatic operation mode setting is made by the use of the "Operation Mode Selector" button.

1.4.19 Auto Restart after Power Failure

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
12 (22)	5	01	OFF
		02★	ON★

When the "Auto Restart after Power Failure" setting is turned OFF, all the units will remain OFF after power failure, or after the main power supply is restored. When this setting is turned ON (factory setting), the units that were operating before the power failure will automatically restart operation after power failure, or after the main power supply is restored.

Due to the aforementioned, when the "Auto restart after power failure" setting is ON, be careful for the following situations that may occur.



Caution

1. The air conditioner will start operation suddenly after power failure, or when the main power supply is restored. The user might be surprised and wonder why the air conditioner turned ON suddenly.
2. During maintenance, if the main power supply is turned OFF while the units are in operation, the units will automatically start operation (the fan will rotate) after the power supply is restored due to completion of the maintenance work.

1.4.20 Airflow Setting when Cooling Thermostat is OFF

This is used to set airflow to LL airflow when cooling thermostat is OFF.

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
12 (22)	6	01	LL tap
		02★	Set fan speed★

1.4.21 Compensating the Floor Temperature when Cooling

Offset the detected value of the infrared floor sensor with a certain temperature. This setting should be used to have the actual floor temperature detected when, for example, the unit is installed close to a wall.

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
12 (22)	11	01	4°C
		02	2°C
		03★	0°C★
		04	-2°C

Specific usages of this setting

There is no problem with the standard setting in the usual condition. Change the setting in the cases indicated in the following table.

Environment	Operation Mode	Problem	Contents
<ul style="list-style-type: none"> - The unit is installed close to a wall or a window. - High thermal capacity of the floor (such as concrete, etc.). - There are many heat sources including PC. - There is a non-negligible heat source such as floor heating. 	Cooling	Insufficient cooling	-2°C
		Excessive cooling	2°C or 4°C

1.4.22 Ceiling Height Setting, Setting of Normal Airflow

Make the following setting according to the ceiling height.

■ FXFSQ25-80AR

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents	Ceiling Height			
				All round outlet	4-way Outlets	3-way Outlets	2-way Outlets
13 (23)	0	01★	Standard★	Lower than 2.7 m★	Lower than 3.1 m★	Lower than 3.0 m★	Lower than 3.5 m★
		02	High Ceiling	Lower than 3.0 m	Lower than 3.4 m	Lower than 3.3 m	Lower than 3.8 m
		03	Higher Ceiling	Lower than 3.5 m	Lower than 4.0 m	Lower than 3.5 m	—

■ FXFSQ100-140AR

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents	Ceiling Height			
				All round outlet	4-way Outlets	3-way Outlets	2-way Outlets
13 (23)	0	01★	Standard★	Lower than 3.2 m★	Lower than 3.4 m★	Lower than 3.6 m★	Lower than 4.2 m★
		02	High Ceiling	Lower than 3.6 m	Lower than 3.9 m	Lower than 4.0 m	Lower than 4.2 m
		03	Higher Ceiling	Lower than 4.2 m	Lower than 4.5 m	Lower than 4.2 m	—



Note(s)

1. The Second Code No. is factory set to Standard/All-direction airflow. For High ceiling (1) or (2), initial setting by remote controller is required.
2. A closing member kit (optional) is required for 4-, 3-, or 2-direction airflow.

■ FXFSQ-AR with Designer panel

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents	FXFSQ25-80AR (All round outlet)	FXFSQ100-140AR (All round outlet)
13 (23)	0	01★	Standard★	Lower than 2.4 m★	Lower than 3.2 m★
		02	High Ceiling (1)	Lower than 2.7 m	Lower than 3.6 m
		03	High Ceiling (2)	Lower than 3.2 m	Lower than 4.2 m

■ FXAQ-AR

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
13 (23)	0	01★	Standard★
		02	Slightly higher
		03	High

1.4.23 Airflow Direction Setting

Set the airflow direction of indoor units as given in the table below. (Set when sealing material kit of air discharge outlet has been installed.) The second code No. is factory set to **01**.

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
13 (23)	1	01★	4-way airflow★
		02	3-way airflow
		03	2-way airflow

1.4.24 Swing Pattern Settings

Set the flap operation in swing mode.

With the factory swing, flaps facing each other are synchronized to operate, and flaps placed side by side are set to swing in an opposite direction to agitate airflow to reduce temperature irregularity.


Conventional swing operation (all direction synchronized swing) can be set onsite.

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
13 (23)	2	01	All direction synchronized swing
		02	—
		03★	Facing swing★

1.4.25 Airflow Direction Adjustment Range

Make the following airflow direction setting according to the respective purpose.

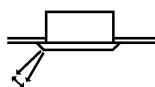

■ FXFSQ-AR, FXAQ-AR

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
13 (23)	4	01	Draft prevention (Upward)
		02★	Standard★
		03	Ceiling soiling prevention (Downward)



Note(s)

1. Some indoor unit models are not equipped with draft prevention (upward) function.
2. When the model FXFSQ-AR is attached with a closing member kit, set the Second Code No. to **02** or **03**.

1.4.26 Setting of Static Pressure Selection

■ FXDQ-PD, FXDQ-ND

★: Factory setting

Model No.	First Code No.	Second Code No.	Contents
13 (23)	5	01★	Standard (10 Pa) ★
		02	High static pressure (30 Pa)

1.4.27 External Static Pressure Settings

Make external static pressure setting automatically using automatic airflow adjustment (11 (21)-7), or manually using external static pressure settings (13 (23)-6).

■ FXMQ-PB

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
13 (23)	6	01	30 Pa (*2) (*3)
		02	50 Pa
		03	60 Pa
		04	70 Pa
		05	80 Pa
		06	90 Pa
		07★	100 Pa★
		08	110 Pa
		09	120 Pa
		10	130 Pa
		11	140 Pa
		12	150 Pa (*3)
		13	160 Pa (*3)
		14	180 Pa (*1) (*3)
		15	200 Pa (*1) (*3)

*1 FXMQ40PB cannot be set to 180 or 200 Pa.

*2 FXMQ50-125PB cannot be set to 30 Pa.

*3 FXMQ140PB cannot be set to 30 Pa and 150-200 Pa.

1.4.28 Setting of Swing Patterns when Cooling Thermostat is OFF

In cooling operation, when the airflow direction is set to swing, flaps swing even when the thermostat is OFF. This setting allows to change the airflow direction when the thermostat is OFF.

★: Factory setting

Mode No.	First Code No.	Second Code No.	Fixed	Swing
13 (23)	7	01	Set Position	Swing
		02	Set Position	P0
		03★	P0★	P0★
		04	Set Position	Swing
		05	Set Position	P2
		06	P2	P2
		07	Set Position	Swing

1.4.29 Setting of Circulation Airflow

This is to set whether the circulation airflow function is enabled or disabled.

★: Factory setting





Mode No.	First Code No.	Second Code No.	Contents
13 (23)	13	01	Disabled
		02★	Enabled★


1.4.30 Circulation Airflow Patterns

This setting is to change the appearance pattern of the circulation airflow direction depending on the installation environment of the indoor unit.

Cooling





★: Factory setting

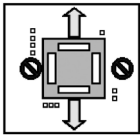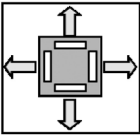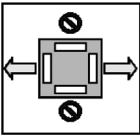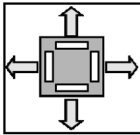
Movement pattern		(a)	(b)	(c)	(d)
					
Appearance Time (sec.) 13 (23)-14	01: Pattern 1★	120★	600★	120★	600★
	02: Pattern 2	120	600	0	0
	03: Pattern 3	0	0	120	600
	04: Pattern 4	120	600	120	600

 Indicates the horizontal flap is in the position of reducing airflow volume (where the flap is reversed).

Heating

★: Factory setting

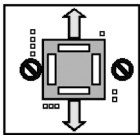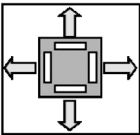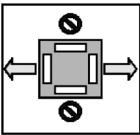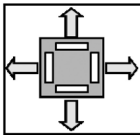Movement pattern		(a)	(b)	(c)	(d)
					
Appearance Time (sec.) 13 (23)-14	01: Pattern 1★	120★	120★	120★	120★
	02: Pattern 2	120	120	0	0
	03: Pattern 3	0	0	120	120
	04: Pattern 4	120	0	120	0

 Indicates the horizontal flap is in the position of reducing airflow volume (where the flap is reversed).

1.4.31 Switching Panel Type

Change this setting depending on the type of the panel connected.

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
13 (23)	15	01★	Standard panel★
		02	Designer panel

1.4.32 Humidification when Heating Thermostat is OFF

Setting to **Equipped** turns ON the humidifier if suction air temperature is 20°C or more and turns OFF the humidifier if suction air temperature is 18°C or below when the heating thermostat is OFF.

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
15 (25)	1	01★	Not equipped★
		02	Equipped

1.4.33 Direct Duct Connection

This is used when "fresh air intake kit equipped with fan" is connected by duct directly. The indoor fan carries out residual operation for 1 minute after the thermostat is stopped. (For the purpose of preventing dust on the air filter from falling off.) When the second code No. is set to **02**: Equipped, heat reclaim ventilation fan conducts the fan residual operation by linking to indoor unit.

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
15 (25)	2	01★	Not equipped★
		02	Equipped

1.4.34 Drain Pump and Humidifier Interlock Selection

This is used to interlock the humidifier with the drain pump. When water is drained out of the unit, this setting is unnecessary.

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
15 (25)	3	01★	Not interlocked★
		02	Interlocked

1.4.35 Individual Ventilation Setting

This is set to perform individual operation of heat reclaim ventilation using the remote controller/central unit when heat reclaim ventilation is built in.
(Switch only when heat reclaim ventilation is built in.)

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
15 (25)	5	01★	Normal★
		02	Individual

1.4.36 Display of Error Codes on the Remote Controller

■ BRC1E Series

Error code (four digits) is displayed for limited products.
Select two-digit display if four-digit display is not preferred.

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
1b	4	01	—
		02	Two-digit display
		03	—
		04★	Four-digit display★

1.4.37 Setting Restricted/Permitted of Airflow Block

The airflow block function cannot be enabled when closure material kit, fresh air intake kit, separately installed natural evaporation type humidifier, or branch air duct is equipped, due to the possibility of dew condensation.

This setting restricts the airflow block function, preventing that the airflow block is inadvertently set to ON.

Ensure that "Airflow block restricted" is set when using the options listed above.

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
1b	14	01★	<u>Airflow block permitted</u>★
		02	—
		03	—
		04	—
		05	Airflow block restricted

1.4.38 Room Temperature Display

■ BRC1E Series

A "Detailed display screen" can be selected as the display screen. This setting is used if you do not want to display "Room temperature display" on the "Detailed display screen".

★: Factory setting

Mode No.	First Code No.	Second Code No.	Contents
1c	0	01	Not displayed
		02★	<u>Displayed</u>★

1.5 Operation Control Mode

The operation control mode is compatible with a variety of controls and operations by limiting the functions of the operation remote controller. Furthermore, operations such as remote controller ON/OFF can be limited in accordance with the combination conditions. (Refer to information on the next page.)

Central remote controller is normally available for operations. (Except when centralized monitor is connected)

Contents of Control Modes

20 modes consisting of combinations of the following 5 operation modes with temperature and operation mode setting by remote controller can be set and displayed by operation modes 0 through 19.

■ ON/OFF control impossible by remote controller

Used when you want to turn ON/OFF by central remote controller only.

(Cannot be turned ON/OFF by remote controller.)

■ OFF control only possible by remote controller

Used when you want to turn ON by central remote controller only, and OFF by remote controller only.

■ Centralized

Used when you want to turn ON by central remote controller only, and turn ON/OFF freely by remote controller during set time.

■ Individual

Used when you want to turn ON/OFF by both central remote controller and remote controller.


■ Timer operation possible by remote controller

Used when you want to turn ON/OFF by remote controller during set time and you do not want to start operation by central remote controller when time of system start is programmed.

How to Select Operation Mode

Whether operation by remote controller will be possible or not for turning ON/OFF, controlling temperature or setting operation mode is selected and decided by the operation mode given on the right edge of the table below.

Example

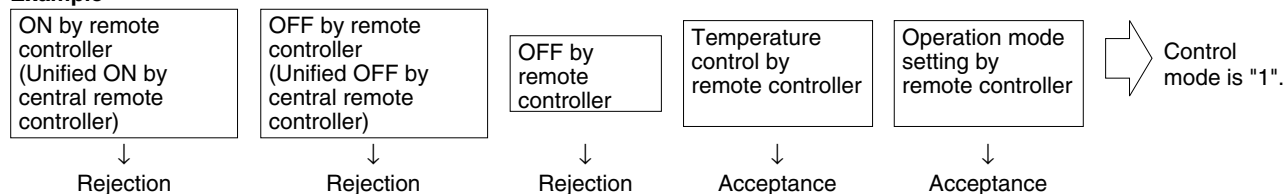


★: Factory setting

Control mode	Control by remote controller					Control mode	
	Operation		OFF	Temperature control	Operation mode setting		
	Unified operation, individual operation by central remote controller, or operation controlled by timer	Unified OFF, individual stop by central remote controller, or timer stop					
ON/OFF control impossible by remote controller	Rejection (Example)	Rejection (Example)	Rejection (Example)	Rejection	Acceptance	0	
					Rejection	10	
					Acceptance (Example)	Acceptance (Example)	1 (Example)
					Rejection	11	
OFF control only possible by remote controller	Rejection (Example)	Rejection (Example)	Acceptance	Rejection	Acceptance	2	
					Rejection	12	
					Acceptance	Acceptance	3
						Rejection	13
Centralized	Acceptance	Acceptance		Rejection	Acceptance	4	
					Rejection	14	
Acceptance				Acceptance	Acceptance	5	
					Rejection	15	
Individual	Acceptance	Acceptance		Rejection	Acceptance	6	
					Rejection	16	
				Acceptance	Acceptance	Acceptance	17★
						Rejection	17
Timer operation possible by remote controller	Acceptance (During timer at ON position only)	Rejection (During timer at OFF position only)		Rejection	Acceptance	8	
					Rejection	18	
					Acceptance	Acceptance	9
						Rejection	19

Do not select "timer operation possible by remote controller" if not using a remote controller. Operation by timer is impossible in this case.

Local remote controllers cannot set temperature or operation mode when the system is under centralized control and the mark for centralized control appears on the screen.

BRC1E63

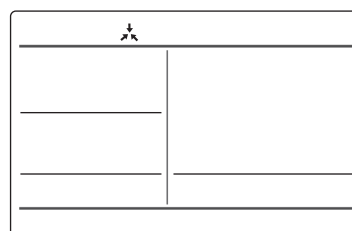

2. Field Settings for Outdoor Unit

This section shows a list of field setting items possible to set at time of initial startup. For details of DIP switch setting, setting mode ("mode 2") and monitor mode ("mode 1"), refer to information on the following pages.

2.1 Function Setting

Following setting may be required to set to comply to specific application requirements.

Setting item	Contents and objective of setting	Overview of setting procedure
Setting of low noise operation (*2)	A.To reduce operation noise level through reduction of the upper limit of the fan using external input (use outdoor fan step 8 for normal control). 1. Level 1: fan step 8 or less. 2. Level 2: fan step 7Y or less. 3. Level 3: fan step 6 or less.	<ul style="list-style-type: none"> ■ Use the optional board DTA104A61 (*1). ■ Set mode 2-12 to 1. ■ Choose level by mode 2-25. ■ If required, set the Capacity priority setting ON by setting the mode 2-29 to 1.
	B.To perform automatic night-time low noise operation. Start time: selectable from 8:00 PM to 12:00 AM (step by 2 hours). End time: selectable from 6:00 AM to 8:00 AM (step by 1 hour). (Note that the set time is estimated according to outdoor air temperature.)	<ul style="list-style-type: none"> ■ Select required level by mode 2-22. ■ Select start time with mode 2-26. ■ Select end time with mode 2-27. ■ Select capacity priority setting if required by mode 2-29-1.
Setting of demand operation (*2)	1. Demand 1 Level 1: 60% of rated capacity or less 2. Demand 1 Level 2: 65% of rated capacity or less 3. Demand 1 Level 3: 70% of rated capacity or less 4. Demand 1 Level 4: 75% of rated capacity or less 5. Demand 1 Level 5: 80% of rated capacity or less 6. Demand 1 Level 6: 85% of rated capacity or less 7. Demand 1 Level 7: 90% of rated capacity or less 8. Demand 1 Level 8: 95% of rated capacity or less 9. Demand 2 Level 1: 40% of rated capacity or less 10. Demand 2 Level 2: 50% of rated capacity or less 11. Demand 2 Level 3: 55% of rated capacity or less 12. Demand 3: Forced thermostat off	<ul style="list-style-type: none"> ■ Use the optional board DTA104A61. ■ Wire external signal(s) to the optional adaptor DTA104A61.
		<ul style="list-style-type: none"> ■ Activate input optional board DTA104A61 by setting the mode 2-12 to 1. ■ Select level of demand 1 by mode 2-30. ■ Select level of demand 2 by mode 2-31.
		<ul style="list-style-type: none"> ■ If constant demand control is required (without adaptor DTA104A61), set level by mode 2-32.
Setting of AIRNET address	■ Make AIRNET address when it is connected to AIRNET monitoring, or to view detail in the map on Service Checker type III.	■ Set AIRNET address with mode 2-13.
Setting of high static pressure mode	■ Set high static pressure mode in order to operate the system with duct to the outdoor unit (used at concealed installation on floors or balconies).	■ Set mode 2-18 to 0 (Automatic ESP adjustment).
Evaporating temperature setting (cooling performance)	■ Setting to choose the reaction time of outdoor control on change of outdoor and cooling indoor load.	<ul style="list-style-type: none"> ■ Set mode 2-8 to choose cooling capacity control logic between standard and high sensible. ■ Set mode 2-81 to choose Te adjustment at start up between Powerful, Quick, Mild or Eco.
Eco mode invalid setting	■ Eco mode may be deemed unavailable. 0: Valid 1: Invalid When this configuration is set, it is not possible to turn this control ON/OFF using the external control adaptor.	■ Set mode 2-23.
Eco level setting for Eco mode by external control adaptor	■ You may set the Eco level of Eco mode to Standard/Low or make it unavailable. Depending on the settings, low noise operation or demand operation may not be performed using the external control adaptor.	■ You need an external control adaptor. Using mode 2-11, define if Eco level will be set by the external control adaptor low noise level or demand level. If you short-circuit the terminal (TeS1), Eco level can be set to Standard/Low. In case of open circuit, the setting will be unavailable.
Condensing temperature setting (heating performance)	■ Setting to choose the reaction time of outdoor control on change of outdoor and heating indoor load.	<ul style="list-style-type: none"> ■ Set mode 2-9 to choose heating capacity control logic between fixed, automatic or high sensible. ■ Set mode 2-82 to choose Tc adjustment at start up between Powerful, Quick, Mild or Eco.

For detailed description about each setting, refer to **Details of Setting Mode (Mode 2)** on page 122.



Note(s)

- *1. External control adaptor for outdoor unit.
- *2. These functions are available when setting mode 2-11 to 0.


2.2 Settings by DIP Switches

2.2.1 DIP Switch Setting when Mounting a Spare PCB


Caution:

- After replacement with spare PCB, be sure to make settings shown in the table below. The procedure for making settings of spare PCB is different from that used for factory settings described above. Be sure to refer to the table on the following page in order to make settings of spare PCB after replacement.
- Enforce a re-initialization of communication: press the **RETURN (BS3)** button for minimum 5 seconds.
- After initialization, a test operation is required from outdoor unit. Press the **SET (BS2)** button until indication **t01** appears.

RXYMQ4AVMK

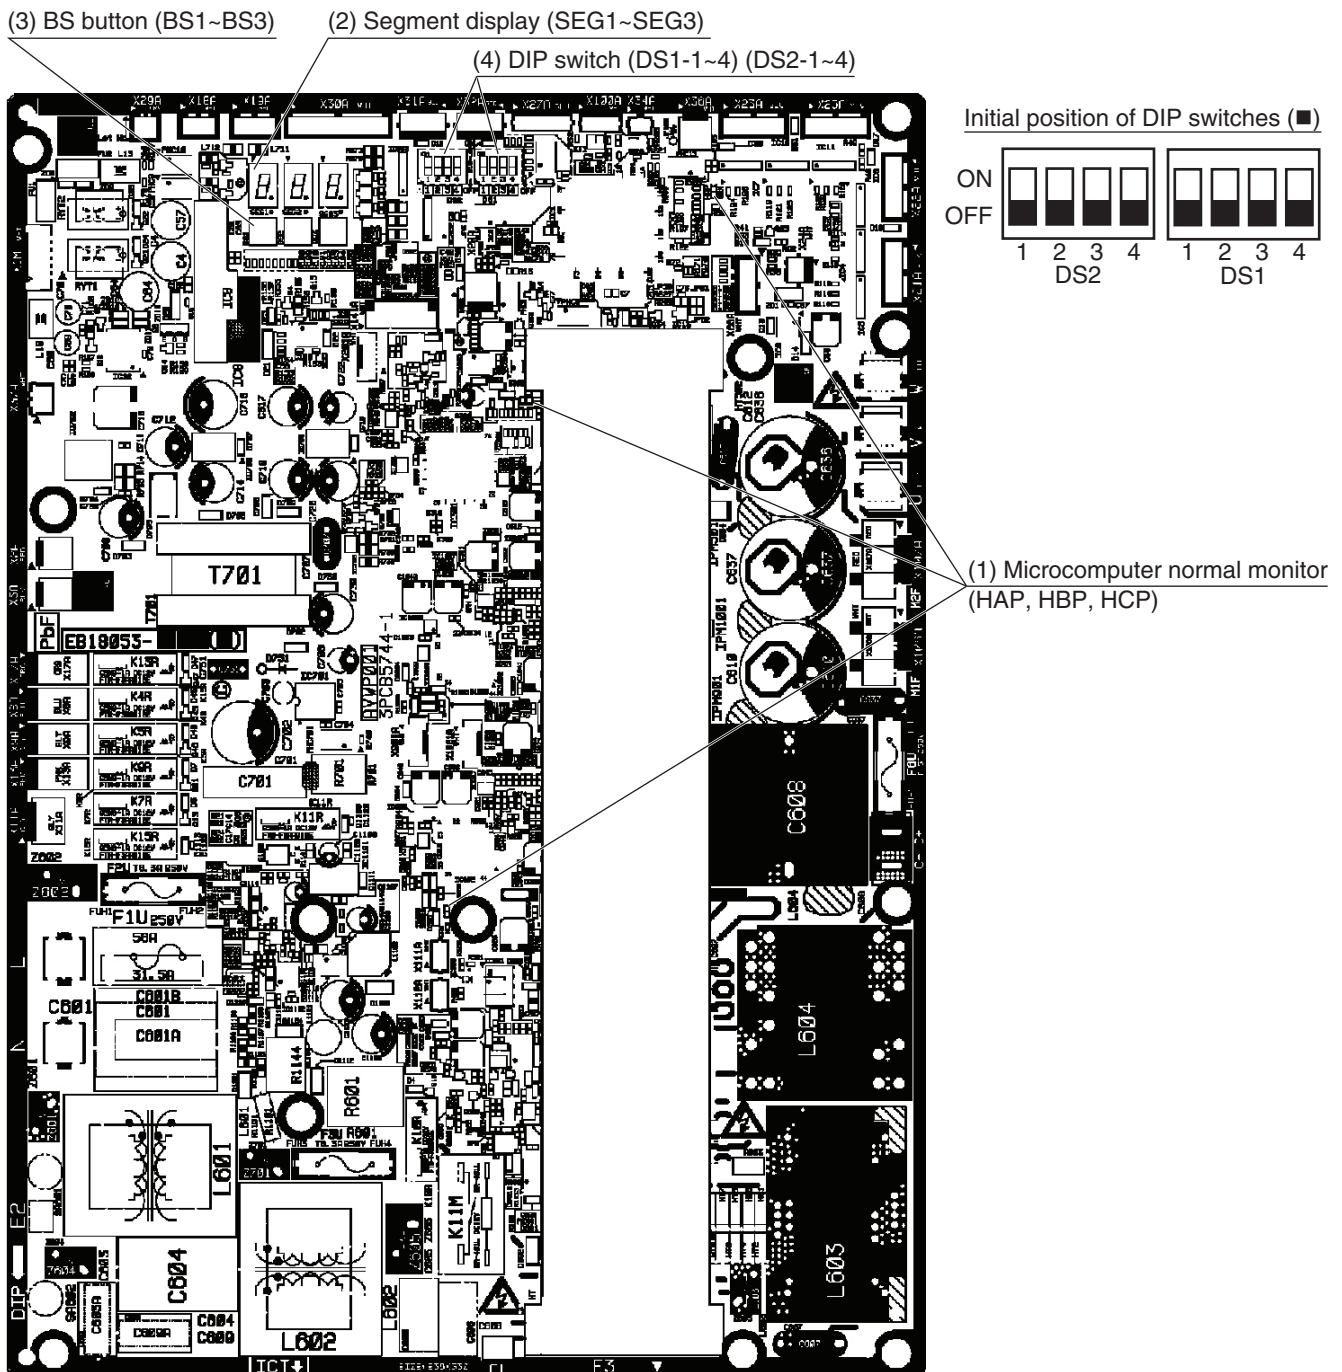

RXYMQ4-6AYFK

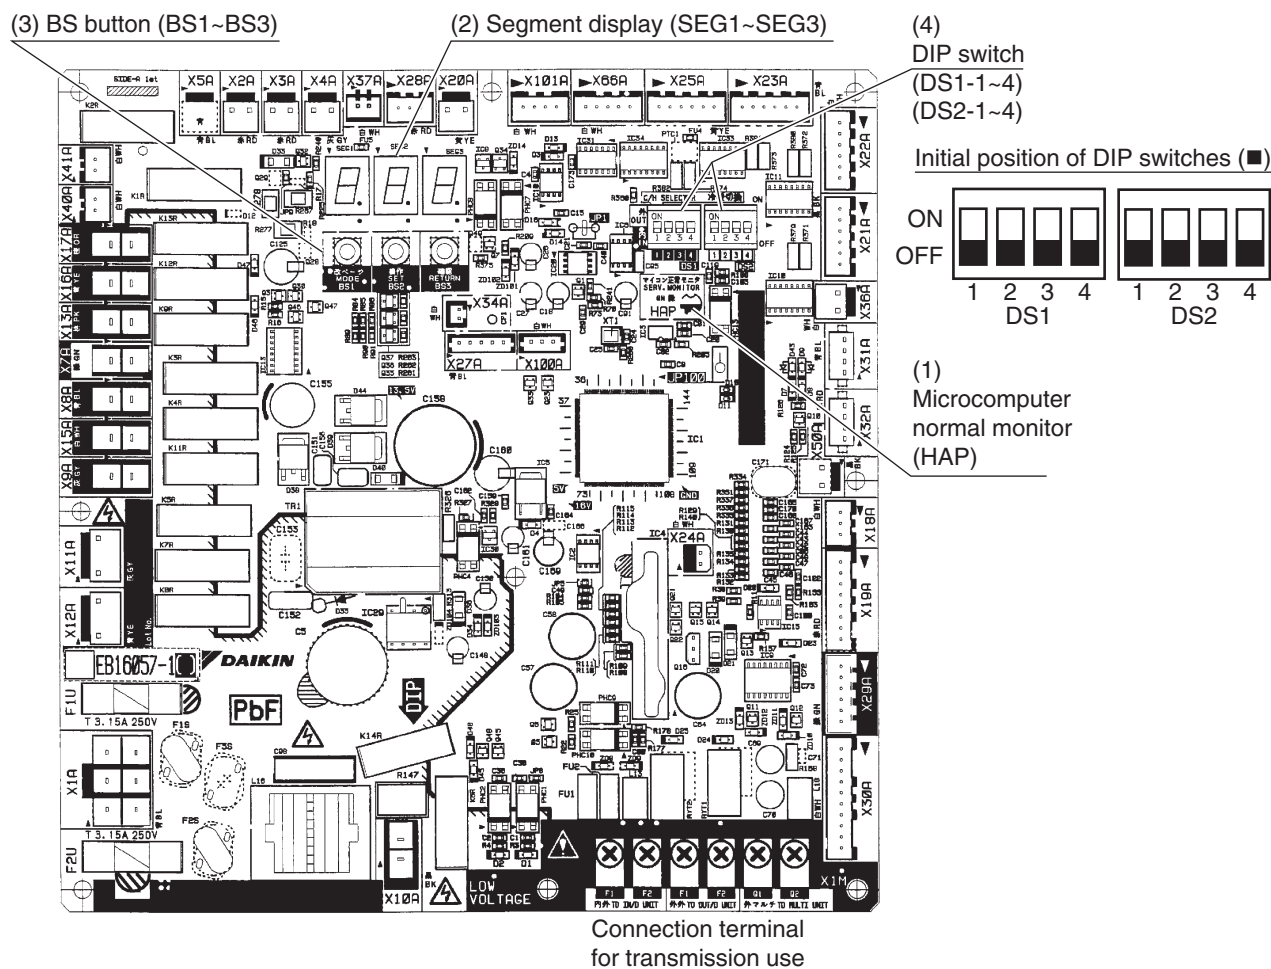

(1) Microcomputer normal monitor

This monitor blinks while in normal control, and turns ON or OFF when an error occurs.

(2) 7 segment display

- Used to check the transmission.
- Used to display the transmission state between indoor and outdoor units.
- Used to display the contents of error.
- Used to display the contents of field setting.

(3) BS button

Used to change mode.

(4) DIP switch

Used to make field settings.


The figure below shows the required position of the DIP switches on spare PCB. Change DIP switches at time of power disconnected.

Application model	The setting method (■ represents the position of switches)	
RXYMQ4AVMK	<p>ON OFF</p> <p>1 2 3 4 DS2</p> <p>1 2 3 4 DS1</p>	Set DS1-2, DS1-4, DS2-1, and DS2-3 to ON.
RXYMQ4AYFK RXYMQ5AYFK RXYMQ6AYFK	<p>ON OFF</p> <p>1 2 3 4 DS1</p> <p>1 2 3 4 DS2</p>	Set DS1-2, DS1-4, DS2-1, DS2-2, and DS2-3 to ON

REMOVING MAIN PCB

- REMOVE THE COVER SCREWS BEFORE REMOVING THE ELECTRICAL COMPONENT.
NOT DOING SO MAY DAMAGE THE REFRIGERANT PIPE.
- REPLACE THE GREASE ON THE HEAT SINK WITH NEW GREASE.
NOT DOING SO MAY CAUSE THE PCB TO FAIL DUE TO INSUFFICIENT COOLING.

REMOVAL

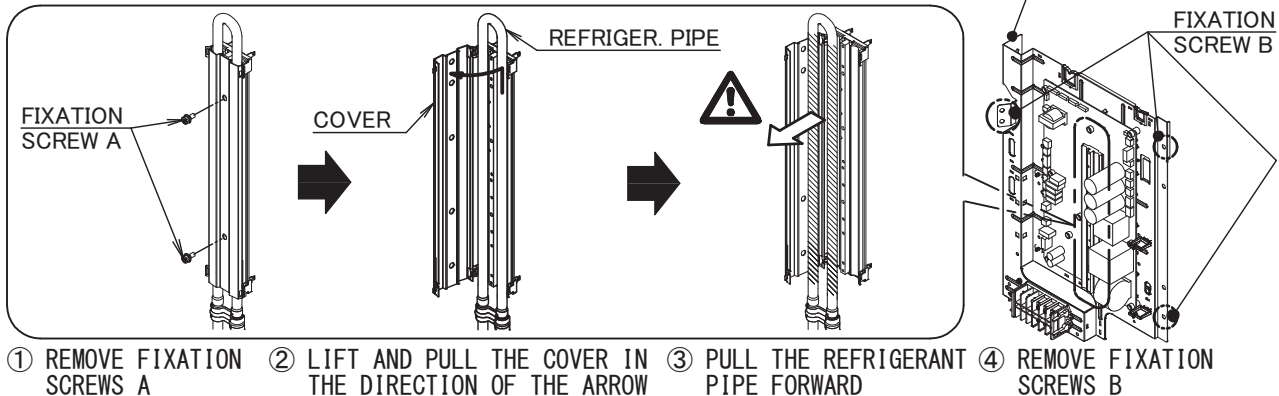


<CAUTION> - DO NOT TOUCH THE HATCHED AREA.



- ALWAYS REPLACE THE GREASE AFTER REMOVING AN ELECTRICAL COMPONENT.
- NO DEFORMATION OF THE PIPE IS ALLOWED.

MOUNTING

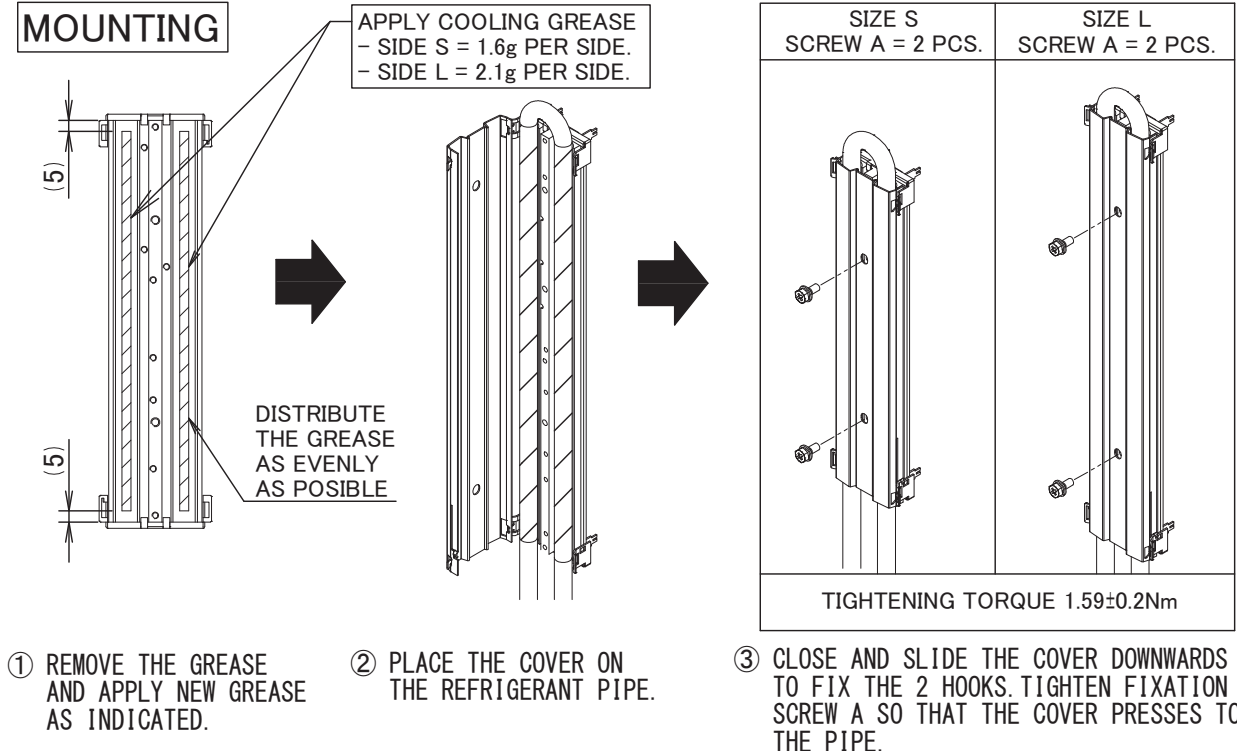


<CAUTION> DO NOT TOUCH THE HATCHED AREA WHEN MOUNTING THE REFRIGERANT PIPE.


2.3 Settings by BS Buttons

The following settings can be made using the BS buttons on the PCB.


BS buttons

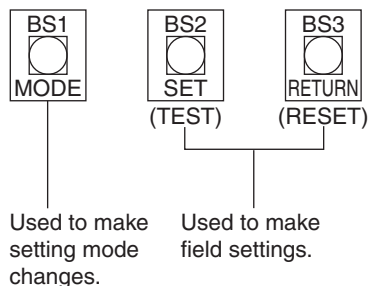


7 segment display (SEG1-3)

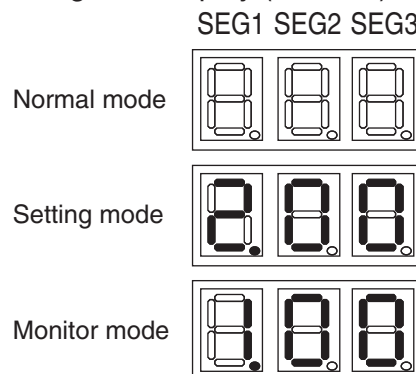

- Normal mode:
 - Blank: If no abnormality is detected and initialization of communication was completed.
 - Flashing combination of letter and number (4 digits): Error code detected by outdoor control or trouble by communication.
- Setting mode: Used to make changes to operating status, performance settings or address setting.
- Monitor mode: Used to verify contents of settings, quantity of units, current value of some parameters during operation of outdoor unit.
- **Mode changing procedure can be selected using the MODE (BS1) button as shown below:**

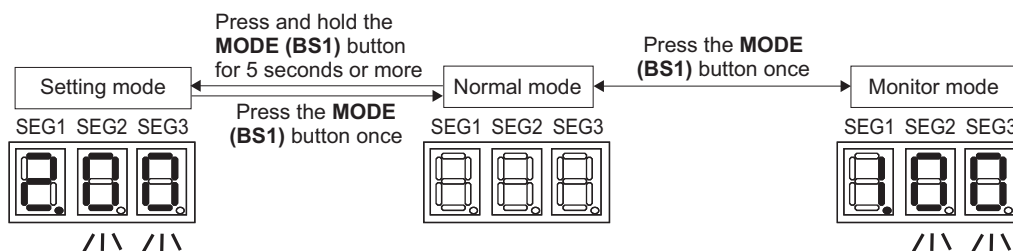


- Selection between normal mode, monitor mode (Mode 1) and setting mode (Mode 2).

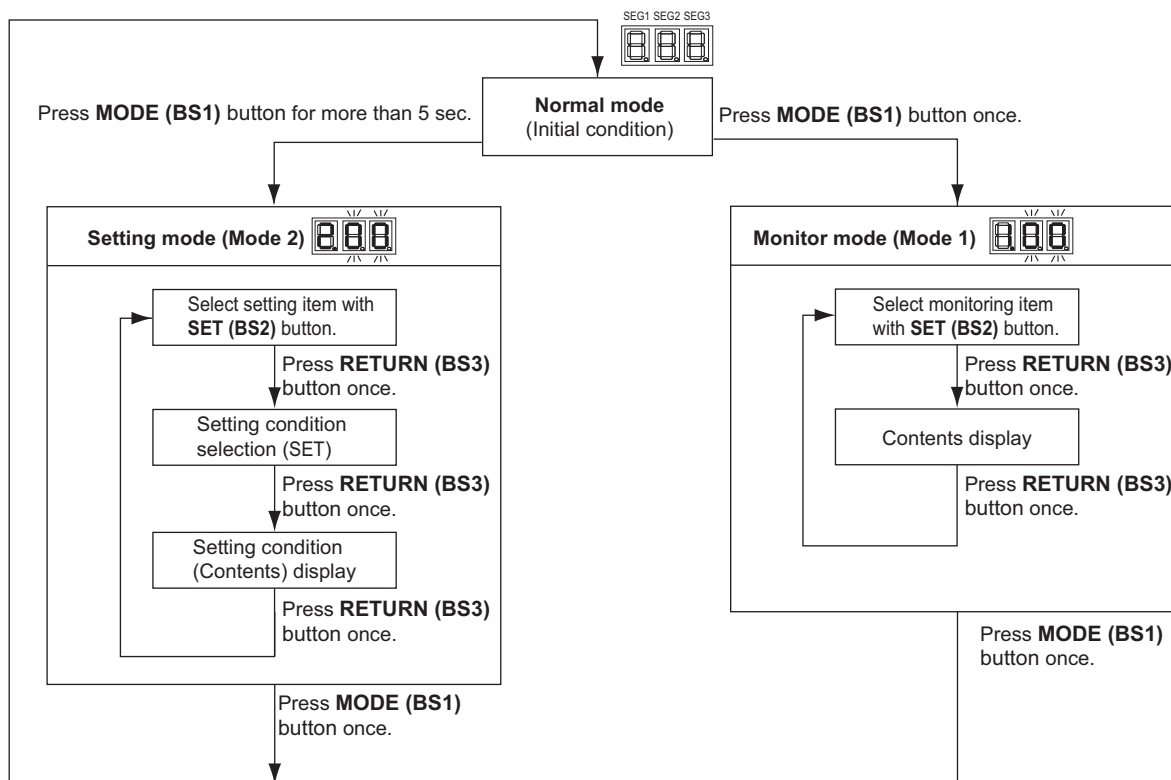


2.4 Normal Mode

1. Indoor/outdoor transmission status: Used to check for the initial status of indoor/outdoor transmission.

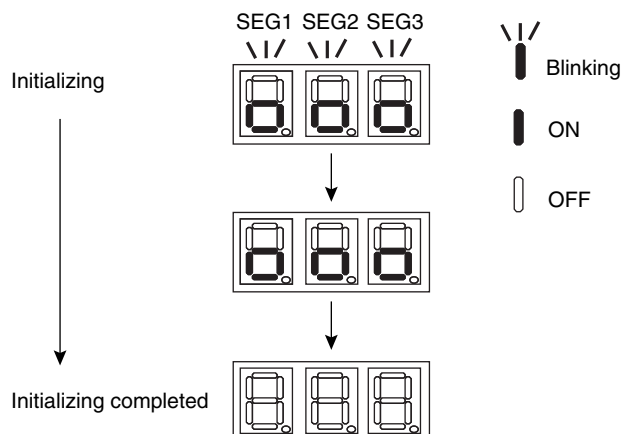


2. Descriptions: Used to display an error content.

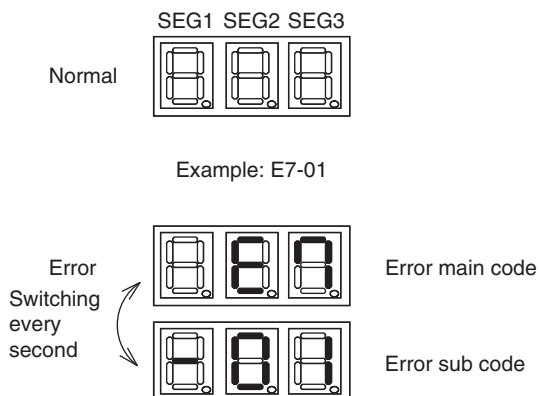

2.5 Monitor Mode (Mode 1)

In the monitor mode, information can be retrieved about settings related to performance, addresses, number of units and actual operation data.

2.5.1 Retrieve data by using BS button on outdoor unit main PCB

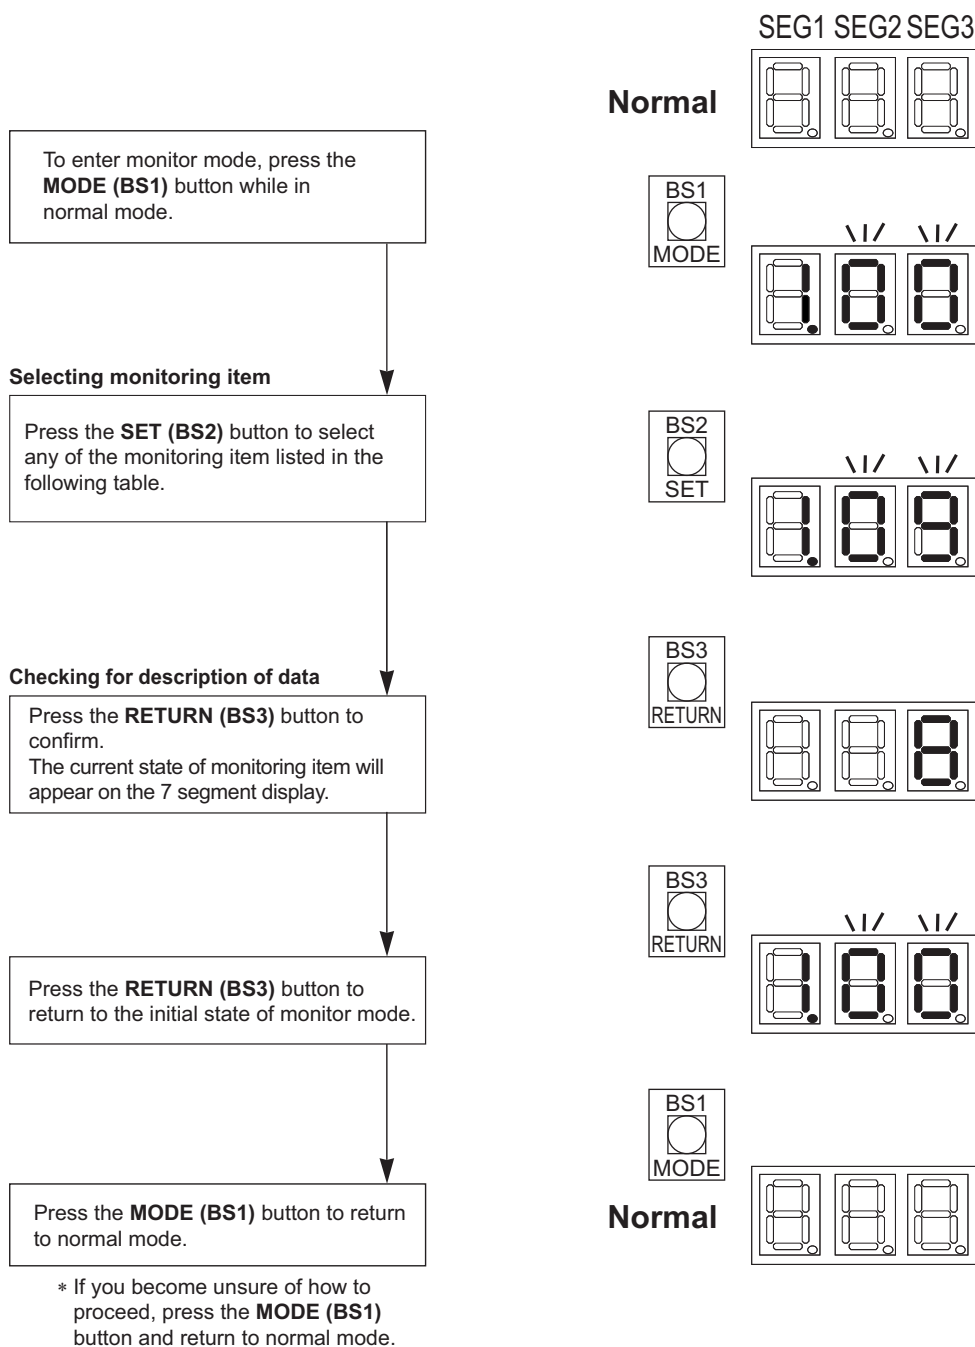

Legend Segment

□ : OFF

■ : ON

⏏ : BLINKS

⌚ : hold 5 seconds

2.5.2 Overview of Monitor Mode (Mode 1)

No. *1	Item				Contents			
	Description	Display			Description	Display		
		SEG 1	SEG 2	SEG 3		SEG 1	SEG 2	SEG 3
1	Low noise operation state display	1.	0	1	In normal operation In low noise operation			0 1
2	Demand operation state display	1.	0	2	In normal operation In demand operation			0 1
3	Automatic backup operation setting	1.	0	3	OFF ON			0 1
4	Defrost selection setting	1.	0	4	Slow defrost Normal Quick defrost			0 1 2
5	Te setting	1.	0	5	Normal 6°C High sensible 7°C High sensible 8°C High sensible 9°C High sensible 10°C High sensible 11°C			2 3 4 5 6 7
6	Tc setting	1.	0	6	Low sensible 41°C Standard 43°C High sensible 46°C			1 3 6
8	Low noise/demand address	1.	0	8	Possible 0-31		3	0 1
9	AIRNET address	1.	0	9	Possible 0-63		6	0 3
10	Number of connected indoor units (refer to *2)	1.	1	0	Possible 0-63		6	0 3
13	Number of outdoor units (refer to *3)	1.	1	3	Possible 0-63		6	0 3
15	Number of units in zone	1.	1	5	Possible 0-63		6	0 3
16	Number of all indoor units of several systems if "F1F2 OUT/D is wired between systems (refer to *4)	1.	1	6	Possible 0-128	1	2	0 8
17	Description of error (latest)	1.	1	7	Refer to information in Error Code via Outdoor Unit PCB on page 152.			
18	Description of error (1 cycle before)	1.	1	8				
19	Description of error (2 cycles before)	1.	1	9				

*1: Numbers in the "No." column represent the number of times to press the BS button.

*2: Number of indoor units connected: represents the number of indoor units connected to a single outdoor system.

*3: Number of outdoor units: represents the number of outdoor units connected to a single DIII-NET that is a communication line.


*4: Number of terminal units: represents the number of indoor units connected to a single DIII-NET that is a communication line.

No. *1	Item				Contents			
	Description	Display			Description	Display		
		SEG 1	SEG 2	SEG 3		SEG 1	SEG 2	SEG 3
23	Description of retry (latest)	1.	2	3	Refer to information in Error Code via Outdoor Unit PCB on page 152.			
24	Description of retry (1 cycle before)	1.	2	4				
25	Description of retry (2 cycles before)	1.	2	5				
28	Number of outdoor units connected in a multi system	1.	2	8	Possible 0-63		6	0 3
32	Outdoor unit PCB status judgment	1.	3	2	0: judgment in process 1: normal 2: abnormal			0 1 2
33	Number of abnormal status judgment outdoor unit PCB	1.	3	3	Possible 0-15		1	0 5
38	Number of connected RA indoor (through BP unit)	1	3	8	Possible 0-63		6	0 3
40	Cooling comfort setting	1.	4	0	Possible 0-3			0 3
41	Heating comfort setting (see mode 2 No. 9)	1	4	1	Possible 0-6			0 6
42	High pressure (MPa)	1.	4	2	Possible 0.1-9.99	0. 9.	1 9	0 9
43	Low pressure (MPa)	1.	4	3	Possible 0.1-9.99	0. 9.	1 9	0 9
44	Compressor total frequency (Hz)	1.	4	4	0-999	0 9	0 9	0 9
45	Opening pulses of main electronic expansion valve (Y1E) (pulses/10)	1	4	5	0-999	0 9	0 9	0 9
46	Discharge pipe temperature (°C) (Tdi1)	1.	4	6	-99-999	- 9	9 9	9 9
50	Outdoor air temperature (°C) (Ta)	1.	5	0	-99-999	- 9	9 9	9 9
51	Compressor suction temperature (°C) (Ts)	1.	5	1	-99-999	- 9	9 9	9 9
52	Subcooling heat exchanger gas pipe temperature (°C) (Tsh)	1.	5	2	-99-999	- 9	9 9	9 9
54	Compressor operation (hours/100)	1.	5	4	0-999	0 9	0 9	0 9

*1: Numbers in the "No." column represent the number of times to press the BS button.

2.6 Setting Mode (Mode 2)

2.6.1 How to Make Settings

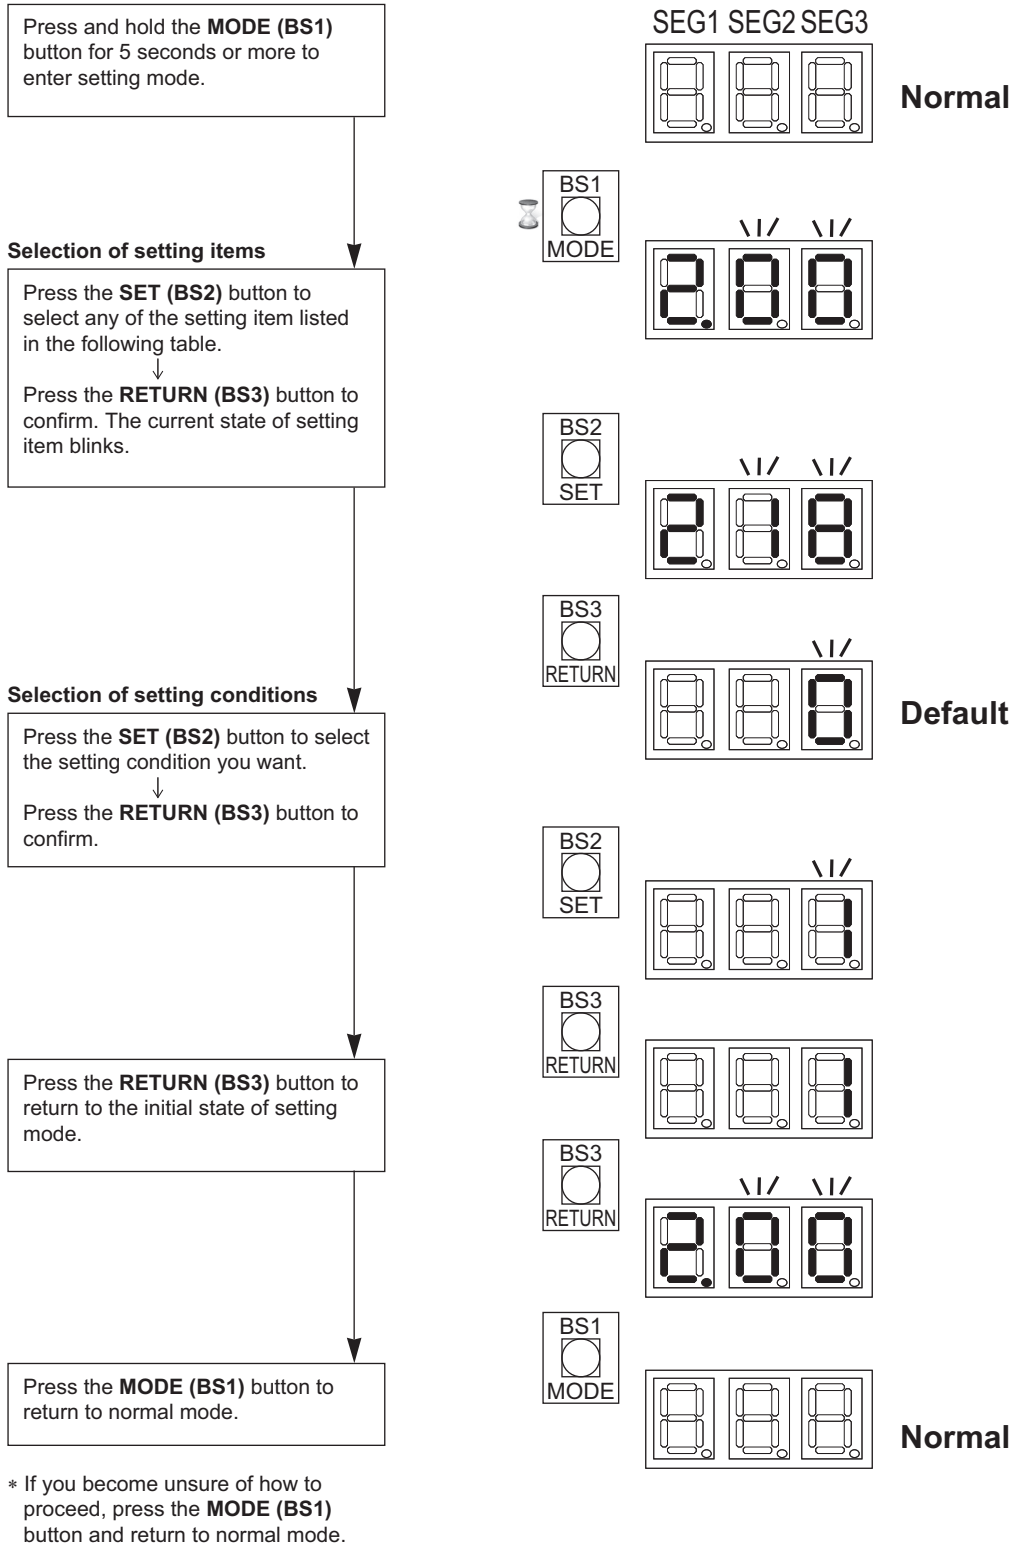

Legend Segment

□ : OFF

■ : ON

▬ : BLINKS



: hold 5 seconds

2.6.2 Overview of Setting Mode (Mode 2)

This overview shows the available settings by using the press buttons on the outdoor unit PCB.

No.	Item					Contents				
	Description		Display			Description		Display		
			SEG 1	SEG 2	SEG 3			SEG 1	SEG 2	SEG 3
2	Low noise/ demand address	Used to make address setting for low noise/demand address.	2.	0	2	Address: 0 ~ 31			3	0 1
5	Indoor fan forced H	Used to force the fan of indoor unit to H tap.	2.	0	5	Normal operation Indoor fan H				0 1
6	Forced thermostat ON	Used to force all indoor units to operate forced thermostat ON.	2.	0	6	Normal operation Forced thermostat ON				0 1
8	Te setting	Used to make setting of targeted evaporating temperature for cooling operation.	2.	0	8	Standard: 6°C High sensible: 7°C High sensible: 8°C High sensible: 9°C High sensible: 10°C High sensible: 11°C				2 3 4 5 6 7
9	Tc setting	Used to make setting of targeted condensing temperature for heating operation.	2.	0	9	Low sensible: 41°C Standard: 43°C High sensible: 46°C				1 3 6
10	Defrost selection setting	Used to adjust the defrost start temperature of outdoor coil, to initiate defrosting earlier/later.	2.	1	0	Defrost IN -2° Normal Defrost IN +2°				0 1 2
11	Eco setting is available from an external input. When this configuration is set, it is not possible to turn the Eco refrigerant control ON/OFF using the remote controller. Also, depending on the settings, low noise operation or demand operation may not be performed using the external control adaptor.		2.	1	1	Unavailable Low noise level input Demand input				0 1 2
12	External low noise/demand setting	Used to receive external low noise or demand signal.	2.	1	2	Input LNO/DE OFF ON				0 1
13	AIRNET address	Used to set address of AIRNET	2.	1	3	Address: 0 ~ 63			6	0 3
18	High EST mode for outdoor fan	High external static pressure mode setting	2.	1	8	ON (Auto adjust and re-judge) OFF (Auto adjust without re-judge) Forced level 0 Forced level 1 Forced level 2				0 1 2 3 4
21	Refrigerant recovery/ vacuuming	Used to set the system to refrigerant recovery mode (without compressor run).	2.	2	1	Refrigerant recovery OFF ON				0 1
22	Automatic night-time low noise operation	Automatic night-time low noise operation. Time for the operation is subject to the start and end time settings.	2.	2	2	OFF Level 1 Level 2 Level 3				0 1 2 3
23	Used to set Eco mode invalid. When this configuration is set, it is not possible to turn the Eco mode ON/OFF using the external control adaptor.		2.	2	3	Valid Invalid for cooling Invalid for heating Invalid				0 1 2 3

No.	Item					Contents			
	Description		Display			Description	Display		
			SEG 1	SEG 2	SEG 3		SEG 1	SEG 2	SEG 3
25	External night-time low noise operation level	Low noise level when the external low noise signal is input at option DTA104A61.	2.	2	5	Level 1 Level 2 Level 3			1 2 3
26	Automatic night-time low noise operation start	Time to start automatic “night-time low noise” operation. (“Night-time low noise” level setting should also be made.)	2.	2	6	About 8:00 PM About 10:00 PM About 12:00 AM			1 2 3
27	Automatic night-time low noise operation stop	Time to stop automatic “night-time low noise” operation. (“Night-time low noise” level setting should also be made.)	2.	2	7	About 6:00 AM About 7:00 AM About 8:00 AM			1 2 3
28	Power transistor check	Used to troubleshoot DC compressor. Inverter waveforms are output without wire connections to the compressor. It is useful to determine whether the relevant trouble has resulted from the compressor or inverter PCB.	2.	2	8	OFF ON (10 Hz)			0 1
29	Capacity priority	Cancel the low noise level control if capacity is required while low noise operation or night-time low noise operation is in progress.	2.	2	9	OFF ON			0 1
30	Demand 1 setting	Used to make a change to the targeted power consumption level when the demand 1 control signal is inputted.	2.	3	0	Level 1 (60%) Level 2 (65%) Level 3 (70%) Level 4 (75%) Level 5 (80%) Level 6 (85%) Level 7 (90%) Level 8 (95%)			1 2 3 4 5 6 7 8
31	Demand 2 setting	Used to use a targeted power current level when the demand 2 control signal is inputted.	2.	3	1	Level 1 (40%) Level 2 (50%) Level 3 (55%)			1 2 3
32	Constant demand setting	Used to set constant demand 1 or 2 control without inputting any external signal.	2.	3	2	OFF Demand 1 (Mode 2-30) Demand 2 (Mode 2-31)			0 1 2
34	Indoor fan upper limit	Forced fan speed to low indoor units thermostat ON if total indoor thermostat-ON > index 130.	2.	3	4	Cooling and heating Heating only Never			0 1 2
35	Tc target setting	To change Tc target cooling.	2.	3	5	Higher Lower Do not use			0 1 ~7
42	Outdoor fan	Outdoor fan noise countermeasure (limit fan speed).	2.	4	2	Standard Mode A Mode B			0 1 2
43	Defrost four way valve	At time defrost starts/end.	2.	4	3	Capacity priority Compressor OFF			0 1
50	Defrost	Priority during defrost.	2.	5	0	Indoor priority Defrost priority			0 1

No.	Item					Contents			
	Description		Display			Description	Display		
			SEG 1	SEG 2	SEG 3		SEG 1	SEG 2	SEG 3
76	VRTsmart control Te upper limit	Used to change upper limit of target evaporation temperature in VRTsmart control.	2.	7	6	Low 1 Low 2 Low 3 Low 4 Low 5 Low 6 Standard High			0 1 2 3 4 5 6 7
77	VRTsmart control Tc lower limit	Used to change lower limit of target condensation temperature in VRTsmart control.	2.	7	7	Low Standard High 1 High 2 High 3 High 4 High 5 High 6			0 1 2 3 4 5 6 7
78	VRT control Te upper limit	Used to change upper limit of target evaporation temperature in VRT control.	2.	7	8	Standard High			4 6
79	VRT control Tc lower limit	Used to change lower limit of target condensation temperature in VRT control.	2.	7	9	Standard Low			2 3
81	Cooling comfort setting		2.	8	1	ECO Mild Quick Powerful			0 1 2 3
82	Heating comfort setting		2.	8	2	ECO Mild Quick Powerful			0 1 2 3
83	Master remote control setting when mix combination		2.	8	3	VRV indoor RA indoor	—	—	0 1
84	Initial indoor EV opening	Initial indoor electronic expansion valve opening at heating thermostat ON	2.	8	4	400 pulse 500 pulse 600 pulse 300 pulse			0 1 2 3
90	Indoor unit without power	Possible for operate system when some indoor units are temporary without power supply.	2.	9	0	Disabled Enabled			0 1
95	Eco level setting for VRTsmart		2.	9	5	Standard Middle High			0 1 2
96	Eco level setting for Eco mode by main PCB		2.	9	6	OFF Low Standard			0 1 2

- Setting does not return to factory setting when exit mode 2. To cancel the function, change setting manually to factory setting.
- Once function is activated **t01** appears. To stop current function, press once BS3 "Return" button.

For detailed description about each setting, refer to **Details of Setting Mode (Mode 2)** on page 122.

Indication **bold** means factory setting.

2.6.3 Details of Setting Mode (Mode 2)

- Mode 2-2: **Low noise/demand address**: address for low noise/demand operation.
 - 1 or more systems (maximum 10 systems wired by "F1F2 OUT/D") can operate use the LNO (Low Noise Operation) or/and the DE (Demand Control) by instruction of field supplied input to optional board DTA104A61/62.
 - To link the system to the corresponding DTA104A61/62, set the address same as the DIP switches position on the related optional board DTA104A61/62.
 - Ensure that also field setting 2-12-1 is set to enable input from optional board DTA104A61/62.
- Mode 2-5: **Cross wiring check**.
 - Default value: 0. Not active.
 - Set 1: force all connected indoor units (except VKM) to operate the indoor fan on high speed. This setting can be made to check which units are missing in the communication if the number of indoor units do not correspond to the system lay out. Ensure that after cross wiring check was confirmed, to return setting to default 2-5-0. Once setting 2-5-1 is active, it is not automatically returning to default when exit mode 2.
- Mode 2-6: **Forced thermostat ON** command all connected indoor units.
 - Default value: 0. Not active.
 - Set 1: force all connected indoor units to operate under "Test" (forced thermostat ON command to outdoor). Ensure that when the forced thermostat ON needs to be ended, to return setting to default 2-6-0. Once setting 2-6-1 is active, it is not automatically returning to default when exit mode 2.
- Mode 2-8: **Te target** temperature for cooling operation. Change the setting in function of required operation method during cooling. (Mode 2-23 should be 1 or 3)
 - Default value: 2 (Te target: 6°C). The refrigerant temperature is fixed to average indoor evaporating temperature of 6°C, independent from the situation. It corresponds to the standard operation which is known and can be expected from/under previous **VRV** systems.
 - Set 3-7: **High Sensible**. The refrigerant temperature is set higher/lower in cooling compared to basic operation. The focus under high sensible mode is comfort feeling for the customer. The selection method of indoor units is important and has to be considered as the available capacity is not the same as under basic operation. Activate this setting under cooling operation.

Mode 2-8	Te target
<u>2</u>	<u>6°C (default)★</u>
3	7°C
4	8°C
5	9°C
6	10°C
7	11°C

- Mode 2-11: **Eco level setting for Eco mode via External control adaptor (Optional)**.


Mode 2-11	Meaning	Level
<u>0</u>	<u>Inactive (default)★</u>	—
1	Eco mode active by low noise terminal short-circuit	Standard
2	Eco mode active by demand terminal short-circuit	2-C short circuit: Low 3-C short circuit: Standard

- Eco mode can be activated by short circuit the terminal on External control adaptor (Optional) according to 2-11 setting. (2-23 should be "0")
- This unit can operate with "Te fix control" and "Eco mode".
- Eco mode means "VRT" & "VRTsmart" control
- If the terminal on external control adaptor is not connected by short circuit and 2-11 is not 0, the system operates according to 2-8 setting.

- **Mode 2-12: Enable input “DTA104A61/62”:** enable the low noise function and/or power consumption limitation. If the system needs to be running under low noise operation or under power consumption limitation conditions when an external signal is sent to the unit, this setting should be changed. This setting will only be effective when the optional external control adaptor for outdoor unit (DTA104A61/62) is installed and the address set by DIP switches on DTA104A61/62 corresponds to the address set on the outdoor unit(s) – set 2-.
 - Default value: 0.
 - To enable input from DTA104A61/62, change the item 2-12 to 1.
- **Mode 2-13: AIRNET address.**
 - When an AIRNET system will be used, outdoor unit needs an AIRNET address.
 - Also to facilitate the recognition of a system in the map lay out of the service checker type III, set each system a unique address between 1 and 63.
 - When duplicating of AIRNET address, **UC** error code will appear on central control.
- **Mode 2-18: Fan high external static pressure mode setting**
 - Fan revolutions will be adjusted automatically according to external static pressure.
 - Default value: 0. Judge external static pressure level during operation check and every cooling restart standby.
 - Set 1: Judge external static pressure level during operation check.
 - Set 2-4: Forced external static pressure level 0-2.
- **Mode 2-21: Refrigerant recovery / vacuuming.**
 - Default value: 0. Recovery mode not active.
 - Set 1: outdoor and indoor electronic expansion valves are opened fully (except EV3 for PCM vessel). Compressor(s) do not operate.
 - All controllers show “Test” and LED operation-ON, but indoor and outdoor fan do not operate.
 - Outdoor segment display indicates **t01**.
 - By opening indoor and outdoor electronic expansion valves there is a free pathway to reclaim remaining refrigerant out by using a refrigerant recovery unit to a refrigerant recovery bottle.
 - Prior to launch the recovery mode, ensure:
 - ◆ To vacuum all lines between service hoses – refrigerant recovery unit and recovery bottle.
 - ◆ Weight the refrigerant recovery bottle to know recovered amount when refrigerant recovery function is terminated.
 - To end the refrigerant recovery mode, press BS3 button once. The 7 segment display returns to normal (all off).
- **Mode 2-22: Selection automatic night-time low noise operation level.** The outdoor can switch automatically to a pre-set night-time low noise operation level during night-time judgment.
 - Default value: 0. Auto night-time low noise operation not active.
 - Set 1: use level 1.
 - Set 2: use level 2.
 - Set 3: use level 3.
 - Set period: refer to set the item 2-26 for start time and the item 2-27 for end time.
- **Mode 2-23: Eco mode invalid setting**
 - Eco mode becomes invalid by this setting.
 - When this configuration is set, it is not possible to turn Eco mode ON/OFF using external control adaptor or other setting.
 - Default value: 0, Eco mode is active.
 - Te fix control 2-23: 1 or 3
 - Tc fix control 2-23: 2 or 3

- **Mode 2-25: Night-time low noise operation level when using external input to optional board DTA104A61/62.**
 - If the system needs to be running under low noise operation conditions when an external signal is sent to the unit, this setting defines the level of low noise that will be applied.
 - This setting will only be effective when the optional external control adaptor for outdoor unit DTA104A61/62 is installed and the setting is enabled (mode 2-12-1).
 - When night-time low noise operation is actually performed, conditions can be checked via mode 1-1.
 - The night-time low noise operation will not be performed in one of following conditions:
 - ◆ Startup of system, or
 - ◆ During oil return, or
 - ◆ 30 minutes after external input opened, or
 - ◆ Capacity priority setting is active (refer to mode 2-29-1) and limit condition is met.
 - Default value: 2 (level 2)
 - Night-time low noise operation level can be selected to 1, 2, or 3 (field setting 2-25-1, 2, 3).

- **Mode 2-26: Start time automatic night-time low noise operation.** When the auto night-time low noise operation is active (refer to field setting 2-22) outdoor will start when start time is reached. The time judgment is taken from outdoor air tendency.

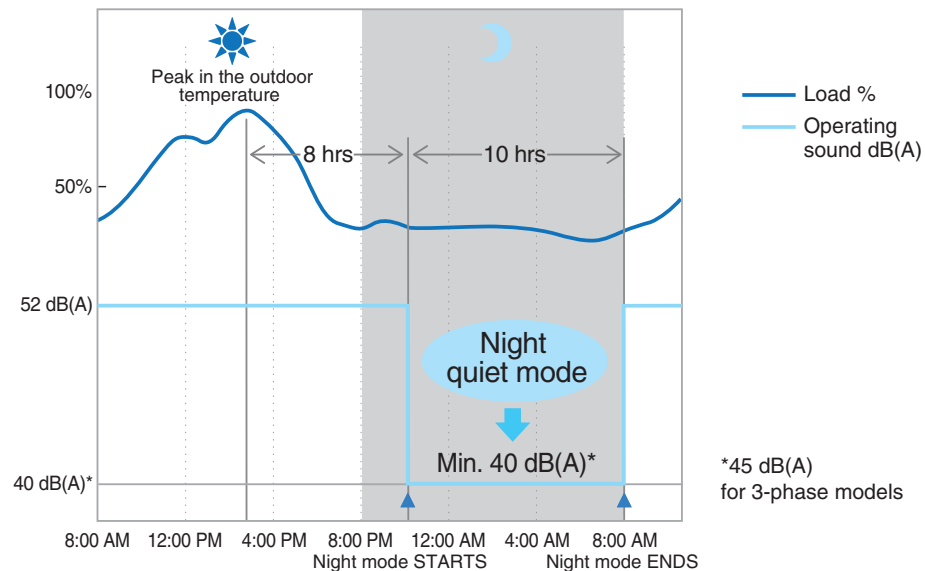

- Default value: 2 (10:00 PM)
 - Field setting 1: 8:00 PM, 3: 12:00 AM (midnight).

- **Mode 2-27: Stop time automatic night-time low noise operation.** When the auto night-time low noise operation is active (refer to field setting 2-22), outdoor unit will stop the night-time low noise operation level automatically when stop time is reached.
 - Default value: 3 (8:00 AM)
 - Field setting 1: 6:00 AM, 2: 7:00 AM


- **Mode 2-28: Power transistor check mode.** To evaluate the output of the power transistors. Use this function in case error code is displayed related to defective inverter PCB or compressor is locked.
 - Default value: 0. Power transistor check mode is not active.
 - Field setting 1: Power transistor check mode is active.
 - ◆ Function:
 - ◆ Inverter circuit gives output of 10 rps in sequence by all 6 transistors. Remove the U/V/W terminals of the compressor, and connect to the inverter checker module. If all 6 LEDs blink, the transistors switch correctly.
 - ◆ When the power transistor check mode is set back to 0 (default), after turning off the power supply, 2 LEDs will light up to indicate discharge of the DC voltage.

- ♦ Wait until the LEDs are OFF before returning fasten terminals back to the compressor terminals.
- Minimum requirements to refer to the result on the inverter checker module:
 - ♦ Line (for RXYMQ4AVMK) or all 3 phases (for RXYMQ4-6AYFK) and neutral are available, and
 - ♦ Inverter circuit is active. Check if the green LED "HBP" on the main PCB (for RXYMQ4AVMK) or "HAP" on the inverter PCB (for RXYMQ4-6AYFK) is blinking normally (approximately 1/second). If LED is OFF, need to exit the "standby mode" of the inverter:
 - ♦ Disconnect and reconnect power supply control PCB, or
 - ♦ Forced thermostat ON condition, or
 - ♦ Make shortly set 2-6-1 (forced thermostat ON indoor), or
 - ♦ 2-20-1 (manual refrigerant charge).
 - ♦ Once the LED is blinking on the PCB, change related setting immediately back to set 0 to deactivate related function.
 - ♦ Diode module generates the required 300 VDC (for RXYMQ4AVMK) or 500 VDC (for RXYMQ4-6AYFK).
- Cautions:
 - ♦ To stop the power transistor check mode, change setting to default 2-28-0.
 - ♦ Output to U/V/W will also stop when outdoor unit main PCB decides standby mode of inverter circuit.
- Below time graphs show the different steps during the power transistor check mode.
 - ♦ Switching sequence during power transistor check mode:

RXYMQ4AVMK

Disconnect U/V/W from compressor before performing the power transistor check.

Power transistor check mode activate;
Mode 2-28 set 0→1

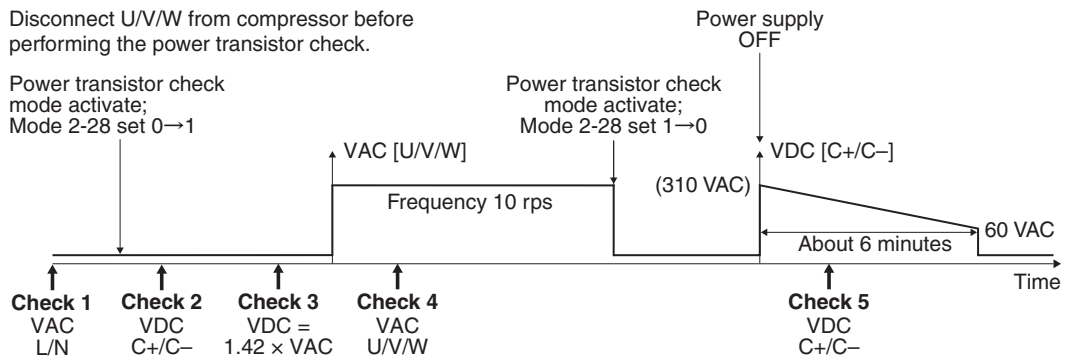

Check 1: AC power input (L, N on X1M: power supply terminal block) around 220 V

Check 2: DC voltage on inverter circuit capacitor (C+, C-) increases to around 310 V.


Check 3: $\text{VDC} = 1.42 \times \text{VAC}$ power supply (calculation from **Check 1** and **Check 2**)

Check 4: AC U/V/W 10 rps intermediate (at fasten U/V/W) around 10 V

Check 5: DC voltage drop (discharge inverter circuit capacitor DC) check difference between "C+, C-" within 2 LED (V phase) brightness reduce till off.

*Note: Actual voltage value depends on meter characteristics.

RXYMQ4-6AYFK

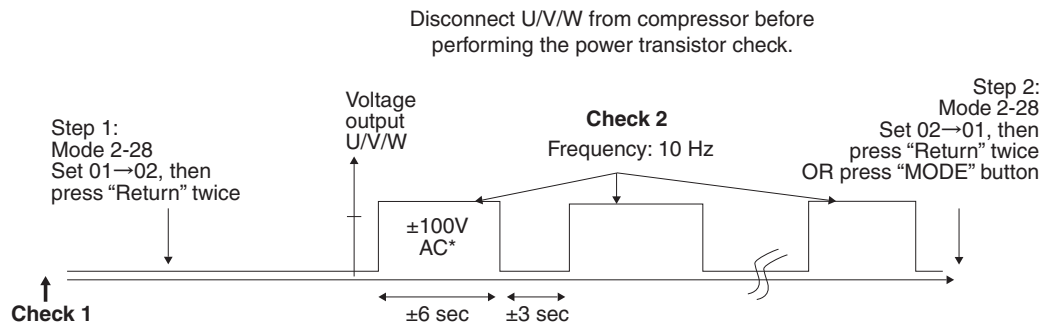


Check 1 : AC power input 380-415 V unbalance max. 2%.

Check 2 : AC U/V/W 10 Hz intermediate: check difference within 10 V (at fasten U/V/W)

*Note: Actual voltage value depends on meter characteristics

- Mode 2-29: **Capacity priority**. When the night-time low noise operation is in use, performance of system might drop because airflow rate of outdoor unit is reduced.
 - Default value: 0. Capacity priority cannot be used.
 - Field setting 1: capacity priority can temporary cancel the night-time low noise operation. Capacity priority can be initiated when certain operation parameters approach the safety setting:
 - ◆ Raise in high pressure during cooling.
 - ◆ Drop in low pressure during heating.
 - ◆ Raise of discharge pipe temperature.
 - ◆ Raise of inverter current.
 - ◆ Raise of fin temperature inverter PCB.
 - When operation parameters return to normal range, the capacity priority is switched OFF, enable to reduce airflow rate depending on night-time low noise operation is still required (end time for low night noise operation is not reached or external input night-time low noise operation is still closed).

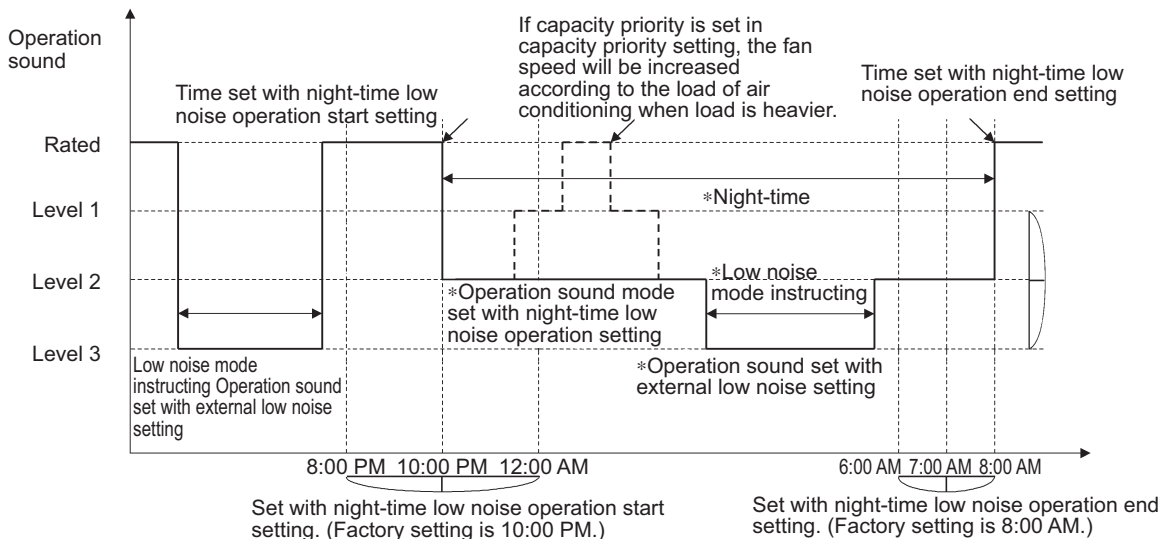

- Mode 2-30: **Power consumption limitation level 1.** If the system needs to be running under power consumption limitation conditions via the external control adaptor for outdoor unit DTA104A61/62. This setting defines the level power consumption limitation that will be applied for level 1. The level is according the table.

- Default: 3 (70%)
- Field setting:

Mode 2-30	current limit set (%)
1	60
2	65
3★	70 (default)★
4	75
5	80
6	85
7	90
8	95

- Mode 2-31: **Power consumption limitation level 2.** If the system needs to be running under power consumption limitation conditions via the external control adaptor for outdoor unit DTA104A61/62. This setting defines the level power consumption limitation that will be applied for level 2. The level is according the table.

- Default: 1 (40%)
- Field setting:

Mode 2-31	current limit set (%)
1★	40 (default)★
2	50
3	55

- Mode 2-32: **Forced, all time, power consumption limitation** operation (no external control adaptor is required to perform power consumption limitation).


- If the system always needs to be running under power consumption limitation conditions, this setting activates and defines the level power consumption limitation that will be applied continuously. The level is according to the table.
- Default value: 0 (OFF).

Mode 2-32	Restriction reference
0	Function not active (default)★
1	Follows 2-30 setting
2	Follows 2-31 setting



- Mode 2-81: **Cooling comfort setting.** The comfort level is related to the timing and the effort (power consumption) which is put in achieving a certain room temperature by changing temporally the refrigerant temperature to different values in order to achieve requested conditions more quickly.

- Default value: 1 (Mild). Undershoot during cooling operation is allowed compared to the requested refrigerant temperature, in order to achieve the required room temperature very fast. The undershoot is not allowed from the startup moment. The startup occurs under the condition which is defined by the operation mode. In case of cooling operation the evaporating temperature is allowed to go down to 6°C on temporary base depending on the situation. When the request from the indoor units becomes more moderate, the system will eventually go to the steady state condition which is defined by the operation method above. The startup condition is different from the powerful and quick comfort setting.
- Field setting:
 - ◆ 0: Eco. The original refrigerant temperature target, which is defined by the Te setting (field setting 2-8) in cooling mode, is kept without any correction, unless for protection control.

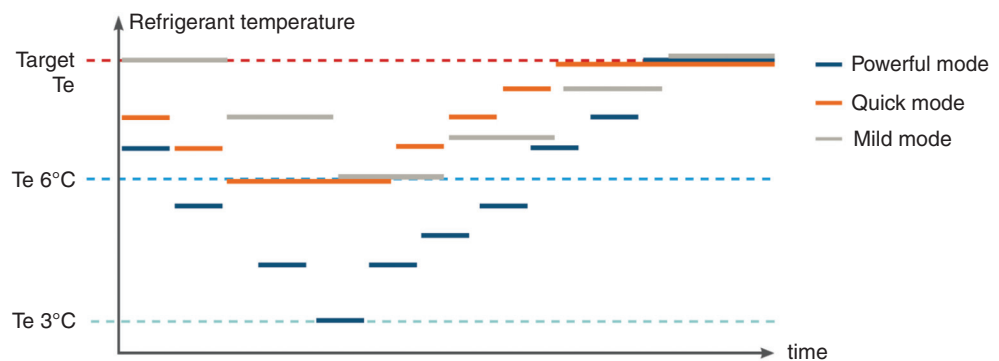- ♦ 2: Quick. Undershoot during cooling operation is allowed compared to the requested refrigerant temperature, in order to achieve the required room temperature very fast. The overshoot is allowed from the start up moment. In case of cooling operation the evaporating temperature is allowed to go down to 6°C on temporary base depending on the situation. When the request from the indoor units becomes more moderate, the system will eventually go to the steady state condition which is defined by the operation method above.
 - ♦ 3: Powerful. Undershoot during cooling operation is allowed compared to the requested refrigerant temperature, in order to achieve the required room temperature very fast. The overshoot is allowed from the start up moment. In case of cooling operation the evaporating temperature is allowed to go down to 3°C on temporary base depending on the situation. This setting is used in conjunction with setting 2-8.
- The graph below shows the different patterns of target Te according to setting 2-81 “cooling comfort setting”



- Mode 2-82: **Heating comfort** setting. The comfort level is related to the timing and the effort (power consumption) which is put in achieving a certain room temperature by changing temporally the refrigerant temperature to different values in order to achieve requested conditions more quickly.
- Default value: 1 (Mild). Overshooting during heating operation is allowed compared to the requested refrigerant temperature, in order to achieve the required room temperature very fast. The overshoot is not allowed from the startup moment. The startup occurs under the condition which is defined by the operation mode. In case of heating operation the condense temperature is allowed to go up to 46°C on temporary base depending on the situation. When the request from the indoor units becomes more moderate, the system will eventually go to the steady state condition which is defined by the operation method above. The startup condition is different from the powerful and quick comfort setting.
 - Field setting:
 - ♦ 0: “Eco”. The original refrigerant temperature target, which is defined by the Tc setting (field setting 2-9) in heating mode, is kept without any correction, unless for protection control.
 - ♦ 2: “Quick”. Overshoot during heating operation is allowed compared to the requested refrigerant temperature, in order to achieve the required room temperature very fast. The overshoot is allowed from the start up moment. In case of heating operation the condense temperature is allowed to go up to 46°C on temporary base depending on the situation. When the request from the indoor units becomes more moderate, the system will eventually go to the steady state condition which is defined by the operation method above.
 - ♦ 3: “Powerful”. The overshoot is allowed from the start up moment. In case of heating operation the condense temperature is allowed to go up to 49°C on temporary base depending on the situation. This setting is used in conjunction with setting 2-9.
- Mode 2-83: **Allocation of cool/heat master logic**. When system contains **VRV DX** indoor and RA indoor (through BP units), it is required to assign the cool/heat change over logic to follow.

- Default value: 1. RA cool/heat master logic. Any RA indoor unit that is switched first, is assigned as cool/heat master as long this unit is in operation (regardless thermostat status). Only when this indoor unit is switched OFF operation (by remote controller), other indoor unit can become cool/heat master:
 - ◆ Priority is given to indoor unit operating in the same mode as the previous cool/heat master switched OFF operation.
 - ◆ Only no more indoor unit operate in the same mode as the previous cool/heat master, other RA indoor unit can become cool/heat master to switch to the other operation mode.
 - ◆ RA indoor unit that is operating, but demanding the other operation mode set by the cool/heat master, enters the “stand-by mode”: operation LED blinks.
 - ◆ **VRV** indoor unit change the operation mode immediately when outdoor unit receives change of operation mode from the current cool/heat master RA indoor unit.
- Field Setting 0: **VRV** cool/heat master logic.
 - ◆ At time of first startup, or when cool/heat master was released, one of connected **VRV** DX indoor unit can be assigned cool/heat master. The symbol “locked cool/heat selector”  blinks. In case of wireless controller kit is used, the green clock LED blinks on the receiver.
 - ◆ Confirm cool/heat master to a **VRV** DX indoor unit: press once the cool/heat selector button  on the remote controller of the indoor unit to be set as cool/heat master.

■ Mode 2-84: **Initial opening electronic expansion valve BP** unit heating thermostat-ON:

- Default value: 1 (500 pulse)
- Field setting 0: 400 pulse, 2: 600 pulse, 3: 300 pulse.

■ Mode 2-90: **Indoor unit without power U4** error generation. In case an indoor unit needs maintenance or repair on the electric side, it is possible to keep the rest of the **VRV** DX indoor units operating without power supply to some indoor unit(s).

- Default value: 0. Not active.
- Field setting 1: Possible to operate system when some indoor units are temporary without power supply. The following conditions must be fulfilled:
 - ◆ Maximum equivalent piping length of the farthest indoor less than 120 m.
 - ◆ Index indoor units power simultaneously less than 30% of the nominal outdoor.
 - ◆ Total capacity is less than 30% of the nominal one of the outdoor unit.
 - ◆ Operation time is limited to 24 hours period.
 - ◆ It is recommended to shut down connected indoor units at the same floor.
 - ◆ Not possible to use service mode operation (e.g. recovery mode).
 - ◆ Backup operation has priority over this special feature.
 - ◆ Not possible to use when the indoor unit electronic expansion valve is defective.
 - ◆ Not possible to use with systems that include BP units.
 - ◆ It is necessary to wait for 10 min. before shutting down the connected indoor units after indoor units operation is stopped.

■ Mode 2-96: **Eco level setting for Eco mode by main PCB**

- Default value: 0

Mode 2-96	Eco level setting
0	OFF (default)★
1	Low
2	Standard

2.7 Eco Mode Setting

By connecting an external contact input in the input of mode configuration and external control adaptor (sold separately), you may control Eco mode setting, limiting compressor operation load and power consumption.

When Eco mode is set as unavailable (Outdoor unit external control adaptor is unnecessary)

Eco mode control is unavailable during cooling operation.

When the Eco level of Eco mode control is set as Standard/Low or Eco mode control is set as unavailable by external control adaptor

Setting description			Setting mode	
Item	Condition	Description	External control adaptor	Outdoor unit PCB
Eco level	Standard	Eco level set as Standard by low noise level	Short-circuit the low noise level terminal in the terminal TeS1	Set mode 2-11 to Eco setting by low noise level input
		Eco level set as Standard by demand control	Short-circuit the demand input terminal 3 – C in the terminal TeS1	Set mode 2-11 to Eco setting by demand input
	Low	Eco level set as Low by demand control	Short-circuit the demand input terminal 2 – C in the terminal TeS1	
Eco control unavailable		Eco control set as unavailable by low noise level	Open the low noise level terminal in the terminal TeS1	Set mode 2-11 to Eco setting by low noise level input
		Eco control set as unavailable by demand control	Open the demand input terminal in the terminal TeS1	Set mode 2-11 to Eco setting by demand input

1. Connect the external control adaptor and short-circuit the input terminal TeS1 if necessary.
2. Set mode 2-11 (External Eco Setting) to **Eco setting by low noise level input** or **Eco setting by demand input** according to the short-circuited terminal.

About Eco Level Setting

The upper limit of Te (target evaporation temperature) and the lower limit of Tc (target condensation temperature) are changed based on the Eco level.

In case of VRTsmart control

VRTsmart control		Mode 2-76: Te upper limit	Mode 2-77: Tc lower limit
Eco level	Standard	22°C	30°C
	Low	9°C	42°C

*1 The lowest temperature between the above and mode 2-76 VRTsmart control Te upper limit is set.

*2 The highest temperature between the above and mode 2-77 VRTsmart control Tc lower limit is set.

In case of VRT control

VRT control		Mode 2-78: Te upper limit		Mode 2-79: Tc lower limit	
		Standard	High	Standard	Low
Eco level	Standard	17°C	21°C	38°C	36°C
	Low	16°C	20°C	40°C	38°C

The priority of each setting is as follows:

1. Mode 2-23 (Eco Control Unavailable Setting)
2. Mode 2-11 (External Eco Setting) and external control adaptor input
3. Eco mode setting

2.8 Night-Time Low Noise Operation and Demand Operation


Night-time Low Noise Operation

By connecting the external contact input to the low noise input of the outdoor unit external control adaptor (optional), you can lower operating noise by 2-3 dB.

Setting	Content
Level 1	Set the outdoor fan to Step 8 or lower.
Level 2	Set the outdoor fan to Step 7Y or lower.
Level 3	Set the outdoor fan to Step 6 or lower.

A. When night-time low noise operation is carried out by external contact (with the use of the external control adaptor for outdoor unit)

1. Connect external control adaptor for outdoor unit and short circuit terminal of night-time low noise operation (Refer below figure). If carrying out demand or low noise input, connect the adaptor's terminals as shown below. External control adaptor for outdoor unit Host computer Outside wiring indicated monitor panel by dotted line or demand controller

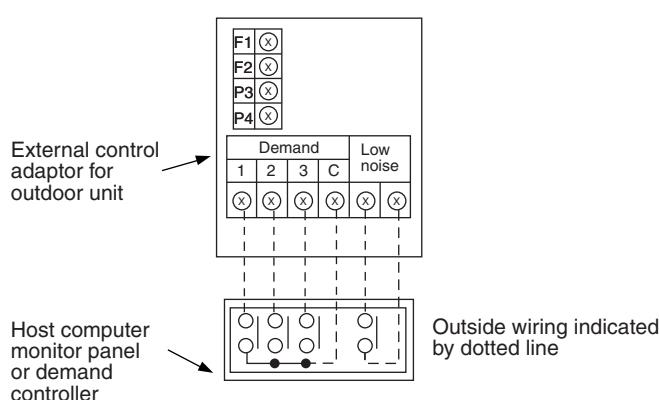


2. While in setting mode 2, set the item 2-12 (External low noise or demand setting) to ON.
3. If necessary, while in setting mode 2, select an external low noise level for the item 2-25.
4. If necessary, while in setting mode 2, set the item 2-29 (Capacity priority setting) to ON. (If the condition is set to ON, when the air conditioning load reaches a high level, the low noise operation command will be ignored to put the system into normal operation mode.)

B. When night-time low noise operation is carried out automatically (External control adaptor for outdoor unit is not required)

1. While in setting mode 2, select a night-time low noise operation level for the item 2-22.
2. If necessary, while in setting mode 2, select a starting time of night-time low noise operation (i.e., 8:00 PM, 10:00 PM, or 12:00 AM) for the item 2-26. (Use the starting time as a guide since it is estimated according to outdoor temperatures.)
3. If necessary, while in setting mode 2, select an ending time of night-time low noise operation (i.e., 06:00 AM, 07:00 AM, or 08:00 AM) for the item 2-27. (Use the ending time as a guide since it is estimated according to outdoor air temperatures.)
4. If necessary, while in setting mode 2, set the item 2-29 (Capacity priority setting) to ON. (If the condition is set to ON, when the air conditioning load reaches a high level, the system will be put into normal operation mode even during night-time.)

Image of operation in the case of A

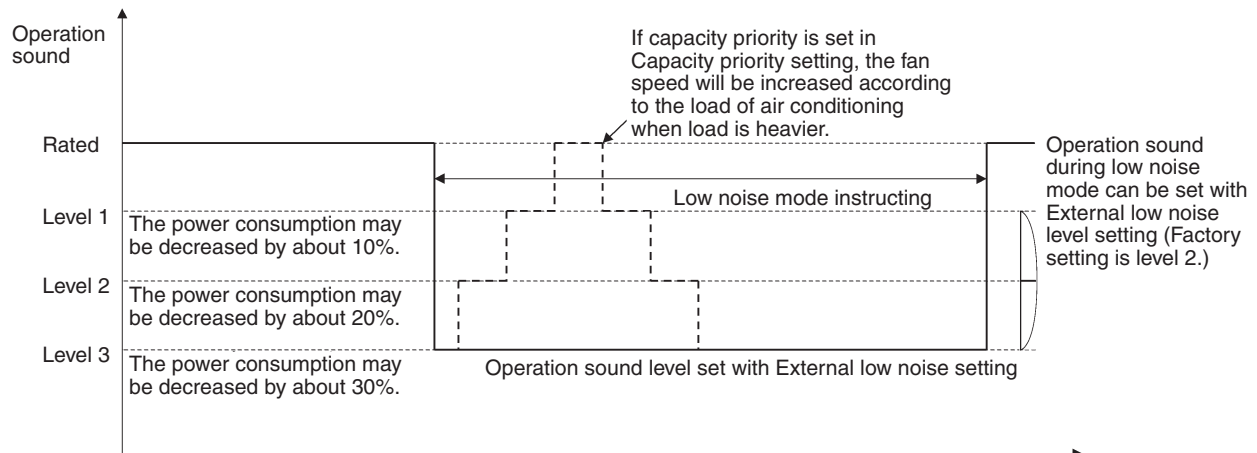

Note 1: Above values are reference only (measured in silent room)

Note 2: Target sound level

	Level 1	Level 2	Level 3
RXYMQ4AVMK	50 dB	45 dB	40 dB
RXYMQ4-6AYFK	55 dB	50 dB	45 dB

Image of operation in the case of B


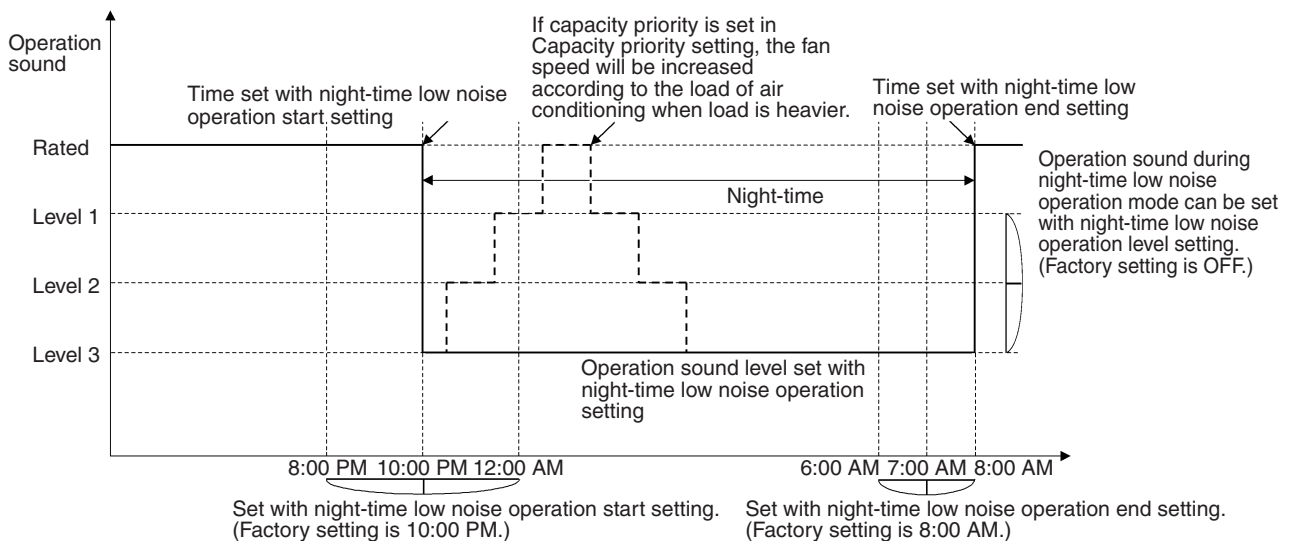


Image of operation in the case of A and B

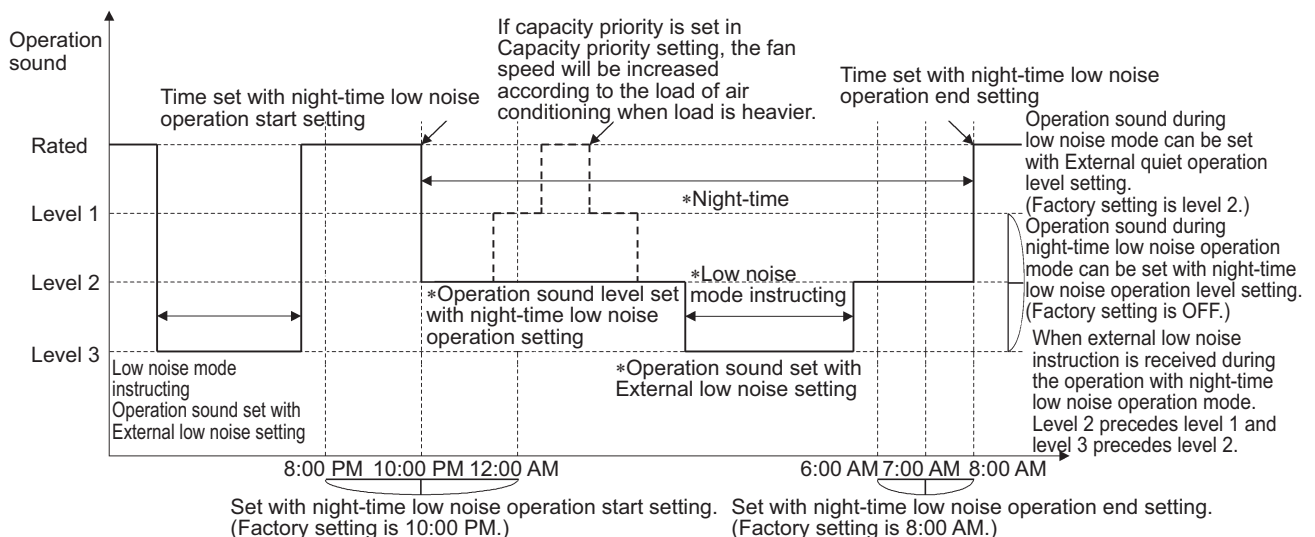

Setting of Demand Operation


By connecting the external contact input to the demand input of the external control adaptor for outdoor unit (optional), the power consumption of unit operation can be saved suppressing the compressor operating condition.

Setting content			Setting method	
Set item	Condition	Content	External control adaptor for outdoor unit	Outdoor unit PCB
Demand 1	Level 1	The compressor operates at 60% or less of rating.	Short circuit "1" and "C" on the terminal strip (TeS1).	Set the item 2-32 to Demand 1, and the item 2-30 to Level 1.
	Level 2	The compressor operates at 65% or less of rating.		Set the item 2-32 to Demand 1, and the item 2-30 to Level 2.
	Level 3	The compressor operates at 70% or less of rating.		Set the item 2-32 to Demand 1, and the item 2-30 to Level 3.
	Level 4	The compressor operates at 75% or less of rating.		Set the item 2-32 to Demand 1, and the item 2-30 to Level 4.
	Level 5	The compressor operates at 80% or less of rating.		Set the item 2-32 to Demand 1, and the item 2-30 to Level 5.
	Level 6	The compressor operates at 85% or less of rating.		Set the item 2-32 to Demand 1, and the item 2-30 to Level 6.
	Level 7	The compressor operates at 90% or less of rating.		Set the item 2-32 to Demand 1, and the item 2-30 to Level 7.
	Level 8	The compressor operates at 95% or less of rating.		Set the item 2-32 to Demand 1, and the item 2-30 to Level 8.
Demand 2	Level 1	The compressor operates at 40% or less of rating.	Short circuit "2" and "C".	Set the item 2-32 to Demand 2, and the item 2-31 to Level 1.
	Level 2	The compressor operates at 50% or less of rating.		Set the item 2-32 to Demand 2, and the item 2-31 to Level 2.
	Level 3	The compressor operates at 55% or less of rating.		Set the item 2-32 to Demand 2, and the item 2-31 to Level 3.
Demand 3	—	Forced thermostat OFF	Short circuit "3" and "C".	—

*: However the demand operation does not occur in the following operation modes.

- (1) Startup control
- (2) Oil return control
- (3) Defrost control
- (4) Pump down residual control

If carrying out demand or low noise input, connect the adaptor's terminals as shown below.

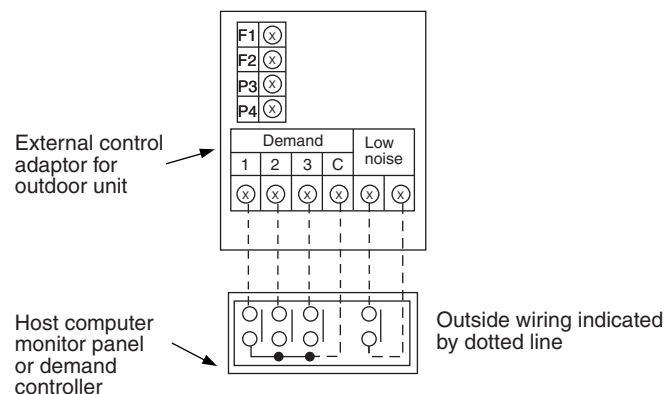

A. When the demand operation is carried out by external contact (with the use of the external control adaptor for outdoor unit).

1. Connect external control adaptor for outdoor unit and short circuit terminals as required (Refer to the figure above).
2. While in setting mode 2, set the item 2-12 (External low noise or demand setting) to ON.
3. If necessary, while in setting mode 2, select a demand 1 level for the item 2-30.

B. When the constant demand operation is carried out. (Use of the external control adaptor for outdoor unit is not required.)

1. While in setting mode 2, set the item 2-32 (Constant demand setting) to Level 1.
- While in setting mode 2, select a demand 1 level for the item 2-30.

Image of operation in the case of A

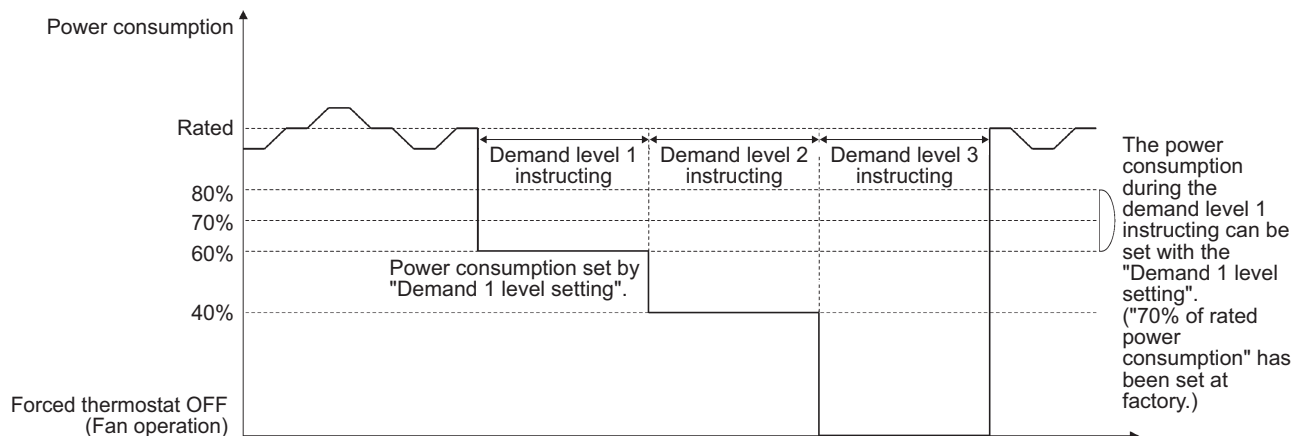


Image of operation in the case of B


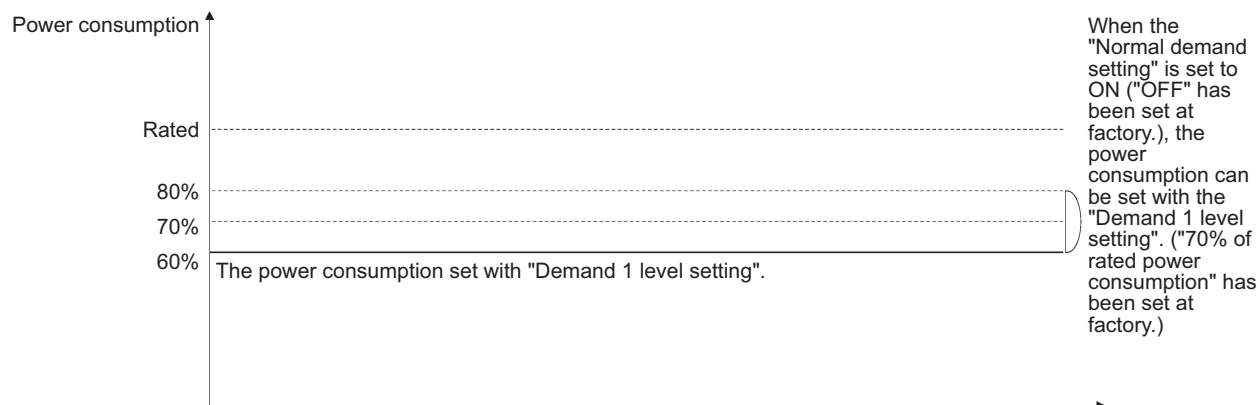


Image of operation in the case of A and B

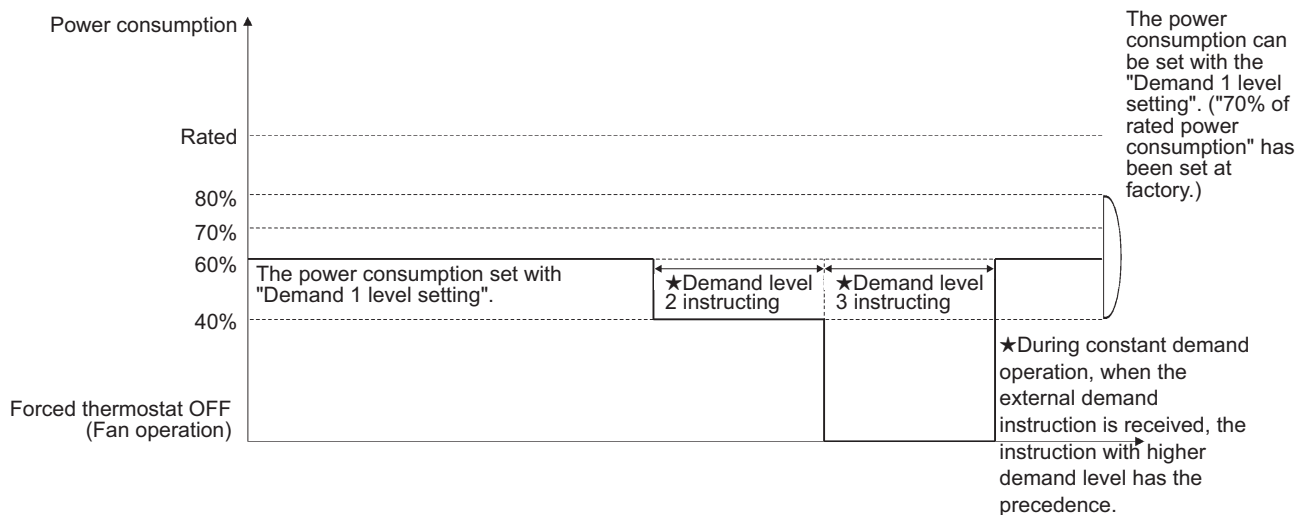

3. Test Operation

3.1 Checks before Test Operation

Before carrying out a test operation, proceed as follows:

Step	Action
1	Make sure the voltage at the primary side of the safety breaker is: 220-240 V \pm 10% for 1-phase units; 380-415 V \pm 10% for 3-phase units.
2	Fully open the liquid and the gas stop valve.

3.2 Checkpoints

To carry out a test operation, check the following:

- Check that the temperature setting of the remote controller is at the lowest level in cooling mode or use test mode.
- Go through the following checklist:

Checkpoints	Cautions or warnings
Are all units securely installed?	<ul style="list-style-type: none"> ● Dangerous for turning over during storm ● Possible damage to pipe connections
Is the earth wire installed according to the applicable local standard?	Dangerous if electric leakage occurs
Are all air inlets and outlets of the indoor and outdoor units unobstructed?	<ul style="list-style-type: none"> ● Poor cooling ● Poor heating
Does the drain flow out smoothly?	Water leakage
Is piping adequately heat-insulated?	Water leakage
Have the connections been checked for gas leakage?	<ul style="list-style-type: none"> ● Poor cooling ● Poor heating ● Stop
Is the supply voltage conform to the specifications on the name plate?	Incorrect operation
Are the cable sizes as specified and according to local regulations?	Damage of cables
Are the remote controller signals received by the unit?	No operation

3.3 Test Operation Procedure

To start smoothly, a crankcase heater is equipped to the unit. To power up the crankcase heater in advance, be sure to turn on the power supply 6 hours before operation.



Warning

Be sure to inform other installers or attach the front panel well before leaving with the power supply turned on for the outdoor unit.

Before powering ON

- Protect the electronic components with insulating tape in accordance with the **Service Precautions** label attached to the front panel.
- All indoor units connected with the outdoor unit will operate automatically after powering on. To ensure safety, check the indoor unit installation has been completed.

Powering On to Test Operation

- Make sure to perform a test operation first after installation (If the unit is operated with the indoor unit's remote controller without performing a test operation, the error code **U3** will be displayed on the remote controller and the unit will not operate normally).
- After turning on the power supply, do not touch any switches excluding push button switches and DIP switches when setting the outdoor unit PCB (A1P).
(For positions of the button switches (BS1~3) and DIP switches (DS1, 2) on the PCB, refer to the **Service Precautions** label)
- Check the state of the outdoor units and fault wiring with this operation.

1. Attach the front panel of the outdoor unit.
Turn on the power supply of the outdoor and indoor units.
2. Make sure all field settings you want are set.
3. Turn ON the power to the outdoor unit and the connected indoor units.
4. Make sure the default (idle) situation is existing. Push BS2 for 5 seconds or more. The unit will start test operation.

- The test operation is automatically carried out, the outdoor unit display will indicate **t01** and the indication "Test operation" and "Under centralized control" will display on the user interface of indoor units.

Steps during the automatic system test run procedure:

- t01**: control before start up (pressure equalization)
- t02**: cooling start up control
- t03**: cooling stable condition
- t04**: communication check
- t05**: stop valve check
- t06**: pipe length check
- t07**: refrigerant amount check
- t08**: in case [2-88]=0, detailed refrigerant situation check (RXYMQ4AVMK only)
- t09**: pump down operation
- t10**: unit stop

- If the automatic refrigerant charge function has been used, **t07** and **t08** will not be displayed during the test operation, as they have already been checked during automatic refrigerant charge operation.
- During the test operation, it is not possible to stop the unit operation from a user interface. To abort the operation, press BS3. The unit will stop after ±30 seconds.

5. Check the test operation results on the outdoor unit segment display.
 - Normal completion: no indication on the segment display (idle)
 - Abnormal completion: indication of error code on the segment display
 Take actions for correcting the abnormality. When the test operation is fully completed, normal operation will be possible after 5 minutes.
6. Be sure to attach the front panel of the outdoor unit after test operation is completed.

About test operation

- In order to ensure uniform refrigerant distribution, it may take up to around 10 minutes for the compressor to start up after the unit starting operation. This is not an error.
- Meaning of operation check is not to check individual indoor unit. After completing operation check, operate the system normally with the remote controller.
- Test operation cannot be performed when the unit is in other modes such as refrigerant recycling mode.
- Never perform test operation with discharge pipe thermistor (R2T), suction pipe thermistor (R3T) and pressure sensor (S1NPH, S1NPL) removed. Doing so will result in compressor damaged.

For Normal Operation**Set the master unit (the indoor unit)**

For wired remote controller

- After test operation is completed, symbol **MASTER CONTROLLED** blinks on all connected remote controllers.
- Set the master unit as customer's request.
(It is recommended to set the indoor unit with highest frequency of use as the master unit.)
- Press the operation mode changeover button on the remote controller of the master unit.
- Conduct cool/heat changeover with this remote controller and the symbol **MASTER CONTROLLED** vanishes.
- For other remote controllers excluding the above, the symbol **MASTER CONTROLLED** lights up.

For wireless remote controller

- After test operation is completed, timer lamps blink on all indoor units connected.
- Set the master unit as customer's request.
(It is recommended to set the indoor unit with highest frequency of use as the master unit.)
- Press the operation mode changeover button on the remote controller of the master unit.
Then a sound of beeps can be heard and the timer lamps on all indoor units go out.
- The indoor unit has the option to change over between cooling/heating operation.

For details, refer to the installation manual included with the indoor unit.

- After test operation is completed, operate the unit normally.
 - (1) Check the indoor and outdoor units are in normal operation.
(If a knocking sound can be heard produced by liquid compression of the compressor, stop the unit immediately.)
 - (2) Operate each indoor unit one by one and check the corresponding outdoor unit is also in operation.
 - (3) Check to see if cold (or hot) air is coming out from the indoor unit.
 - (4) Press the fan direction and strength buttons of the indoor unit to see if they operate properly.

About normal operation check

- The compressor will not restart in about 5 minutes even if the ON/OFF button of the remote controller is pressed.
- When the system operation is stopped by the remote controller, the outdoor unit may continue operating for further 1 minute at maximum.
- If any check operation was not performed through test operation at first installation, the error code **U3** will be displayed. In this case, perform check operation in accordance with **Powering ON to Test Operation** on page 136.

3.4 Turn Power ON

Turn outdoor unit and indoor unit power ON.




Check the 7 segment display of the outdoor unit PCB.




- Be sure to turn the power ON 6 hours before starting operation to protect compressors.

- Check to be sure the transmission is normal.
In a normal condition, the 7-segment display is OFF. Please refer to the following figure for other states.

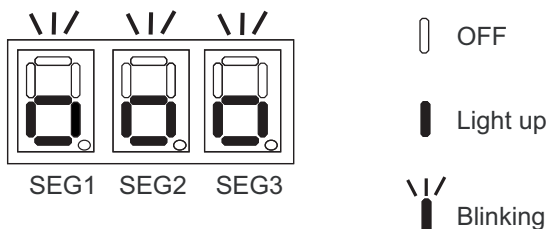


Power switched ON
initial check

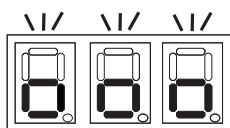


Normal


Abnormal

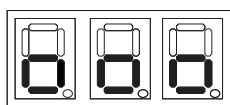

Initialization in progress

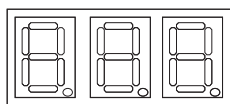


Initialization terminated (normal)

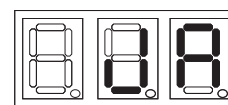

Main error code

Switching alternative
1 second

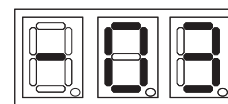

Sub error code

- (*) The master unit is the outdoor unit to which the transmission wiring for the indoor units is connected.
The other outdoor units are slave units.

Make field settings with outdoor unit PCB.



Conduct check operations.



Check for normal operation.

- Make field settings if needed.
(For the setting procedure, refer to information in "Field Settings for Outdoor Unit".)
For the outdoor-multi system, make field settings with the master unit.
(Field settings made with the slave unit will be all invalid.)

The check operations shown below will be automatically initiated.

- Check for erroneous wirings
- Check for failure to open stop valves
- Check for excessive refrigerant refilling
- Automatic judgment of piping length

- Before starting the normal operation after the completion of check operations, make sure indoor and outdoor units normally operate.

Part 6

Service Diagnosis

1. Servicing Items to be Confirmed	142
1.1 Troubleshooting.....	142
1.2 Precautions for Maintenance.....	142
1.3 Refrigerant Properties (R-410A).....	143
2. Symptom-based Troubleshooting	144
2.1 With Optional Infrared Presence/Floor Sensor.....	147
2.2 For All Outdoor Units.....	148
3. Error Code via Remote Controller	149
3.1 BRC1E63	149
3.2 BRC1H81 Series	150
3.3 BRC4M Series.....	151
4. Error Code via Outdoor Unit PCB	152
5. Troubleshooting by Error Code	153
5.1 Error Codes and Descriptions	153
5.2 Error Codes (Sub Codes).....	155
5.3 External Protection Device Abnormality	160
5.4 Indoor Unit PCB Abnormality	161
5.5 Drain Level Control System Abnormality.....	162
5.6 Indoor Fan Motor Lock, Overload.....	164
5.7 Indoor Fan Motor Abnormality	166
5.8 Power Supply Voltage Abnormality	172
5.9 Electronic Expansion Valve Coil Abnormality, Dust Clogging	175
5.10 Humidifier System Abnormality	176
5.11 Auto Grille Unit Error	177
5.12 Defective Capacity Setting	178
5.13 Transmission Abnormality (between Indoor Unit PCB and Fan PCB).....	179
5.14 Transmission Error	181
5.15 Transmission Error (between Indoor Unit PCB and Auto Grille Control PCB)	182
5.16 Thermistor Abnormality	184
5.17 Combination Abnormality (between Indoor Unit PCB and Fan PCB)...	185
5.18 Capacity Setting Abnormality	186
5.19 Indoor Unit PCB Abnormality	187
5.20 Infrared Presence/Floor Sensor Error	188
5.21 Remote Controller Thermistor Abnormality	193
5.22 Outdoor Unit Main PCB Abnormality.....	194
5.23 Current Leakage Detection	195
5.24 Missing of Leakage Detection Core	196
5.25 Activation of High Pressure Switch	197
5.26 Activation of Low Pressure Sensor	199
5.27 Compressor Motor Lock	200

5.28 Outdoor Fan Motor Abnormality	202
5.29 Electronic Expansion Valve Coil Abnormality	205
5.30 Discharge Pipe Temperature Abnormality	206
5.31 Wet Alarm.....	208
5.32 Refrigerant Overcharged	210
5.33 Harness Abnormality (between Outdoor Unit Main PCB and Inverter PCB).....	211
5.34 OL Activation (Compressor Overload)	212
5.35 Outdoor Fan PCB Abnormality	214
5.36 Thermistor Abnormality	215
5.37 High Pressure Sensor Abnormality	217
5.38 Low Pressure Sensor Abnormality	218
5.39 Inverter Circuit Abnormality	219
5.40 Momentary Power Failure during Test Operation	221
5.41 Inverter Radiation Fin Temperature Rise Abnormality	222
5.42 Compressor Instantaneous Overcurrent	224
5.43 Compressor Overcurrent	226
5.44 Compressor Startup Abnormality	228
5.45 Transmission Error between Microcomputers on Outdoor Unit Main PCB	230
5.46 Transmission Error between Inverter PCB and Outdoor Unit Main PCB	231
5.47 Inverter Circuit Capacitor High Voltage	233
5.48 Power Supply Voltage Imbalance	234
5.49 Reactor Temperature Abnormality	236
5.50 Inverter Radiation Fin Temperature Abnormality	237
5.51 Field Setting after Replacing Outdoor Unit Main PCB Abnormality or Combination of PCB Abnormality	239
5.52 Refrigerant Shortage Warning (Cooling)	240
5.53 Refrigerant Shortage Warning (Heating)	241
5.54 Refrigerant Shortage Abnormality (Heating Only)	243
5.55 Open Phase	246
5.56 Power Supply Insufficient or Instantaneous Abnormality	247
5.57 Check Operation Not Executed	251
5.58 Transmission Error between Indoor Units and Outdoor Units	252
5.59 Transmission Error between Remote Controller and Indoor Unit	255
5.60 Transmission Error between Outdoor Units	256
5.61 Transmission Error between Main and Sub Remote Controllers	260
5.62 Other Indoor Units and Outdoor Unit Abnormality	261
5.63 Improper Combination of Indoor Unit and Outdoor Unit, Indoor Unit and Remote Controller	262
5.64 Address Duplication of Centralized Controller	265
5.65 Transmission Error between Centralized Controller and Indoor Unit	266
5.66 System Not Set Yet	269
5.67 System Abnormality, Refrigerant System Address Undefined	270
6. Check	271
6.1 High Pressure Check	271
6.2 Low Pressure Check	272
6.3 Superheat Operation Check	273
6.4 Power Transistor Check	275
6.5 Refrigerant Overcharge Check	278
6.6 Refrigerant Shortage Check	279

6.7	Vacuuming and Dehydration Procedure	280
6.8	Thermistor Check	281
6.9	Pressure Sensor Check	284
6.10	Broken Wire Check of the Relay Wires	285
6.11	Fan Motor Connector Check (Power Supply Cable)	285
6.12	Fan Motor Connector Check (Signal Cable)	287
6.13	Electronic Expansion Valve Coil Check	288

1. Servicing Items to be Confirmed

1.1 Troubleshooting

1. Initial verification and troubleshooting
 - (1) Properly understand the end user's needs and issues.
 - (2) Check the cause of errors according to the description provided by the end user.
 - (3) Check if the remote controller displays any error codes.
(Or use the outdoor unit monitor mode to check for errors).
If there is no display of error codes, refer to **Symptom-Based Troubleshooting** on page 144 for diagnosis.
If an error code is displayed, refer to troubleshooting flowchart for diagnosis.
2. Take appropriate measures.
 - (1) Repair the defect or replace the parts according to the troubleshooting results.
 - (2) Turn off the power supply for 10 minutes before disassembling.
 - (3) The refrigerant has to be collected before refrigerant system components are replaced.
3. Verification after taking appropriate measures
 - (1) Run the unit after repairing the defect to confirm normal unit operation.
 - (2) Record the check results and inform the client.

1.2 Precautions for Maintenance


Pay attention to the following matters in servicing.

1. Precaution for maintenance
Touch the paint-free metal part of the product (electrical box lid of the standard model; tap bolts of electrical box of anti-corrosion and heavy anti-corrosion models) to release static electricity before starting work.
2. Precautions for maintaining the service cover
After maintenance, make sure to close the service cover.
(Otherwise, leakage of water or contamination by foreign matter may cause defects)
3. Precautions for maintaining the electrical box
 - (1) Turn off the power for 10 minutes before opening the cover of the electrical box.
 - (2) After opening the cover, use the tester to measure the terminal voltage of the power supply terminal to make sure that the power has been cut.
Then check if the circuit capacitor voltage is under 50 VDC.
 - (3) To avoid PCB defects, touch the earth terminal of the electrical box with your hand when unplugging the connector to release static electricity.
 - (4) Unplug the connector X106A (RXYMQ4AVMK) or X1A (RXYMQ4-6AYFK) of the outdoor fan motor.
When unplugging the connectors, do not touch the live parts.
(When the outdoor fan is rotating because of strong wind, there is a risk of electric shock due to main circuit board capacitor power storage.)
 - (5) After maintenance, reconnect the connectors of the outdoor fan in their original positions.
Otherwise, the remote controller will display error code **E7**, preventing normal operation.
4. Precautions for piping work and refrigerant charging:
This unit uses R-410A refrigerant. Pay attention to the following conditions.
 - (1) The charging pipe and the manifold tube use R-410A products for pressure maintenance and avoiding contamination by impurities (SUNISO oil, etc.).
 - (2) Be sure to purge with nitrogen when brazing.
 - (3) Properly perform airtightness test and vacuum drying. (Airtight test pressure: 4.0 MPa)
 - (4) Charge refrigerant in liquid state.

5. Precautions for operating in servicing mode (field setting):
When a test operation is interrupted or after exiting service mode, please wait for at least one


minute before entering service mode again. In case of continuous execution, the outdoor unit PCB may sometimes display an error code. If any error codes are displayed, press the **RETURN (BS3)** button. If performing the above operation still does not eliminate the error, reconnect the unit to the power supply.

1.3 Refrigerant Properties (R-410A)

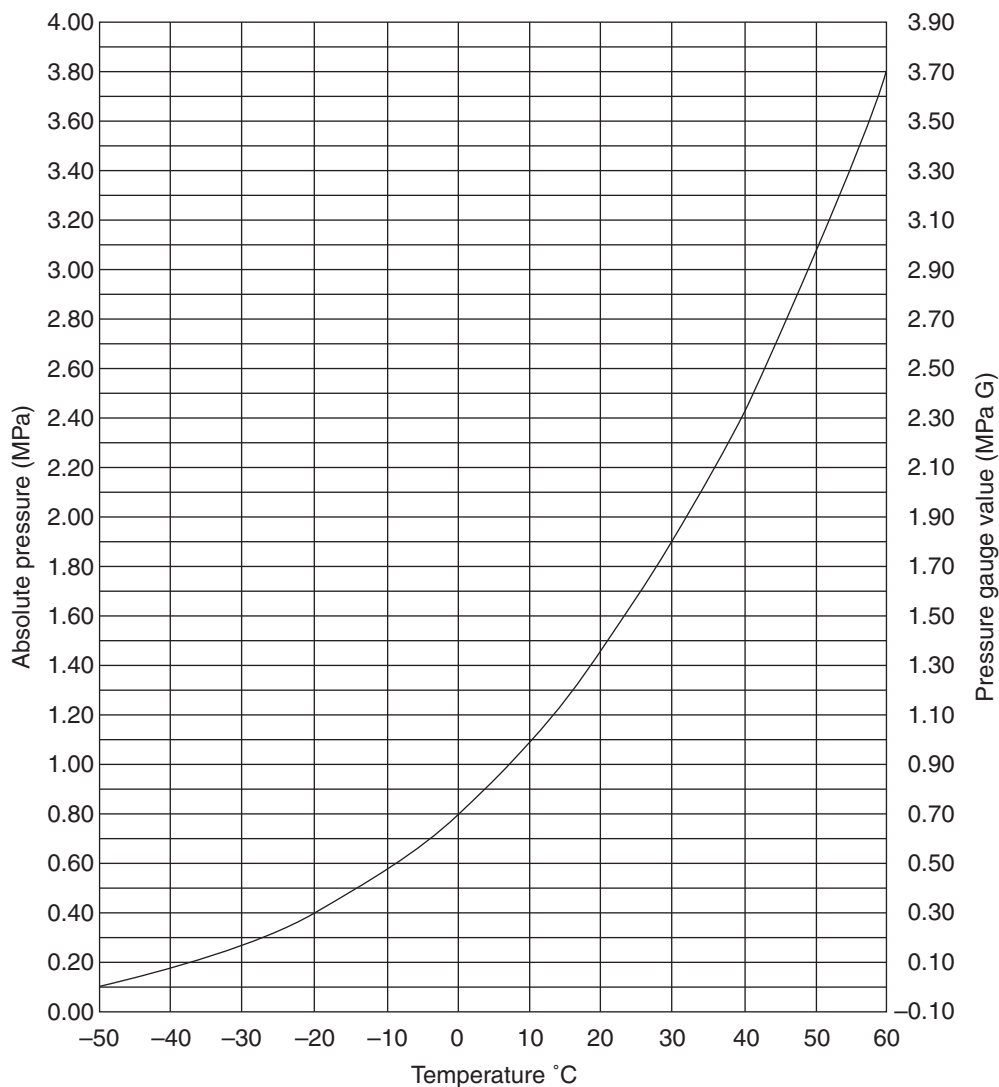

Temperature (°C)	Absolute Pressure (MPa)	Temperature (°C)	Absolute Pressure (MPa)	Temperature (°C)	Absolute Pressure (MPa)	Temperature (°C)	Absolute Pressure (MPa)
-50	0.11	-20	0.40	10	1.09	40	2.42
-48	0.12	-18	0.43	12	1.15	42	2.54
-46	0.13	-16	0.46	14	1.22	44	2.67
-44	0.15	-14	0.50	16	1.29	46	2.80
-42	0.16	-12	0.54	18	1.37	48	2.93
-40	0.18	-10	0.57	20	1.45	50	3.07
-38	0.19	-8	0.61	22	1.53	52	3.21
-36	0.21	-6	0.66	24	1.61	54	3.36
-34	0.23	-4	0.70	26	1.70	56	3.51
-32	0.25	-2	0.75	28	1.79	58	3.64
-30	0.27	0	0.80	30	1.89	60	3.83
-28	0.29	2	0.85	32	1.99	62	4.00
-26	0.32	4	0.91	34	2.09	64	4.17
-24	0.34	6	0.96	36	2.20	—	—
-22	0.37	8	1.02	38	2.31	—	—

2. Symptom-based Troubleshooting

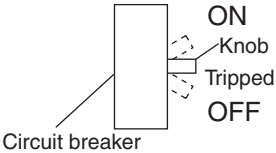Symptom		Supposed Cause	Countermeasure
1	The system does not start operation at all.	Blowout of fuse(s)	Turn Off the power supply and then replace the fuse(s).
		Cutout of breaker(s)	<ul style="list-style-type: none"> • If the knob of any breaker is in its OFF position, turn ON the power supply. • If the knob of any circuit breaker is in its tripped position, do not turn ON the power supply. 
		Power failure	After the power failure is reset, restart the system.
		The connector loose or not fully plugged in	Turn off the power supply to verify the connection of the connector.
2	The system starts operation but makes an immediate stop.	Blocked air inlet or outlet of indoor or outdoor unit	Remove obstacle(s).
		Clogged air filter(s)	Clean the air filter(s).
3	The system does not cool or heat air well.	Blocked air inlet or outlet of indoor or outdoor unit	Remove obstacle(s).
		Clogged air filter(s)	Clean the air filter(s).
		Enclosed outdoor unit(s)	Remove the enclosure.
		Improper set temperature	Set the temperature to a proper degree.
		Airflow rate set to LOW	Set it to a proper airflow rate.
		Improper direction of air diffusion	Set it to a proper direction.
		Open window(s) or door(s)	Shut it tightly.
		Cooling operation Direct sunlight received	Hang curtains or shades on windows.
		Cooling operation Too many people staying in a room	The model must be selected to match the air conditioning load.
		Cooling operation Too many heat sources (e.g. OA equipment) located in a room	
		Dry operation The reason is that the dry operation serves not to reduce the room temperature where possible.	Change the system to cooling operation.
4	The system does not operate.	The system stops and immediately restarts operation.	Normal operation. The system will automatically start operation after a lapse of five minutes.
		Pressing the temperature setting button immediately resets the system.	
		The remote controller displays the mark for centralized control which blinks for a period of several seconds when the OPERATION button is depressed.	Operate the system using the COOL/HEAT central remote controller.
		The system stops immediately after turning ON the power supply.	Wait for a period of approximately one minute.
5	The system makes intermittent stops.	The remote controller displays error codes U4 or U5 , and the system stops but restarts after a lapse of several minutes.	The system stops due to an interruption in communication between units caused by electrical noises coming from equipment other than air conditioners.
			Remove causes of electrical noises. If these causes are removed, the system will automatically restart operation.


Symptom		Supposed Cause		Countermeasure
6	COOL/HEAT selection is disabled.	The remote controller displays the mark for centralized control.	This remote controller has no option to select cooling operation.	Use a remote controller with option to select cooling operation.
		The remote controller displays the mark for centralized control and the COOL/HEAT selection remote controller is provided.	COOL/HEAT selection is made using the COOL/HEAT selection remote controller.	Use the COOL/HEAT selection remote controller to select cool or heat.
7	The system conducts fan operation but not cooling or heating operation.	This symptom occurs immediately after turning ON the power supply.	The system is in preparation mode of operation.	Wait for a period of approximately 10 minutes.
		The remote controller displays the mark for centralized control; no cooling or heating operation is performed. Switch to fan operation.	In thermal storage operation, the unit is set to fan operation in cooling or heating operation, and the remote controller shows the mark for centralized control.	Normal operation.
8	The airflow rate is not reproduced according to the setting.	Even pressing the airflow rate setting button makes no changes to the airflow rate.	In heating operation, when the room temperature reaches the set degree, the outdoor unit will stop while the indoor unit is brought to fan LL operation so that no one gets cold air. Furthermore, if fan operation mode is selected when other indoor unit is in heating operation, the system will be brought to fan LL operation.	Normal operation.
9	The airflow direction is not reproduced according to the setting.	The airflow direction is not corresponding to that displayed on the remote controller. The flap does not swing.	Automatic control	Normal operation.
10	A white mist comes out from the system.	Indoor unit In cooling operation, the ambient humidity is high. (This indoor unit is installed in a place with much oil or dust.)	Uneven temperature distribution due to heavy stain of the inside of the indoor unit	Clean the inside of the indoor unit.
		Indoor unit Immediately after cooling operation stopping, the ambient temperature and humidity are low.	Hot gas (refrigerant) that has flowed in the indoor unit results to be vapor from the unit.	Normal operation.
		Indoor and outdoor units After the completion of defrost control, the system is switched to heating operation.	Defrosted moisture turns to be vapor and comes out from the units.	Normal operation.
11	The system produces sounds.	Indoor unit Immediately after turning ON the power supply, indoor unit produces ringing sounds.	These are operating sounds of the electronic expansion valve of the indoor unit.	Normal operation. This sound becomes low after a lapse of approximately one minute.
		Indoor and outdoor units Hissing sounds are continuously produced while in cooling or defrost control.	These sounds are produced from gas (refrigerant) flowing respectively through the indoor and outdoor units.	Normal operation.
		Indoor and outdoor units Hissing sounds are produced immediately after the startup or stop of the system, or the startup or stop of defrost control.	These sounds are produced when the gas (refrigerant) stops or changes flowing.	Normal operation.
		Indoor unit Faint sounds are continuously produced while in cooling operation or after stopping the operation.	These sounds are produced from the drain discharge device in operation.	Normal operation.
		Indoor unit Creaking sounds are produced while in heating operation or after stopping the operation.	These sounds are produced from resin parts expanding and contracting with temperature changes.	Normal operation.
		Indoor unit Sounds like trickling or the like are produced from indoor units in the stopped state.	On VRV systems, these sounds are produced when other indoor units in operation. The reason is that the system runs in order to prevent oil or refrigerant from dwelling.	Normal operation.
		Outdoor unit Pitch of operating sounds changes.	The reason is that the compressor changes the operating frequency.	Normal operation.

Symptom			Supposed Cause	Countermeasure
12	Dust comes out from the system.	Dust comes out from the system when it restarts after the stop for an extended period of time.	Dust, which has deposited on the inside of indoor unit, is blown out from the system.	Normal operation.
13	Odors come out from the system.	In operation	Odors of room, cigarettes or else adsorbed to the inside of indoor unit are blown out.	The inside of the indoor unit should be cleaned.
14	Outdoor fan does not rotate.	In operation	The reason is that fan revolutions are controlled to put the operation to the optimum state.	Normal operation.
15	LCD display 88 or Checking the connection. Please stand by appears on the remote controller.	Immediately after turning ON the power supply	The reason is that the system is checking to be sure the remote controller is normal.	Normal operation. This code is displayed for a period of approximately one minute at maximum.
16	The outdoor unit compressor or the outdoor fan does not stop.	After stopping operation	It stops in order to prevent oil or refrigerant from dwelling.	Normal operation. It stops after a lapse of approximately 5 to 10 minutes.
17	The outdoor gets hot.	While stopping operation	The reason is that the compressor is warmed up to provide smooth startup of the system.	Normal operation.
18	Hot air comes out from the system even though it stops.	Hot air is felt while the system stops.	On VRV systems, small quantity of refrigerant is fed to indoor units in the stopped state when other indoor units are in operation.	Normal operation.

2.1 With Optional Infrared Presence/Floor Sensor


	Problem	Measure
1	"Louver operation different from setting" or "No downward airflow in heating operation"	Refer to the flowchart below.
2	Individual airflow direction setting different from the actual airflow direction	Check the "Louver operation different from setting" error diagnosis.
3	While not operating, the louver does not close completely.	Turn off the circuit breaker and then turn it on again.
4	The remote controller menu does not display energy saving operating mode for when people are not present. The remote controller menu does not display the stop function for when people are not present. The remote controller menu does not display the automatic draft prevention function.	Refer to "Infrared presence/floor sensor error (CE)" in troubleshooting.
5	The menu does not display the eco-friendly display function.	No defect. Set the clock.
6	During cooling and dry operation, the louver automatically switches from horizontal (P0) to one-level downward (P1).	No defect. When relative ambient humidity is higher, automatic louver control will be activated.
7	During heating operation, the use of an airflow block will not cause other louvers to turn downward (P4).	No defect. In heating operation, if an airflow block is set, then the air outlet control outside the airflow block will be within the range P0-P3.
8	When using airflow block, the airflow block will be routinely lifted (become horizontal) during heating operation.	No defect. Set louver to horizontal (P0) during thermostat OFF.
9	Although people are not present, the infrared presence sensor detects human presence.	Check if there are any objects that generate temperature change when moving. For example: · An electric heater with swing function · Doors, curtains, blind switches · Output of paper from a fax machine or a printer · Turning on/off of incandescent lights · Moving objects
10	Although people are present, the infrared presence sensor fails to determine their presence.	Check for the following conditions. · Lack of movement · Facing away from the sensor · Little skin exposed · Slight movement in a place far from the sensor
11	Large difference between floor temperature and actual temperature	Check for the following conditions. · Sensor detection zone affected by solar radiation · High or low temperature objects in the sensor detection zone · Large difference between floor temperature and temperature of the living space · Sensors installed near walls may be affected by wall temperature.

Error diagnosis of "Louver operation different from setting"

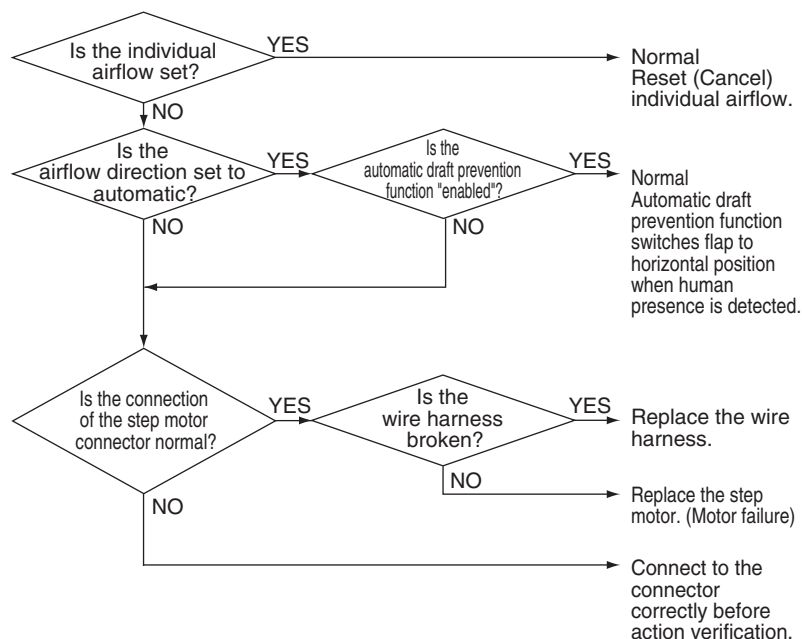

2.2 For All Outdoor Units


Problem	Measure
Decrease of main circuit power supply insulation resistance (Less than 1 MΩ)	Define the measure using the flowchart below.

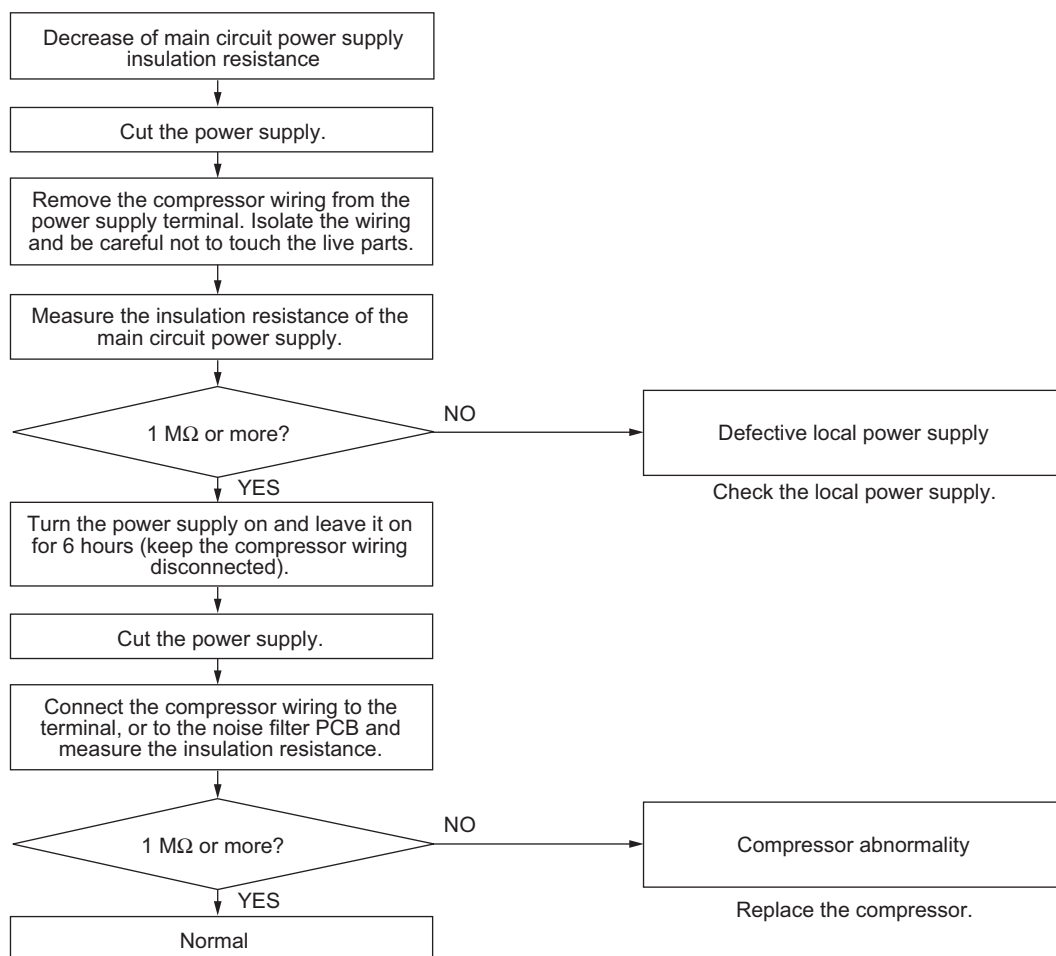

3. Error Code via Remote Controller

3.1 BRC1E63

The following message is displayed on the screen when an error (or a warning) occurs during operation.
Check the error code and take the corrective action specified for the particular model.

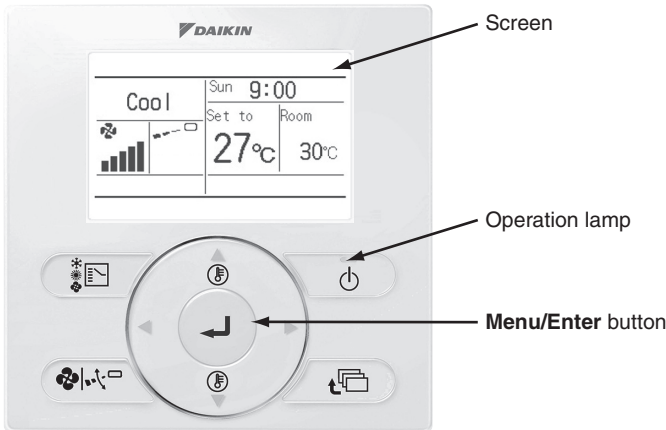

(1) Check if it is error or warning.

	Operation Status	Display	
Abnormal shutdown	The system stops operating.	The operation lamp (green) starts to blink. The message Error: Push Menu button blinks at the bottom of the screen.	
Warning	The system continues its operation.	The operation lamp (green) remains on. The message Warning: Push Menu button blinks at the bottom of the screen.	

(2) Take corrective action.

Press the **Menu/Enter** button to check the error code.



Take the corrective action specific to the model.

Error Code:A6-01

Contact Info
0123-456-789

Indoor Model FXFSQ25ARV1
Outdoor Model RXYMQ4AVMK


Return

— Error code

└ Applicable model names

3.2 BRC1H81 Series


When the system is in error and the controller presents you with an error screen from as soon as you try to enter the main menu, consult your dealer.

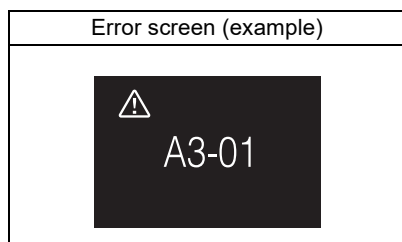

3.2.1 Refrigerant Leak Detection


When the system detects a refrigerant leak, an alarm goes off. Stop the alarm and consult your dealer.

To stop the leak detection alarm

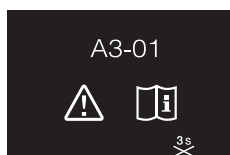

1 Press for 3 seconds to stop the alarm.

Result: The alarm stops.

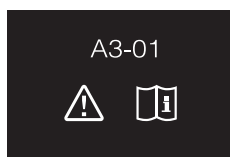



2 Consult your dealer.

3.3 BRC4M Series

When the air conditioner stops in emergency, the operating indicator lamp on the indoor unit starts blinking.

Take the following steps yourself to read the error code that appears on the display. Contact your local dealer with this code. It will help pinpoint the cause of the trouble, speeding up the repair.

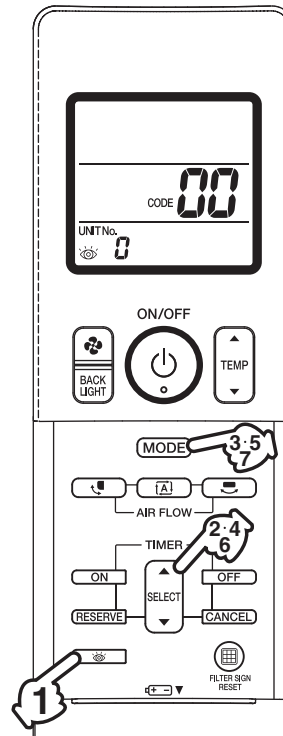


1. Press the **INSPECTION** button to select the inspection mode “”.
0 appears on display and blinks.
 “UNIT No.” appears.
2. Press **PROGRAMMING TIMER** button and change the unit number.
 Press to change the unit number until the indoor unit beeps and perform the following operation according to the number of beeps.
Number of beeps
 3 short beeps.....Perform all steps from 3 to 6.
 1 short beepPerform 3 and 6 steps.
 1 long beepNormal state
3. Press **OPERATION MODE SELECTOR** button.
0 on the left-hand of the error code blinks.
4. Press **PROGRAMMING TIMER** button and change the error code.
 Press until the indoor unit beeps twice.
5. Press **OPERATION MODE SELECTOR** button.
0 on the right-hand of the error code blinks.
6. Press **PROGRAMMING TIMER** button and change the error code.
 Press until the indoor unit makes a long beep.
 The error code is fixed when the indoor unit makes a long beep.
7. Reset of the display
 Press the **OPERATION MODE SELECTOR** button to get the display back to the normal state.

4. Error Code via Outdoor Unit PCB

Error code descriptions are accessible on monitor mode (Mode 1). Refer to page 115 for monitor mode.

The error codes for forced stop outdoor or retry are item:

- 17, 18, 19: description of error (outdoor system stopped operation).
- 23, 24, 25: description of retry.

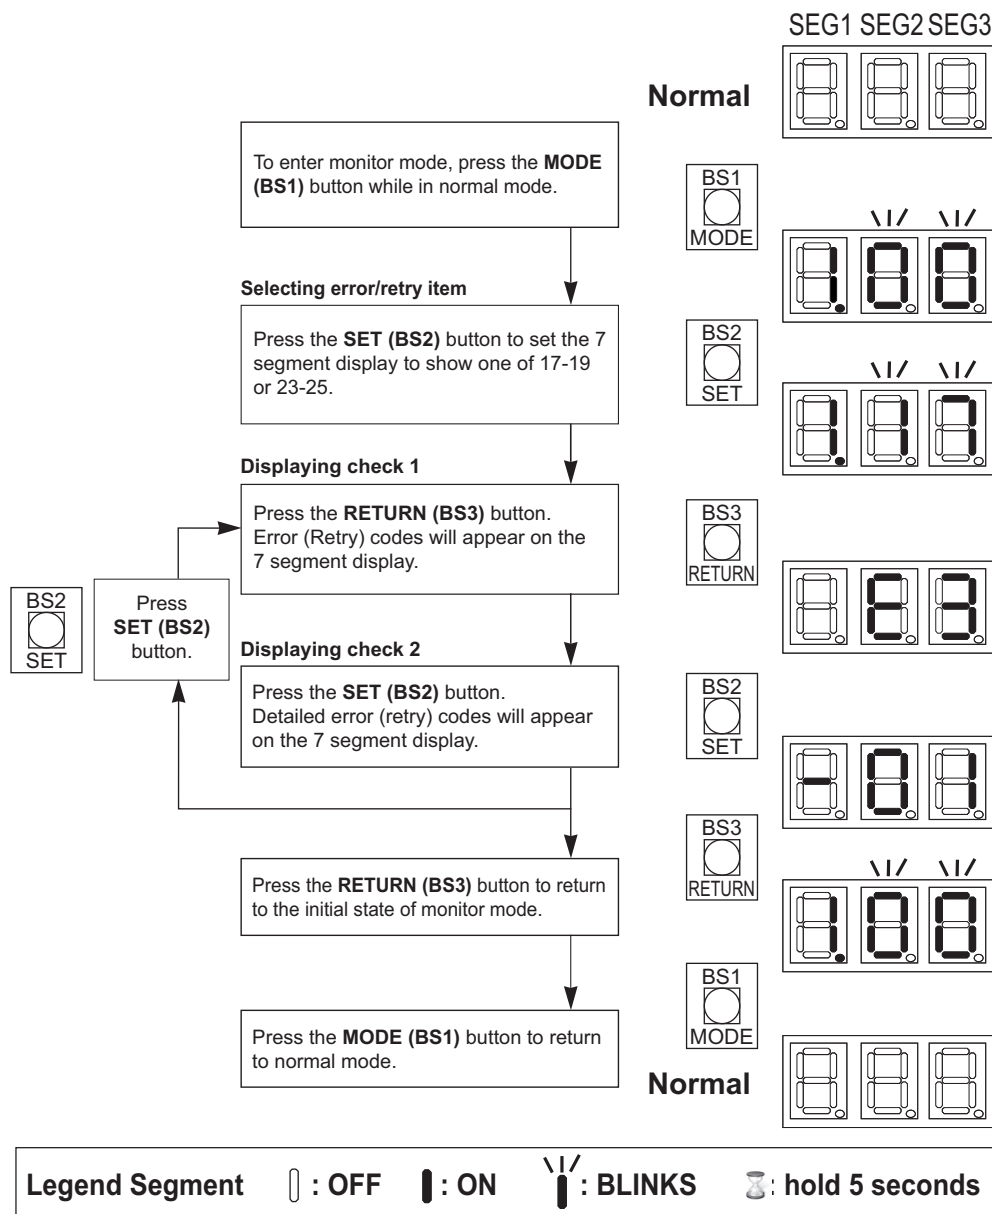

- The tables on the following pages show a full list of possible error codes displayed on the 3 digit 7 segment display of the outdoor unit. The error code contains an upper and lower digit. To scroll between upper and lower error digit, use the **SET (BS2)** button.
- The errors cover problems detected in the outdoor unit or the communication.
- Errors detected on the indoor unit are not shown on the outdoor display. For inspecting error code on indoor unit, please consult:
 - Display of the remote controller connected to the indoor units.
 - If there are no remote controllers, there should be a central control device set up. Prior to start up, make the necessary group number settings on each indoor unit.

5. Troubleshooting by Error Code

5.1 Error Codes and Descriptions

○: ON ●: OFF ◐: Blink

	Error code	Operation lamp	Description	Reference page
Indoor Unit	A0	●	External protection device abnormality	160
	A1	◐	Indoor unit PCB abnormality	161
	A3	◐	Drain level control system abnormality	162
	A6	◐	Indoor fan motor lock, overload Indoor fan motor abnormality	164 166
	A8	◐	Power supply voltage abnormality	172
	A9	◐	Electronic expansion valve coil abnormality, dust clogging	175
	AF★	○	Humidifier system abnormality	176
	AH	◐	Auto grille unit error	177
	AJ	◐	Defective capacity setting	178
	C1	◐	Transmission abnormality (between indoor unit PCB and fan PCB)	179
			Transmission error	181
			Transmission error (between indoor unit PCB and auto grille control PCB)	182
	C4	◐	Indoor heat exchanger liquid pipe thermistor abnormality	184
	C5	◐	Indoor heat exchanger gas pipe thermistor abnormality	184
	C6	◐	Combination abnormality (between indoor unit PCB and fan PCB)	185
			Capacity setting abnormality	186
			Indoor unit PCB abnormality	187
	C9	◐	Suction air thermistor abnormality	184
	CE★	○	Infrared presence/floor sensor error	188
	CJ★	○	Remote controller thermistor abnormality	193

	Error code	Operation lamp	Description	Reference page
Outdoor Unit	E1	●	Outdoor unit main PCB abnormality	194
	E2	●	Current leakage detection Missing of leakage detection core	195 196
	E3	●	Activation of high pressure switch	197
	E4	●	Activation of low pressure sensor	199
	E5	●	Compressor motor lock	200
	E7	●	Outdoor fan motor abnormality	202
	E9	●	Electronic expansion valve coil abnormality	205
	F3	●	Discharge pipe temperature abnormality	206
	F4	●	Wet alarm	208
	F6	●	Refrigerant overcharged	210
	H3	●	Harness abnormality (between outdoor unit main PCB and inverter PCB)	211
	H5	●	OL activation (compressor overload)	212
	H7	●	Outdoor fan PCB abnormality	214
	H9	●	Outdoor air thermistor (R1T) abnormality	215
	J3	●	Discharge pipe thermistor (R21T) abnormality	215
	J5	●	Suction pipe thermistor (R3T) abnormality	215
	J6	●	Heat exchanger deicer thermistor (R7T) abnormality	215
	J7	●	Subcooling heat exchanger liquid pipe thermistor (R5T) abnormality	215
	J8	●	Heat exchanger liquid pipe thermistor (R4T) abnormality	215
	J9	●	Subcooling heat exchanger gas pipe thermistor (R6T) abnormality	215
	JA	●	High pressure sensor abnormality	217
	JC	●	Low pressure sensor abnormality	218
	L1	●	Inverter circuit abnormality	219
	L2	●	Momentary power failure during test operation	221
	L4	●	Inverter radiation fin temperature rise abnormality	222
	L5	●	Compressor instantaneous overcurrent	224
	L8	●	Compressor overcurrent	226
	L9	●	Compressor startup abnormality	228
	LC	●	Transmission error between microcomputers on outdoor unit main PCB Transmission error between inverter PCB and outdoor unit main PCB	230 231
	P1	●	Inverter circuit capacitor high voltage Power supply voltage imbalance	233 234
	P3	●	Reactor temperature abnormality	236
	P4★	●	Inverter radiation fin temperature abnormality	237
	PJ	●	Field setting after replacing outdoor unit main PCB abnormality or combination of PCB abnormality	239
System	U0★	○	Refrigerant shortage warning (Cooling) Refrigerant shortage warning (Heating) Refrigerant shortage abnormality (Heating only)	240 241 243
	U1	●	Open phase	246
	U2	●	Power supply insufficient or instantaneous abnormality	247
	U3	●	Check operation not executed	251
	U4	●	Transmission error between indoor units and outdoor units	252
	U5	●	Transmission error between remote controller and indoor unit	255
	U7	●	Transmission error between outdoor units	256
	U8	●	Transmission error between main and sub remote controllers	260
	U9	●	Other indoor units and outdoor unit abnormality	261
	UA	●	Improper combination of indoor unit and outdoor unit, indoor unit and remote controller	262
	UC★	○	Address duplication of centralized controller	265
	UE	●	Transmission error between centralized controller and indoor unit	266
	UF	●	System not set yet	269
	UH	●	System abnormality, refrigerant system address undefined	270

★The system operates for error codes indicated, however, be sure to check and repair.

5.2 Error Codes (Sub Codes)

If an error code like the one shown below is displayed when the navigation remote controller (BRC1E series) is in use, make a detailed diagnosis or a diagnosis of the relevant unit referring to the attached list of detailed error codes.

5.2.1 Indoor Unit

Error code	Troubleshooting	
	Description of error	Diagnosis
A6 - 01	Fan motor locked	A locked fan motor current has been detected. Turn the fan by hand to check for the connection of connectors.
A6 - 10	Fan overcurrent error	A fan motor overcurrent has been detected. Check for the connection of the connector between the fan motor and the PCB for the fan. If the connection is normal, replace the fan motor. If this still cannot solve the error, replace the PCB for the fan.
A6 - 11	Fan position detection error	An error in the detection of position of the fan motor. Check for the connection of the connector between the fan motor and the PCB for the fan. If the connection is normal, replace the fan motor. If this still cannot solve the error, replace the PCB for the fan.
A8 - 01	Power supply voltage error	Check for the input voltage of the fan motor.
A9 - 01	Electronic expansion valve error	There is an error in the electronic expansion valve coil or a connector disconnected.
A9 - 02	Refrigerant leakage detection error	Refrigerant leaks even if the electronic expansion valve is closed. Replace the electronic expansion valve.
AH - 03	Transmission error (between the self-cleaning decoration panel and the indoor unit) (when the self-cleaning decoration panel is mounted)	Check for the connection of the harness connector between the panel PCB and the indoor unit PCB.
AH - 04	Dust detection sensor error (when the self-cleaning decoration panel is mounted)	Check for the connections of the connector X12A on the panel PCB and the connectors X18A and X19A on the sensor PCB.
AH - 05	Dust collection sign error (when the self-cleaning decoration panel is mounted)	Check for clogging with dust at the dust collection port as well as in the brush unit, S-shaped pipe, and dust box. Furthermore, check for any stains of the light receiving and emitting parts of the infrared unit.
AH - 06	Air filter rotation error (when the self-cleaning decoration panel is mounted)	Check for anything getting in the way of rotating the filter (e.g. the filter comes off or the drive gear is clogged with foreign matter).
AH - 07	Damper rotation error (when the self-cleaning decoration panel is mounted)	The damper does not rotate normally. Check for any foreign matter around the damper and for the operation of the gear and limit switch.
AH - 08	Filter self-cleaning operation error (when the self-cleaning decoration panel is mounted)	The unit has not yet completed the filter self-cleaning operation even after the lapse of specified period of time. Check for any external noise, etc.
AH - 09	Filter self-cleaning operation start disabled error (when the self-cleaning decoration panel is mounted)	The unit has been put into a state in which the filter self-cleaning operation is disabled. Check the unit for the operating conditions.
AH - 12	Auto grille unit error (when the auto grille unit is mounted)	It is detected that the grille does not operate properly. Check whether the grille does not contact with something or the wire does not snaggle.
AJ - 01	Capacity setting error	There is an error in the capacity setting of the indoor unit PCB.
AJ - 02	Electronic expansion valve setting error	There is a fault in the setting of the gear type electronic expansion valve/direct acting type electronic expansion valve.
C1 - 01	Transmission error (between indoor unit PCB and the PCB for the fan)	Check for the conditions of transmission between the indoor unit PCB and the PCB for the fan.
C1 - 06	Transmission error (between indoor unit PCB and auto grille control PCB)	Refer to C1-06 flowchart.
C6 - 01	Defective combination of indoor unit PCB and the PCB for the fan	A combination of indoor unit PCB and the PCB for the fan is defective. Check whether the capacity setting adaptor is correct and the type of the PCB for the fan is correct.
C6 - 05	Indoor unit PCB abnormality	Refer to C6-05 flowchart.
CE - 01	Infrared presence sensor error	The output of the infrared presence sensor is not detected. Check if the connector is properly connected, and if the harness is not broken
CE - 02	Infrared floor sensor error	A disconnection of the temperature correction circuit (thermistor) of the infrared floor sensor has been detected. Check if the connector is properly connected.
CE - 03	Infrared floor sensor error	A short-circuit of the temperature correction circuit (thermistor) of the infrared floor sensor has been detected. Check if the pins of the connector are touching each other, and if any foreign matter on the PCB is causing a short-circuit.

Error code	Troubleshooting	
	Description of error	Diagnosis
CE - 04	Infrared floor sensor error	An abnormality other than the ones mentioned above has been detected. Check if the temperature nearby the sensor is too high, and if there is any foreign matter that may cause noise.
U4 - 01	Indoor-Outdoor transmission error	Refer to the U4 flowchart.
UA - 13	Refrigerant type error	The type of refrigerant used for the indoor unit is different from that used for the outdoor unit.
UA - 15	Not applicable for self-cleaning decoration panel (when the self-cleaning decoration panel is mounted)	An outdoor unit is not applicable for the self-cleaning decoration panel is connected.

As there are various combinations of indoor and outdoor units, the sub codes of A0 - A3 are not shown in this table.

5.2.2 Outdoor Unit, System

Error code	Troubleshooting	
	Description of error	Diagnosis
E1 - 01	Outdoor unit PCB error	Refer to the E1 flowchart and make a diagnosis based on the Error code shown to the left.
E1 - 02	Defective outdoor unit PCB	
E2 - 01	Earth leakage detection error	Refer to the E2 flowchart and make a diagnosis based on the Error code shown to the left.
E2 - 06	Missing of earth leakage detection core	
E3 - 01	High pressure switch activated	Refer to the E3 flowchart and make a diagnosis based on the Error code shown to the left.
E3 - 02	High pressure switch activated	
E3 - 07	High pressure switch activated (Batch)	
E3 - 13	Liquid stop valve check error	
E3 - 20	High pressure switch activated	
E4 - 01	Low pressure error	Refer to the E4 flowchart and make a diagnosis based on the Error code shown to the left.
E5 - 01	Compressor M1C lock	Refer to the E5 flowchart and make a diagnosis based on the Error code shown to the left.
E7 - 01	Fan motor M1F lock	Refer to the E7 flowchart and make a diagnosis of the fan motor based on the Error code shown to the left.
E7 - 05	Fan motor M1F instantaneous overcurrent	
E7 - 09	Fan motor M1F IPM error	
E9 - 01	Electronic expansion valve coil Y1E error	Refer to the E9 flowchart and make a diagnosis of the relevant electronic expansion valve based on the Error code shown to the left.
E9 - 03	Electronic expansion valve coil Y2E error	
E9 - 04	Electronic expansion valve coil Y3E error	
E9 - 26	Electronic expansion valve coil Y4E error	
E9 - 48	Electronic expansion valve overcurrent	
E9 - 54	Defective circuit	
F3 - 01	Discharge pipe high temperature error	Refer to the F3 flowchart and make a diagnosis based on the Error code shown to the left.
F3 - 23	Overload protector activated (Q1M)	
F4 - 01	Wet alarm for compressor M1C	Refer to the F4 flowchart and make a diagnosis based on the Error code shown to the left.
F4 - 08	Wet error for compressor M1C	
F4 - 14	Indoor unit failure alarm	
F6 - 02	Excess refrigerant charge error	Excess refrigerant charge was detected during test run.
F6 - 03	Excess refrigerant charge warning	Excess refrigerant charge was detected during operation other than test run.
H3 - 02	Connection error between main PCB and inverter PCB	Refer to the H3 flowchart and make a diagnosis based on the Error code shown to the left.
H5 - 01	Defective overload protector for M1C (Q1M)	Refer to the H5 flowchart and make a diagnosis based on the Error code shown to the left.
H7 - 21	Defective fan PCB for M1F	Refer to the H7 flowchart and make a diagnosis based on the Error code shown to the left.
H9 - 01	Defective outdoor air thermistor (R1T)	Refer to the H9 flowchart and make a diagnosis based on the Error code shown to the left.
J3 - 16	Defective discharge pipe thermistor (R21T): Open	Refer to the J3 flowchart and make a diagnosis based on the Error code shown to the left.
J3 - 17	Defective discharge pipe thermistor (R21T): Short	
J3 - 56	Discharge pipe warning	
J5 - 01	Defective suction pipe thermistor (R3T)	Refer to the J5 flowchart and make a diagnosis of the thermistor based on the Error code shown to the left.
J6 - 01	Defective heat exchanger deicer thermistor (R7T)	Refer to the J6 flowchart and make a diagnosis of the thermistor based on the Error code shown to the left.
J7 - 06	Defective subcooling heat exchanger liquid pipe thermistor (R5T)	Refer to the J7 flowchart and make a diagnosis of the thermistor based on the Error code shown to the left.
J8 - 01	Defective heat exchanger liquid pipe thermistor (R4T)	Refer to the J8 flowchart and make a diagnosis of the thermistor based on the Error code shown to the left.
J9 - 01	Defective subcooling heat exchanger gas pipe thermistor (R6T)	Refer to the J9 flowchart and make a diagnosis of the thermistor based on the Error code shown to the left.
J9 - 08	Error detection of subcooling heat exchanger gas pipe thermistor (R6T)	

Error code	Troubleshooting	
	Description of error	Diagnosis
JA - 06	Defective high pressure sensor: Open	Refer to the JA flowchart and make a diagnosis of the sensor based on the Error code shown to the left.
JA - 07	Defective high pressure sensor: Short	
JC - 06	Defective low pressure sensor: Open	Refer to the JC flowchart and make a diagnosis of the sensor based on the Error code shown to the left.
JC - 07	Defective low pressure sensor: Short	
L1 - 01	IPM error: Compressor M1C	The inverter PCB may be defective or a PCB other than the specified is mounted. Refer to the L1 flowchart and make a diagnosis based on the Error code shown to the left.
L1 - 02	Defective current sensor: Compressor M1C	
L1 - 03	Current offset: Compressor M1C	
L1 - 04	IGBT error: Compressor M1C	
L1 - 05	Jumper settings error: Compressor M1C	
L1 - 36	EEPROM abnormality: Compressor M1C	
L1 - 47	Power supply voltage abnormality: Compressor M1C	
L2 - 01	Momentary power failure	Refer to the L2 flowchart and make a diagnosis based on the Error code shown to the left.
L2 - 04	Power ON	
L4 - 01	Radiation fin temperature rise: Inverter for M1C	Refer to the L4 flowchart and make a diagnosis based on the Error code shown to the left.
L4 - 06	Radiation fin temperature rise: Inverter fan M1F	
L5 - 03	Current offset error	Refer to the L5 flowchart and make a diagnosis based on the Error code shown to the left.
L8 - 03	Compressor M1C overcurrent error	Refer to the L8 flowchart and make a diagnosis of the compressor based on the Error code shown to the left.
L9 - 01	Compressor M1C startup error	Refer to the L9 flowchart and make a diagnosis of the compressor based on the Error code shown to the left.
L9 - 13	Compressor M1C output open phase	
LC - 14	PCB inverter error (Compressor M1C)	Refer to the LC flowchart and make a diagnosis based on the Error code shown to the left.
LC - 19	PCB inverter error (Fan M1F)	
P1 - 01	Inverter circuit capacitor high voltage	Refer to the P1 flowchart and make a diagnosis based on the Error code shown to the left.
	Unbalanced power supply voltage	
P3 - 01	Defective reactor thermistor 1	Refer to the P3 flowchart and make a diagnosis based on the Error code shown to the left.
P3 - 04	Defective reactor thermistor 2	
P4 - 01	Defective radiation fin thermistor	Refer to the P4 flowchart and make a diagnosis based on the Error code shown to the left.
P4 - 02	Defective fan M1F fin sensor	
PJ - 04	Incorrect type of compressor	Refer to the PJ flowchart and make a diagnosis based on the Error code shown to the left.
PJ - 09	Incorrect type of fan	
U0 - 05	Refrigerant shortage warning (cooling)	Refer to the U0 flowchart and make a diagnosis based on the Error code shown to the left.
U0 - 06	Refrigerant shortage warning (heating)	
U0 - 08	Refrigerant shortage	
U1 - 16	Open phase for power supply	Refer to the U1 flowchart and make a diagnosis based on the Error code shown to the left.
U1 - 19	Hz error for power supply	
U2 - 01	Shortage of inverter power supply voltage	Refer to the U2 flowchart and make a diagnosis based on the Error code shown to the left.
U2 - 02	Power phase loss	
U3 - 02	Initial installation alarm / Test operation failed due to indoor unit error	Refer to the U3 flowchart and make a diagnosis based on the Error code shown to the left.
U3 - 03	Test operation not conducted	
U3 - 04	Abnormal end of test operation	
U3 - 05	Premature end of test operation during initial transmission error – check indoor unit error U4 / U9	
U3 - 06	Premature end of test operation during normal transmission error	
U3 - 07	Premature end of test operation due to transmission error	
U3 - 08	Premature end of test operation due to transmission error of all units	
U3 - 10	System refrigerant auto charge operation not yet executed	
U4 - 01	Transmission error between indoor unit and outdoor unit	Refer to the U4 flowchart and make a diagnosis based on the Error code shown to the left.
U4 - 03	Transmission error between indoor unit and system: check indoor unit error	

Error code	Troubleshooting	
	Description of error	Diagnosis
U7 - 01	Error when external control adaptor for outdoor unit is installed	Refer to the U7 flowchart and make a diagnosis based on the Error code shown to the left.
U7 - 02	Alarm when external control adaptor for outdoor unit is installed	
U7 - 11	Error in indoor unit connection capacity for test operation	
U9 - 01	Other indoor units and outdoor unit abnormality	Refer to the U9 flowchart and make a diagnosis based on the Error code shown to the left.
UA - 00	TSS plus unit field settings error, CT address duplication warning	Refer to the UA flowchart and make a diagnosis based on the Error code shown to the left.
UA - 03	Connection of excessive indoor units	
UA - 17	Connection of excess indoor units	
UA - 18	Connection of incorrect models of indoor units	
UA - 20	Improper combination of outdoor units	
UA - 21	Wrong connection	
UF - 01	Wrong wiring check error	Refer to the UF flowchart and make a diagnosis based on the Error code shown to the left.
UF - 05	Defective stop valve for test operation	
UH - 01	Wiring error	Refer to the UH flowchart.

5.3 External Protection Device Abnormality


Applicable Models	All indoor unit models
Error Code	A0
Method of Error Detection	Detects open or short circuit between external input terminals in indoor unit.
Error Decision Conditions	An open circuit occurs between external input terminals with the remote controller set for external ON/OFF input.
Supposed Causes	<ul style="list-style-type: none"> ■ Activation of external protection device ■ Improper field setting ■ Defective indoor unit PCB

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

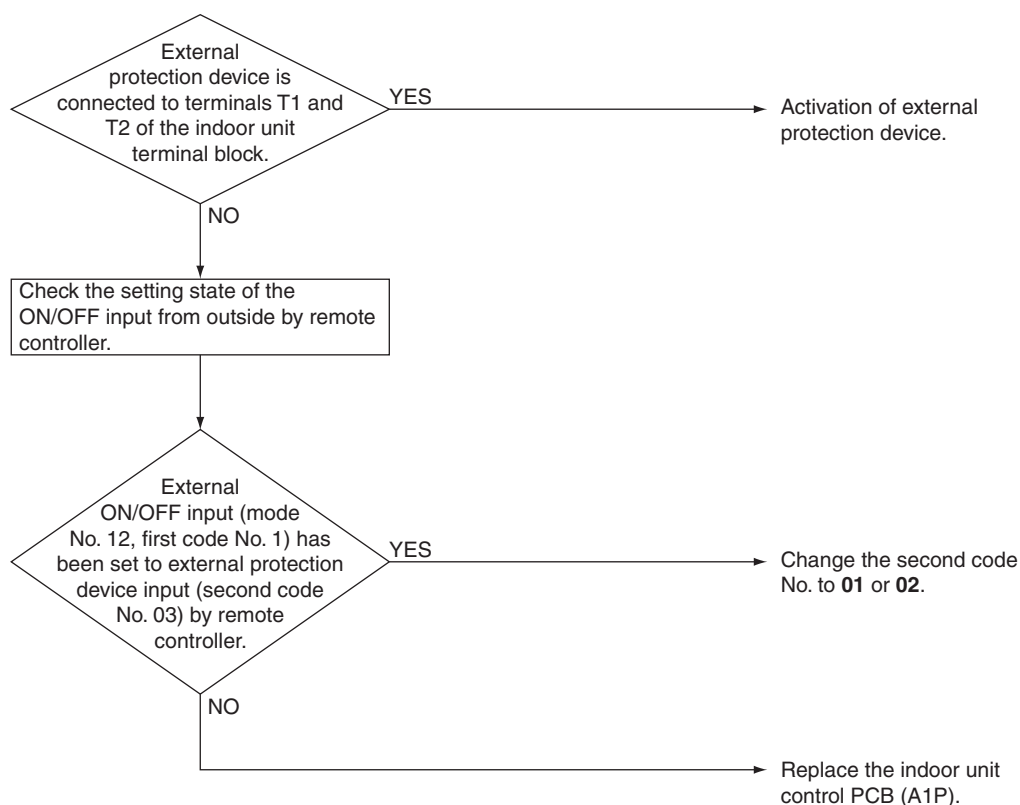

5.4 Indoor Unit PCB Abnormality

Applicable Models All indoor unit models

Error Code **A1**

Method of Error Detection Data from EEPROM is checked.

Error Decision Conditions Data cannot be correctly received from the EEPROM
EEPROM: Type of nonvolatile memory. Maintains memory contents even when the power supply is turned OFF.

Supposed Causes


- Defective indoor unit control PCB
- External factor (Noise etc.)

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

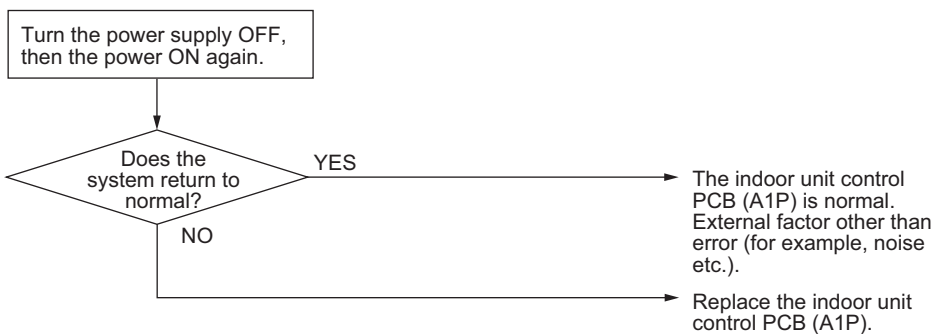

5.5 Drain Level Control System Abnormality

Applicable Models

FXFSQ-AR, FXDQ-PD, FXDQ-ND, FXMQ-PB, FXMQ-AR

Error Code

A3

Method of Error Detection

By float switch OFF detection

Error Decision Conditions

Float switch goes OFF when the conditions for water level rise are not met

Supposed Causes


- 220-240 V power supply is not provided.
- Defective float switch or short circuit connector
- Defective drain pump
- Drain clogging, upward slope, etc.
- Defective indoor unit control PCB
- Loose connection of connector


Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

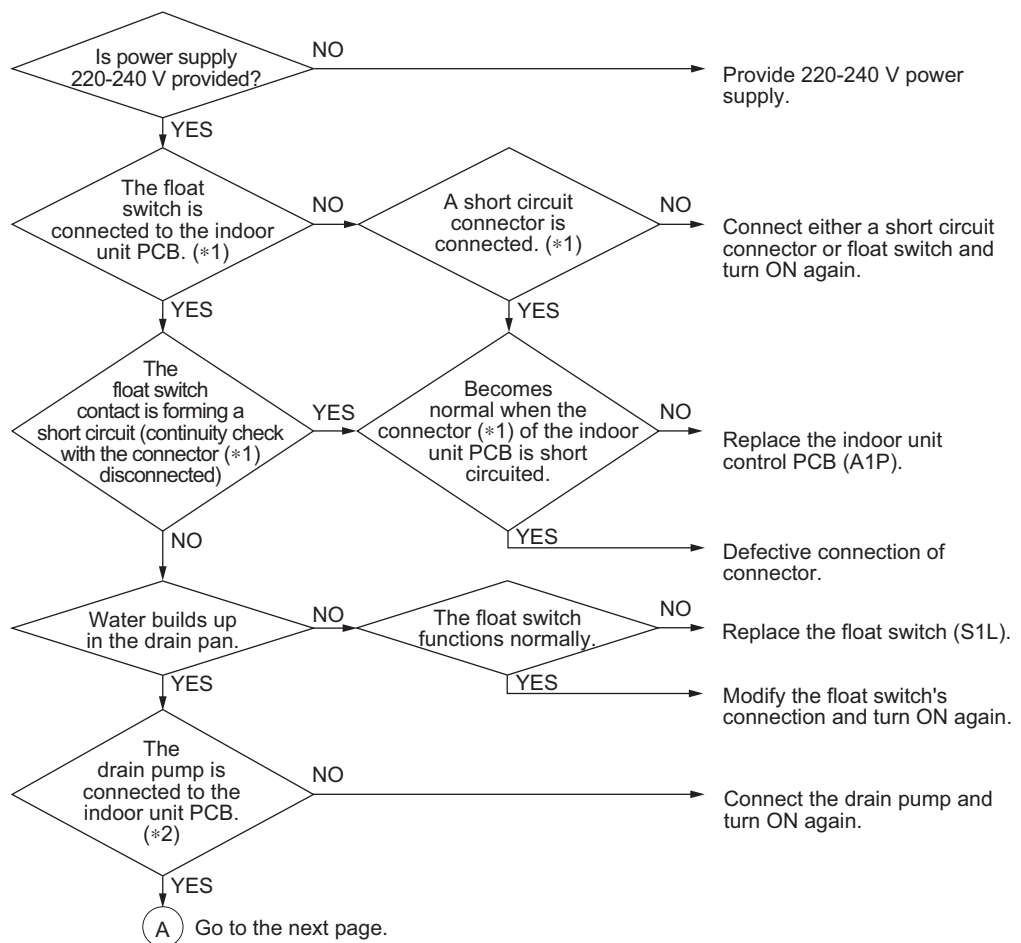

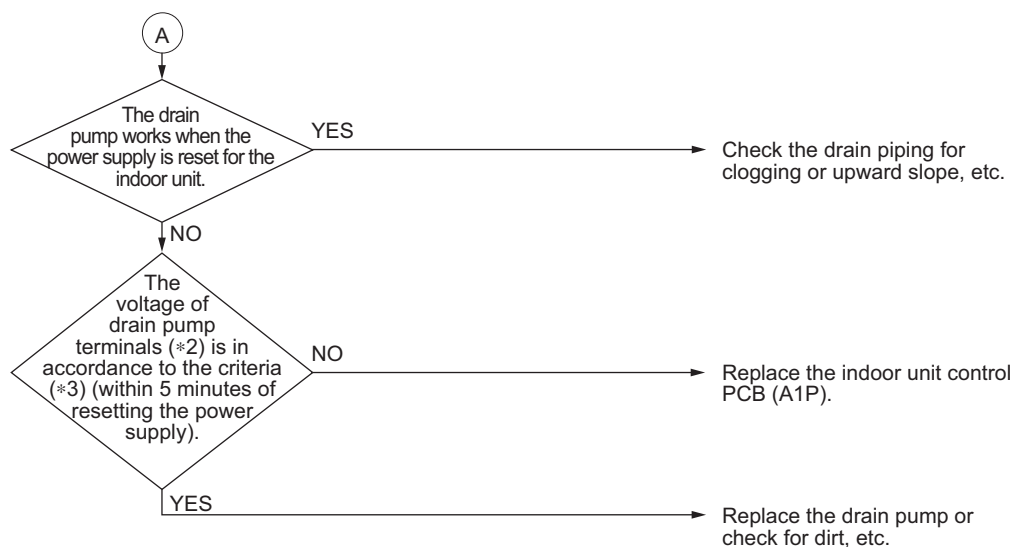

i Note(s)

Model	*1: Float switch (S1L) / short circuit connector	*2: Drain pump (M1P) connector	*3: Drain pump (M1P) voltage	Note
FXFSQ-AR	X15A	X25A	13 VDC	—
FXDQ-PD	X8A	X25A	220-240 VAC	—
FXDQ-ND	X8A	X25A	220-240 VAC	—
FXMQ-PB	X15A	X25A	13 VDC	—
FXMQ-AR	X8A	Y1, Y2	220-240 VAC	—


5.6 Indoor Fan Motor Lock, Overload

Applicable Models	FXMQ40PB, FXAQ-AR
Error Code	A6
Method of Error Detection	Abnormal fan revolutions are detected by a signal output from the fan motor.
Error Decision Conditions	The fan revolutions do not increase.
Supposed Causes	<ul style="list-style-type: none">■ Broken wires in, short circuit of, or disconnection of connectors from the fan motor harness■ Defective fan motor (Broken wires or defective insulation)■ Abnormal signal output from the fan motor (defective circuit)■ Defective indoor unit control PCB■ Instantaneous disturbance in the power supply voltage■ Fan motor lock (Due to motor or external causes)■ The fan does not rotate due to foreign matter blocking the fan.■ Disconnection of the connector between the high-power PCB and the low-power PCB

Troubleshooting


Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

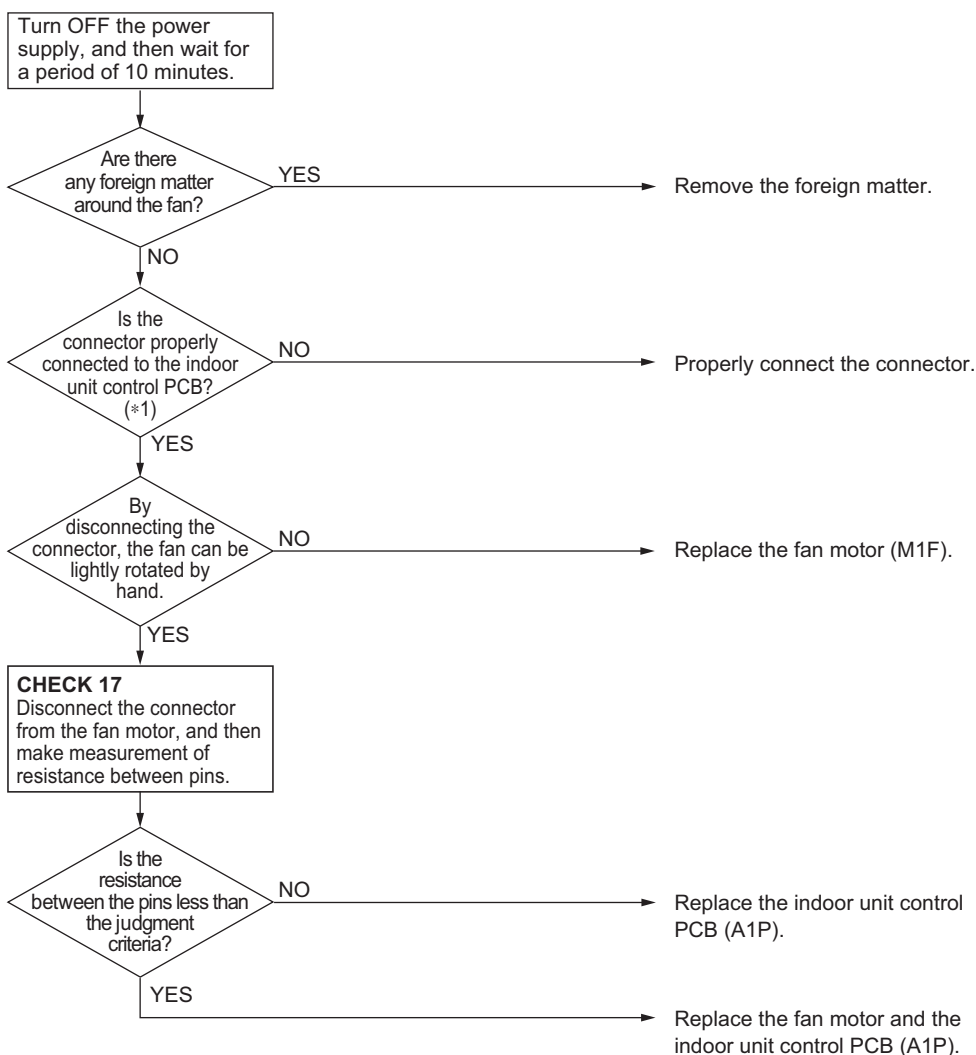
Note(s)

*1: Check the following connectors.

Model	Connector
FXMQ40PB	X8A
FXAQ-AR	X20A



Reference

CHECK 17 Refer to page 287.

5.7 Indoor Fan Motor Abnormality

5.7.1 Indoor Fan Motor Abnormality (FXDQ-PD, FXDQ-ND)

Applicable Models	FXDQ-PD, FXDQ-ND
Error Code	A6
Method of Error Detection	This error is detected if there is no revolution detection signal output from the fan motor.
Error Decision Conditions	When no revolutions can be detected even at the maximum output voltage to the fan
Supposed Causes	<ul style="list-style-type: none">■ Defective indoor fan motor■ Broken wires■ Defective contact
Troubleshooting	

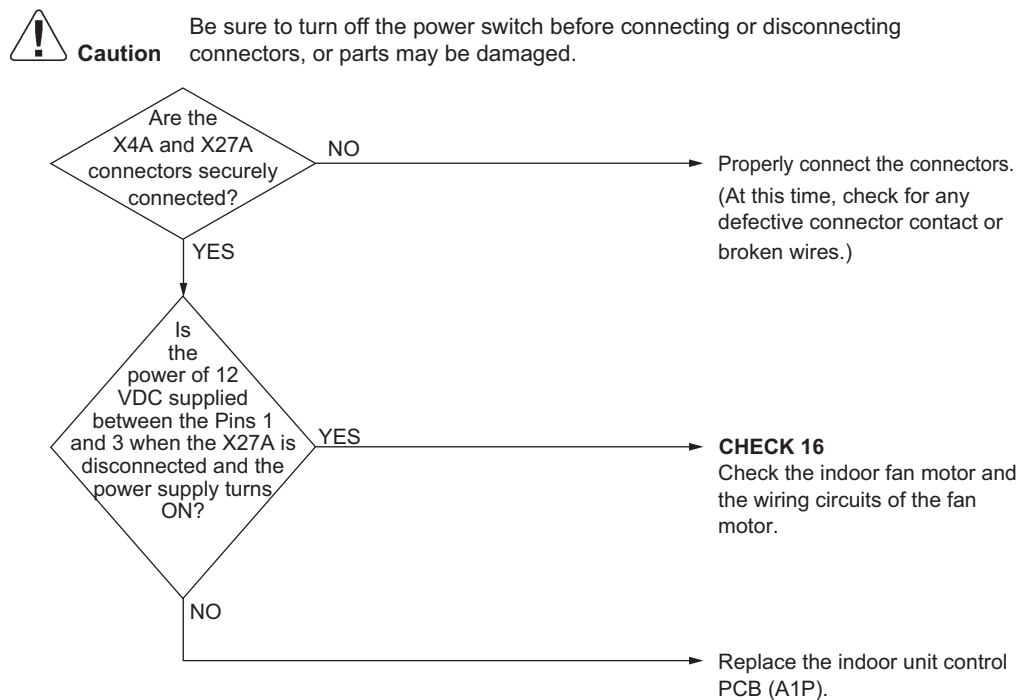

Reference

CHECK 16 Refer to page 285.

5.7.2 Indoor Fan Motor Abnormality (FXMQ50-140PB)


Applicable Models	FXMQ50-140PB
Error Code	A6
Method of Error Detection	<ul style="list-style-type: none"> ■ Error from the current flow on the fan PCB ■ Error from the rotation speed of the fan motor in operation ■ Error from the position signal of the fan motor ■ Error from the current flow on the fan PCB when the fan motor starting operation
Error Decision Conditions	<ul style="list-style-type: none"> ■ An overcurrent flows. ■ The rotation speed is less than a certain level for 6 seconds. ■ A position error in the fan rotor continues for 5 seconds or more.
Supposed Causes	<ul style="list-style-type: none"> ■ Clogging of a foreign matter ■ Disconnection of the fan motor connectors (X1A and X2A) ■ Disconnection of the connectors between the indoor unit control PCB (A1P) and fan PCB (A2P) ■ Defective fan PCB (A2P) ■ Defective fan motor


Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

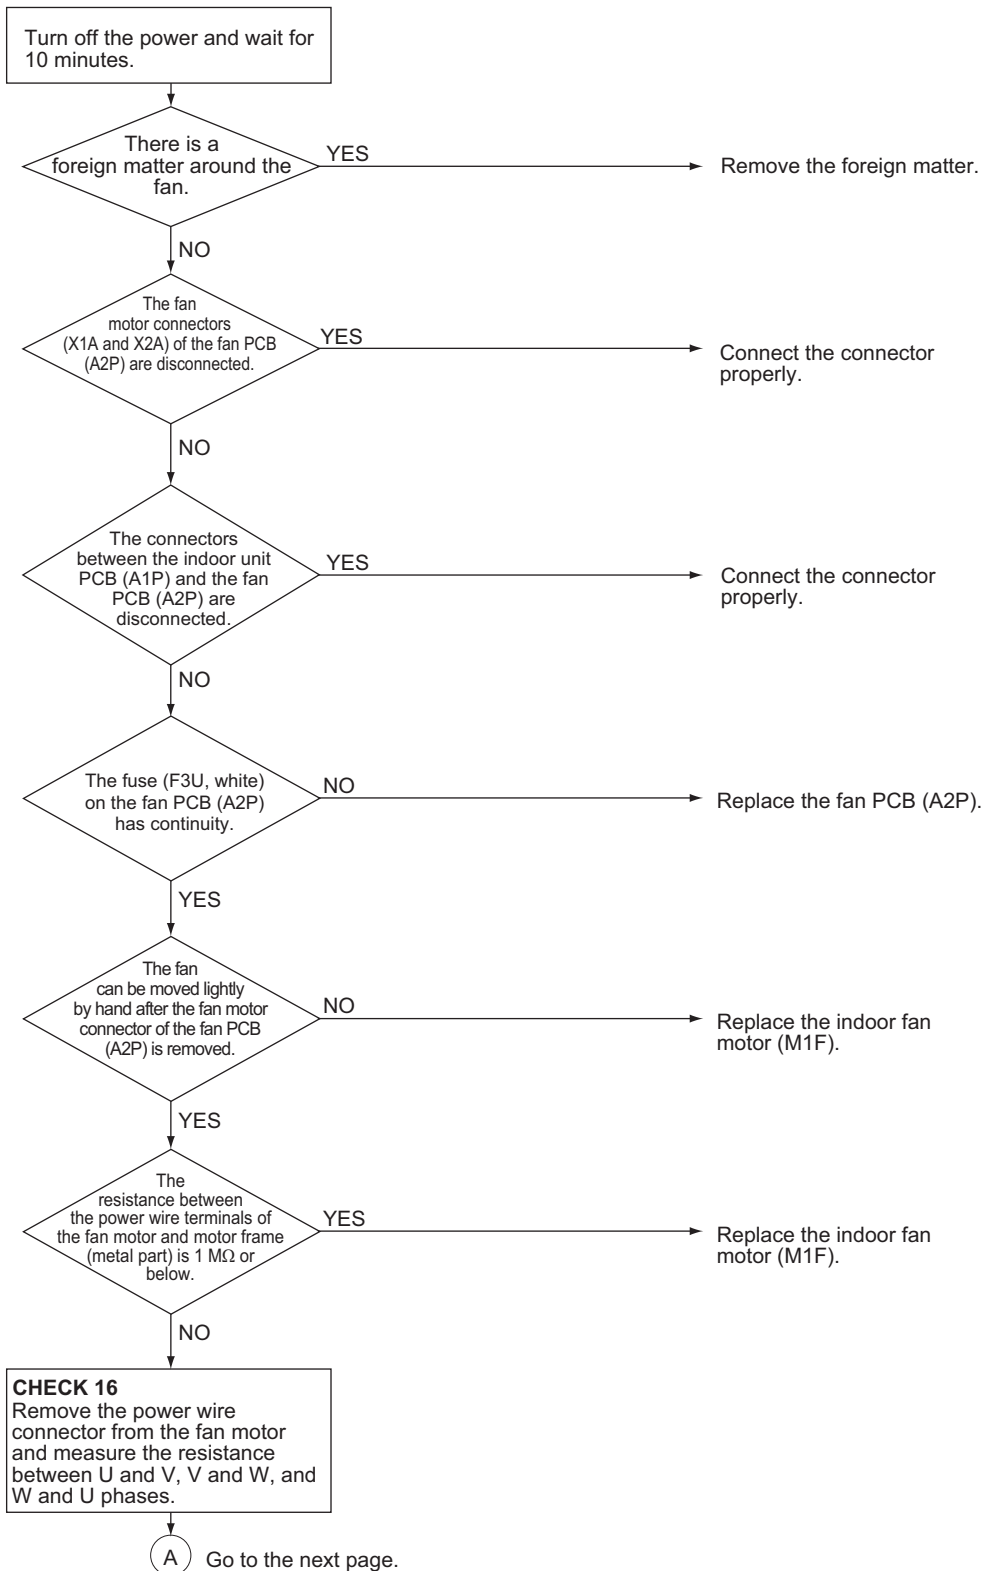

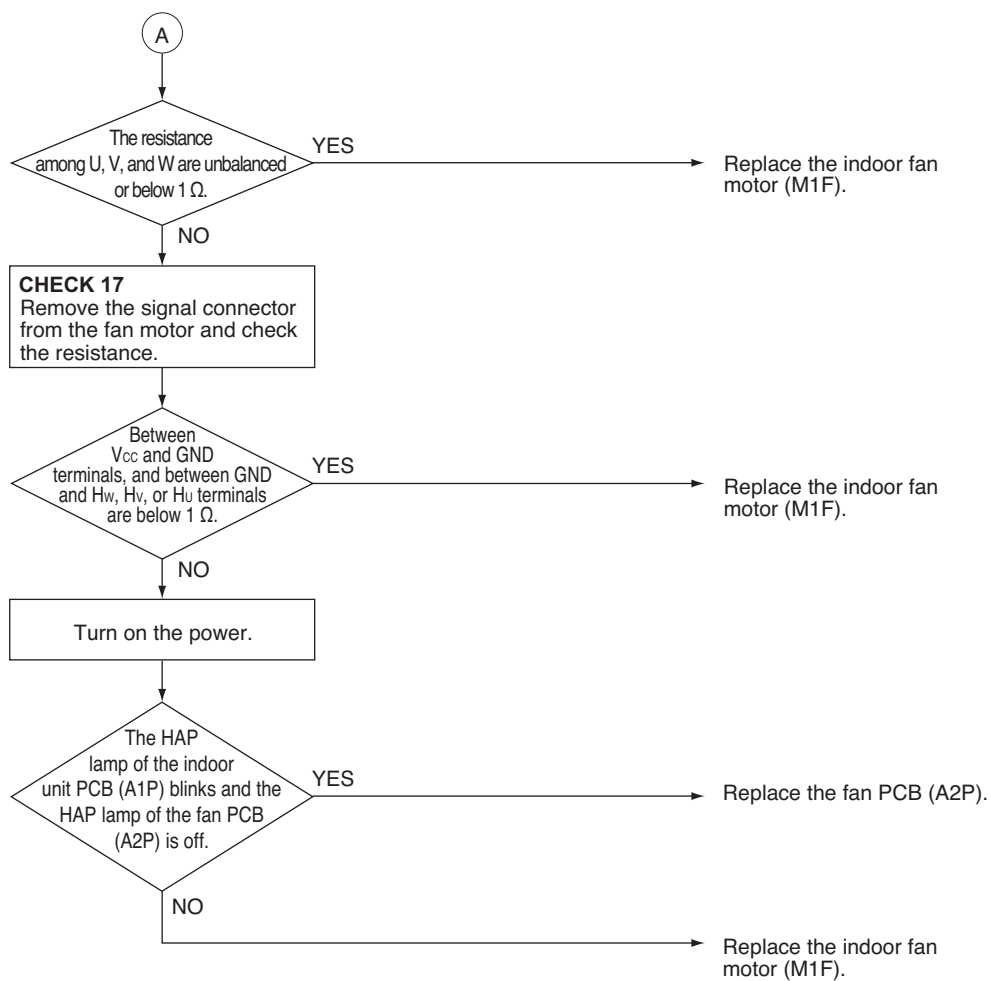

Reference

CHECK 16 Refer to page 285.

Reference

CHECK 17 Refer to page 287.

5.7.3 Indoor Fan Motor Abnormality (FXFSQ-AR)

Applicable Models FXFSQ-AR

Error Code **A6-10**

Method of Error Detection

- Detection from the current flow on the fan PCB (A1P)
- Detection from the rotation speed of the fan motor in operation
- Detection from the position signal of the fan motor
- Detection from the current flow on the fan PCB when the fan motor starting operation


Error Decision Conditions


- An overcurrent flows
- The rotation speed is less than a certain level for 6 seconds.
- A position error in the fan rotor continues for 5 seconds or more.

Supposed Causes

- Clogged foreign matter
- Disconnection of fan motor connectors
- Fan motor lock
- Defective fan motor
- Defective indoor unit PCB

Troubleshooting

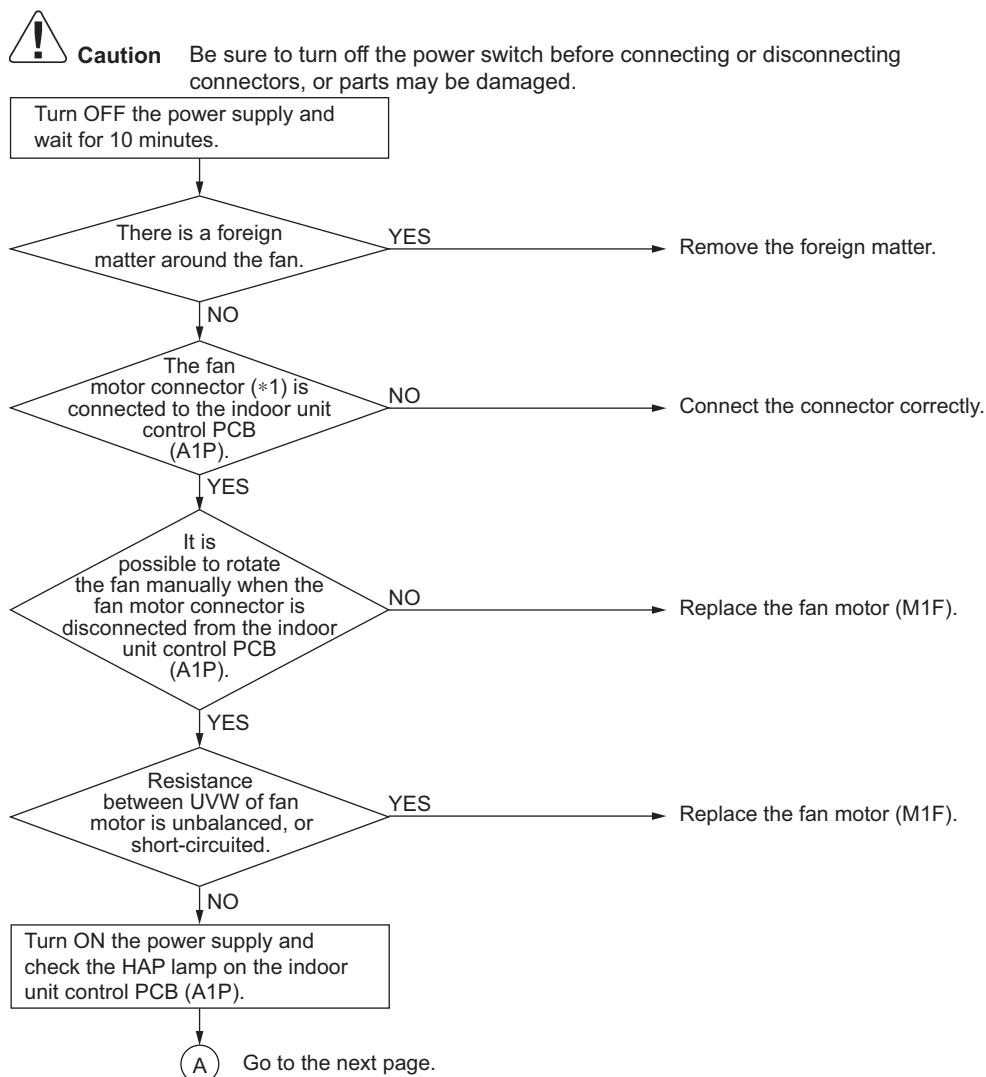

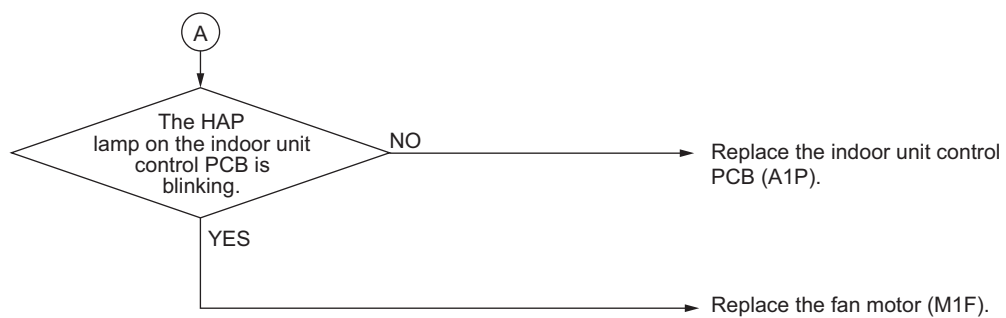

*1 Check also if the relay connector between the indoor unit control PCB and the fan motor are correctly connected.

5.8 Power Supply Voltage Abnormality


5.8.1 Power Supply Voltage Abnormality (FXMQ-PB)

Applicable Models	FXMQ-PB
Error Code	A8
Method of Error Detection	Error is detected by checking the input voltage of the fan motor.
Error Decision Conditions	When the input voltage of fan motor is 150 V or less, or 386 V or more.
Supposed Causes	<ul style="list-style-type: none"> ■ Defective power supply voltage. ■ Defective connection on signal line. ■ Defective wiring. ■ Instantaneous power failure, others.
Troubleshooting	



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

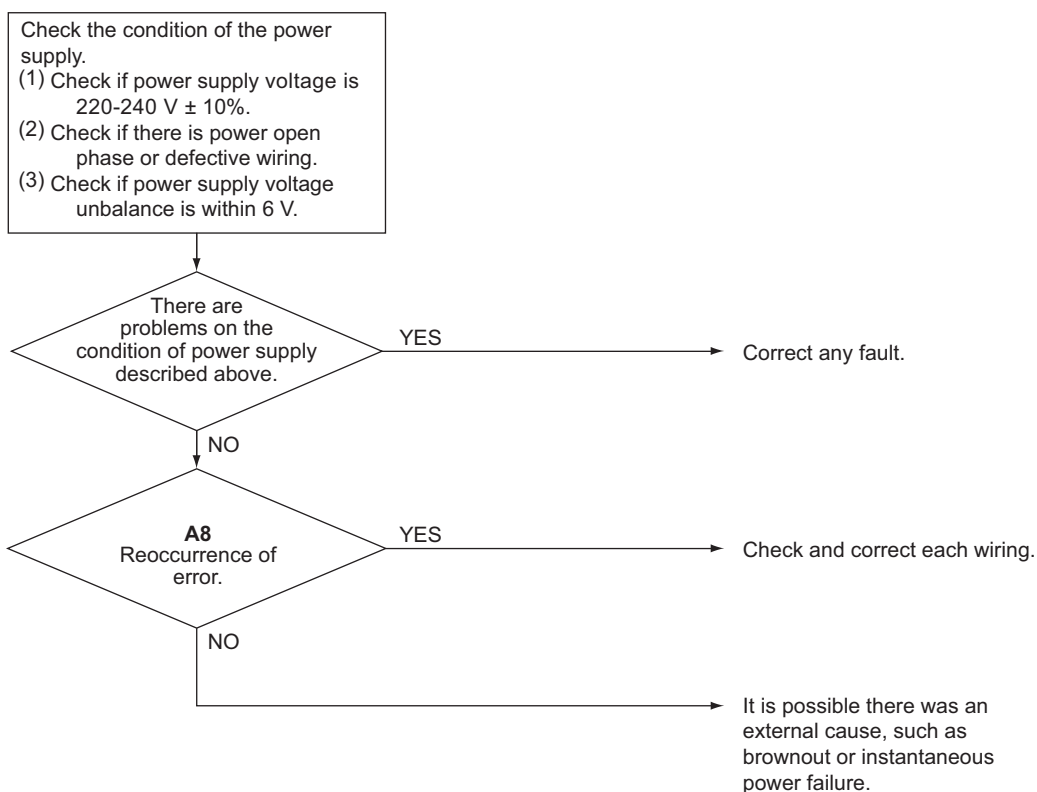

5.8.2 Power Supply Voltage Abnormality (FXFSQ-AR)

Applicable Models	FXFSQ-AR
--------------------------	----------

Error Code	A8-01
-------------------	--------------

Method of Error Detection	This error is detected by checking the voltage status with the microcomputer.
----------------------------------	---

Error Decision Conditions	Overvoltage or voltage drop is detected on the fan driver.
----------------------------------	--


Supposed Causes	<ul style="list-style-type: none">■ Defective connection of power supply connector■ Defective indoor unit PCB (A1P)■ External factors (e.g. noise)
------------------------	--

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

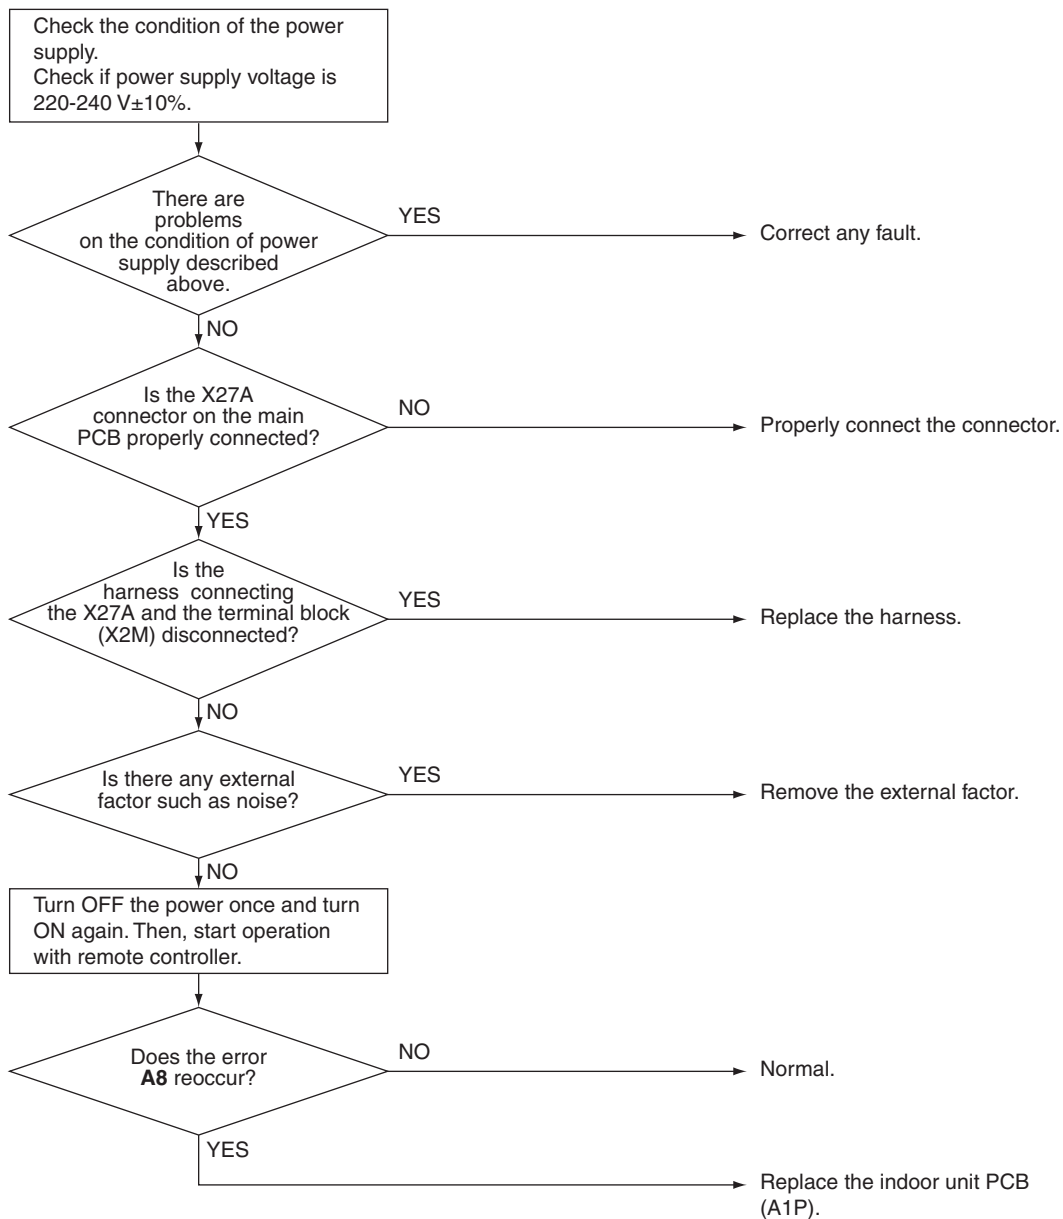


5.9 Electronic Expansion Valve Coil Abnormality, Dust Clogging

Applicable Models	All indoor unit models
Error Code	A9, A9-02
Method of Error Detection	Electronic expansion valve coil conditions are checked via microcomputer. The electronic expansion valve main body is checked for dust clogging via microcomputer.
Error Decision Conditions	Pin input for electronic expansion valve coil is abnormal when initializing microcomputer. Either of the following conditions is seen/caused/occurs while the unit stops operation. <ul style="list-style-type: none"> ● Temperature of suction air (R1T) – temperature of liquid pipe (R2T) > 8°C. ● Temperature of liquid pipe of heat exchanger (R2T) shows fixed degrees or below.
Supposed Causes	<ul style="list-style-type: none"> ■ Defective electronic expansion valve coil ■ Defective indoor unit control PCB ■ Defective relay cables

Troubleshooting


Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

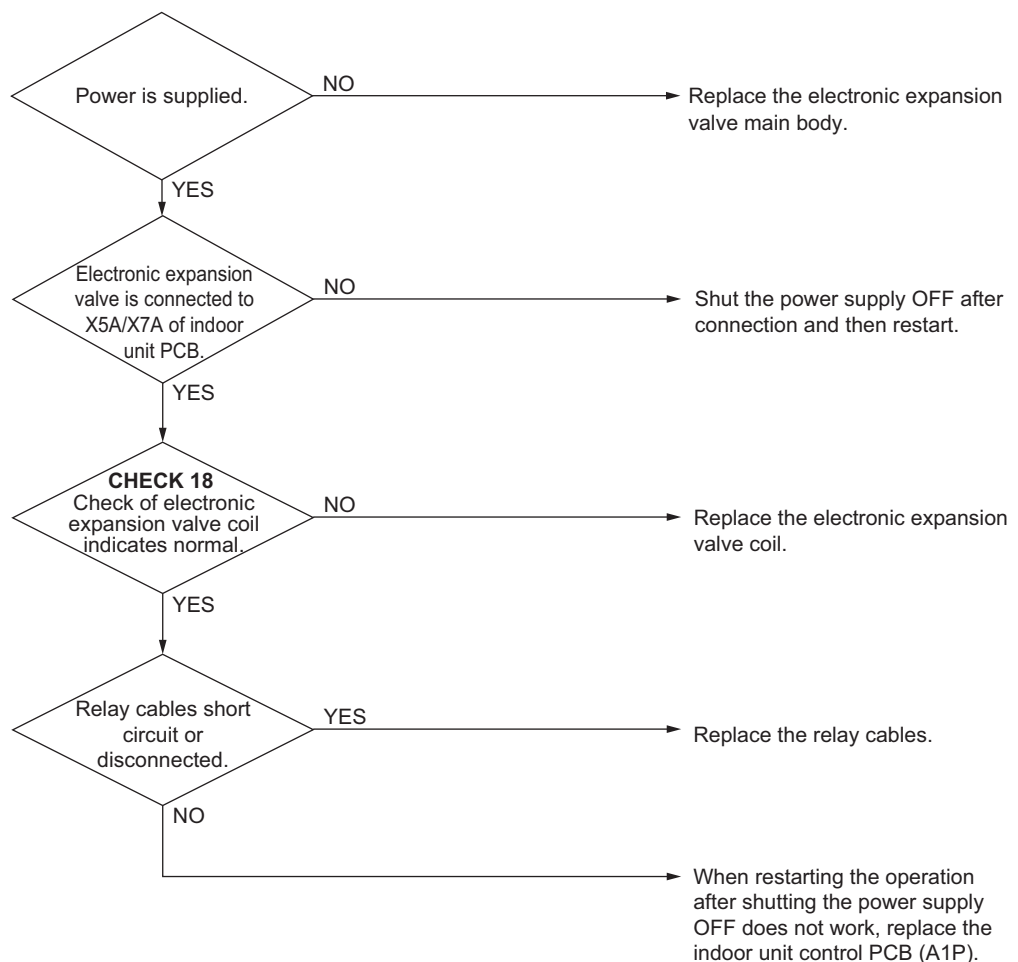

Reference

CHECK 18 Refer to page 288.

5.10 Humidifier System Abnormality

Applicable Models	FXFSQ-AR, FXDQ-PD, FXDQ-ND, FXMQ-PB, FXMQ-AR
Error Code	AF
Method of Error Detection	Water leakage from the humidifier system is detected based on float switch ON/OFF operation while the compressor is not in operation.
Error Decision Conditions	The float switch changes from ON to OFF while the compressor is not in operation. * Error code is displayed but the system operates continuously.
Supposed Causes	<ul style="list-style-type: none"> ■ Humidifier unit (optional accessory) leaking ■ Defective drain piping (upward slope, etc.) ■ Defective indoor unit control PCB

Troubleshooting

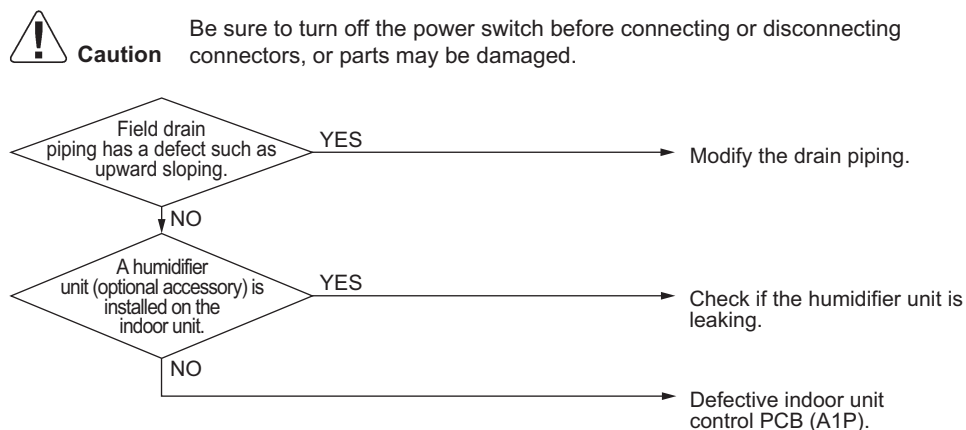

5.11 Auto Grille Unit Error

Applicable Models

FXFSQ-AR (when auto grille panel BYCQ125EBSF is installed)

Error Code

AH-12

Method of Error Detection

This error is determined when an abnormal signal from the auto grille kit is detected.

Error Decision Conditions

Any of the following conditions is established while the grille is elevating.

- The storage detection limit switch does not detect anything for a prescribed time while the grille is moving upward.
- The position detection limit switch does not detect anything for a prescribed time while the grille is moving upward.
- The position detection limit switch detects a position for less than one second while the grille is moving downward.

Supposed Causes


- A large load on the grille
- Tangled wire
- Defective motor
- Defective limit switch

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

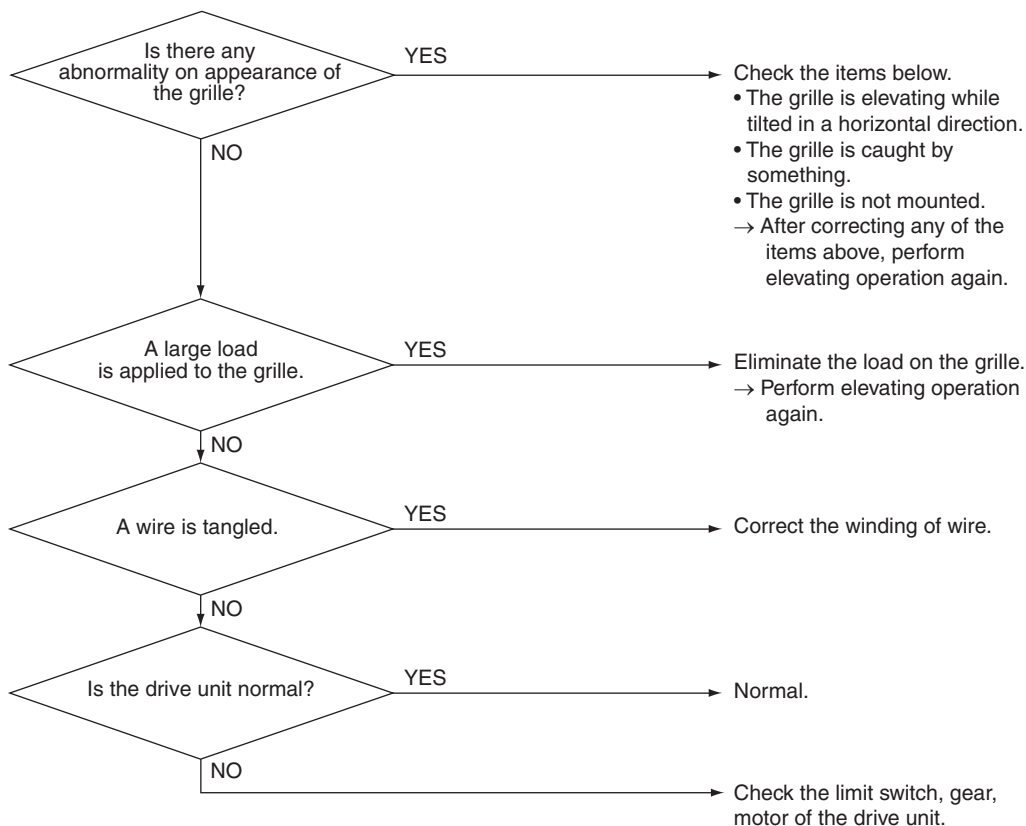

5.12 Defective Capacity Setting


Applicable Models	All indoor unit models
Error Code	AJ
Method of Error Detection	Capacity is determined according to resistance of the capacity setting adaptor and the memory inside the IC memory on the indoor unit PCB, and whether the value is normal or abnormal is determined.
Error Decision Conditions	The capacity code is not saved to the PCB, and the capacity setting adaptor is not connected. A capacity that does not exist for that unit is set.
Supposed Causes	<ul style="list-style-type: none"> ■ The capacity setting adaptor was not installed. ■ Defective indoor unit PCB

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

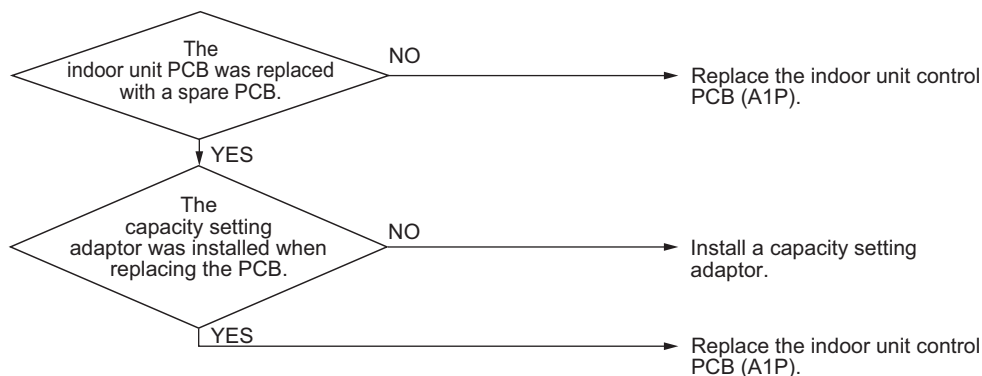

5.13 Transmission Abnormality (between Indoor Unit PCB and Fan PCB)


Applicable Models	FXMQ-PB
Error Code	C1
Method of Error Detection	Transmission conditions between the indoor unit control PCB (A1P) and fan PCB (A2P) are checked via microcomputer.
Error Decision Conditions	When normal transmission is not carried out for a certain duration.
Supposed Causes	<ul style="list-style-type: none">■ Defective connection of the connector between indoor unit control PCB (A1P) and fan PCB (A2P)■ Defective indoor unit control PCB (A1P)■ Defective fan PCB (A2P)■ External factor, such as instantaneous power failure

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

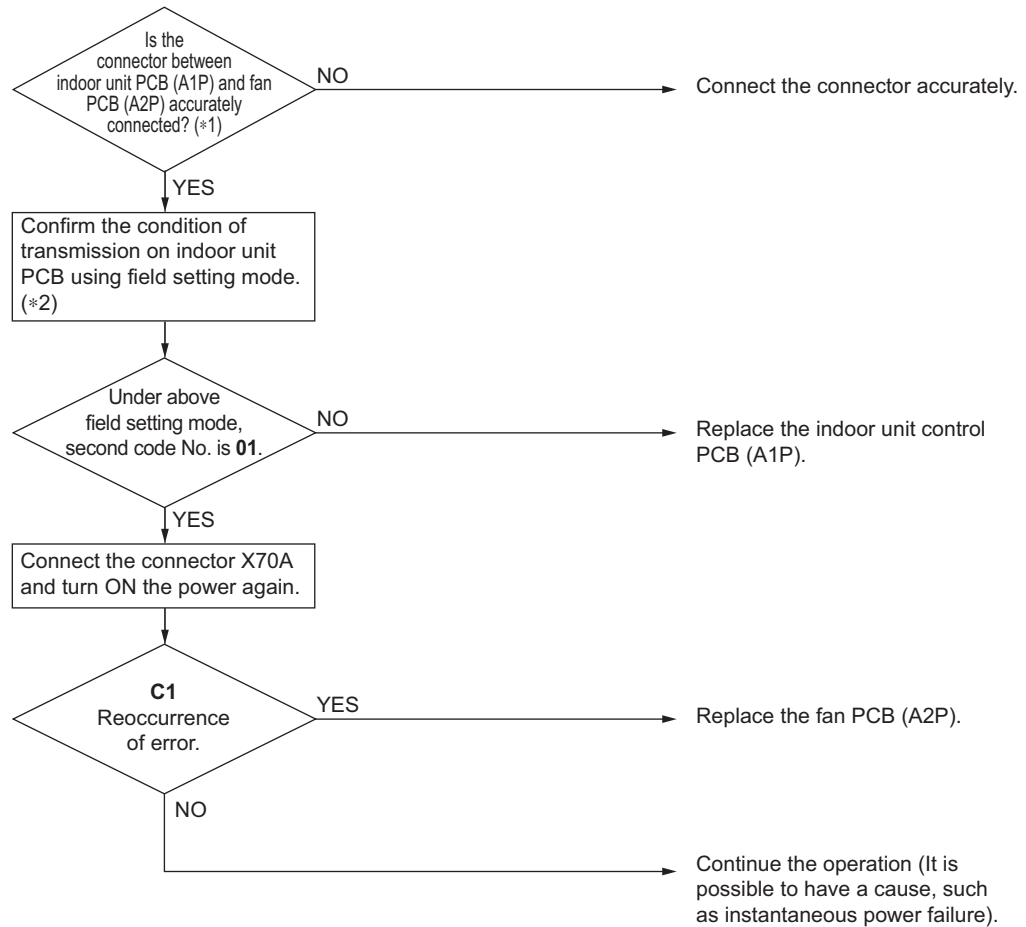

Note(s)

*1. Pull out and insert the connector once and check if it is absolutely connected.

*2. Method to check transmission part of indoor unit control PCB.

(1) Turn OFF the power and remove the connector X70A of indoor unit control PCB (A1P).

(2) Short circuit X70A.

(3) After turning ON the power, check below numbers under field setting from remote controller.

(Confirmation: Second code No. at the condition of first code No. 21 on mode No. 41)

Determination

01: Normal

Other than 01: Transmission error on indoor unit control PCB

* After confirmation, turn OFF the power, take off the short circuit and connect X70A back to original condition.

5.14 Transmission Error

Applicable Models FXFSQ-AR

Error Code **C1-01**


Method of Error Detection Check the condition of transmission using microcomputer.

Error Decision Conditions Error is decided when transmission has been lost for 15 seconds and the error code is displayed on the remote controller 60 seconds later.

Supposed Causes

- Defective connection of the transmission connector (X70A)
- Defective indoor unit control PCB
- External factor such as noise

Troubleshooting

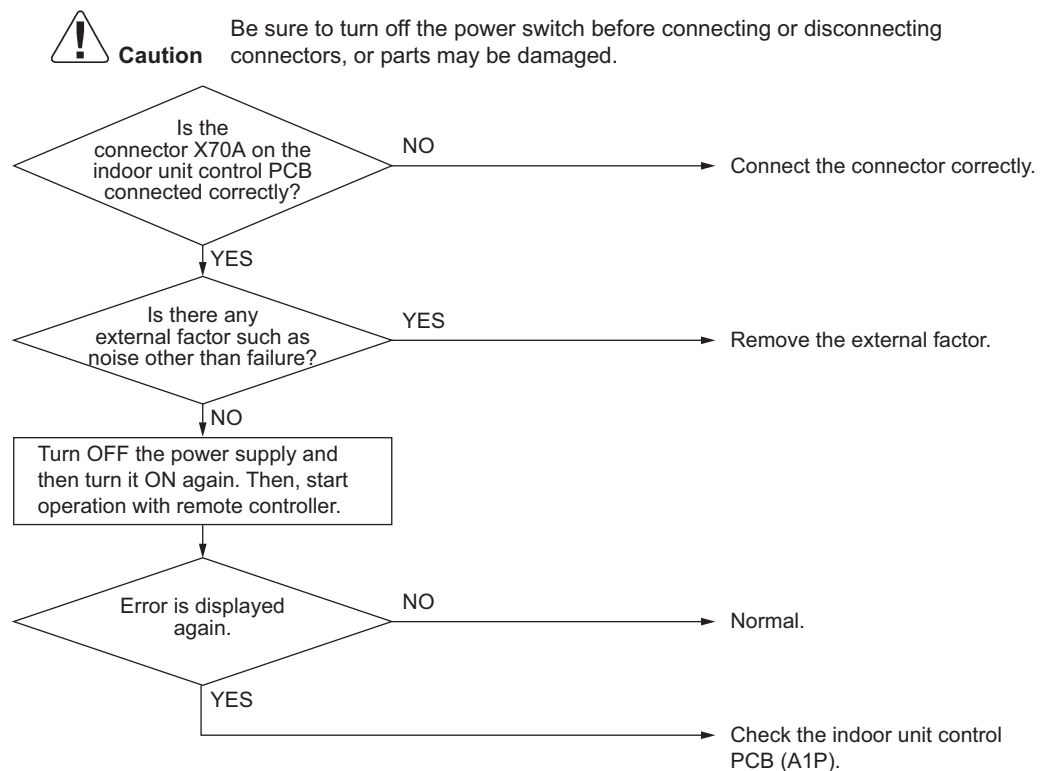

5.15 Transmission Error (between Indoor Unit PCB and Auto Grille Control PCB)


Applicable Models	FXFSQ-AR (when auto grille panel BYCQ125EBSF is installed)
Error Code	C1-06
Method of Error Detection	The status of communication between the indoor unit PCB (X70A) and the auto grille control PCB (X12A) is checked with the microcomputer.
Error Decision Conditions	When transmission communication between the indoor unit PCB and the auto grille control PCB is not normally performed for a certain period of time or more.
Supposed Causes	<ul style="list-style-type: none">■ Defective connection of the transmission communication connector between the indoor unit PCB and the auto grille control PCB■ Defective indoor unit PCB■ Defective auto grille control PCB■ External factors (e.g. noise)

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

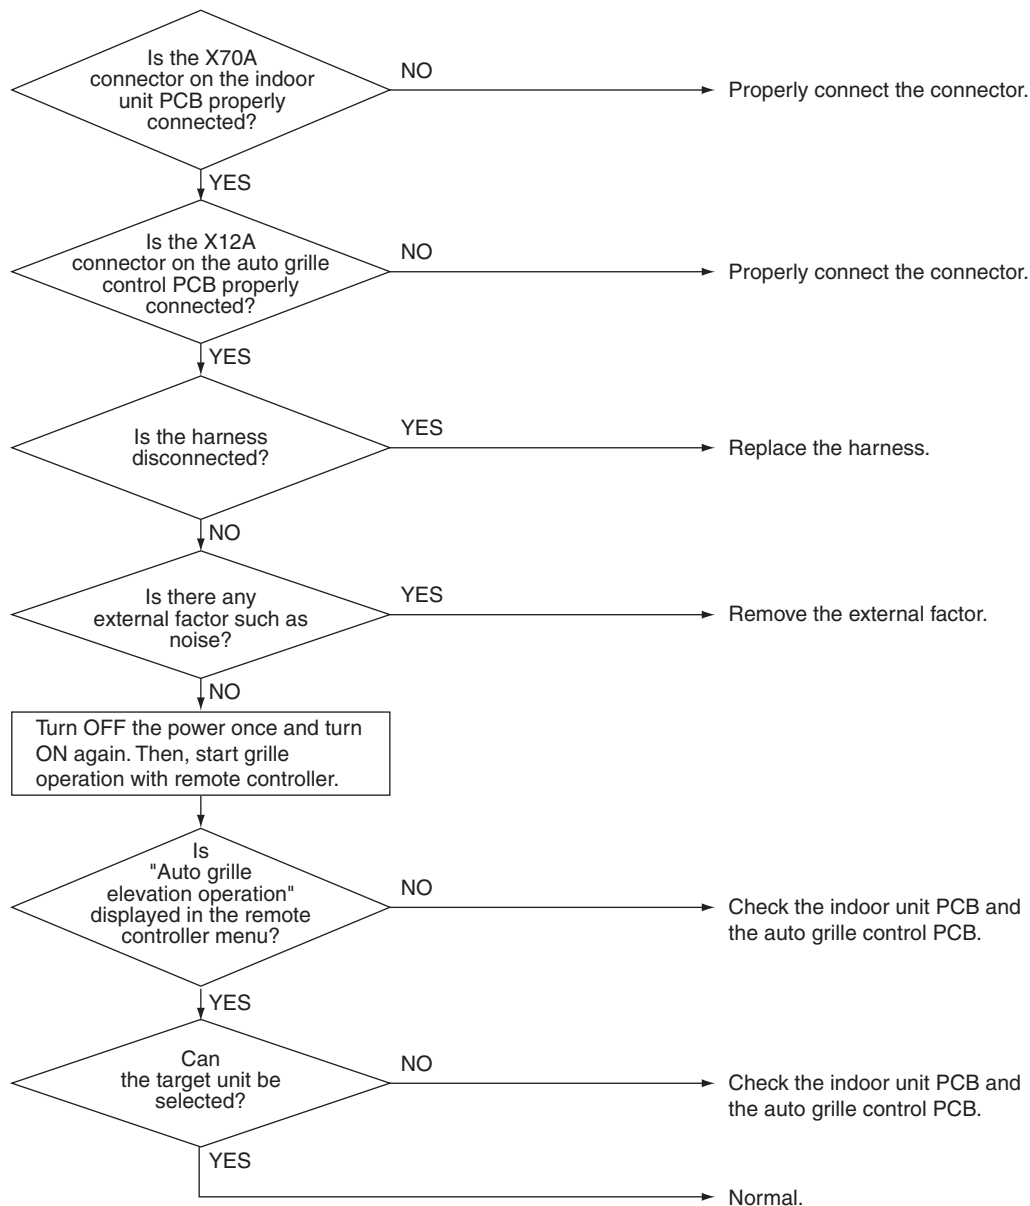

5.16 Thermistor Abnormality

Applicable Models

All indoor unit models

Error Code

C4, C5, C9

Method of Error Detection

The error is determined by the temperature detected by the thermistor.

Error Decision Conditions

The thermistor becomes disconnected or shorted while the unit is running.

Supposed Causes


- Defective thermistor
- Defective indoor unit PCB
- Disconnection of connector

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

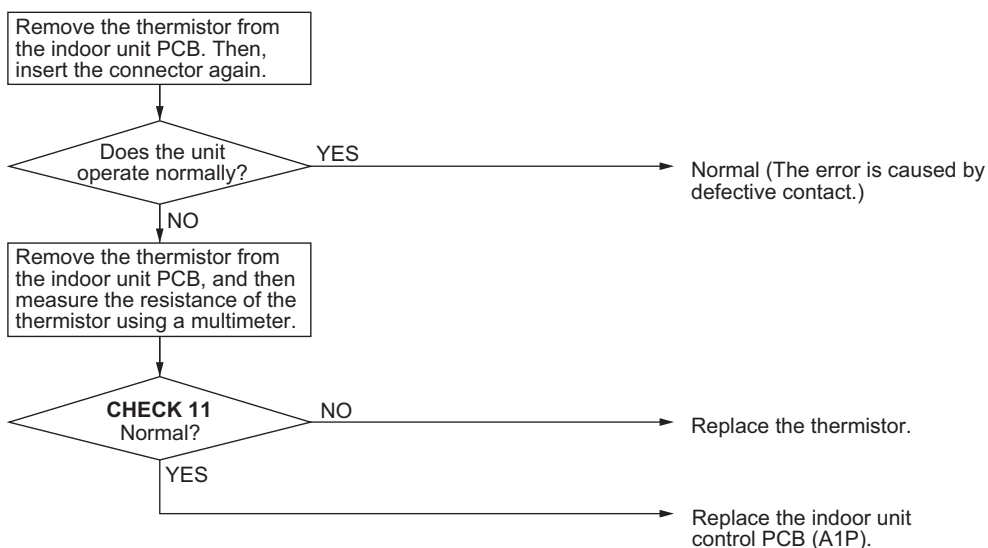

Note(s)

Error code and thermistor

Error Code	Thermistor	Electric Symbol
C4	Indoor heat exchanger liquid pipe thermistor	R2T
C5	Indoor heat exchanger gas pipe thermistor	R3T
C9	Suction air thermistor	R1T



Reference

CHECK 11 Refer to page 281.


5.17 Combination Abnormality (between Indoor Unit PCB and Fan PCB)

Applicable Models	FXMQ-PB
Error Code	C6
Method of Error Detection	Transmission conditions with the fan PCB (A2P) are checked using the indoor unit PCB (A1P).
Error Decision Conditions	Fan PCB (A2P) communication data is determined to be incorrect.
Supposed Causes	<ul style="list-style-type: none"> ■ Defective fan PCB (A2P) ■ Defective connection of capacity setting adaptor ■ Field setting error
Troubleshooting	



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

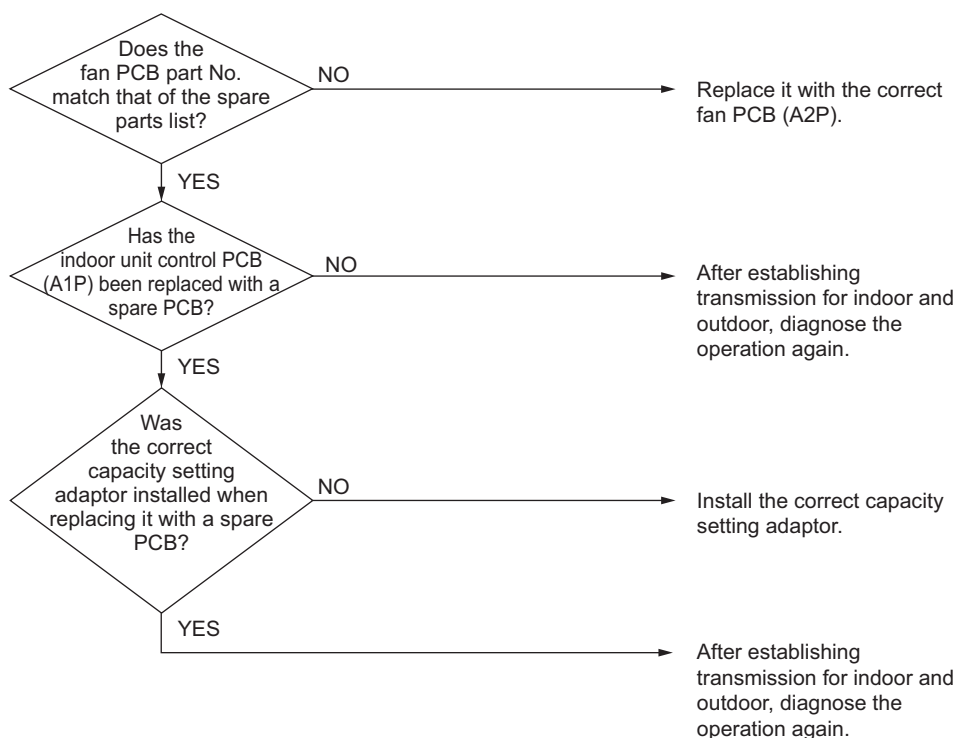


5.18 Capacity Setting Abnormality

Applicable Models	FXFSQ-AR
Error Code	C6-01
Method of Error Detection	This error is detected by checking communication between the PCB (A1P) and the fan microcomputer.
Error Decision Conditions	Based on the communication data, decide whether the combination of capacity setting and the type of fan driver is correct.
Supposed Causes	<ul style="list-style-type: none"> ■ Defective connection of the capacity setting adaptor ■ Wrong field setting
Troubleshooting	



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

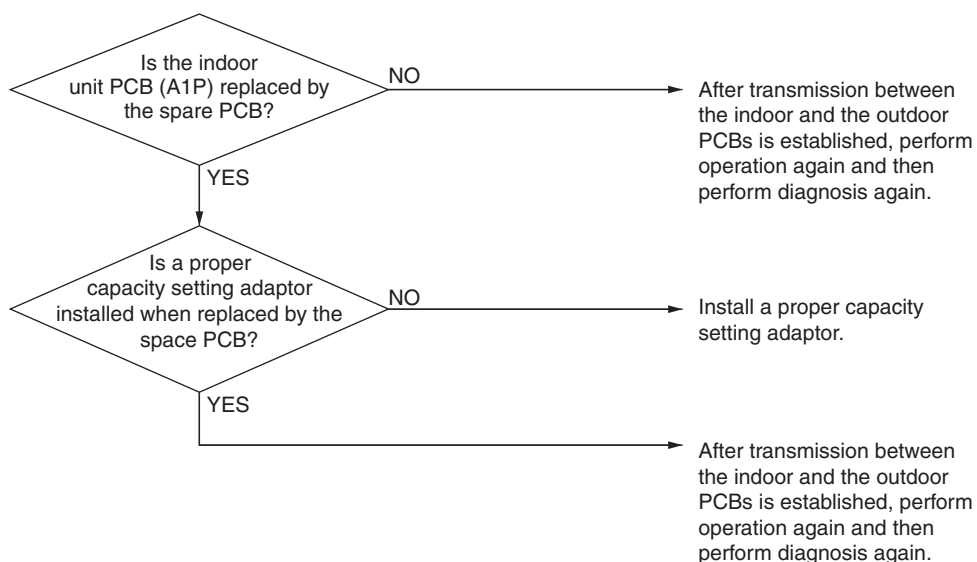

5.19 Indoor Unit PCB Abnormality

Applicable Models FXFSQ-AR

Error Code **C6-05**


Method of Error Detection This error is detected by checking the current sensor value.

Error Decision Conditions When an abnormal signal is detected at the start of operation of the fan motor.

Supposed Causes

- Disconnection of the connector of the fan motor lead wire
- Defective fan motor (Broken wires or defective insulation)
- Defective PCB (A1P)

Troubleshooting

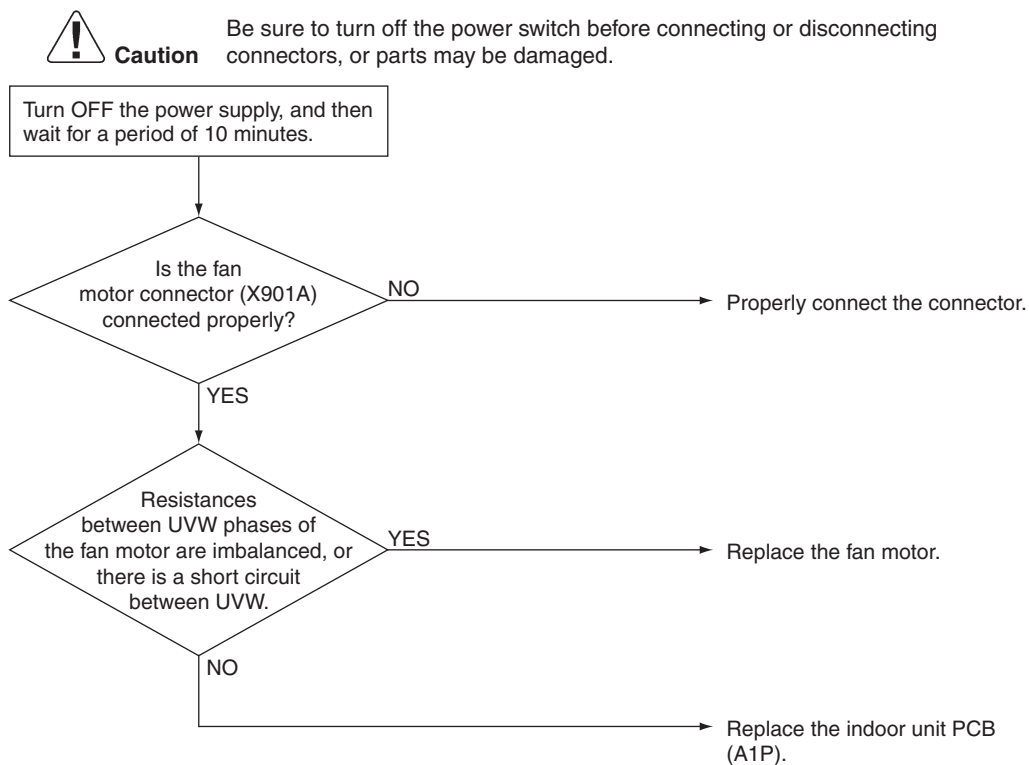


5.20 Infrared Presence/Floor Sensor Error

Applicable Models	FXFSQ-AR
Error Code	CE
Method of Error Detection	The contents of a failure vary with the detailed error code. Check the code and proceed with the flowchart.
Error Decision Conditions	Error is detected based on sensor output signals
Supposed Causes	<ul style="list-style-type: none"> ■ Defective or disconnected infrared presence sensor connector: CE-01 ■ Defective infrared floor sensor (Temperature compensation circuit disconnection): CE-02 ■ Defective infrared floor sensor (Temperature compensation short circuit): CE-03 ■ Defective infrared floor sensor element: CE-04
Troubleshooting	



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

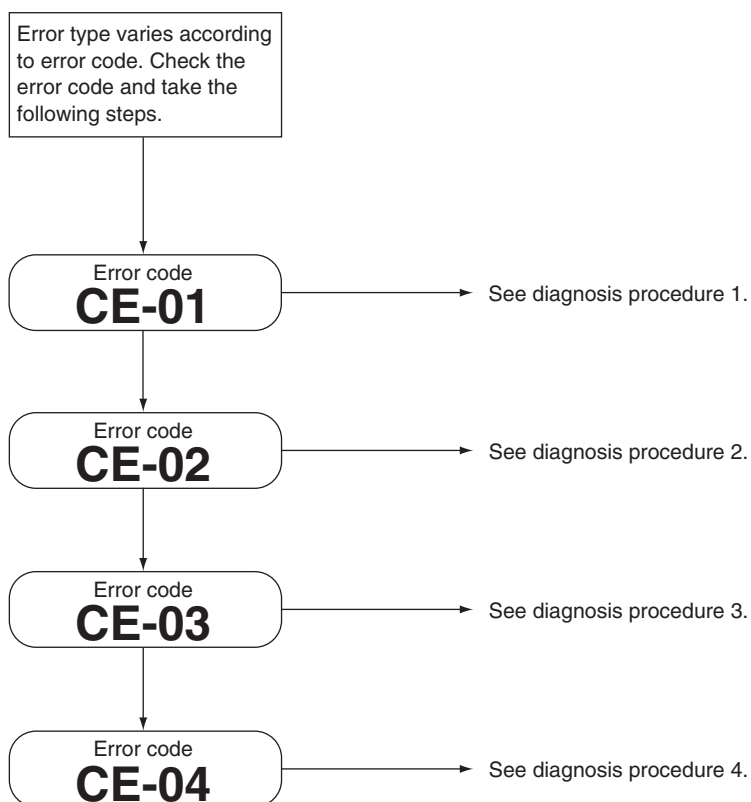


Troubleshooting

Diagnosis procedure 1

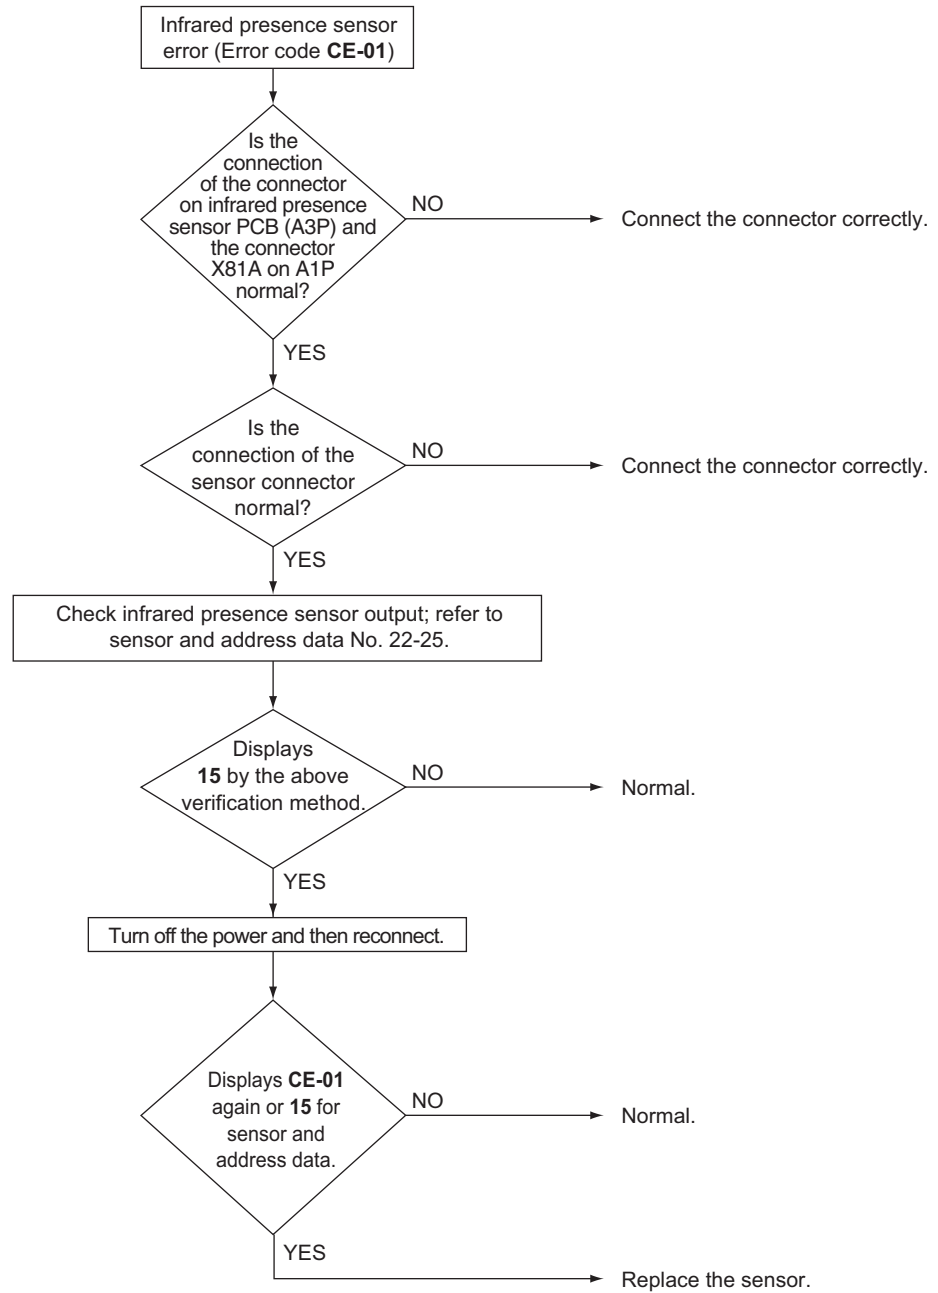


Troubleshooting

Diagnosis procedure 2

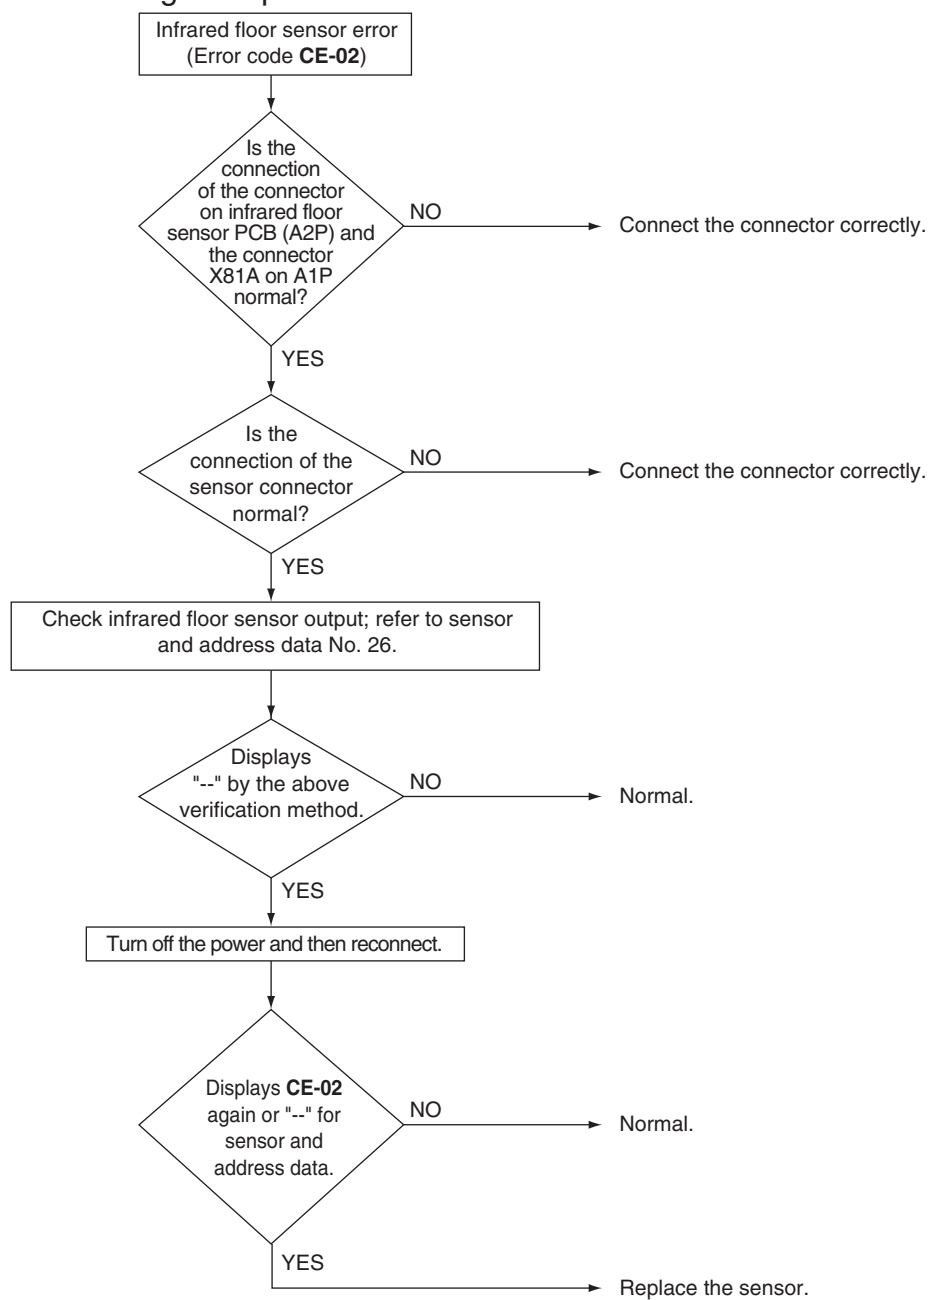


Troubleshooting

Diagnosis procedure 3

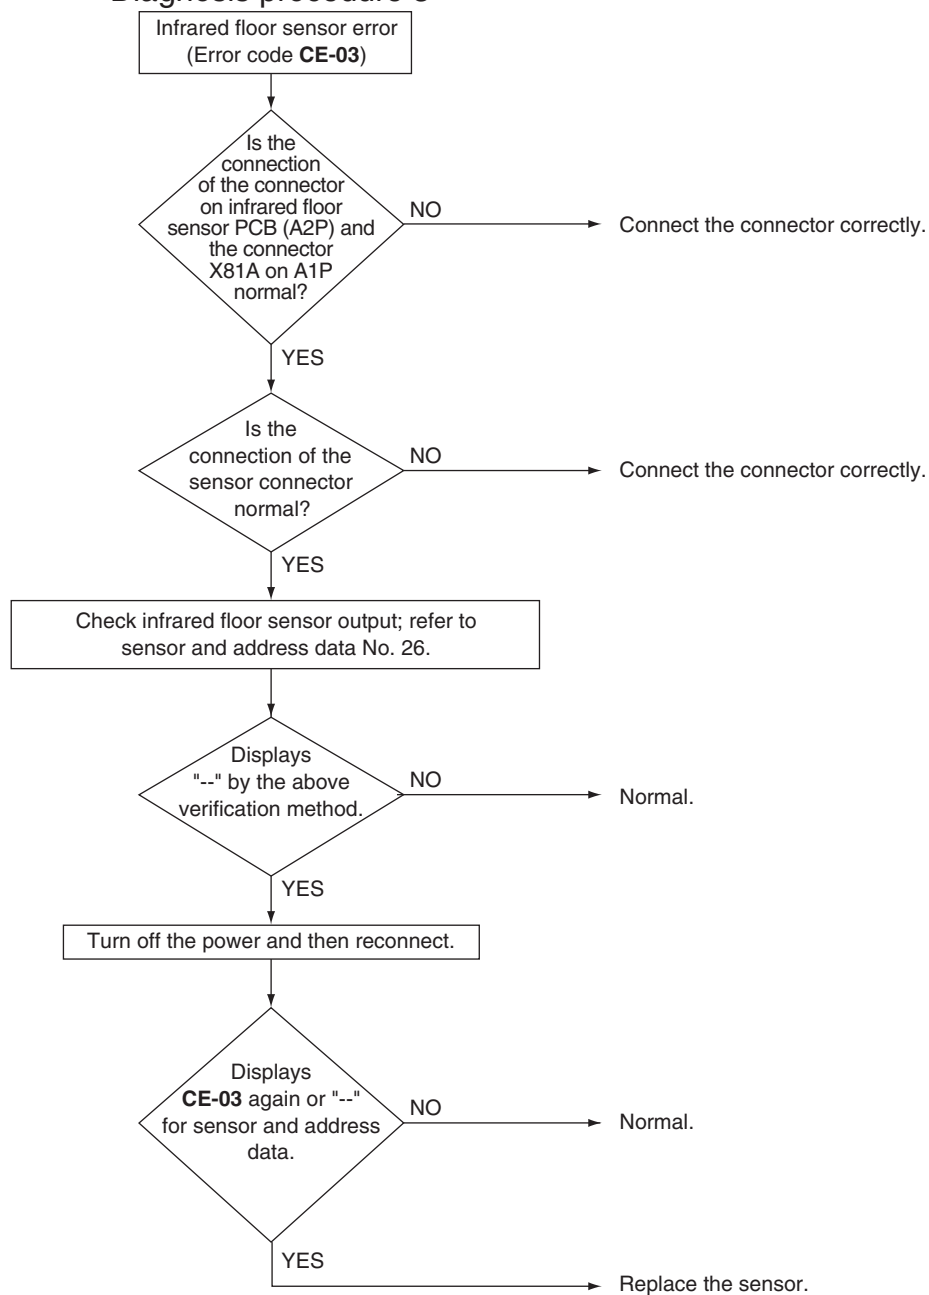

Troubleshooting

Diagnosis procedure 4

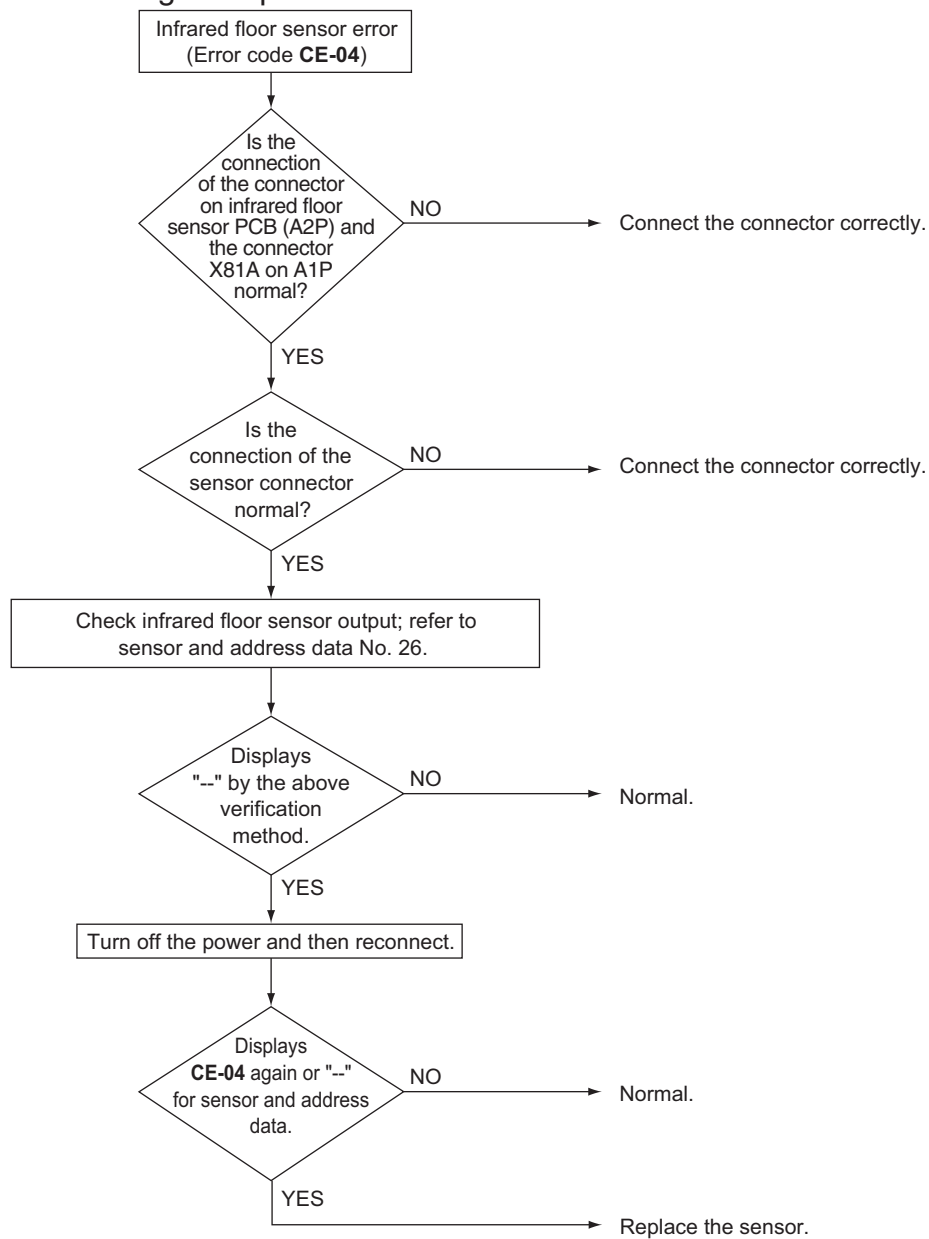

5.21 Remote Controller Thermistor Abnormality


Applicable Models	All indoor unit models
Error Code	CJ
Method of Error Detection	Error detection is carried out by the temperature detected by the remote controller thermistor.
Error Decision Conditions	When the remote controller thermistor becomes disconnected or shorted while the unit is running. * Error code is displayed but the system operates continuously.
Supposed Causes	<ul style="list-style-type: none"> ■ Defective remote controller thermistor ■ Defective remote controller PCB

Troubleshooting


Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

Clear the error code history.
(While in inspection mode, press and hold the **ON/OFF** button for a period of 4 seconds or more.)

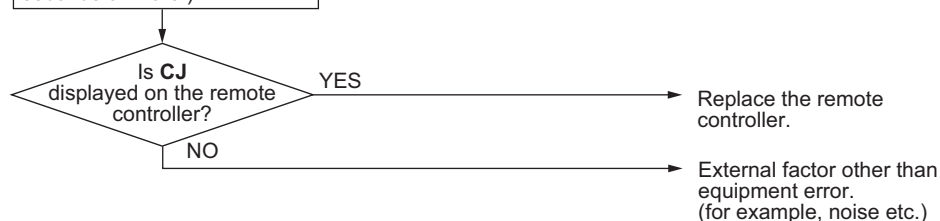

Note(s)

*1: How to delete "history of error codes".

Press the **ON/OFF** button for 4 seconds and more while the error code is displayed in the inspection mode.

5.22 Outdoor Unit Main PCB Abnormality

Applicable Models	All outdoor unit models
Error Code	E1
Method of Error Detection	Abnormality is detected under the communication conditions in the hardware section between the indoor unit and outdoor unit.
Error Decision Conditions	When the communication conditions in the hardware section between the indoor unit and the outdoor unit are not normal.
Supposed Causes	<ul style="list-style-type: none"> ■ Defective outdoor unit main PCB ■ Disconnection of the inside/outside relay wires
Troubleshooting	

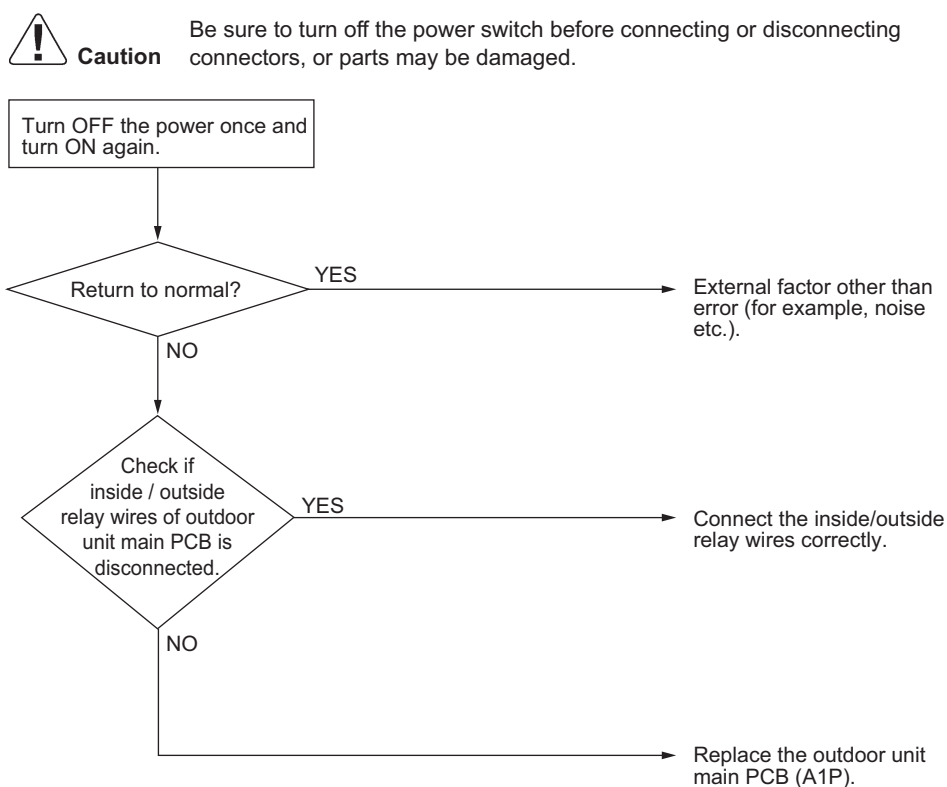

5.23 Current Leakage Detection

Applicable Models

RXYMQ4-6AYFK

Error Code

E2

Sub code: 01

Method of Error Detection

Current leakage is detected in the earth leakage detection circuit. Error is detected on the outdoor unit main PCB.


Error Decision Conditions

When leakage current is detected.

Supposed Causes

- Earth fault
- Defective wiring with the current sensor
- Temporary liquid back or refrigerant stagnation

Troubleshooting

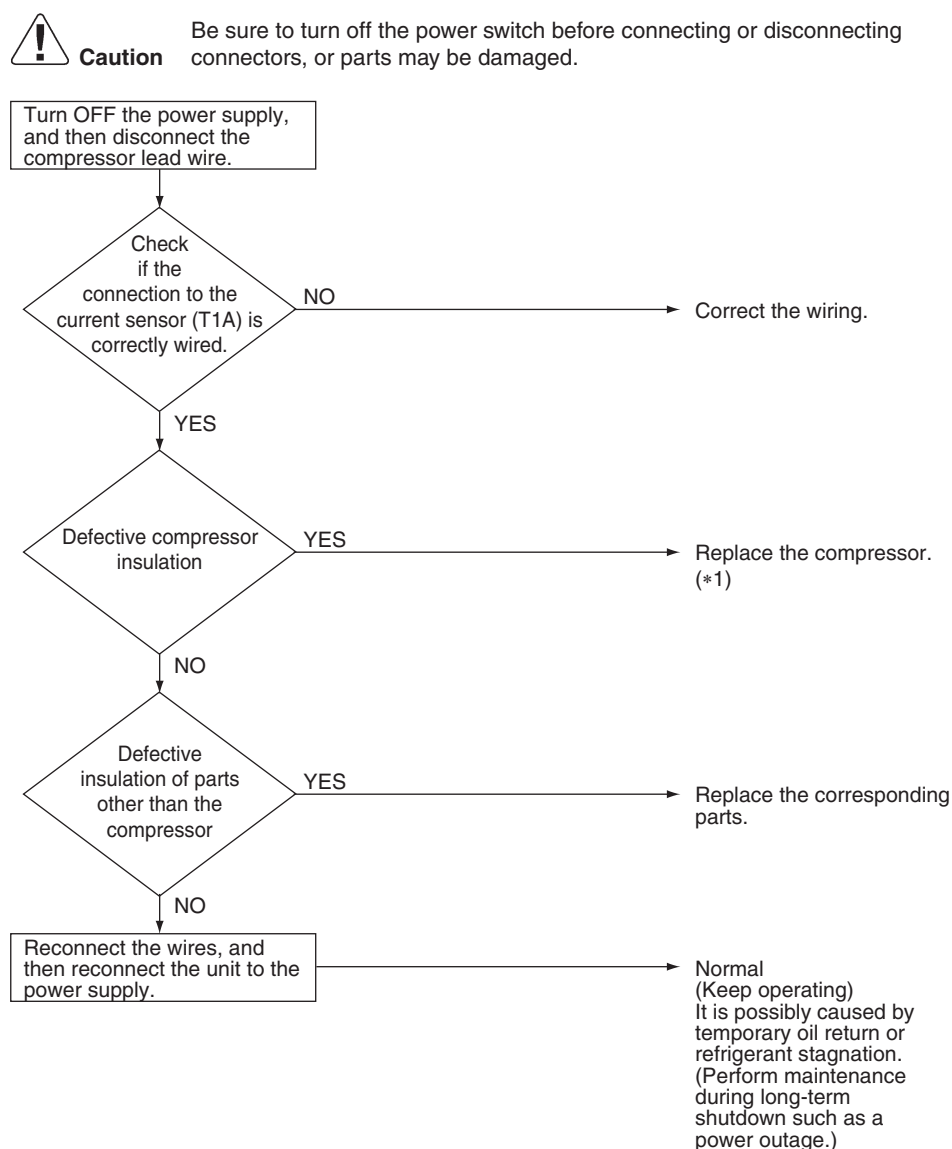

Note(s)

*1. M1C

5.24 Missing of Leakage Detection Core


Applicable Models	RXYMQ4-6AYFK
Error Code	E2 Sub code: 06
Method of Error Detection	Detect error according to whether or not there is continuity across the connector (X101A).
Error Decision Conditions	When no current flows at the time of turning ON the power supply.
Supposed Causes	<ul style="list-style-type: none"> ■ Disconnection of connector (X101A) ■ Wiring disconnection ■ Defective outdoor unit main PCB

Troubleshooting



Caution


Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

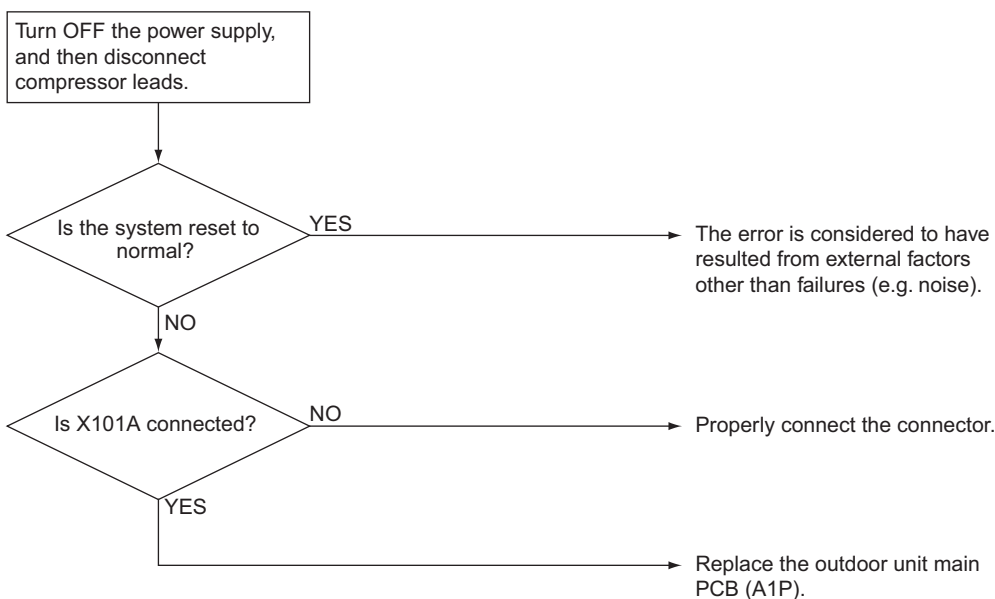


5.25 Activation of High Pressure Switch

Applicable Models	All outdoor unit models
Error Code	E3
Method of Error Detection	Detect continuity across the high pressure switch in the protection device circuit.
Error Decision Conditions	<p>When part of the protection device circuit opens.</p> <p>(Reference) Operating pressure of the high pressure switch:</p> <ul style="list-style-type: none"> ■ Operating pressure: 4.0 MPa ■ Resetting pressure: 3.0 MPa
Supposed Causes	<ul style="list-style-type: none"> ■ Activation of high pressure switch ■ Defective high pressure switch ■ Defective outdoor unit main PCB ■ Momentary power failure ■ Defective high pressure sensor

Troubleshooting

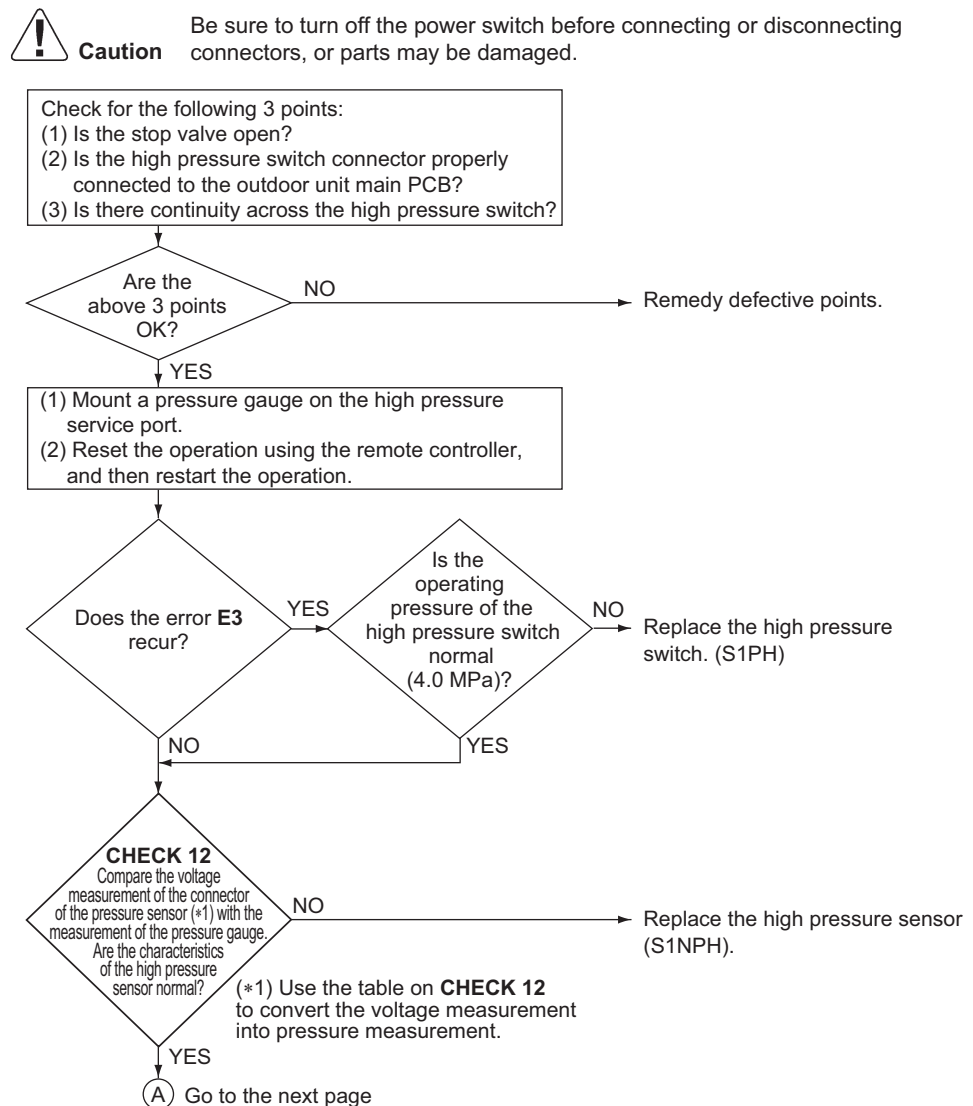

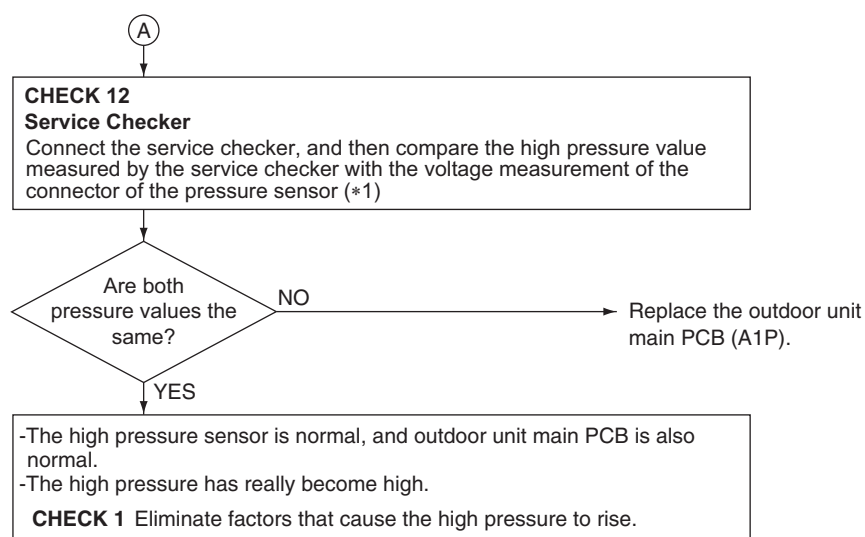

Reference

CHECK 1 Refer to page 271.



Reference


CHECK 12 Refer to page 284.

5.26 Activation of Low Pressure Sensor

Applicable Models	All outdoor unit models
Error Code	E4
Method of Error Detection	Make judgment of pressure detected by the low pressure sensor with the outdoor unit main PCB.
Error Decision Conditions	When low pressure caused a drop while the compressor is in operation: <ul style="list-style-type: none"> ■ Operating pressure: 0.07 MPa
Supposed Causes	<ul style="list-style-type: none"> ■ Abnormally drop in low pressure ■ Defective low pressure sensor ■ Defective outdoor unit main PCB ■ The stop valve is not opened
Troubleshooting	

**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

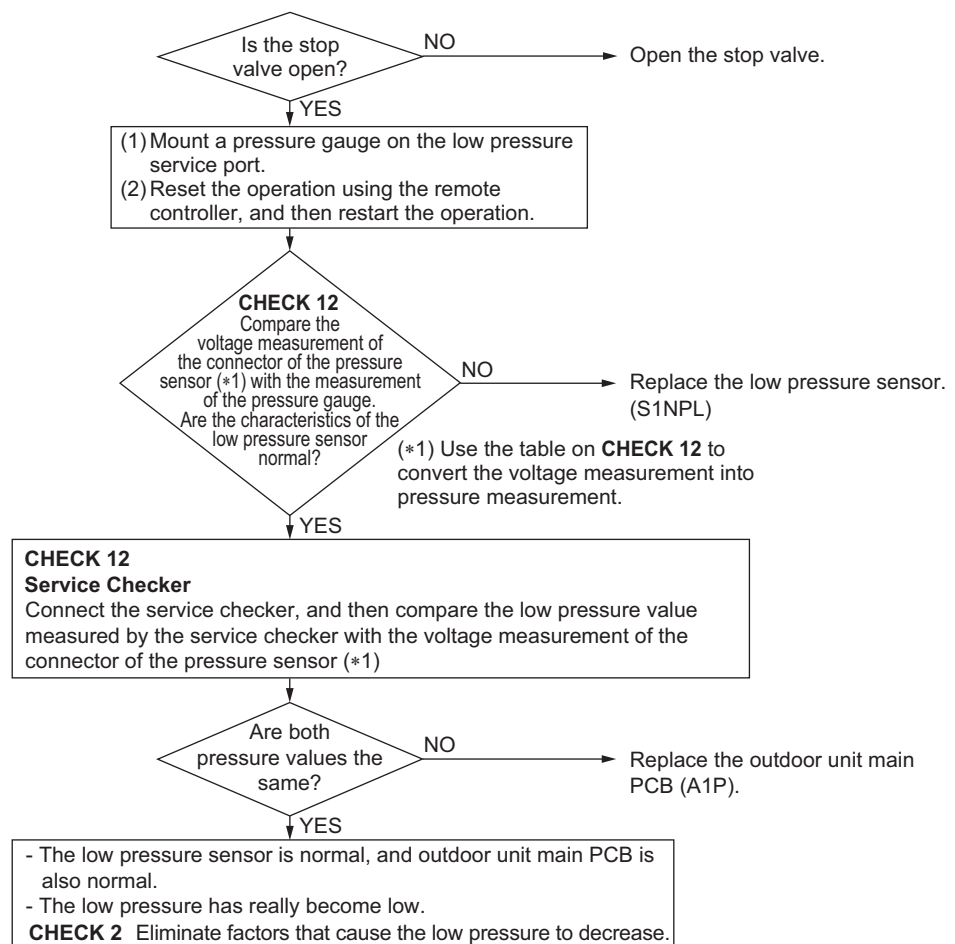**Reference****CHECK 2** Refer to page 272.**Reference****CHECK 12** Refer to page 284.

5.27 Compressor Motor Lock

Applicable Models

All outdoor unit models

Error Code

E5

Method of Error Detection

Outdoor unit main PCB takes the position signal from UVW line connected between the inverter and compressor, and the error is detected when any abnormality is observed in the phase-current waveform.

Error Decision Conditions

When the compressor motor does not operate even by starting it in forced startup mode.

Supposed Causes


- Compressor lock
- High differential pressure (0.5 MPa or more)
- UVW connection error
- Defective inverter circuit
- The stop valve is not opened.


Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

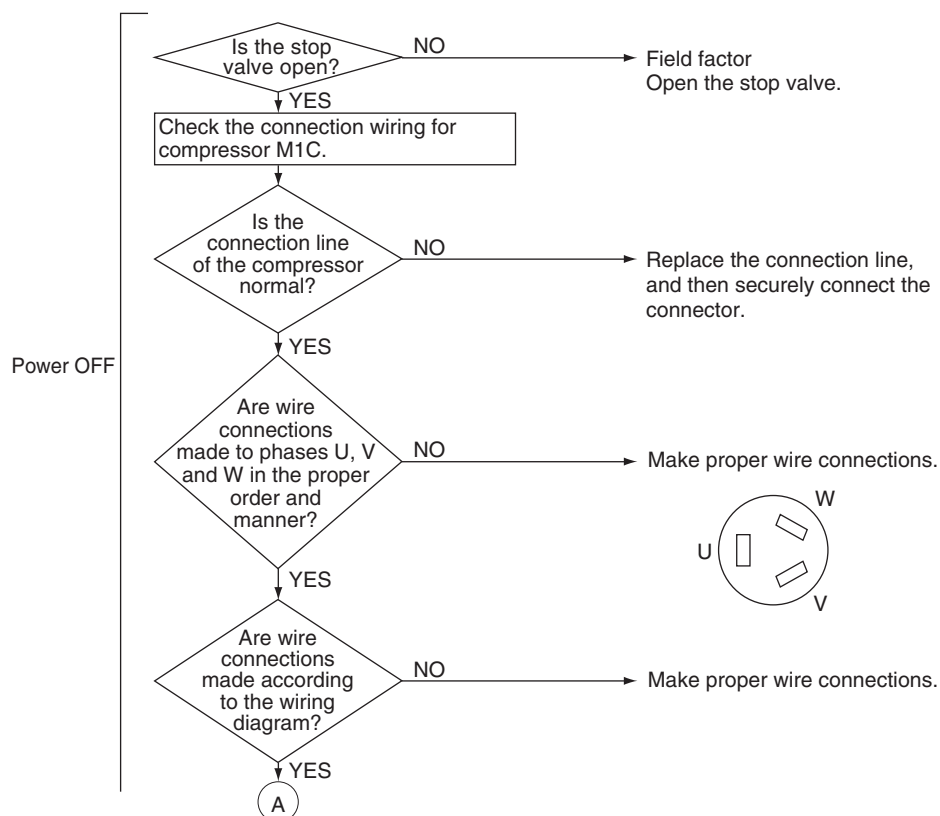

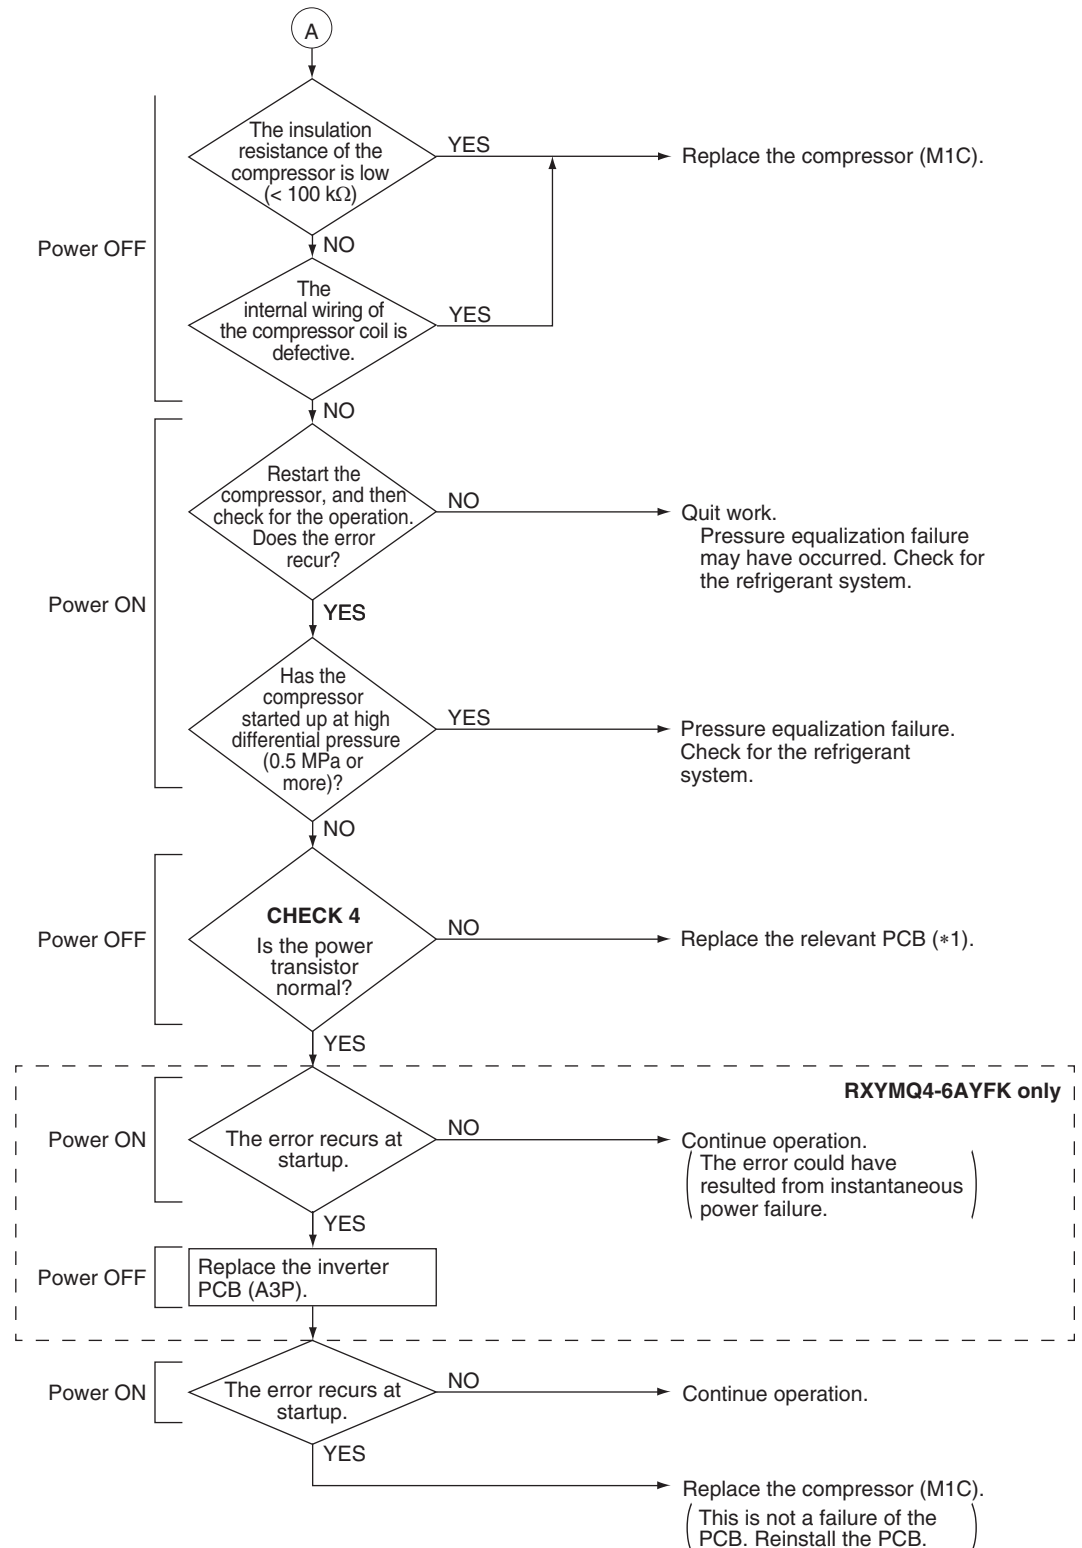**Note(s)**

*1. RXYMQ4AVMK: outdoor unit main PCB (A1P)
RXYMQ4-6AYFK: inverter PCB (A3P)

**Reference**

CHECK 4 Refer to page 275.


5.28 Outdoor Fan Motor Abnormality

Applicable Models	All outdoor unit models
Error Code	E7
Method of Error Detection	<ul style="list-style-type: none">■ Detect according to the value of current flowing through the PCB.■ Detect error of the fan motor system according to the fan revolutions detected by the Hall IC during the fan motor runs.
Error Decision Conditions	<ul style="list-style-type: none">■ When overcurrent is detected (Detecting overcurrent 4 times will shut down the system).■ When the fan revolutions fall below a given level for a period of 6 seconds while in fan motor rotation mode (Detecting shortage of revolutions will shut down the system).
Supposed Causes	<ul style="list-style-type: none">■ Fan motor failure■ Disconnection of harness/connector between the fan motor and the PCB■ Fan does not rotate due to foreign matter caught in it■ Clearing condition: fan motor performs normal operation for a period of 5 minutes


Troubleshooting


Caution


Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

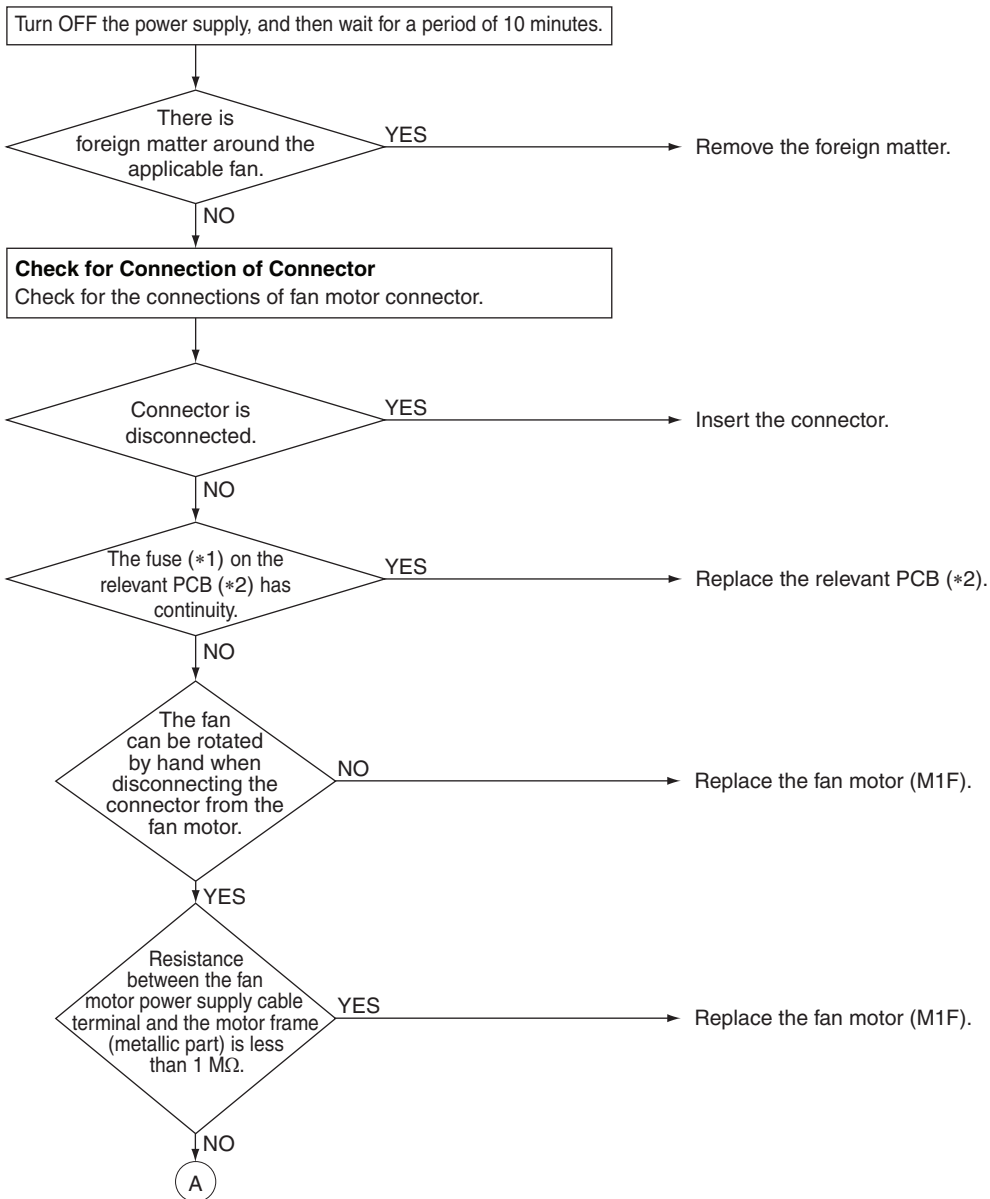

RXYMQ4AVMK

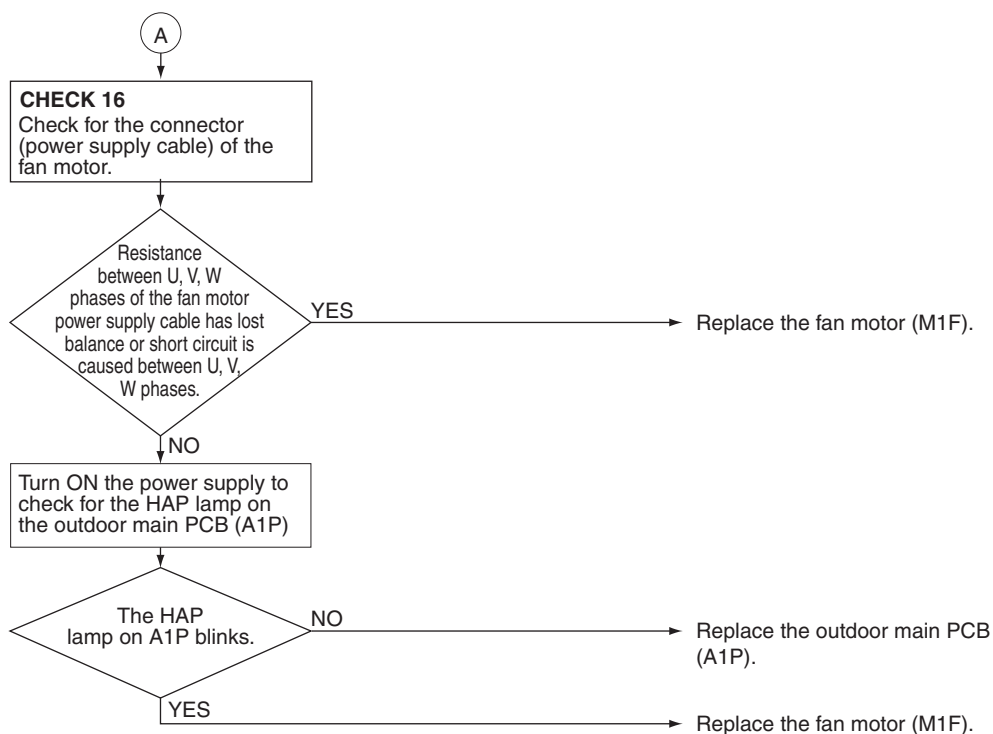

RXYMQ4-6AYFK

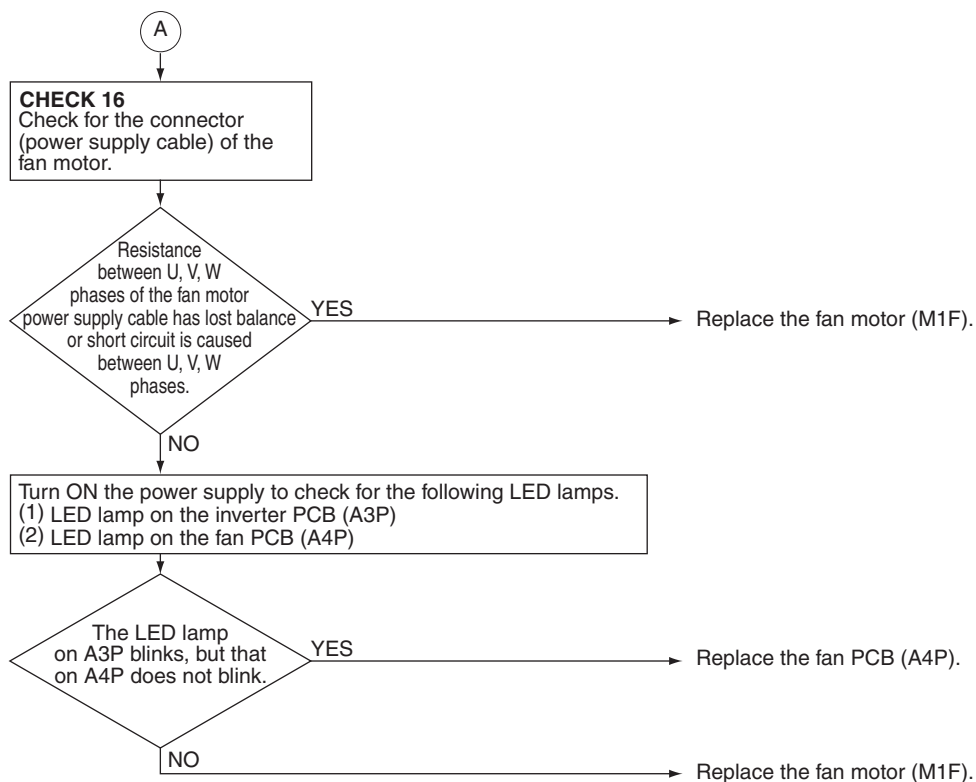

Note(s)

- *1. RXYMQ4AVMK: F6U
RXYMQ4-6AYFK: F101U
- *2. RXYMQ4AVMK: outdoor unit main PCB (A1P)
RXYMQ4-6AYFK: fan PCB (A4P)




Reference

CHECK 16 Refer to page 285.

5.29 Electronic Expansion Valve Coil Abnormality

Applicable Models	All outdoor unit models
Error Code	E9
Method of Error Detection	Detect according to whether or not there is continuity across the electronic expansion valve coils (Y1E, Y2E, Y3E, Y4E).
Error Decision Conditions	When no current flows through common (COM+) at the time of turning ON the power supply.
Supposed Causes	<ul style="list-style-type: none"> ■ Disconnection of connectors from electronic expansion valves (Y1E, Y2E, Y3E, Y4E) ■ Defective electronic expansion valve coil ■ Defective outdoor unit main PCB

Troubleshooting

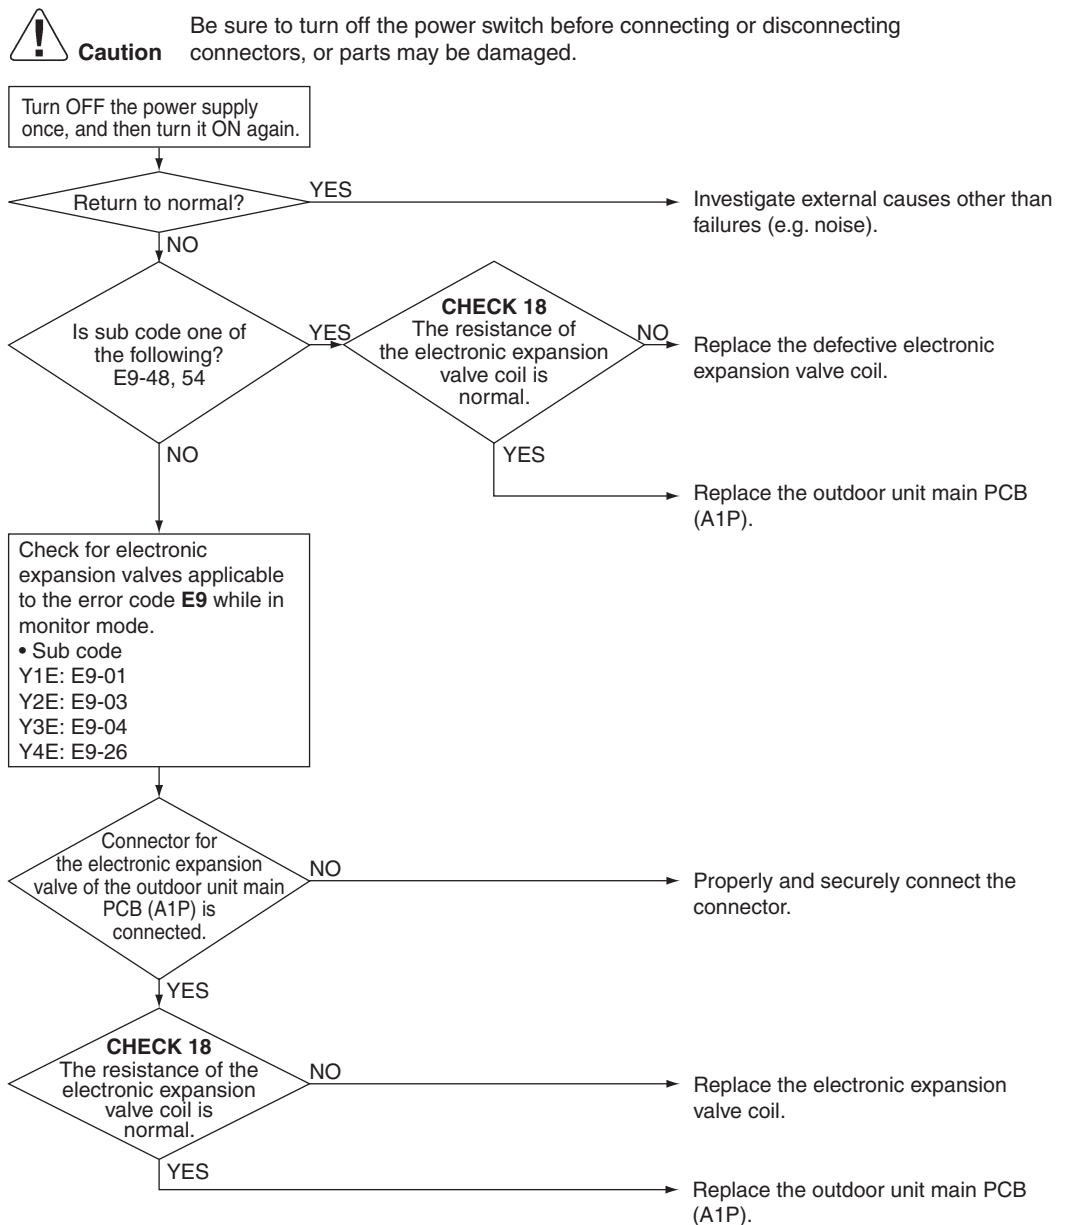

Reference

CHECK 18 Refer to page 288.


5.30 Discharge Pipe Temperature Abnormality

Applicable Models	All outdoor unit models
Error Code	F3
Method of Error Detection	Detect according to temperature detected with the discharge pipe or compressor body thermistor.
Error Decision Conditions	<ul style="list-style-type: none">■ When discharge pipe temperature becomes abnormally high (i.e., 135°C or more)■ When discharge pipe temperature sharply rises (remains at 120°C or more for a period of consecutive 10 minutes)
Supposed Causes	<ul style="list-style-type: none">■ Abnormal discharge pipe temperature■ Defective discharge pipe thermistor■ Defective outdoor unit main PCB■ Closed stop valve

Troubleshooting


Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

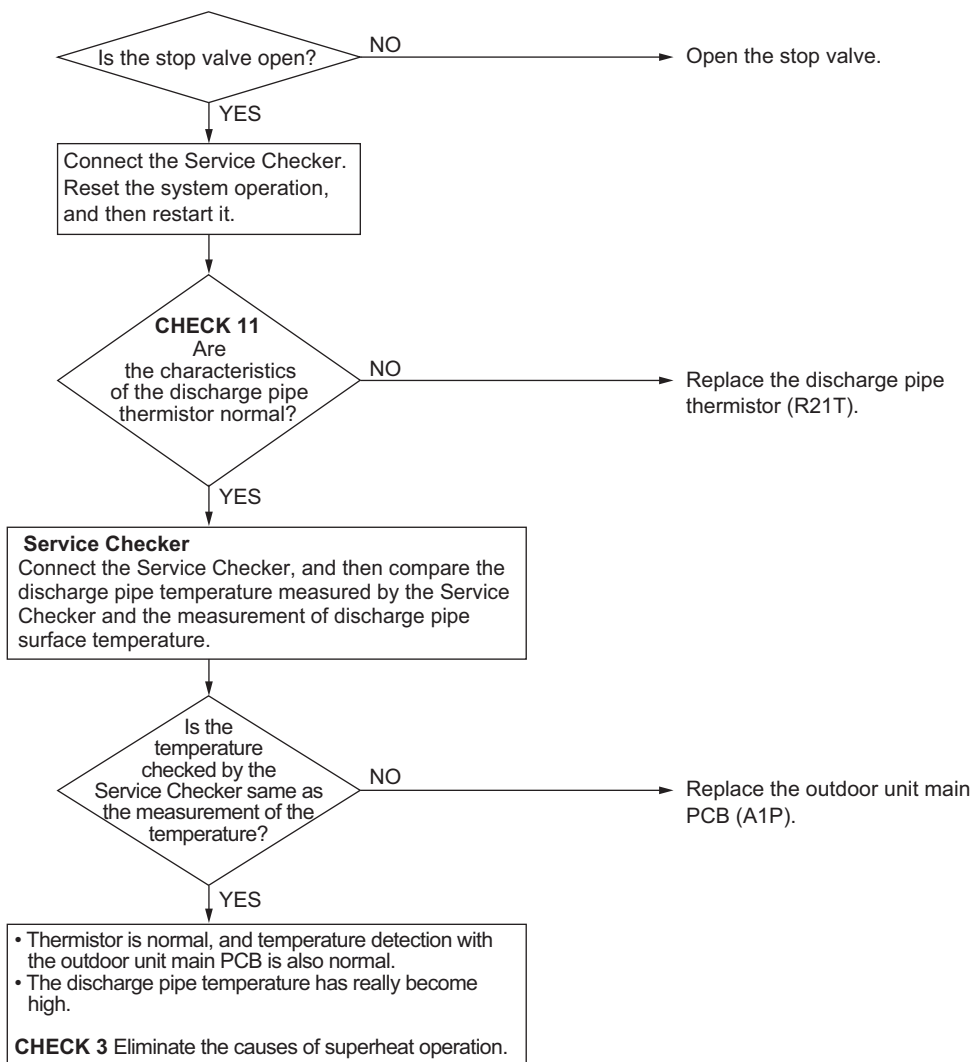
Reference

CHECK 3 Refer to page 273.


Reference

CHECK 11 Refer to page 281.

5.31 Wet Alarm

Applicable Models	All outdoor unit models
--------------------------	-------------------------

Error Code	F4
-------------------	-----------

Method of Error Detection	In cooling operation, detect the condition under which liquid refrigerant returns to the compressor, according to the temperature and pressure of each part.
----------------------------------	--

Error Decision Conditions	<p>When the following wet state continues for a period of 180 minutes, an alert is issued. An error is defined for 240 minutes.</p> <ul style="list-style-type: none">■ Wet state in outdoor units
----------------------------------	--

	<p>When the following wet state continues for a period of 180 minutes, an alert is issued.</p> <ul style="list-style-type: none">■ Wet state in some of indoor units
--	--

Supposed Causes	<ul style="list-style-type: none">■ Defective suction pipe thermistor■ Defective discharge pipe thermistor■ Defective high pressure sensor■ Defective indoor unit electronic expansion valve■ Dirty air filter
------------------------	--

Troubleshooting


Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

Connect the Service Checker.
Mount a pressure gauge on the
high pressure service port.
Reset the operation, and then
restart the operation.

Are the
characteristics of the
suction pipe thermistor
normal?

NO

Replace the suction pipe
thermistor.

YES

Are the
discharge pipe
thermistor characteristics
normal?

NO

Replace the discharge
pipe thermistor.

YES

Are the high
pressure sensor
characteristics
normal?

NO

Replace the high
pressure sensor
(S1NPH).

YES

Service Checker

Use the Service Checker to find indoor units
operating under the following conditions:
&

- Gas pipe temperature (R3T) - Liquid pipe temperature (R2T) < 2.5°C
- Electronic expansion valve opening < 300 pulse

Stop the relevant indoor units while
the system is in cooling operation,
and then check for the liquid pipe
temperature of these indoor units
after the system is stabilized.

The liquid pipe
temperature is low
(equivalent to the evaporating
temperature).

YES

Replace the indoor
electronic expansion
valve.

NO

Clean the air filters
of the indoor units.

5.32 Refrigerant Overcharged


Applicable Models	All outdoor unit models
Error Code	F6
Method of Error Detection	Detect overcharged refrigerant according to outdoor air temperature, heat exchanger liquid pipe temperature, and subcooling liquid pipe temperature during test operation.
Error Decision Conditions	When the amount of refrigerant, which is calculated using outdoor air temperature, heat exchanger liquid pipe temperature, and subcooling liquid pipe temperature during test operation, exceeds the regular charge amount by 30% or more (If refrigerant is charged slightly over the regular charge amount, F6 may be displayed on the remote controller.)
Supposed Causes	<ul style="list-style-type: none"> ■ Refrigerant overcharged ■ Disconnection of outdoor air thermistor ■ Disconnection of heat exchanger liquid pipe thermistor ■ Disconnection of subcooling liquid pipe thermistor

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

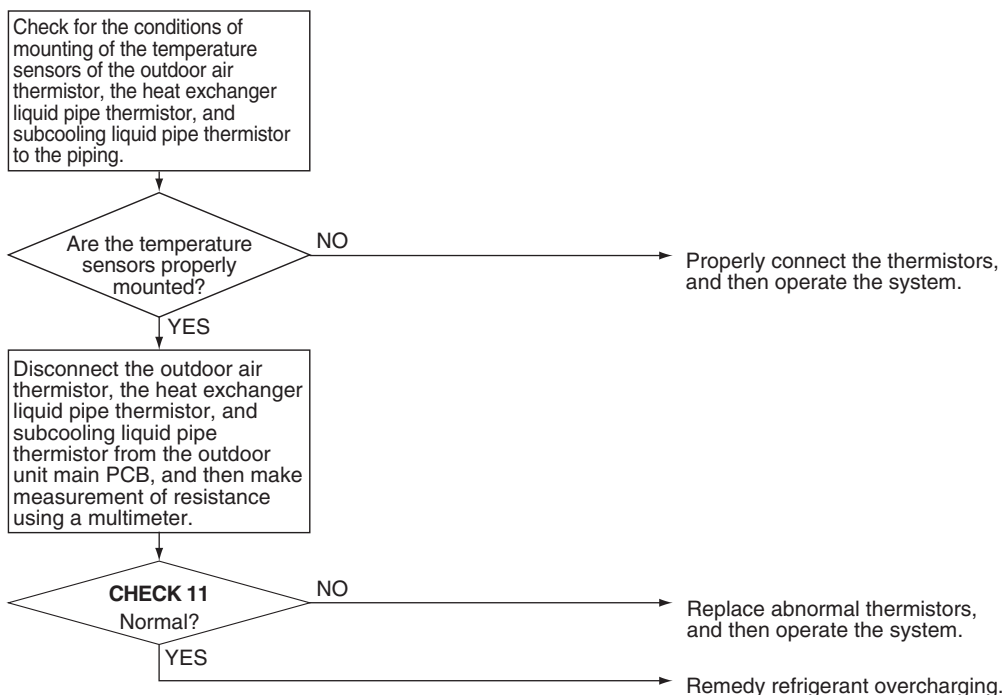

Reference

CHECK 11 Refer to page 281.

5.33 Harness Abnormality (between Outdoor Unit Main PCB and Inverter PCB)

Applicable Models RXYMQ4-6AYFK

Error Code **H3**


Method of Error Detection Check for the transmission conditions of the harnesses between the PCBs (X28A (A1P) and X6A (A3P)), and relay connector, if any, using microcomputer.

Error Decision Conditions When normal transmission between PCBs is disabled during the compressor stops running.

Supposed Causes

- Defective connection of harnesses between PCBs
- Defective outdoor unit main PCB
- Defective inverter PCB

Troubleshooting

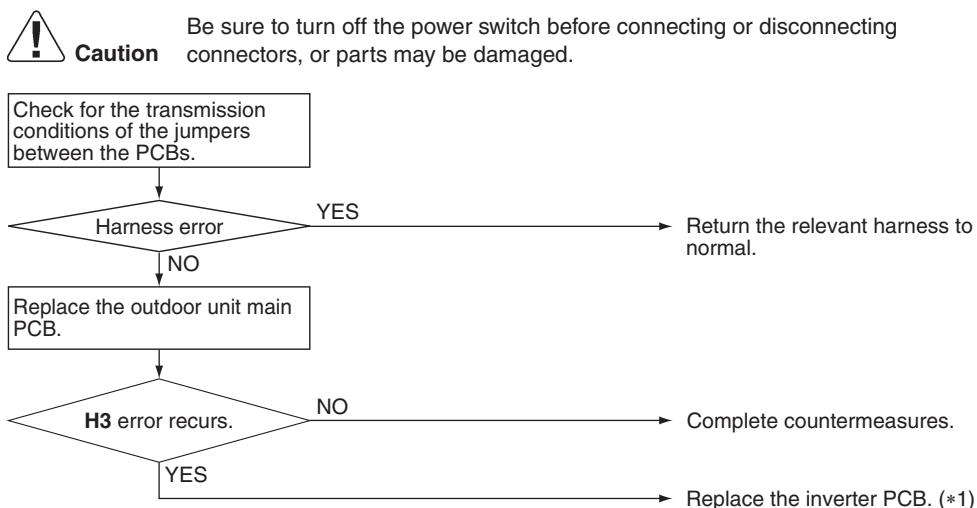

Note(s)

*1. A3P

5.34 OL Activation (Compressor Overload)

Applicable Models	All outdoor unit models
--------------------------	-------------------------

Error Code	H5
-------------------	-----------

Method of Error Detection	A compressor overload is detected through compressor OL.
----------------------------------	--

Error Decision Conditions	<ul style="list-style-type: none">■ If the error occurs, the system is shut down.■ Reset condition: Continuous run for about 60 minutes without any other error
----------------------------------	--


Supposed Causes	<ul style="list-style-type: none">■ Disconnection of discharge pipe thermistor■ Defective discharge pipe thermistor■ Disconnection of connector X3A (RXYMQ4AVMK)■ Disconnection of connector X5A (RXYMQ4-6AYFK)■ Disconnection of 2 terminals of OL (Q1M)■ Defective OL (Q1M)■ Broken OL harness■ Defective outdoor unit PCB
------------------------	---

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

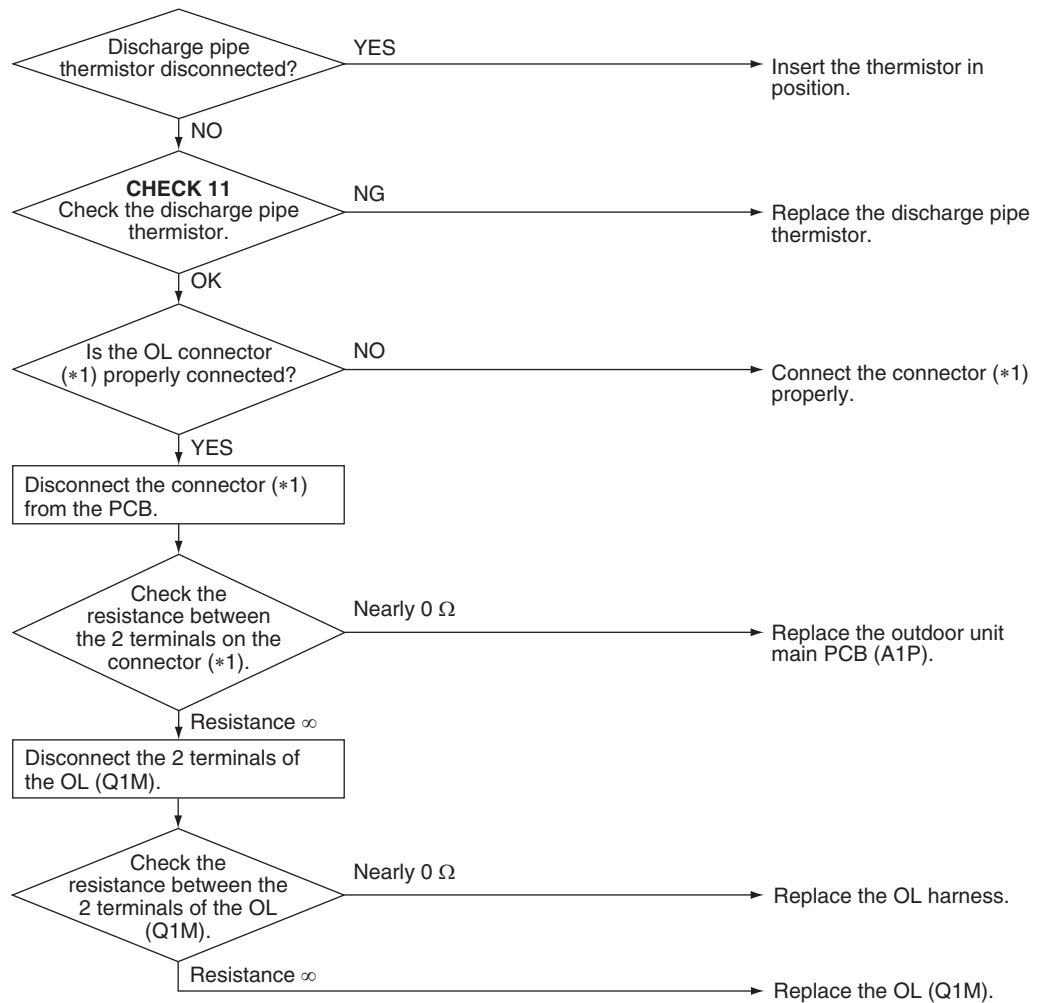

Note(s)

OL (Q1M) activating temperature: 125°C

OL (Q1M) recovery temperature: 110°C

*1. RXYMQ4AVMK: X3A

RXYMQ4-6AYFK: X5A



Reference

CHECK 11 Refer to page 281.

5.35 Outdoor Fan PCB Abnormality

Applicable Models RXYMQ4-6AYFK

Error Code **H7-21**

Method of Error Detection Detect according to values detected with current sensor.

Error Decision Conditions When the current sensor is abnormal.

Supposed Causes


- Disconnection/Short circuit in fan motor leads or disconnection of connector
- Defective fan PCB

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

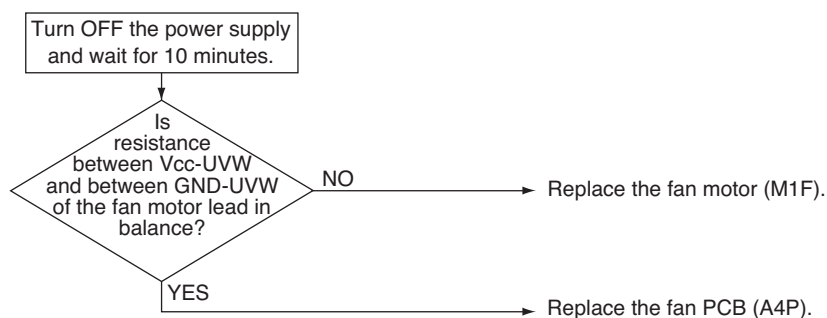


5.36 Thermistor Abnormality

Applicable Models	All outdoor unit models
Error Code	H9, J3, J5, J6, J7, J8, J9
Method of Error Detection	Detect according to temperature detected with individual thermistors.
Error Decision Conditions	When the system is in operation and the thermistor causes wiring disconnection or short circuit in it.
Supposed Causes	<ul style="list-style-type: none"> ■ Defective connection of thermistor ■ Defective thermistor ■ Defective outdoor unit main PCB

Troubleshooting


Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

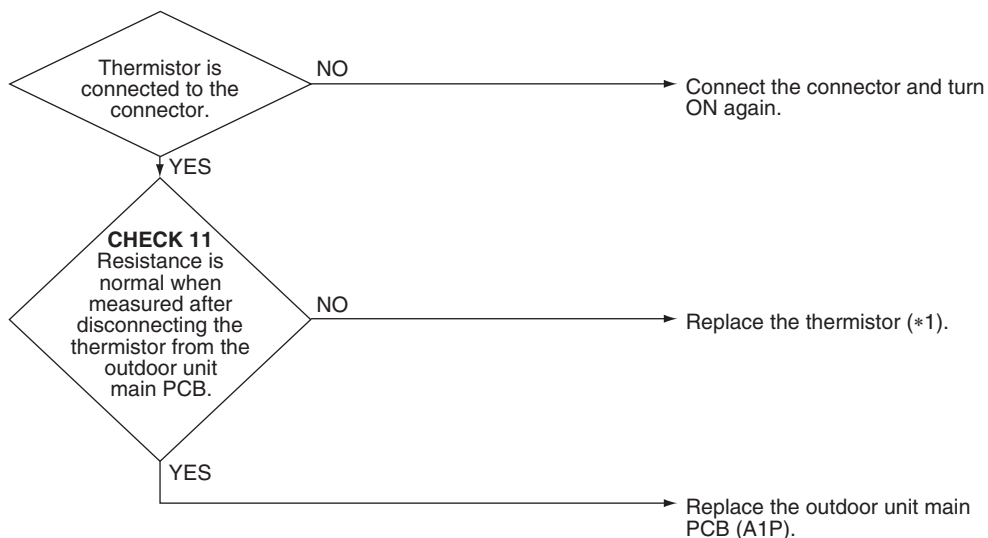

**Note(s)**

*1. Error codes and thermistors

Error Code	Applicable Thermistor	RXYMQ-A	
		Electric symbol	Connector
H9	Outdoor air thermistor	R1T	X18A
J3	Discharge pipe thermistor	R21T	X19A
J5	Suction pipe thermistor	R3T	X30A (Group connector)
J6	Heat exchanger deicer thermistor	R7T	
J7	Subcooling heat exchanger liquid pipe thermistor	R5T	
J8	Heat exchanger liquid pipe thermistor	R4T	
J9	Subcooling heat exchanger gas pipe thermistor	R6T	

**Reference****CHECK 11** Refer to page 281.

5.37 High Pressure Sensor Abnormality

Applicable Models

All outdoor unit models

Error Code

JA

Method of Error Detection

Detect according to temperature detected with the high pressure sensor.

Error Decision Conditions

The high pressure sensor is short circuit or open circuit.
(Pressure range: 0-4.3 MPa)

Supposed Causes

- Defective high pressure sensor
- Connection of low pressure sensor in mistake for high pressure sensor
- Defective outdoor unit main PCB
- Defective connection of high pressure sensor


Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

(1) Mount a pressure gauge on the high pressure service port.
(2) Connect the Service Checker for VRV systems.

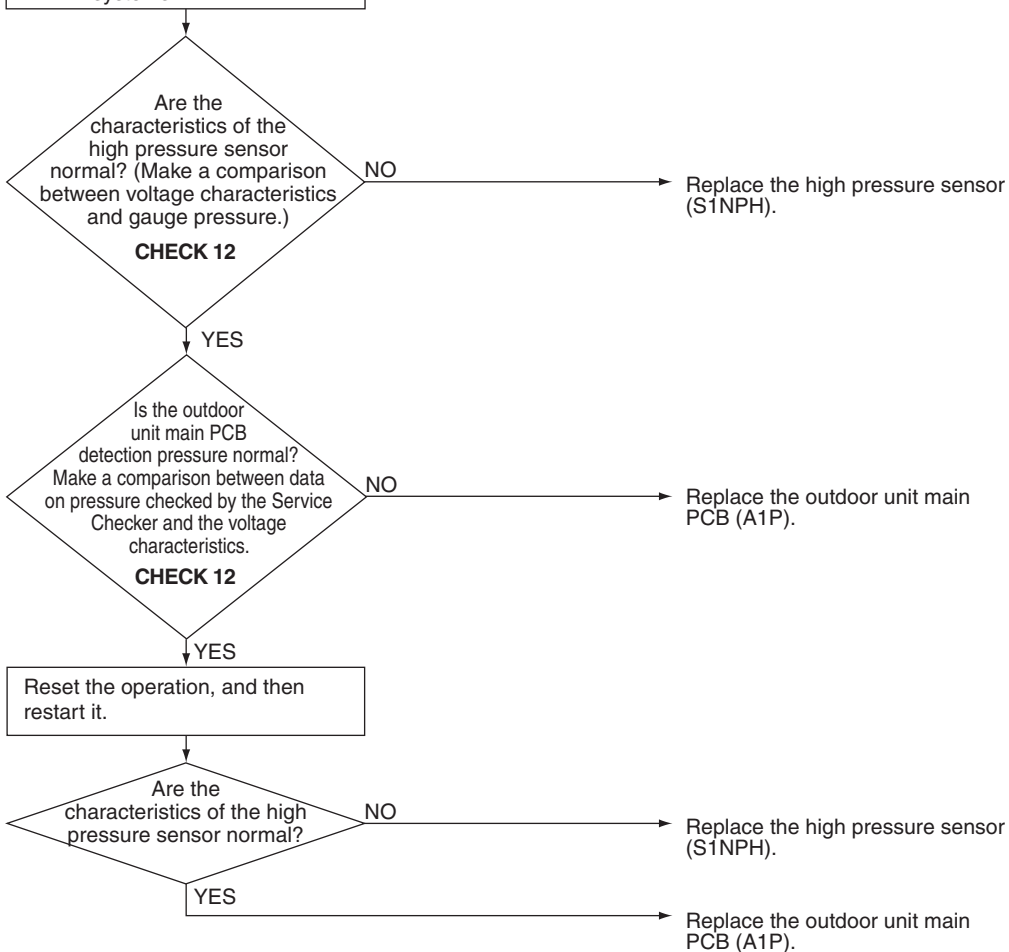


Reference

CHECK 12 Refer to page 284.

5.38 Low Pressure Sensor Abnormality

Applicable Models	All outdoor unit models
Error Code	JC
Method of Error Detection	Detect according to temperature detected with the low pressure sensor.
Error Decision Conditions	The low pressure sensor is short circuit or open circuit. (Pressure range: 0-1.7 MPa)
Supposed Causes	<ul style="list-style-type: none"> ■ Defective low pressure sensor ■ Connection of high pressure sensor in mistake for low pressure sensor ■ Defective outdoor unit main PCB ■ Defective connection of low pressure sensor

Troubleshooting

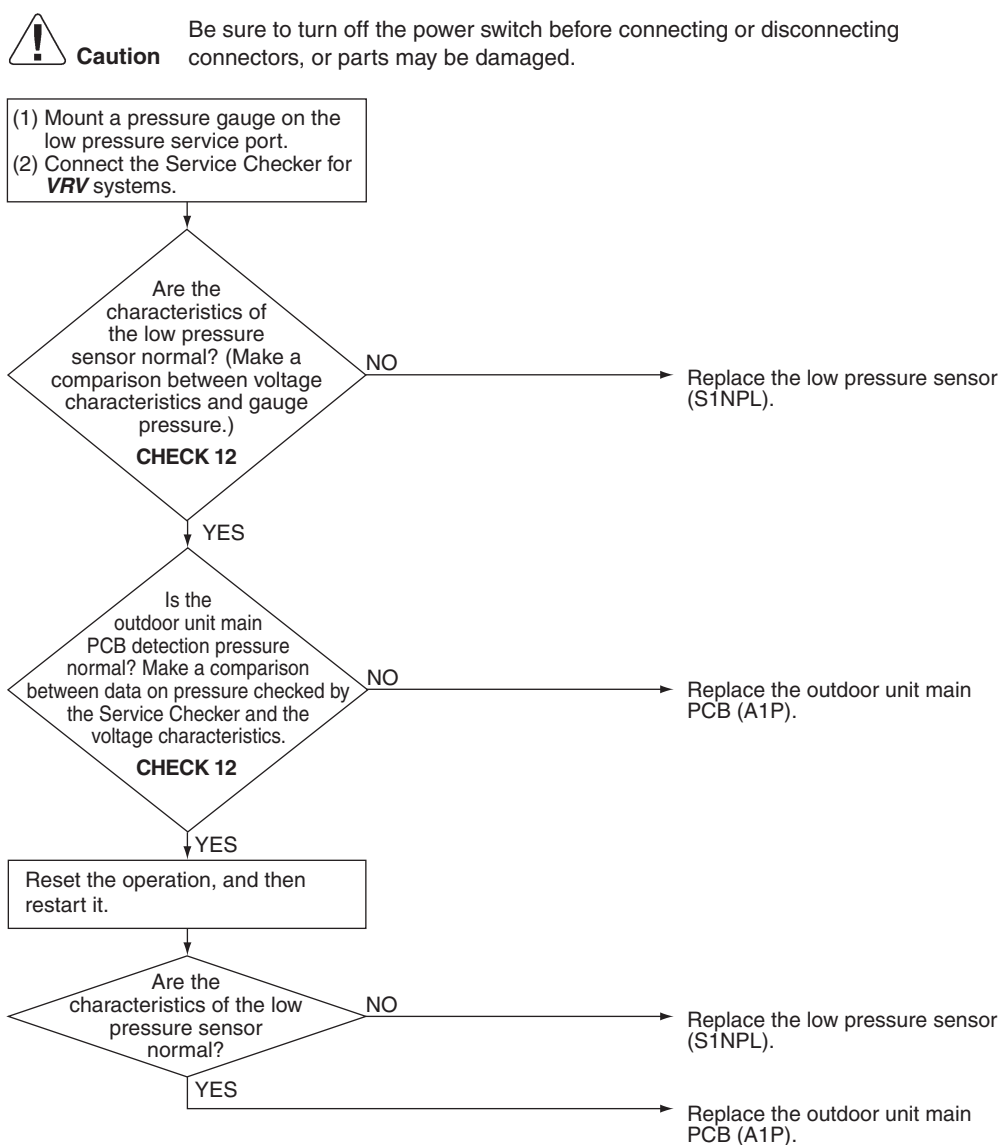

Reference

CHECK 12 Refer to page 284.

5.39 Inverter Circuit Abnormality

Applicable Models	All outdoor unit models
Error Code	L1
Method of Error Detection	Error is detected based on the current value during waveform output before starting compressor. Error is detected based on the value from current sensor during synchronous operation when starting the unit.
Error Decision Conditions	<ul style="list-style-type: none">■ Overcurrent flows during waveform output.■ Error of current sensor during synchronous operation.■ IPM failure.
Supposed Causes	<ul style="list-style-type: none">■ IPM failure■ Current sensor failure■ Drive circuit failure

Troubleshooting

RXYMQ4AVMK



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

Turn off the power. Then,
turn on the power again.

Does the power
supply normally come
back on?

YES

It is supposed that the error results
from external causes other than
failures (e.g. exogenous noises or
thunder).

NO

Replace the outdoor unit main
PCB (A1P).

RXYMQ4-6AYFK



Caution

Be sure to turn off the power switch before connecting or disconnecting
connectors, or parts may be damaged.

Turn off the power. Then,
turn on the power again.

Return to normal?

YES

The error could have resulted from
external factors other than failures
(e.g. external noise or thunder).

NO

CHECK 4

Is the power
transistor normal?

NO

Is the
insulation to
ground resistance of the
compressor 100 kΩ or
more?

NO

Replace both the compressor (M1C)
and the inverter PCB (A3P).

YES

Replace the inverter PCB (A3P).

YES

CHECK 4

Is the power
transistor of the fan
driver normal?

NO

Replace both the inverter PCB (A3P)
and the fan PCB (A4P).

YES

Replace the inverter PCB (A3P).



Reference

CHECK 4 Refer to page 275.

5.40 Momentary Power Failure during Test Operation

Applicable Models RXYMQ4-6AYFK

Error Code **L2**

Method of Error Detection Momentary power failure is detected by the PCB.

Error Decision Conditions Judgment is made by AC power frequency detection circuit on the outdoor unit main PCB

Supposed Causes


- Defective wiring
- Defective outdoor unit main PCB

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

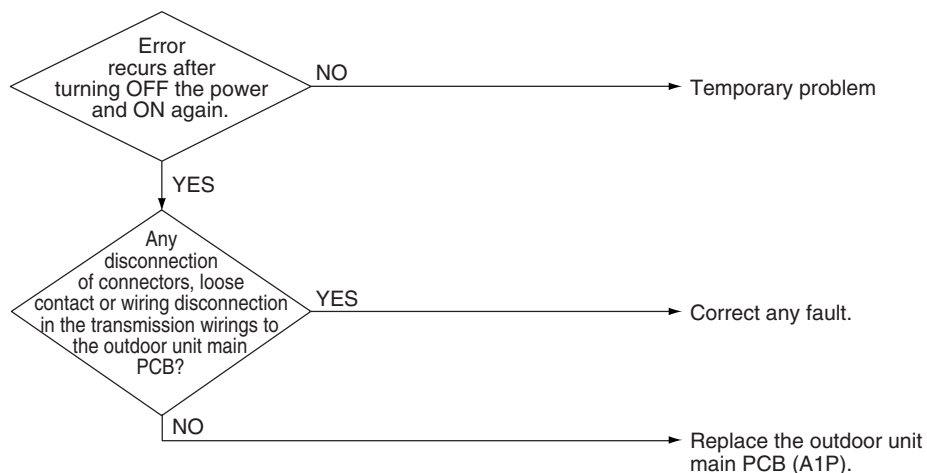

5.41 Inverter Radiation Fin Temperature Rise Abnormality

Applicable Models	All outdoor unit models
Error Code	L4
Method of Error Detection	Detect temperature of power module of the inverter circuit.
Error Decision Conditions	Thermistor located inside the power module of the inverter circuit for compressor and fan motor. Cooling tube plate poor heat-exchange.
Supposed Causes	<ul style="list-style-type: none"> ■ Radiation fin temperature rise of fan circuit ■ Cooling tube plate not fixed with screws ■ U0 error ■ Defective inverter circuit ■ High outdoor air temperature ■ Closed stop valve


Troubleshooting

■ Subcode L4-01



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

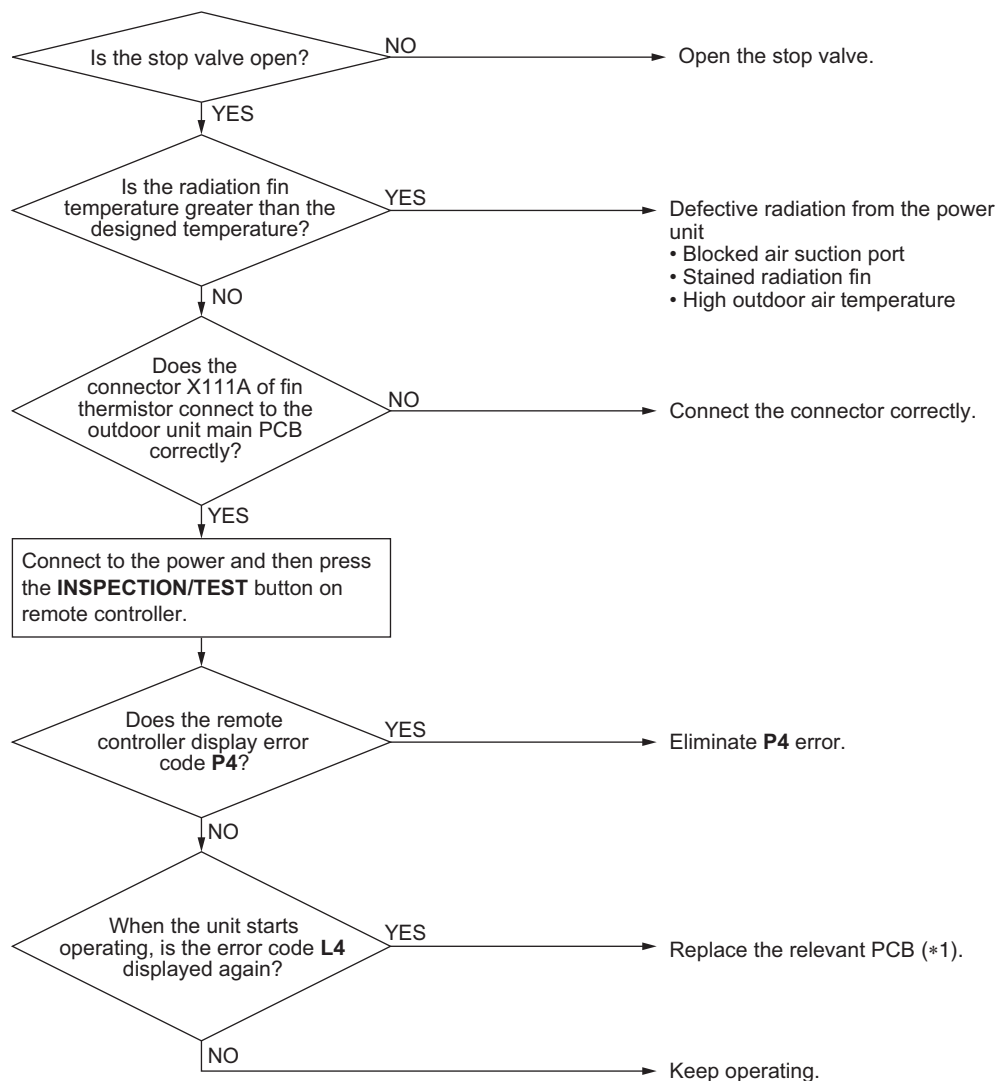


■ Subcode L4-06



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

Check the cooling conditions of the inverter heat sink.
 (1) Is the heat sink properly fixed with screws?
 (2) Error code **U0** is displayed on the Error History screen.

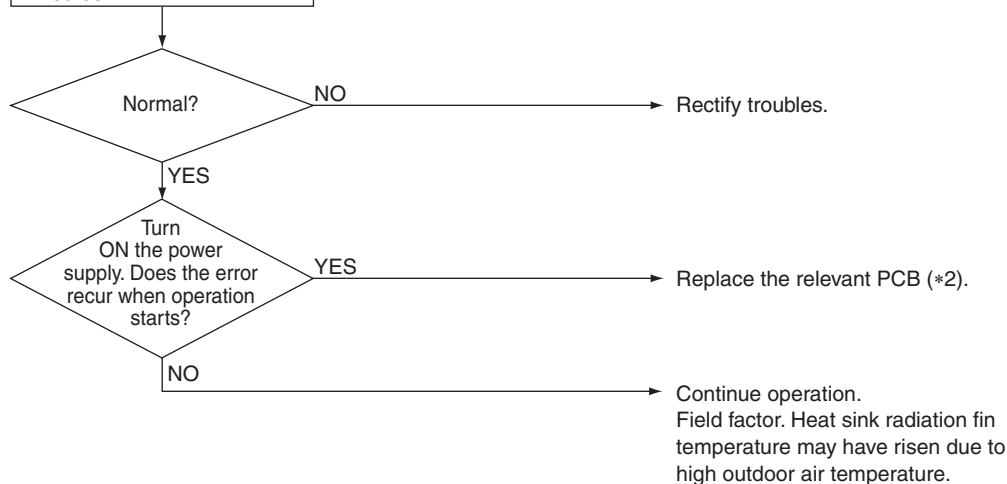

Note(s)

- *1. RXYMQ4AVMK: outdoor unit main PCB (A1P)
 RXYMQ4-6AYFK: inverter PCB (A3P)
- *2. RXYMQ4AVMK: outdoor unit main PCB (A1P)
 RXYMQ4-6AYFK: fan PCB (A4P)

5.42 Compressor Instantaneous Overcurrent

Applicable Models

All outdoor unit models

Error Code

L5

Method of Error Detection

Detect current flowing through the power transistor.

Error Decision Conditions

The current instantaneously exceeds **A** (A) in the power transistor.


Trigger point


Compressor model	A (A)
2Y350APAX2N	48.1
2Y420AVAY1N	48.55

Supposed Causes

- Defective compressor coil (such as wiring disconnection or insulation failure)
- Compressor startup failure (mechanical lock)
- Defective outdoor unit main PCB (RXYMQ4AVMK)
- Defective inverter PCB (RXYMQ4-6AYFK)

Troubleshooting

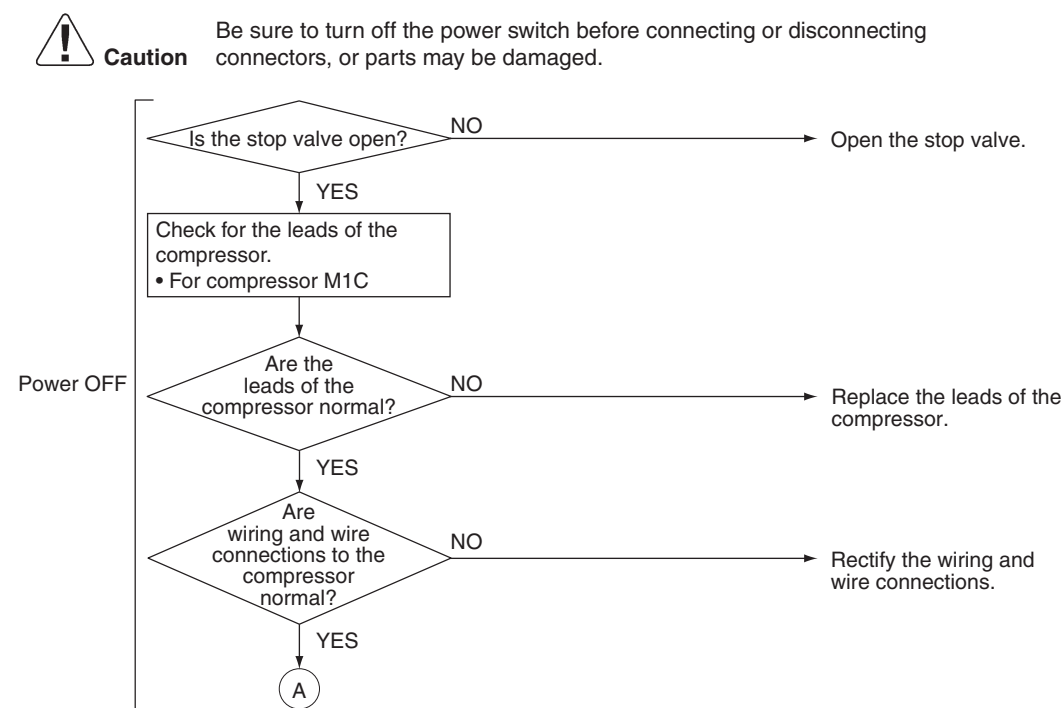


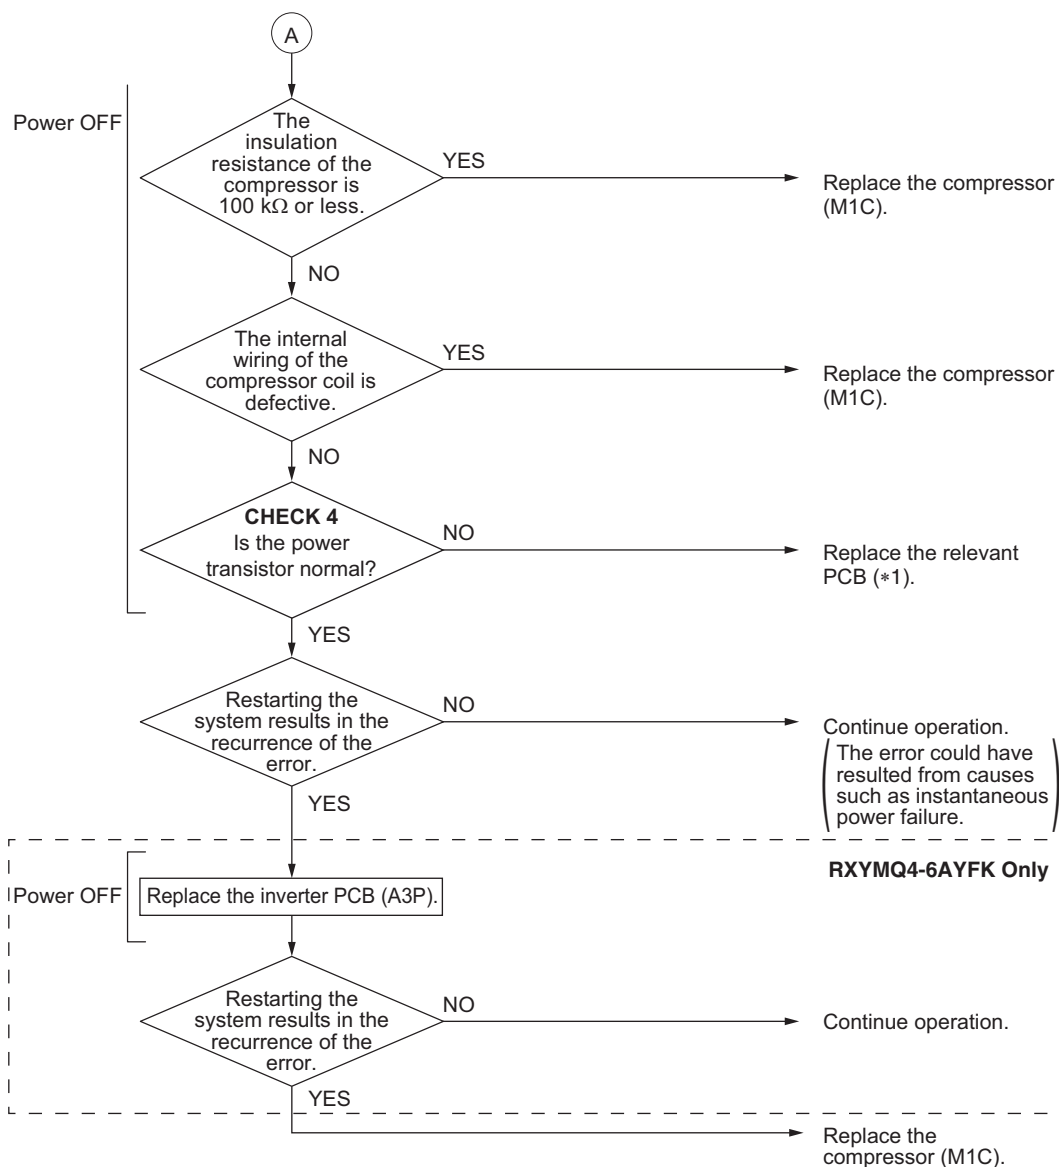**Note(s)**

*1. RXYSMQ4AVMK: outdoor unit main PCB (A1P)
RXYSMQ4-6AYFK: inverter PCB (A3P)

**Reference**

CHECK 4 Refer to page 275.

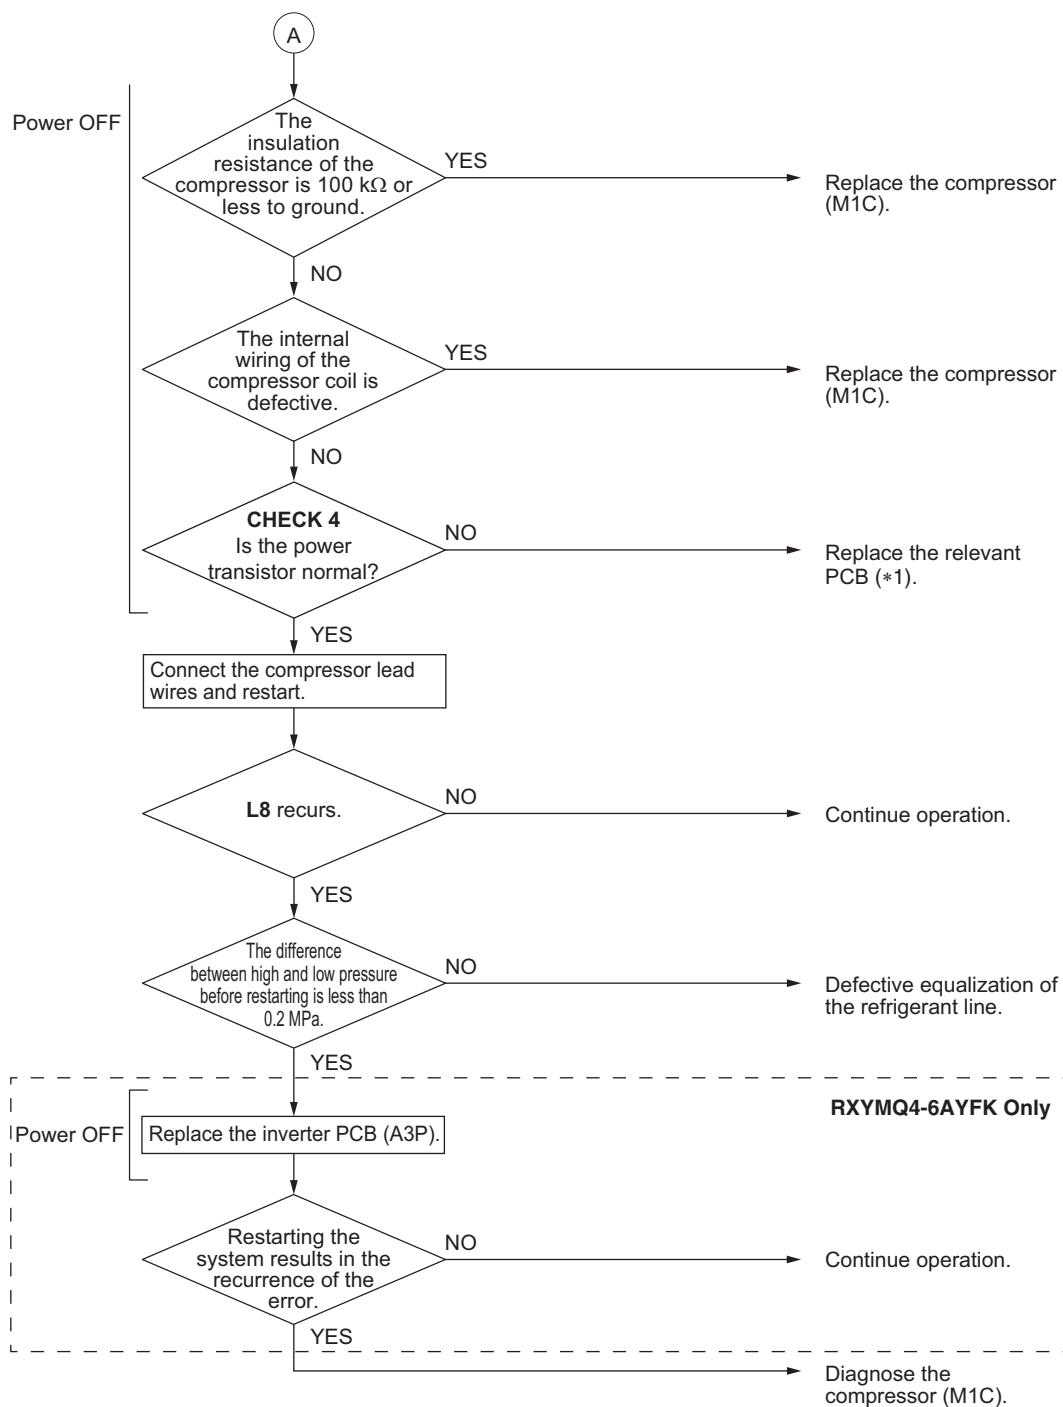**Note(s)**

*1. RXYM4AVMK: outdoor unit main PCB (A1P)
RXYM4-6AYFK: inverter PCB (A3P)

**Reference**

CHECK 4 Refer to page 275.

5.44 Compressor Startup Abnormality

Applicable Models

All outdoor unit models

Error Code

L9

Method of Error Detection

Detect error according to the signal waveform of compressor.

Error Decision Conditions

When compressor startup operation has not been completed.

Supposed Causes


- The stop valve is not opened
- Defective compressor
- Error in wire connections to compressor
- Large differential pressure before compressor startup
- Defective outdoor unit main PCB (RXYMQ4AVMK)
- Defective inverter PCB (RXYMQ4-6AYFK)


Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

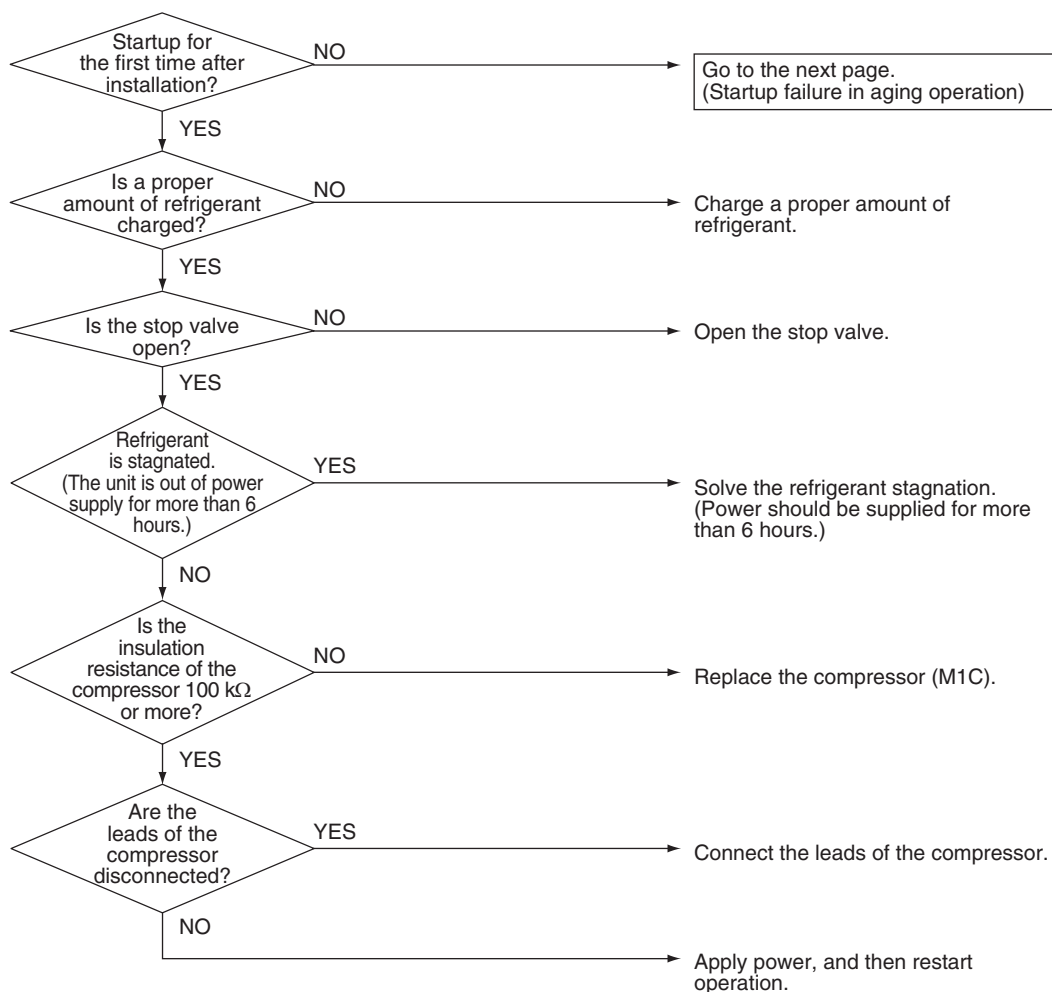

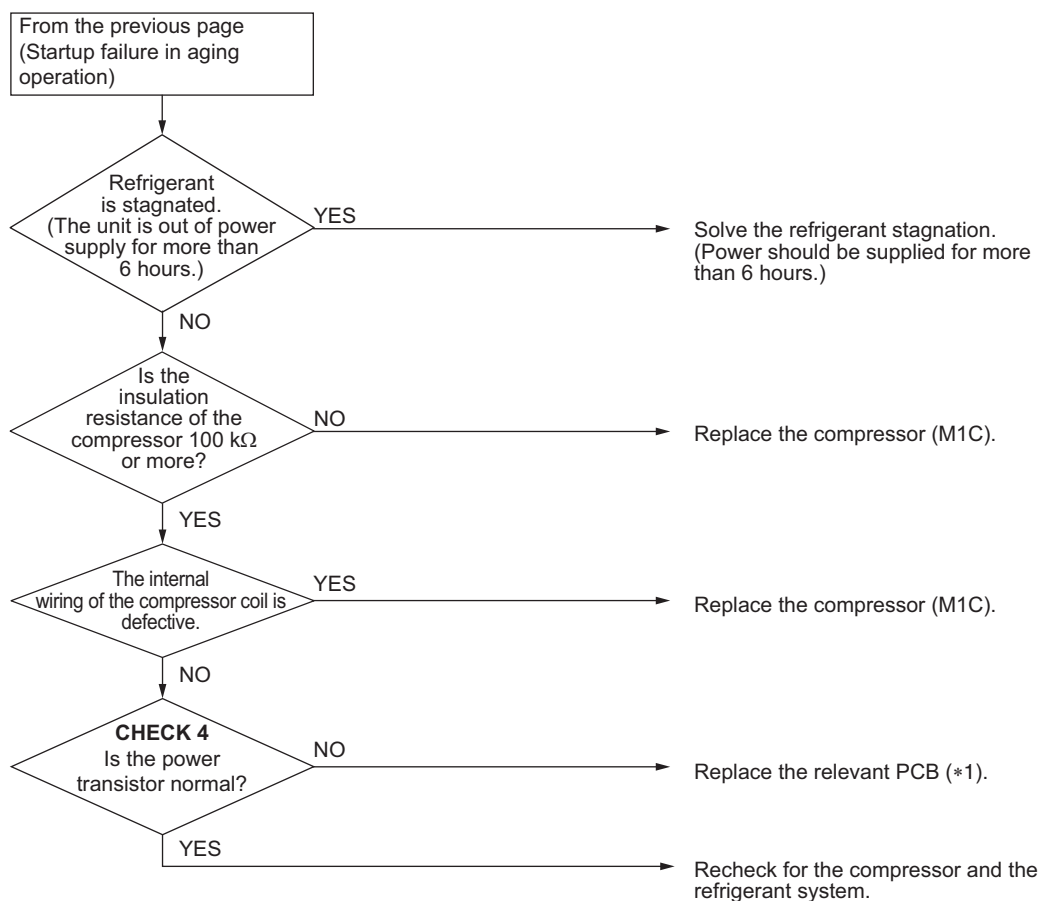**Note(s)**

- *1. RXYMQ4AVMK: outdoor unit main PCB (A1P)
RXYMQ4-6AYFK: inverter PCB (A3P)

**Reference**

CHECK 4 Refer to page 275.

5.45 Transmission Error between Microcomputers on Outdoor Unit Main PCB

Applicable Models

RXYMQ4AVMK

Error Code

LC

Method of Error Detection

Check for the transmission conditions between microcomputers on the outdoor unit main PCB using a microcomputer.

Error Decision Conditions

Normal transmission is disabled for a given period of time or more.

Supposed Causes


- Connection error between microcomputers on the outdoor unit main PCB
- Defective outdoor unit main PCB (transmission block)
- Defective noise filter
- External factors (e.g. noise)
- Defective compressor
- Defective fan motor

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

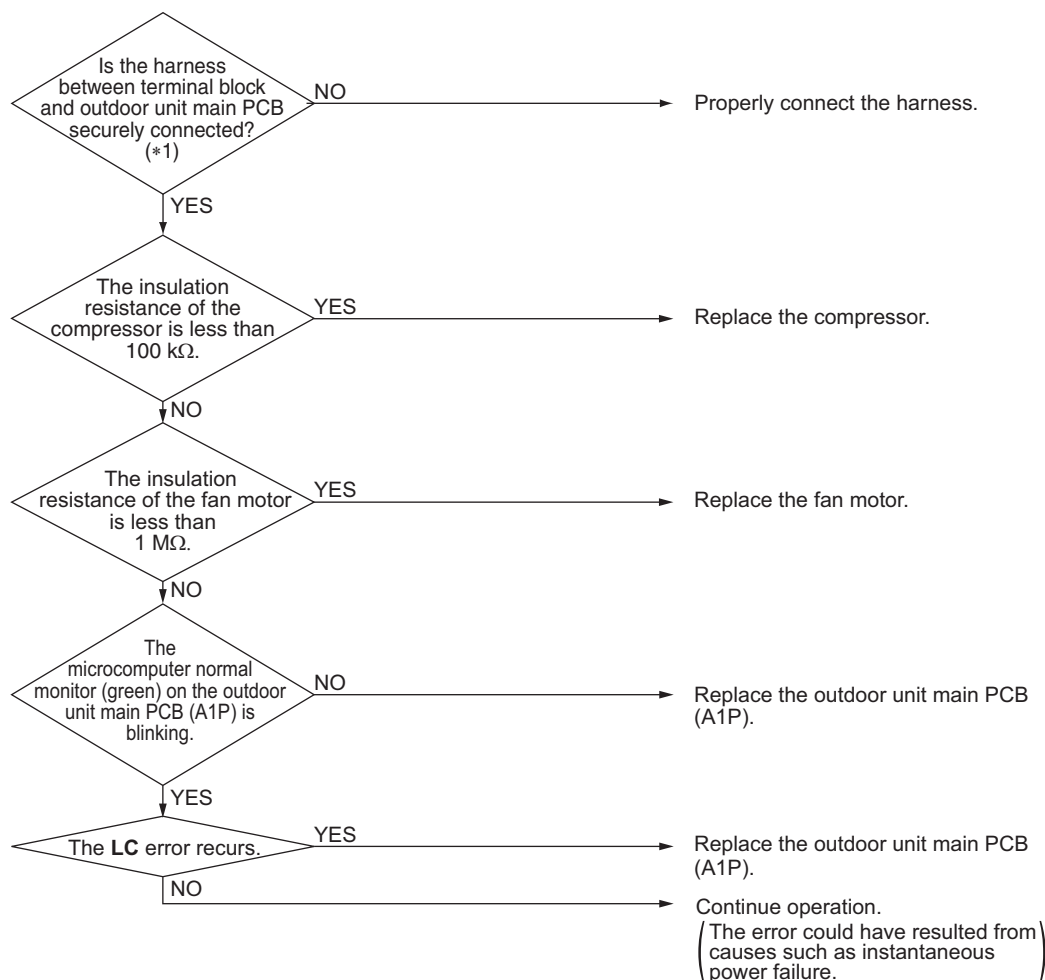

Note(s)

*1. Connect and disconnect the connector once to ensure that it is securely connected.

5.46 Transmission Error between Inverter PCB and Outdoor Unit Main PCB

Applicable Models RXYMQ4-6AYFK

Error Code LC

Method of Error Detection Check for the transmission conditions between the inverter PCB and the outdoor unit main PCB using a microcomputer.

Error Decision Conditions Normal transmission is disabled for a given period of time or more.

Supposed Causes


- Defective connection between the inverter PCB and the outdoor unit main PCB
- Defective outdoor unit main PCB (transmission block)
- Defective noise filter
- External factors (e.g. noise)
- Defective compressor
- Defective fan motor


Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

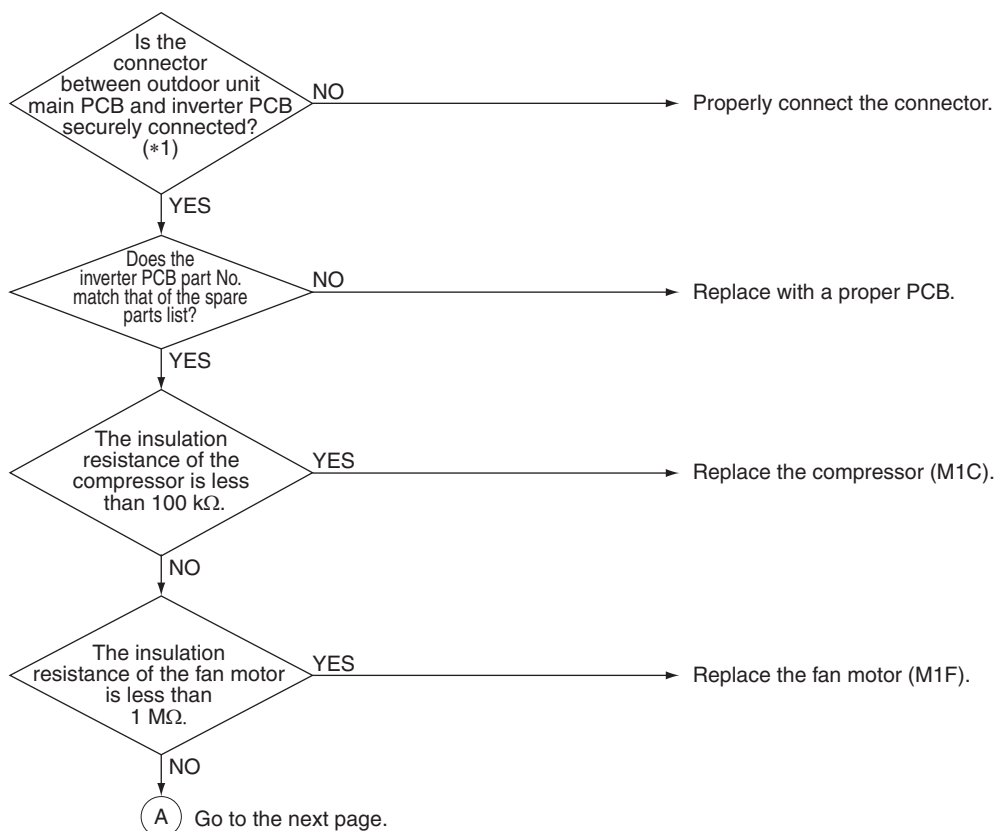

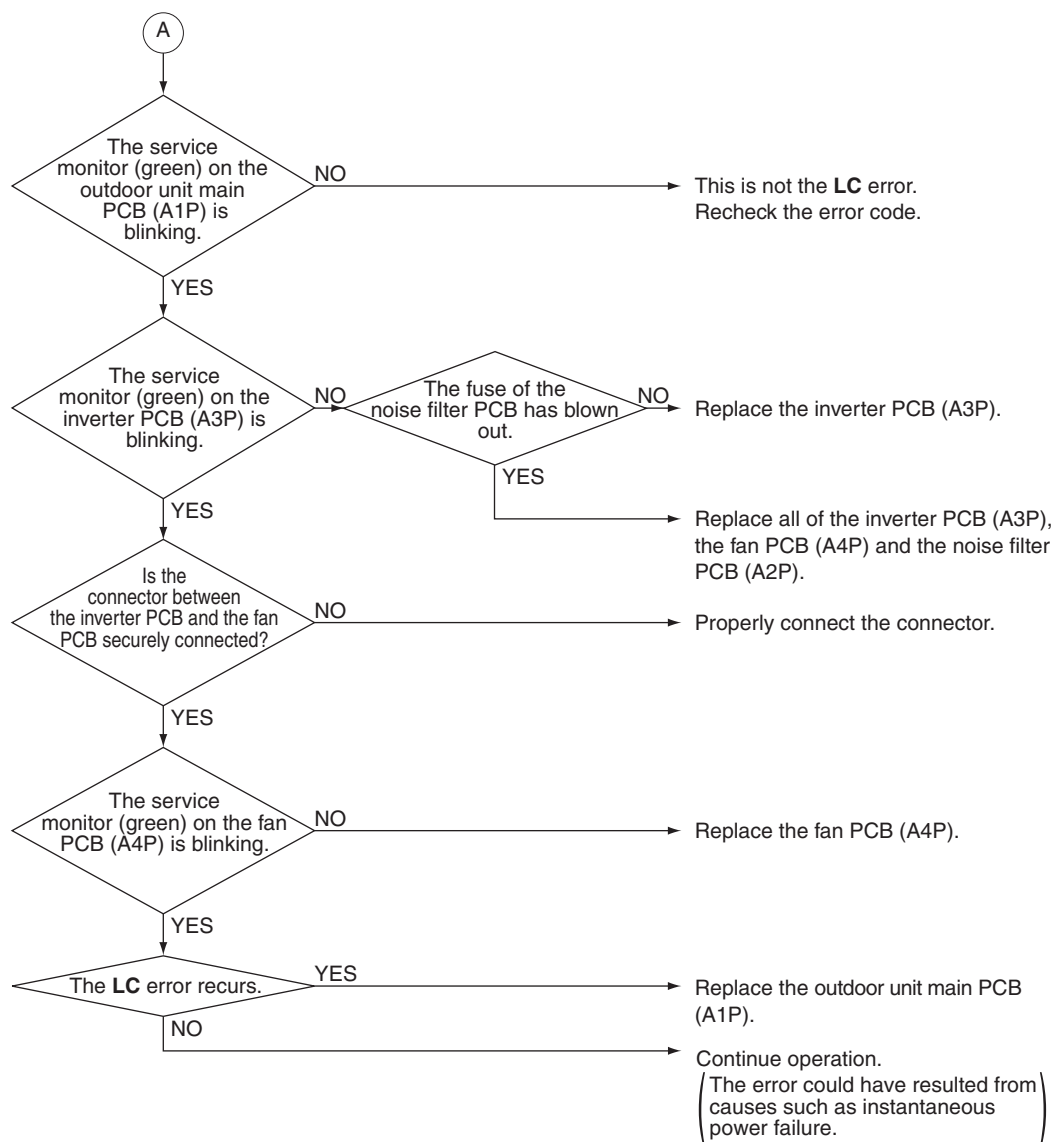

i Note(s)

*1. Connect and disconnect the connector once to ensure that it is securely connected.

5.47 Inverter Circuit Capacitor High Voltage

Applicable Models RXYMQ4AVMK

Error Code **P1**

Method of Error Detection The voltage waveform of the main circuit capacitor of the inverter is used to check for errors.

Error Decision Conditions The voltage waveform fluctuates greatly.

Supposed Causes


- Defective main circuit capacitor
- Incorrect main circuit wiring
- Defective outdoor unit main PCB

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

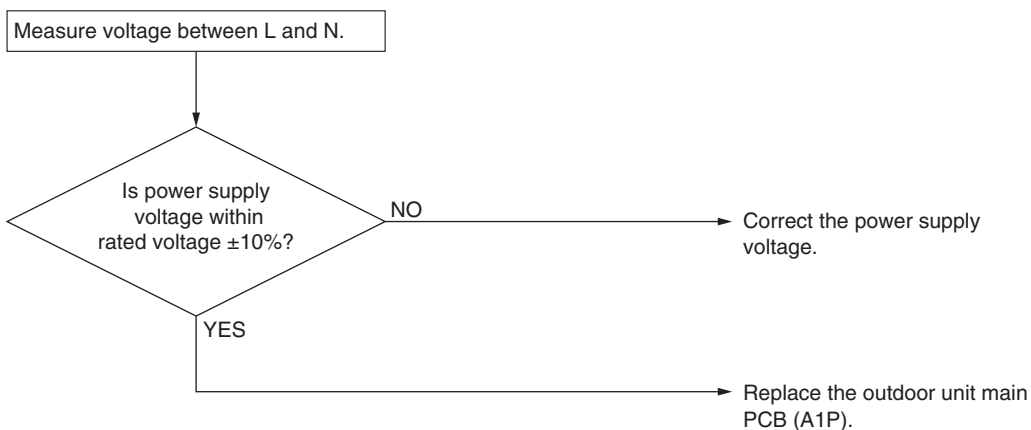

5.48 Power Supply Voltage Imbalance

Applicable Models	RXYMQ4-6AYFK
-------------------	--------------

Error Code	P1
------------	-----------

Method of Error Detection	Detect voltage imbalance through inverter PCB.
---------------------------	--


Error Decision Conditions	Power supply voltage imbalance exceeds approximately 12 V. Error is not decided while the unit operation is continued. P1 will be displayed by pressing the inspection button.
---------------------------	---

Supposed Causes	<ul style="list-style-type: none">■ Open phase■ Interphase voltage imbalance■ Defective capacitor in the main circuit■ Defective inverter PCB■ Defective wiring in the main circuit
-----------------	---

Troubleshooting

**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

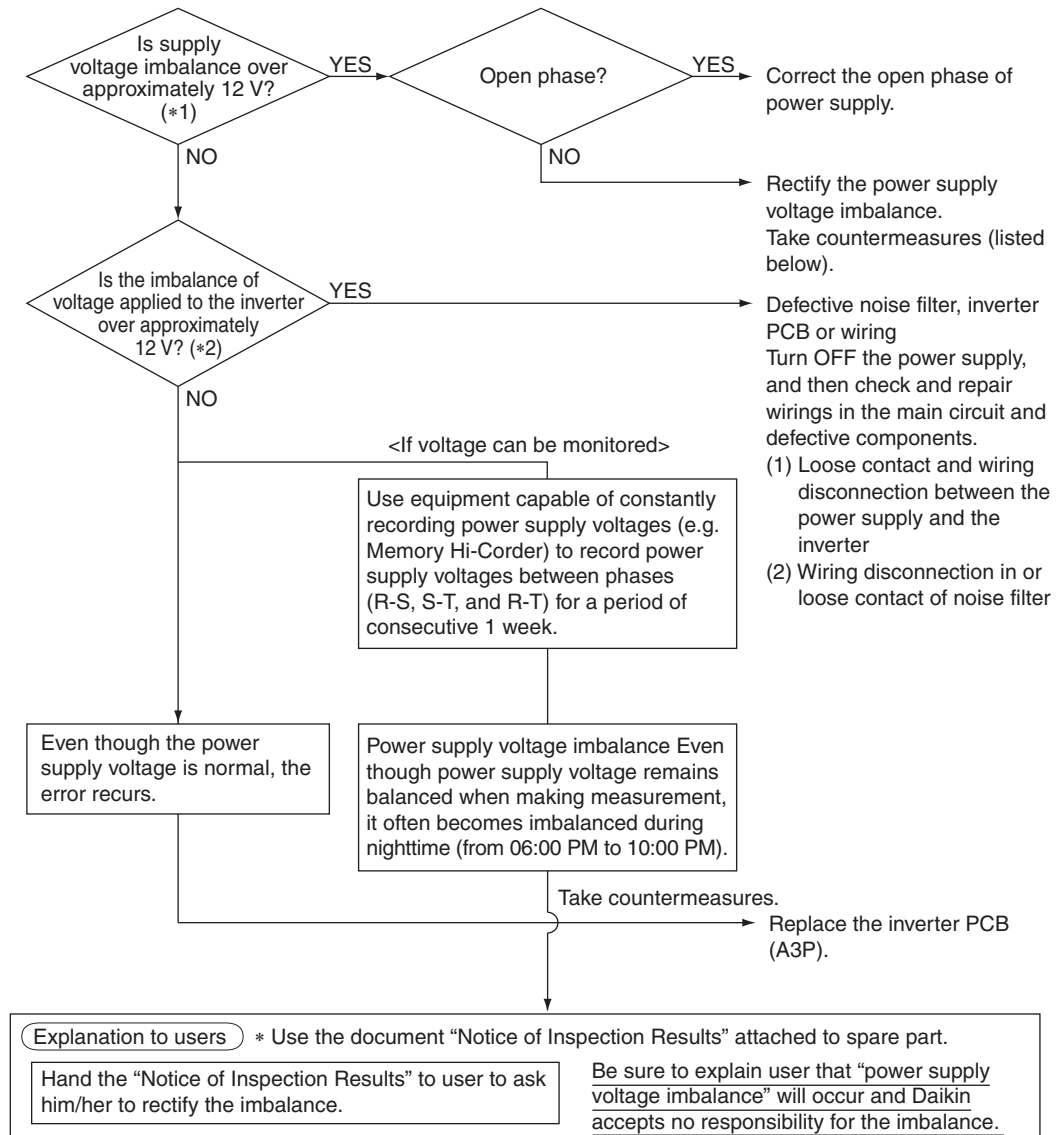**Note(s)**

- *1. Make measurement of voltage at the power supply terminal block (X1M).
- *2. Make measurement of voltage at the L1, L2 and L3 terminals of diode module located on the inverter PCB during the compressor is in operation.

5.49 Reactor Temperature Abnormality


Applicable Models	RXYMQ4-6AYFK
Error Code	P3
Method of Error Detection	Detect according to the value detected with the reactor surface thermistor.
Error Decision Conditions	When the system is in operation and the thermistor causes wiring disconnection or short circuit in it.
Supposed Causes	<ul style="list-style-type: none"> ■ Defective connection of thermistor ■ Defective reactor surface thermistor ■ Defective inverter PCB

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

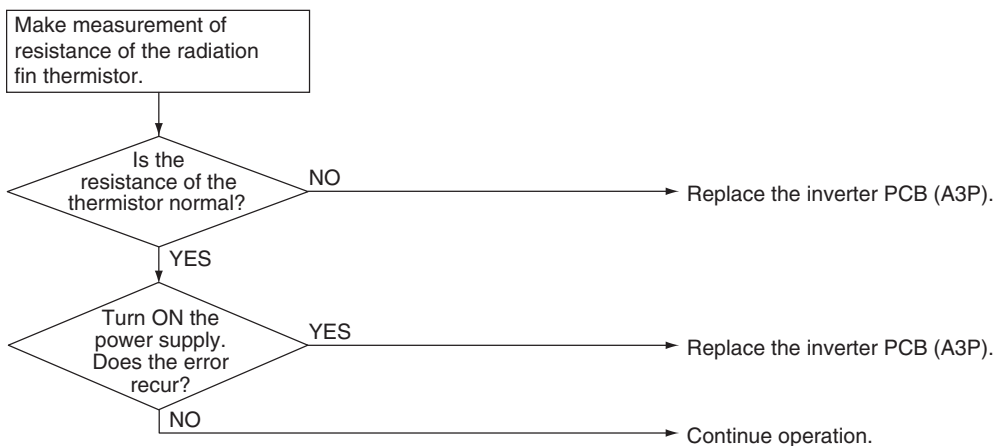

5.50 Inverter Radiation Fin Temperature Abnormality

Applicable Models	All outdoor unit models
Error Code	P4
Method of Error Detection	<p>Detect the resistance of the following thermistors during the compressor stops running:</p> <p>(1) Radiation fin thermistor</p> <p>(2) Thermistor located in PCB circuit</p>
Error Decision Conditions	<p>When the resistance of the thermistor comes to a value equivalent to open or short circuit.</p> <p>Error is not decided while the unit operation is continued.</p> <p>P4 will be displayed by pressing the inspection button.</p>
Supposed Causes	<ul style="list-style-type: none"> ■ Defective radiation fin temperature thermistor ■ Defective outdoor unit main PCB (RXYMQ4AVMK) ■ Defective inverter PCB (RXYMQ4-6AYFK) ■ Defective fan PCB (RXYMQ4-6AYFK) ■ Defective compressor ■ Defective fan motor

Troubleshooting


■ Subcode P4-01



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

Make measurement of resistance of the radiation fin thermistor.

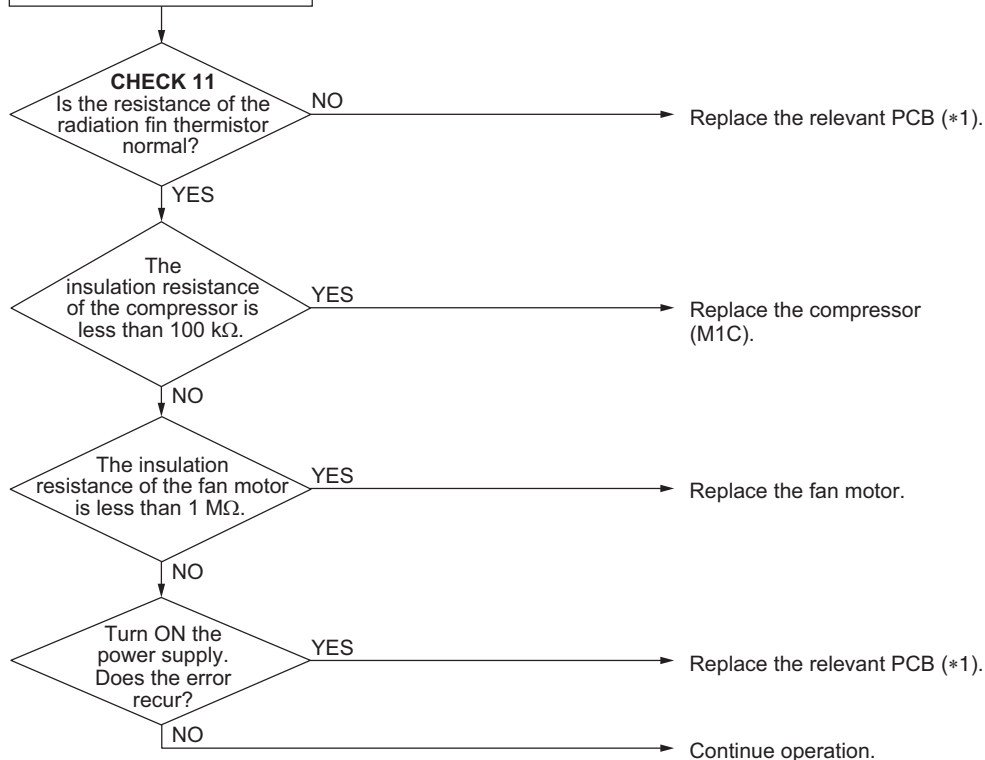


■ Subcode P4-02



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

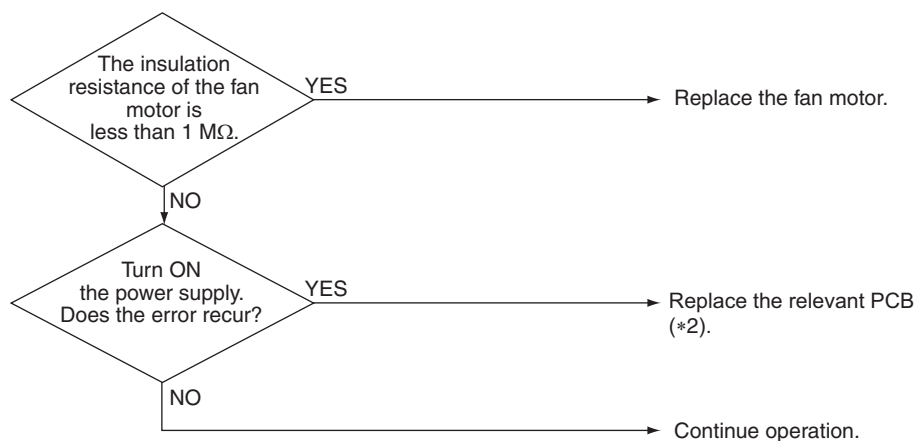

Note(s)

- *1. RXYMQ4AVMK: outdoor unit main PCB (A1P)
RXYMQ4-6AYFK: inverter PCB (A3P)
- *2. RXYMQ4AVMK: outdoor unit main PCB (A1P)
RXYMQ4-6AYFK: fan PCB (A4P)



Reference


CHECK 11 Refer to page 281.

5.51 Field Setting after Replacing Outdoor Unit Main PCB Abnormality or Combination of PCB Abnormality


Applicable Models	All outdoor unit models
Error Code	PJ
Method of Error Detection	This error is detected according to communications with the outdoor unit main PCB (RXYMQ4AVMK) or inverter PCB (RXYMQ4-6AYFK).
Error Decision Conditions	Make judgment according to communication data on whether or not the type of the outdoor unit main PCB (RXYMQ4AVMK) or inverter PCB (RXYMQ4-6AYFK) is correct.
Supposed Causes	<ul style="list-style-type: none"> ■ Mismatching of type of PCB ■ Improper (or no) field setting after replacing outdoor unit main PCB
Troubleshooting	RXYMQ4AVMK

**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

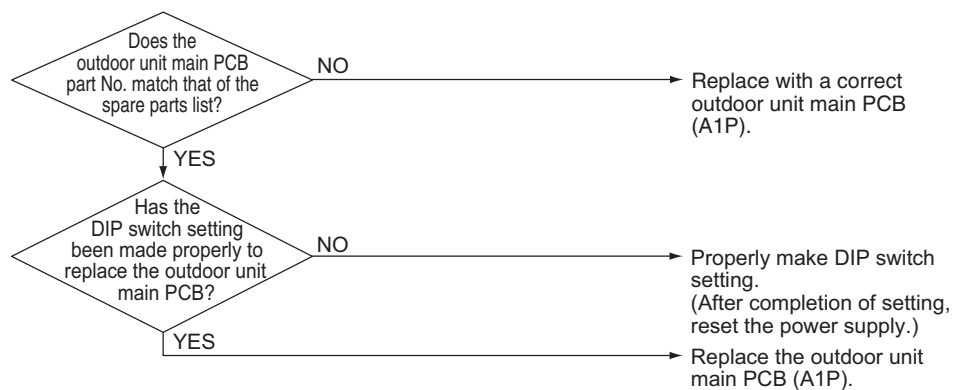**RXYMQ4-6AYFK****Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

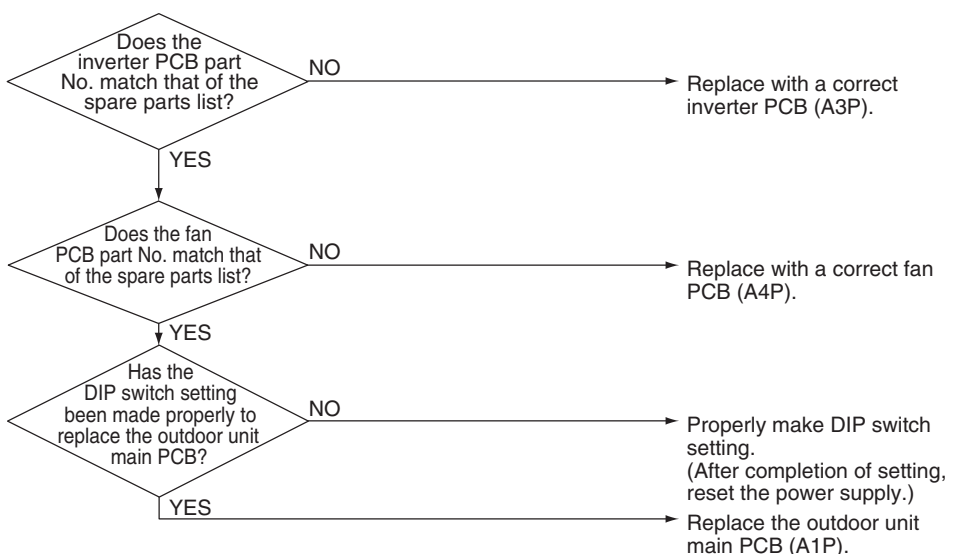

5.52 Refrigerant Shortage Warning (Cooling)

Applicable Models

RXYMQ4-6AYFK

Error Code

U0

Sub code: 05

Method of Error Detection

Detects refrigerant shortage according to the ending conditions of cooling oil return control.

Error Decision Conditions


Cooling oil return control does not finish according to the ending conditions, and the time is up for 3 consecutive times.

* No abnormality is determined, and the operation continues.

Supposed Causes

- Refrigerant shortage and refrigerant clogging (wrong piping)
- Defective thermistor
- Defective low pressure sensor
- Defective outdoor unit main PCB

Troubleshooting

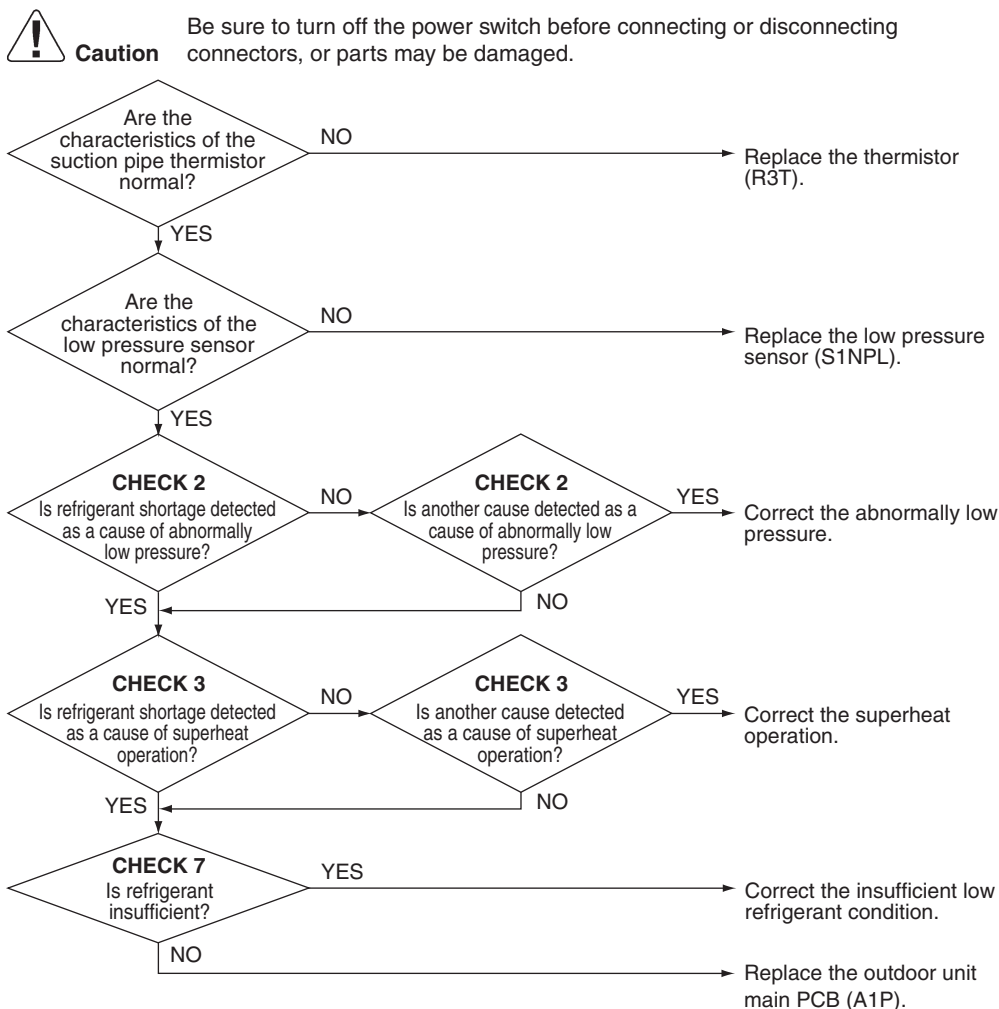

Reference

CHECK 2 Refer to page 272.



Reference

CHECK 3 Refer to page 273.



Reference

CHECK 7 Refer to page 279.

5.53 Refrigerant Shortage Warning (Heating)


Applicable Models	RXYMQ4-6AYFK
Error Code	U0 Sub code: 06
Method of Error Detection	Detects refrigerant shortage according to the difference between low pressure equivalent saturation temperature and suction pipe temperature, opening degree of main electronic expansion valve, or superheating operation.
Error Decision Conditions	<p>The following conditions are satisfied for 20 minutes or more.</p> <ul style="list-style-type: none"> ■ Suction pipe temperature – Low pressure equivalent saturation temperature > 30°C ■ Opening degree of main electronic expansion valve (Y1E) > 480 pulses ■ Discharge pipe temperature > 125°C, or low pressure < 0.15 MPa and high pressure < 2.1 MPa simultaneously. <p>* No abnormality is determined, and the operation continues.</p>
Supposed Causes	<ul style="list-style-type: none"> ■ Refrigerant shortage and refrigerant clogging (wrong piping) ■ Defective thermistor ■ Defective low pressure sensor ■ Defective outdoor unit main PCB

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

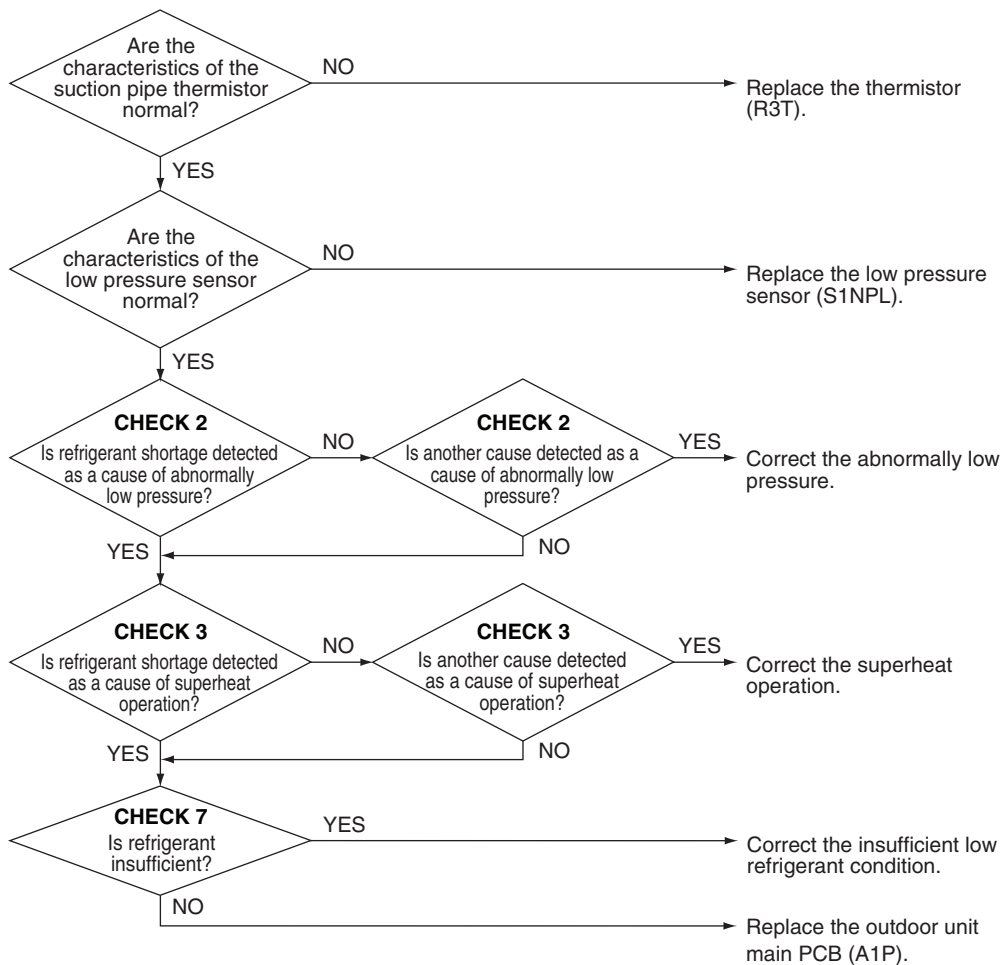

Reference

CHECK 2 Refer to page 272.



Reference

CHECK 3 Refer to page 273.



Reference

CHECK 7 Refer to page 279.


5.54 Refrigerant Shortage Abnormality (Heating Only)


Applicable Models	All outdoor unit models
Error Code	U0 Sub code: -08
Method of Error Detection	Detects refrigerant shortage according to the difference between low pressure equivalent saturation temperature and suction pipe temperature, opening degree of main electronic expansion valve or indoor unit electronic expansion valve, inverter fin temperature, or outdoor air temperature, etc.
Error Decision Conditions	<p>All of the following conditions are satisfied for 5 minutes or more, 4 times within 240 minutes.</p> <ul style="list-style-type: none"> ■ Suction pipe temperature – Low pressure equivalent saturation temperature > 15°C ■ Opening degree of main electronic expansion valve (Y1E) > 480 pulses ■ Inverter fin temperature < Outdoor air temperature ■ Outdoor air temperature – Low pressure equivalent saturation temperature > 15°C ■ Opening degree of the electronic expansion valve of all the indoor units that have thermostat ON is 400 pulses or more ■ High pressure equivalent saturation temperature – Thermostat ON indoor unit liquid pipe temperature < 5°C ■ Compressor operates in minimum step
Supposed Causes	<ul style="list-style-type: none"> ■ Refrigerant shortage and refrigerant clogging (wrong piping) ■ Defective thermistor ■ Defective inverter fin temperature thermistor ■ Defective inverter PCB (RXYMQ4-6AYFK) ■ Defective low pressure sensor ■ Defective electronic expansion valve coil (Y3E) ■ Defective outdoor unit main PCB

Troubleshooting


Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

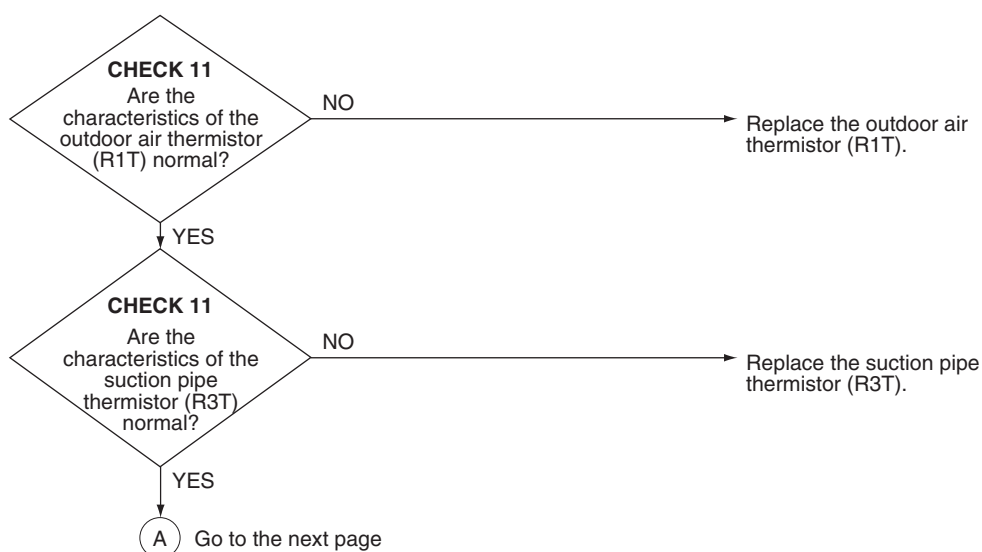

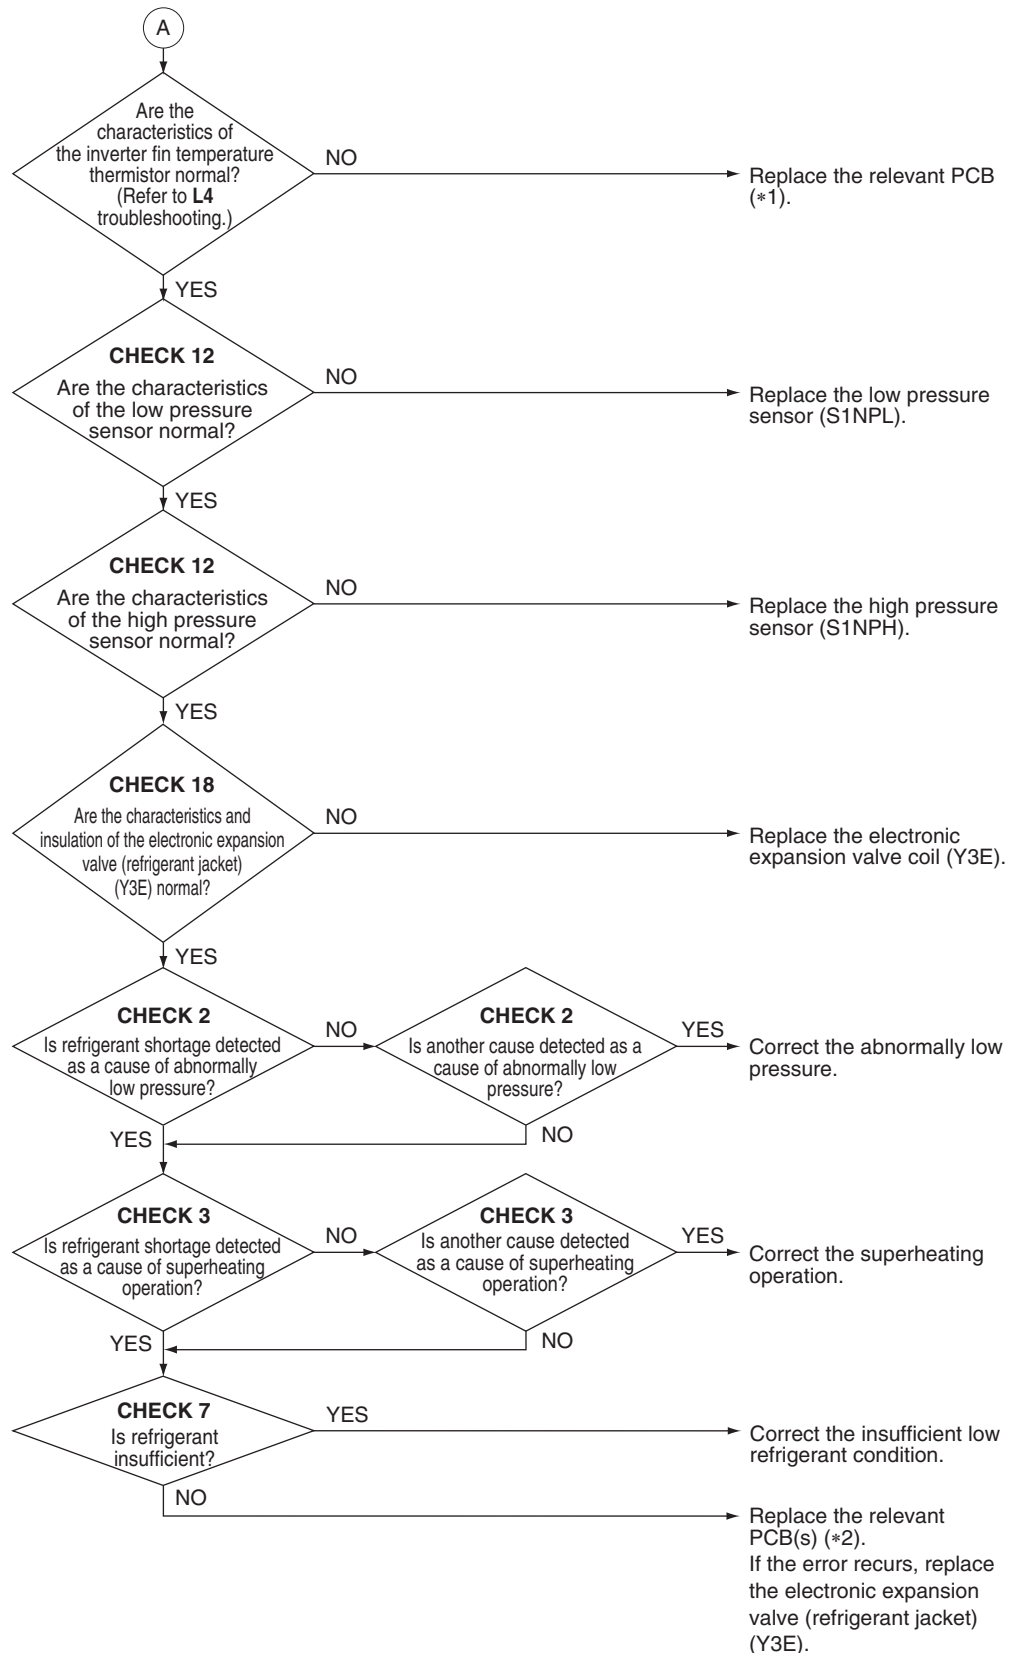

Note(s)

*1. RXYMQ4AVMK: outdoor unit main PCB (A1P)
RXYMQ4-6AYFK: inverter PCB (A3P)

*2. RXYMQ4AVMK: outdoor unit main PCB (A1P)
RXYMQ4-6AYFK: outdoor unit main PCB (A1P) and inverter PCB (A3P)



Reference

CHECK 2 Refer to page 272.



Reference **CHECK 3** Refer to page 273.



Reference **CHECK 7** Refer to page 279.



Reference **CHECK 11** Refer to page 281.



Reference **CHECK 12** Refer to page 284.



Reference **CHECK 18** Refer to page 288.

5.55 Open Phase

Applicable Models

RXYMQ4-6AYFK

Error Code

U1

Method of Error Detection

The phase of each phase is detected by phase detection circuit and open phase is judged.

Error Decision Conditions

When any phase is open phase.


Supposed Causes

- Abnormal supply voltage
- Open phase
- Defective inverter PCB

Troubleshooting


Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

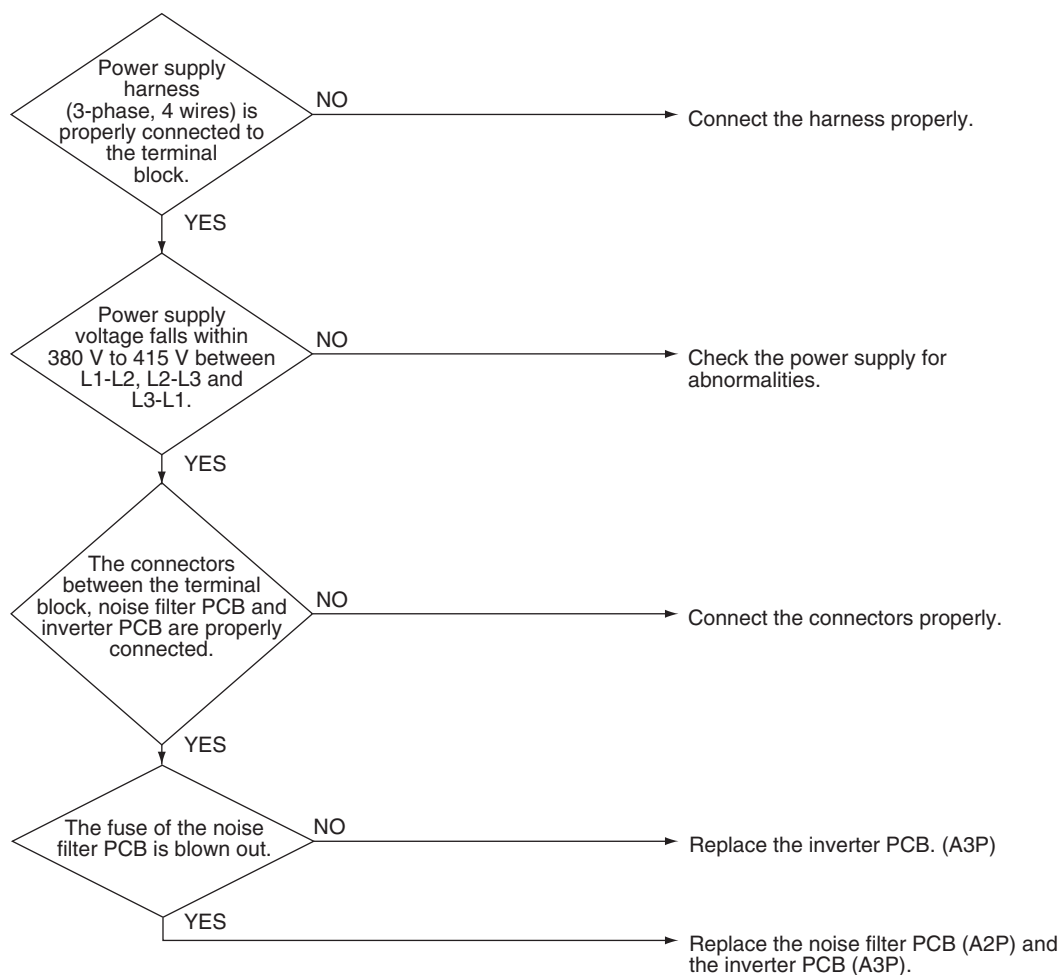

5.56 Power Supply Insufficient or Instantaneous Abnormality

Applicable Models All outdoor unit models

Error Code **U2**

Method of Error Detection Detect the voltage of capacitor of the main circuit in the outdoor unit main PCB.

Error Decision Conditions When the voltage in the DC circuit (between diode module and power module) falls below 220-240 VDC (RXYMQ4AVMK) or 380 VDC (RXYMQ4-6AYFK).

Supposed Causes


- Abnormal power supply voltage
- Instantaneous power failure
- Open phase
- Defective inverter PCB (RXYMQ4-6AYFK)
- Defective outdoor unit main PCB
- Defective compressor
- Defective main circuit wiring
- Defective fan motor
- Defective connection of signal cable


Troubleshooting **RXYMQ4AVMK**



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

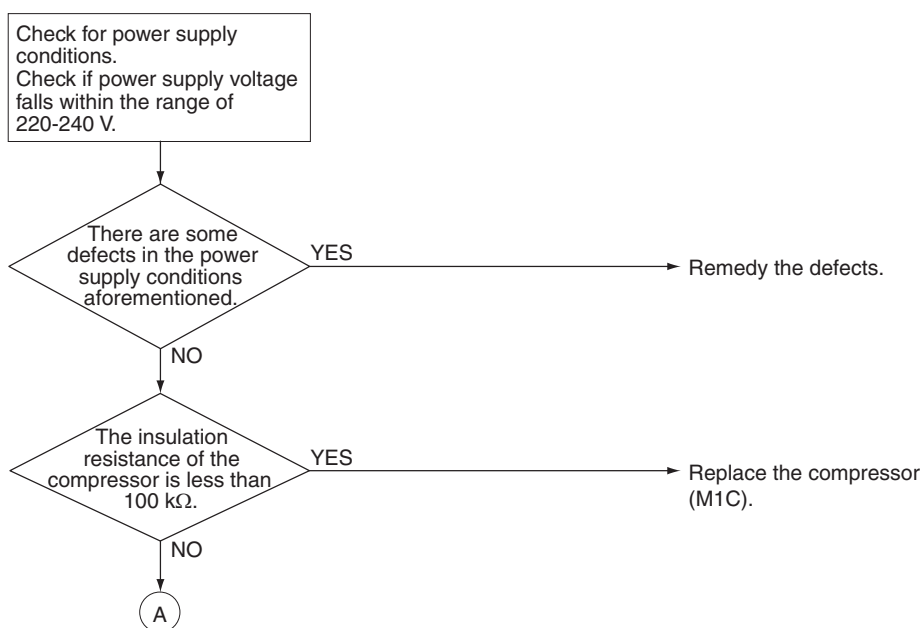


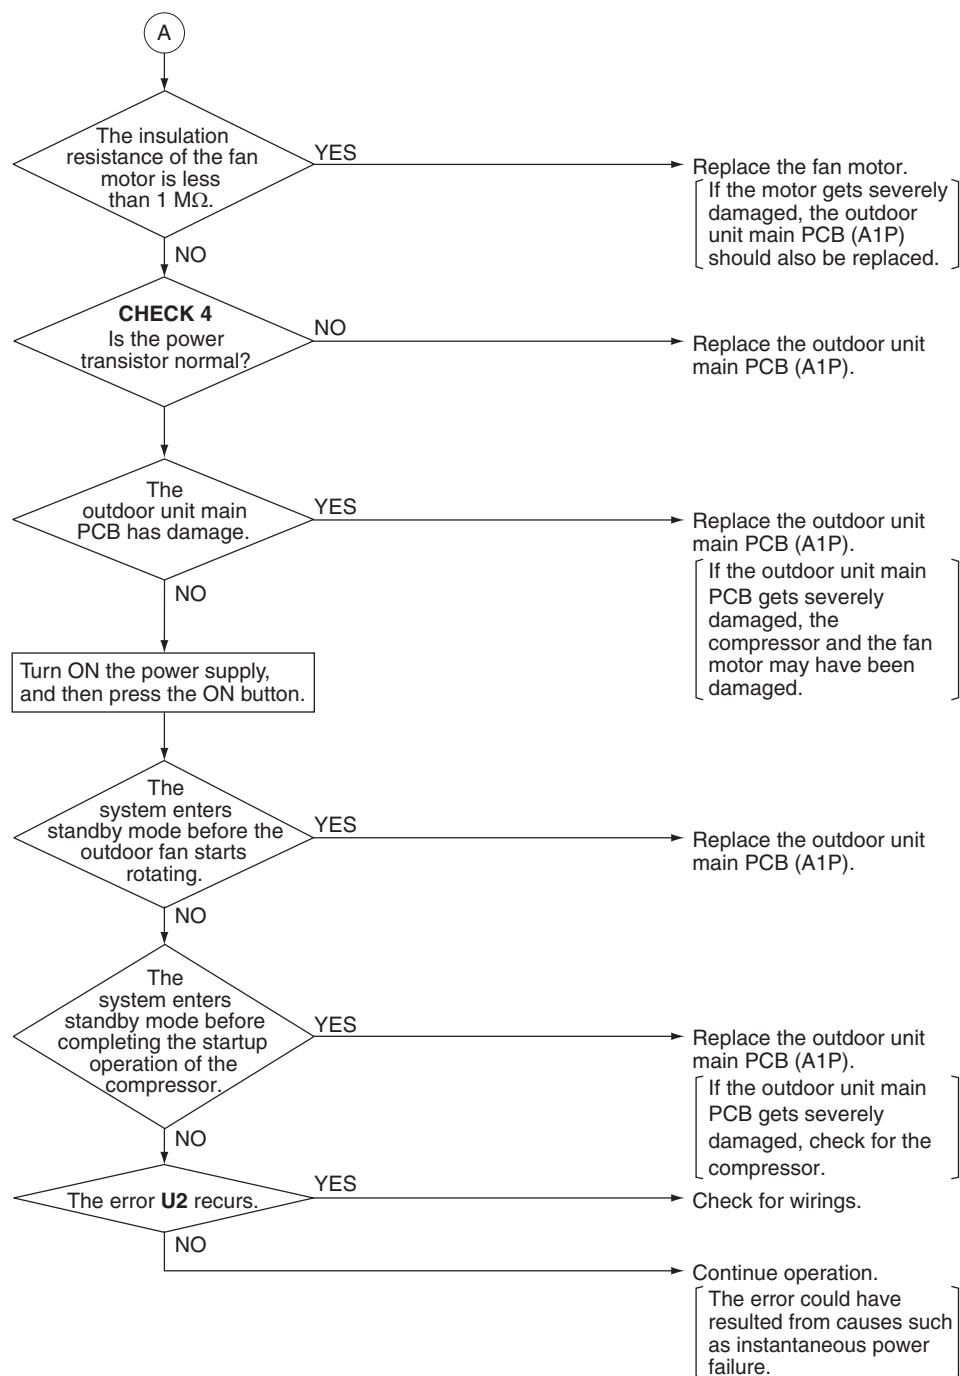


RXYMQ4-6AYFK

**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

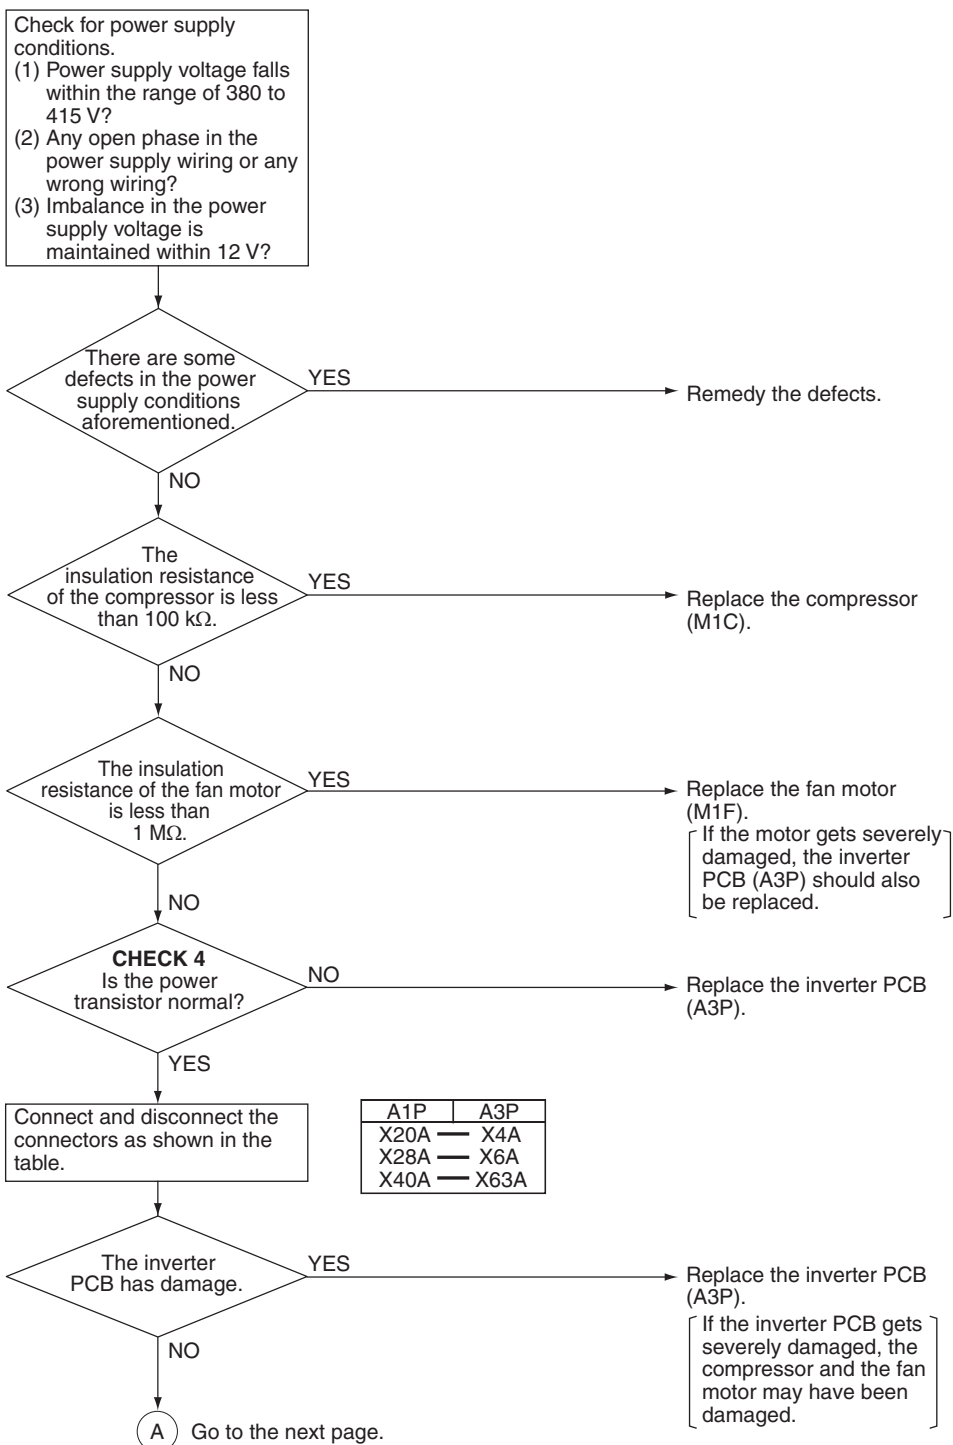

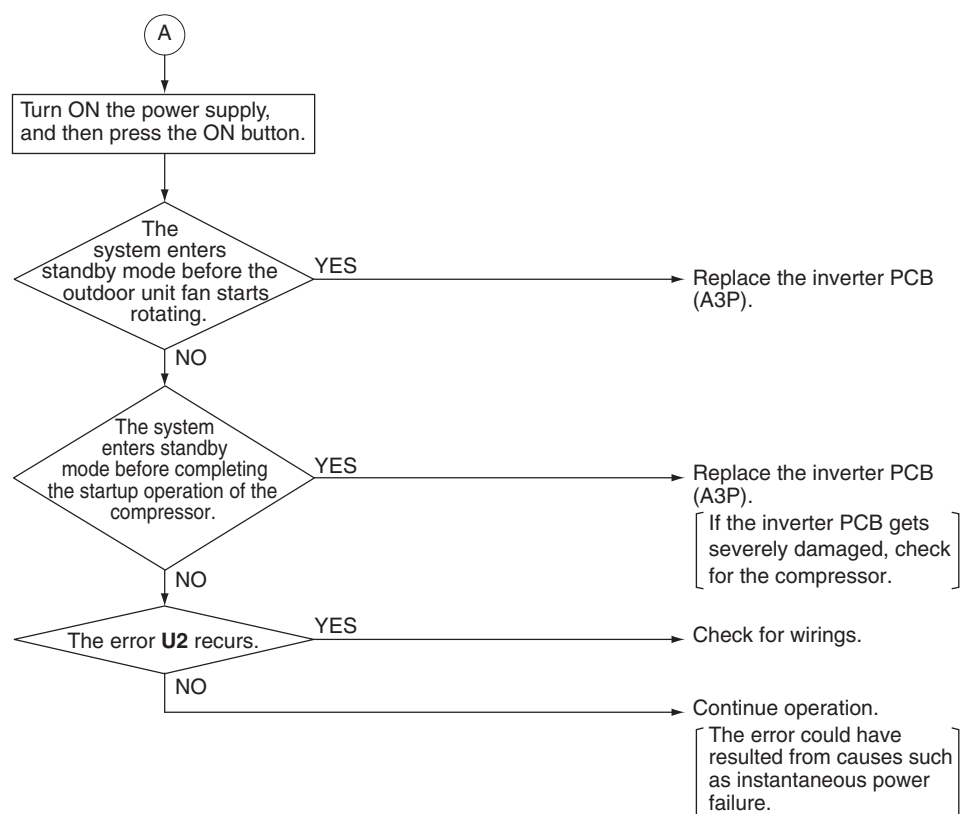

Reference

CHECK 4 Refer to page 275.

5.57 Check Operation Not Executed

Applicable Models

All outdoor unit models

Error Code

U3

Method of Error Detection

The check operation has not been executed.

Error Decision Conditions

Error is decided when the unit starts operation without check operation.

Supposed Causes

- Check operation not executed


Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

The contents of individual failures vary with sub code. Ensure the sub code, and then go to the following:

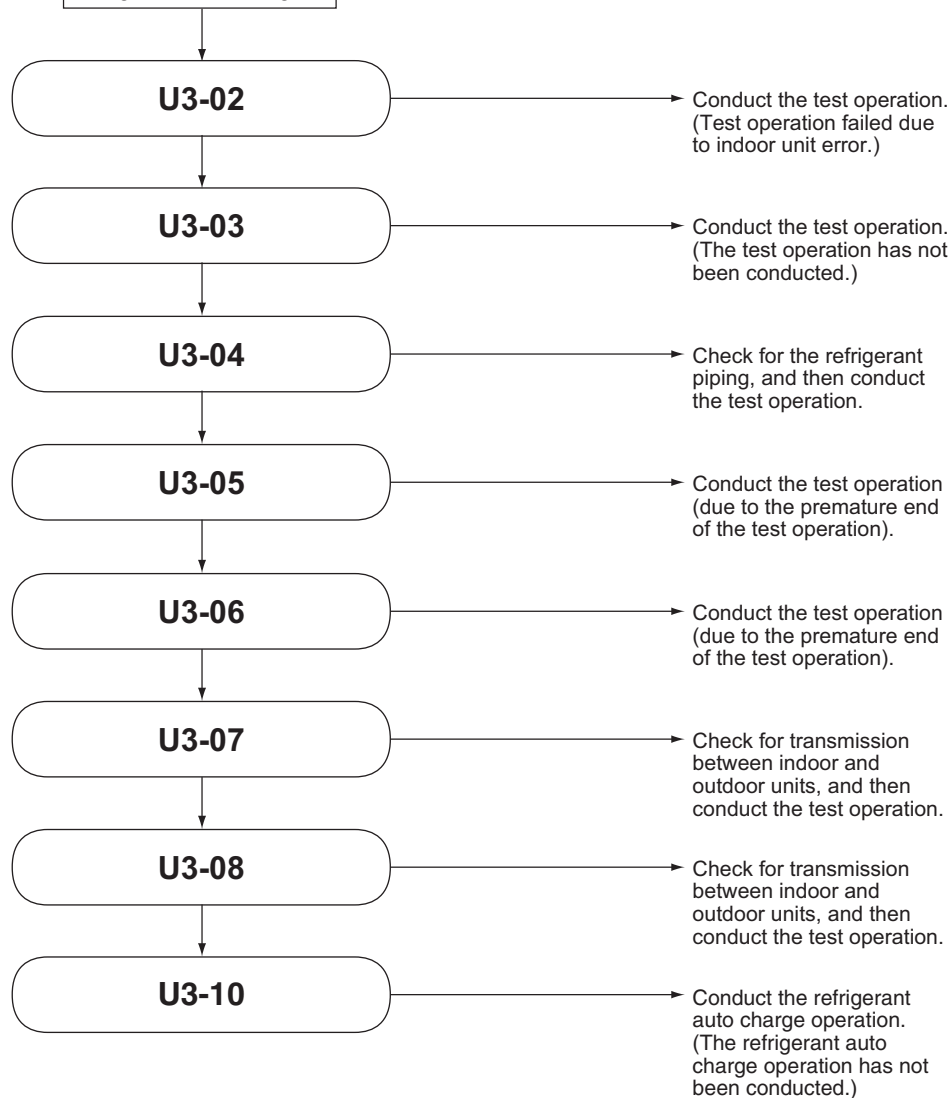


5.58 Transmission Error between Indoor Units and Outdoor Units

Applicable Models	All indoor unit models All outdoor unit models
Error Code	U4
Method of Error Detection	Microcomputer checks if transmission between indoor and outdoor units is normal.
Error Decision Conditions	Transmission is not carried out normally for a certain amount of time.
Supposed Causes	<ul style="list-style-type: none">■ Short circuit in indoor-outdoor transmission wiring (F1/F2), or wrong wiring■ Outdoor unit power supply is OFF■ System address does not match■ Defective indoor unit PCB■ Defective outdoor unit main PCB


Troubleshooting

**Caution**

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

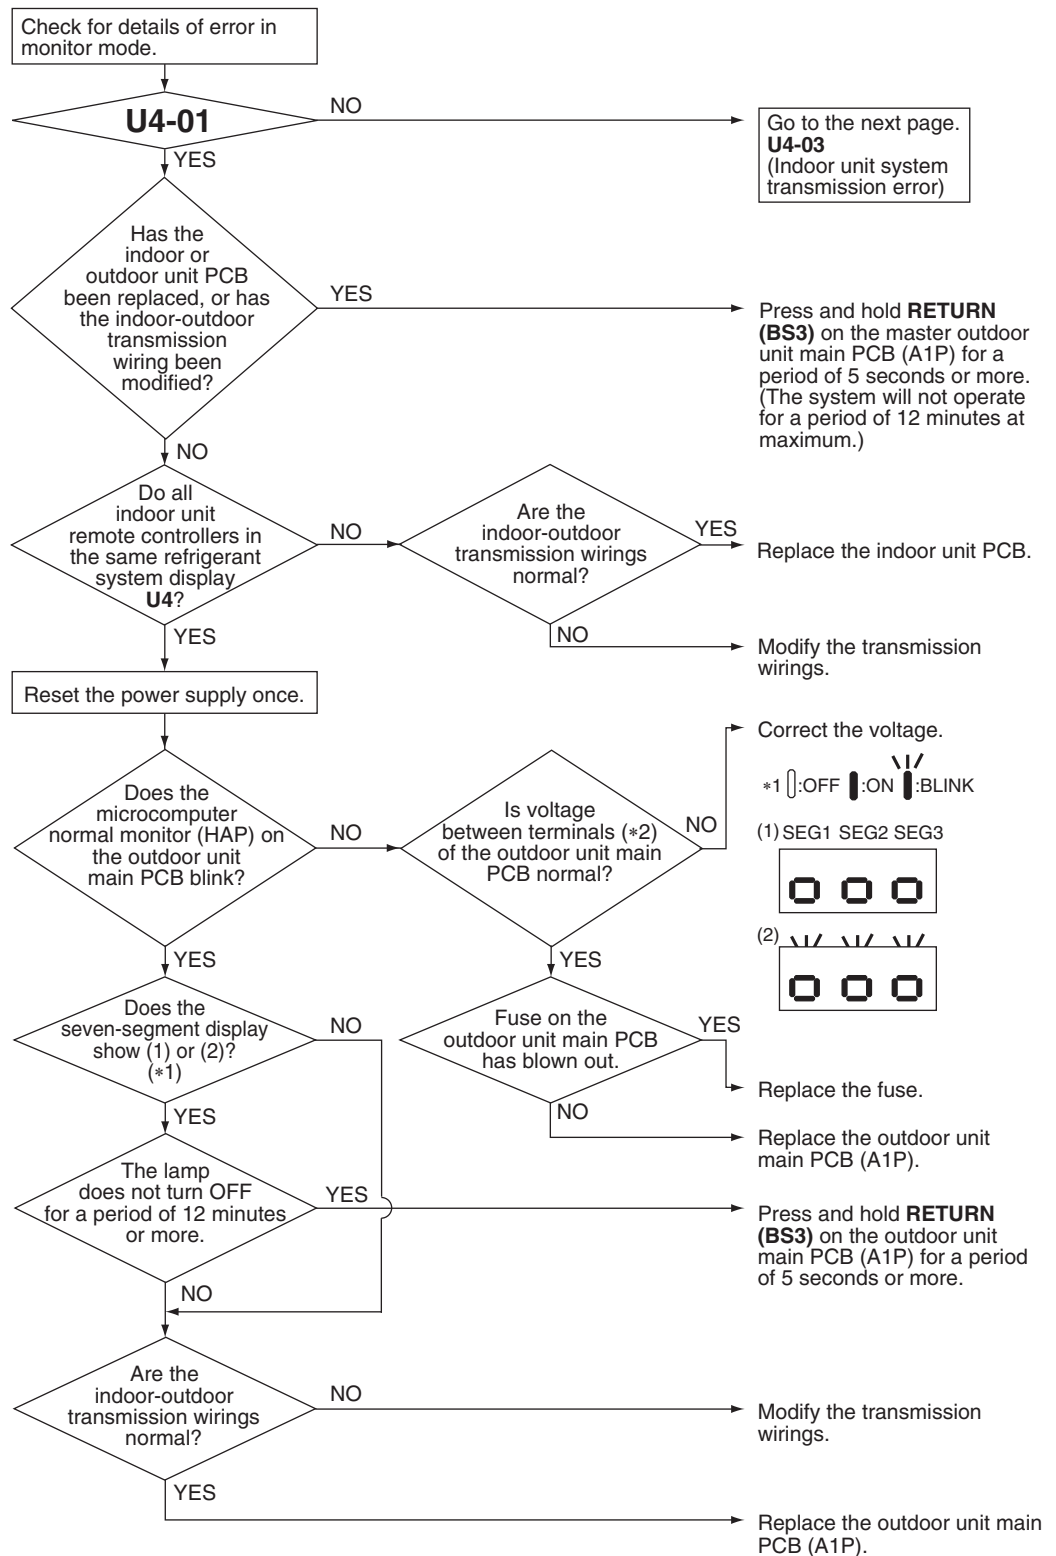**Note(s)**

*2. RXYMQ4AVMK: 220-240V between L and N
RXYMQ4-6AYFK: 380-415V between L1 and N

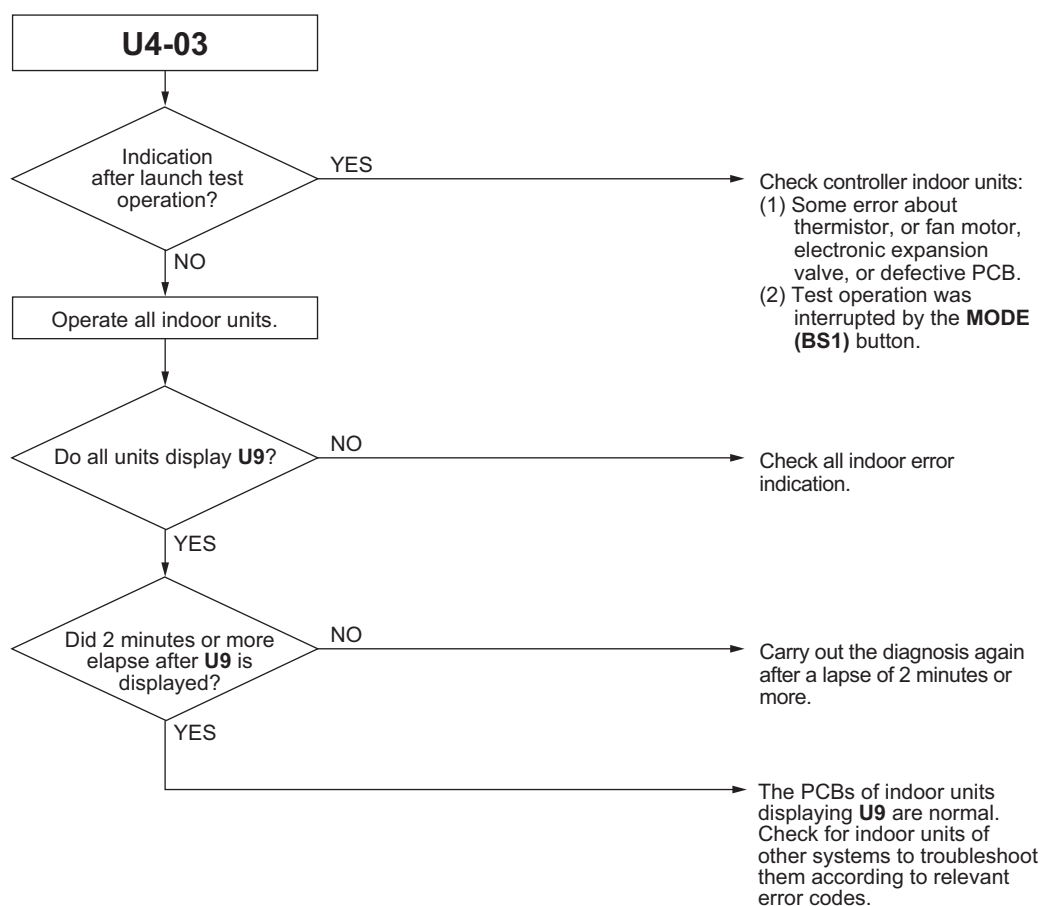

5.59 Transmission Error between Remote Controller and Indoor Unit

Applicable Models

All indoor unit models

Error code

U5

Method of Error Detection

Microcomputer checks if transmission between indoor unit and remote controller is normal.

Error Decision Conditions

When transmission is not carried out normally for a certain amount of time.

Supposed Causes


- Transmission error between indoor unit and remote controller
- Connection of 2 main remote controllers (when using 2 remote controllers)
- Defective indoor unit PCB
- Defective remote controller PCB
- Transmission error caused by noise

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

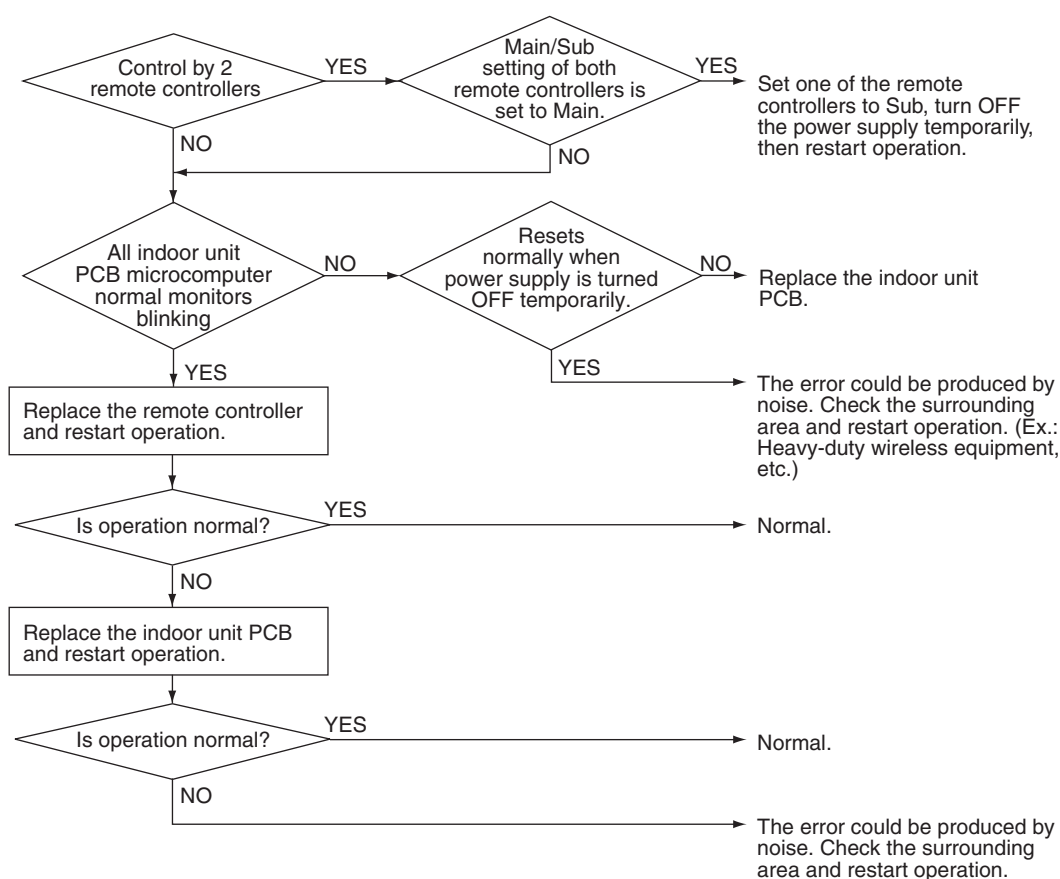

Reference

Refer to page 34 for Main/Sub setting.

5.60 Transmission Error between Outdoor Units


Applicable Models	All outdoor unit models
Error Code	U7
Method of Error Detection	Microcomputer checks if transmission between outdoor units is normal.
Error Decision Conditions	Transmission is not carried out normally for a certain amount of time
Supposed Causes	<ul style="list-style-type: none"> ■ Connection error of transmission wirings between outdoor unit and external control adaptor for outdoor unit ■ Cool/Heat selection setting error ■ Cool/Heat unified address setting error (functional unit, external control adaptor for outdoor unit) ■ Defective outdoor unit main PCB ■ Defective external control adaptor for outdoor unit

Troubleshooting





Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

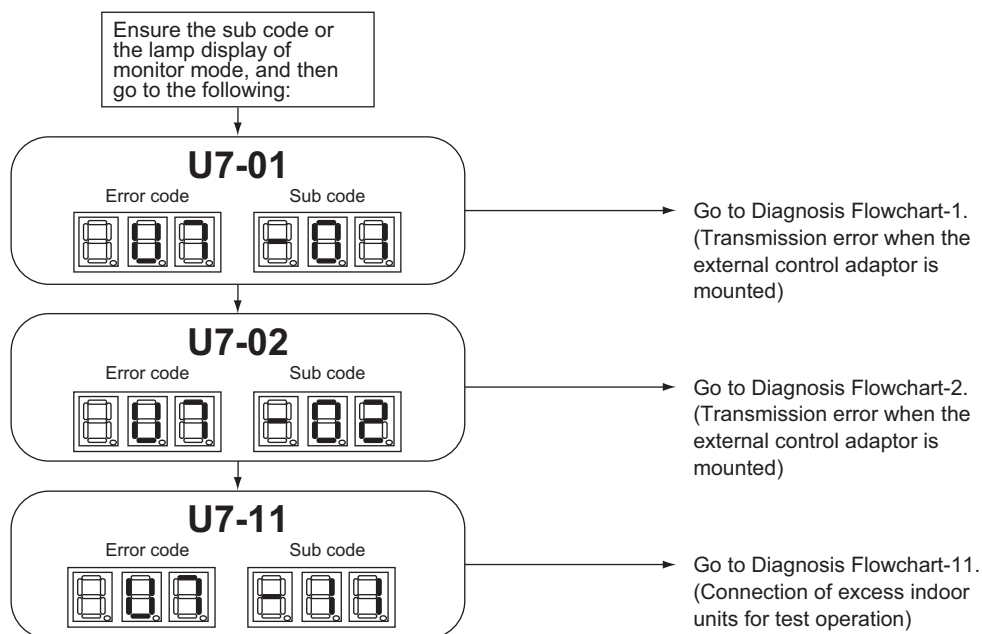


Diagnosis Flowchart-1

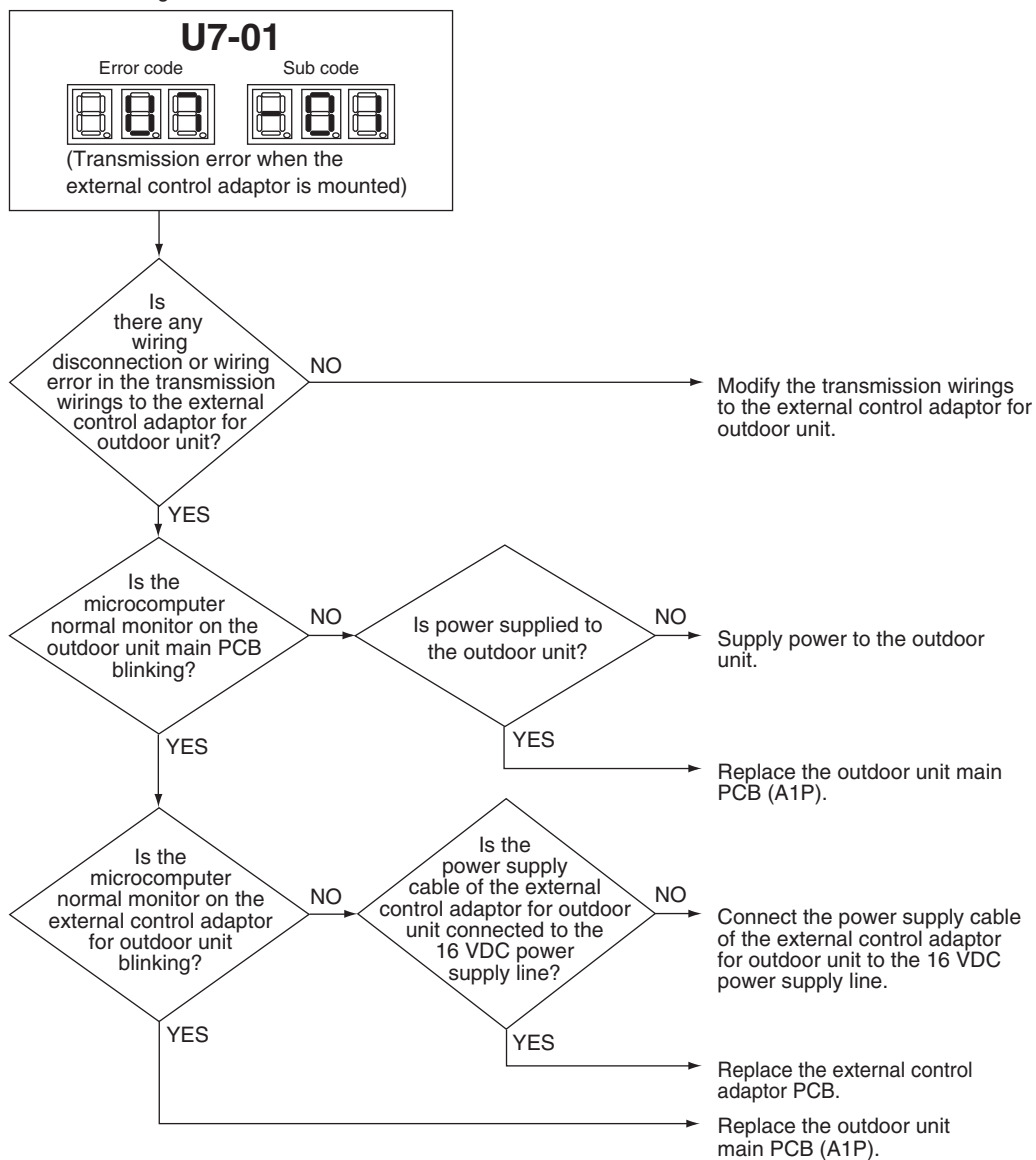

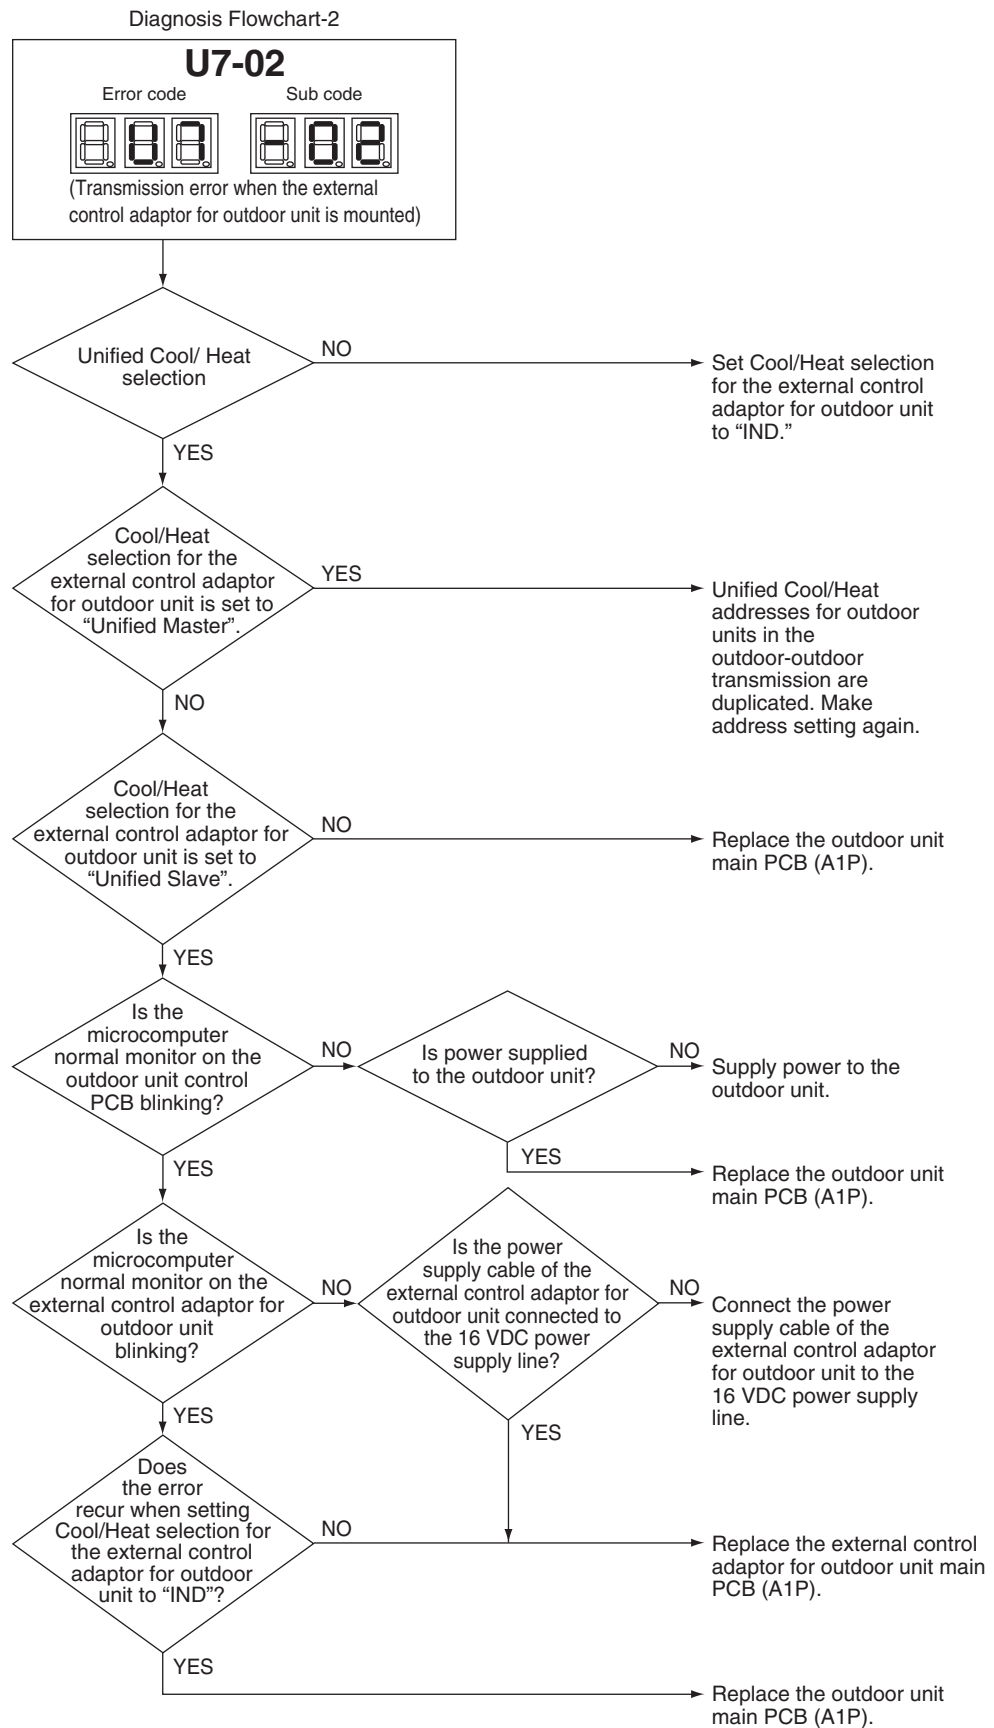

Diagnosis Flowchart-11

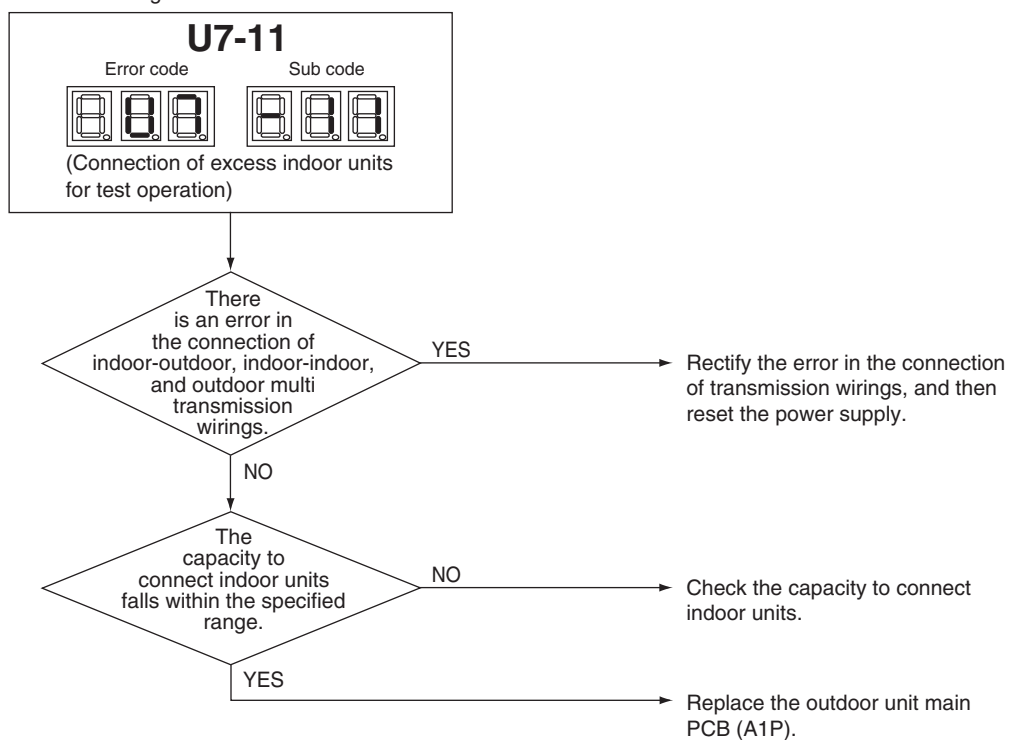


5.61 Transmission Error between Main and Sub Remote Controllers

Applicable Models	All indoor unit models
Error code	U8
Method of Error Detection	In case of controlling with 2 remote controllers, check the system using microcomputer if signal transmission between indoor unit and remote controller (main and sub remote controller) is normal.
Error Decision Conditions	Transmission is not carried out normally for a certain amount of time.
Supposed Causes	<ul style="list-style-type: none"> ■ Transmission error between main and sub remote controller ■ Connection between sub remote controllers ■ Defective remote controller PCB

Troubleshooting


Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

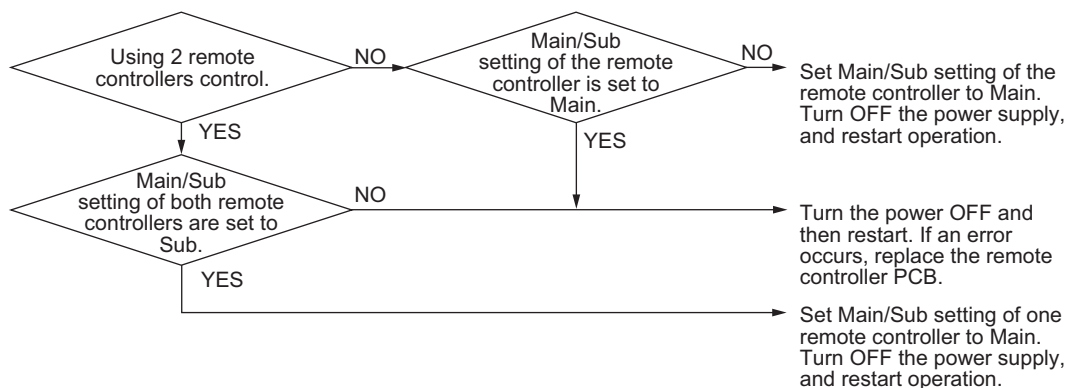
Reference

Refer to page 34 for Main/Sub setting.

5.62 Other Indoor Units and Outdoor Unit Abnormality

Applicable Models
All indoor unit models
All outdoor unit models

Error Code
U9

Method of Error Detection
Detect the error signal for the other indoor unit within the circuit by outdoor unit main PCB.

Error Decision Conditions
The error decision is made on any other indoor units within the system concerned.

Supposed Causes


- Transmission error between other indoor and outdoor units
- Defective electronic expansion valve of other indoor unit
- Defective indoor unit PCB of other indoor unit
- Improper connection of transmission wiring between indoor and outdoor unit

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

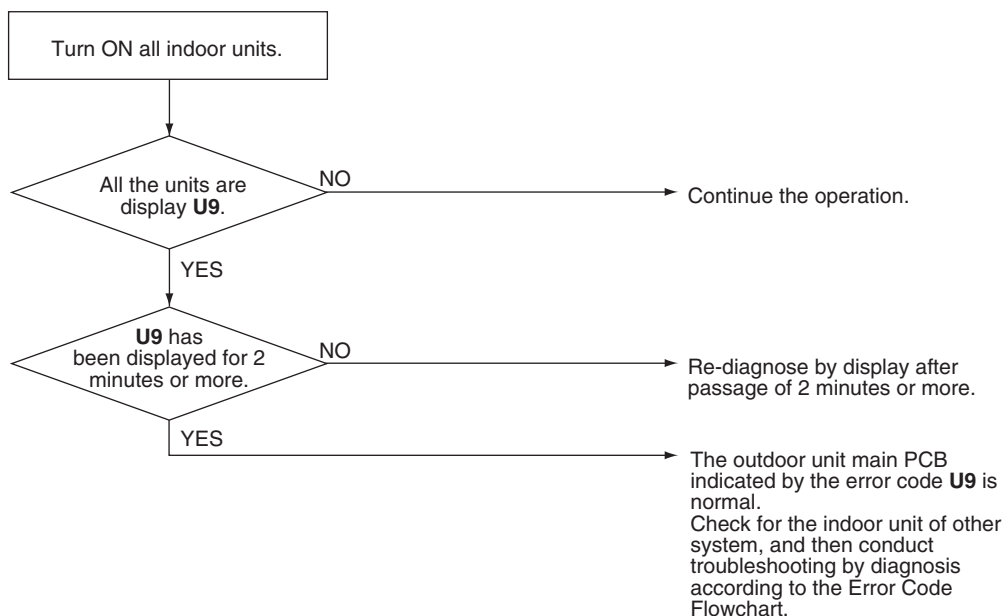

5.63 Improper Combination of Indoor Unit and Outdoor Unit, Indoor Unit and Remote Controller


Applicable Models	All indoor unit models All outdoor unit models
Error Code	UA
Method of Error Detection	A difference occurs in data by the type of refrigerant between indoor and outdoor units. The number of indoor units connected is out of the allowable range.
Error Decision Conditions	The error decision is made as soon as either of the abnormalities aforementioned is detected.
Supposed Causes	<ul style="list-style-type: none"> ■ Excess of connected indoor units ■ Defective outdoor unit main PCB ■ Mismatch of the refrigerant type of indoor and outdoor unit. ■ Setting of outdoor unit main PCB was not carried out after replacing to spare PCB.

Troubleshooting





Caution



Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

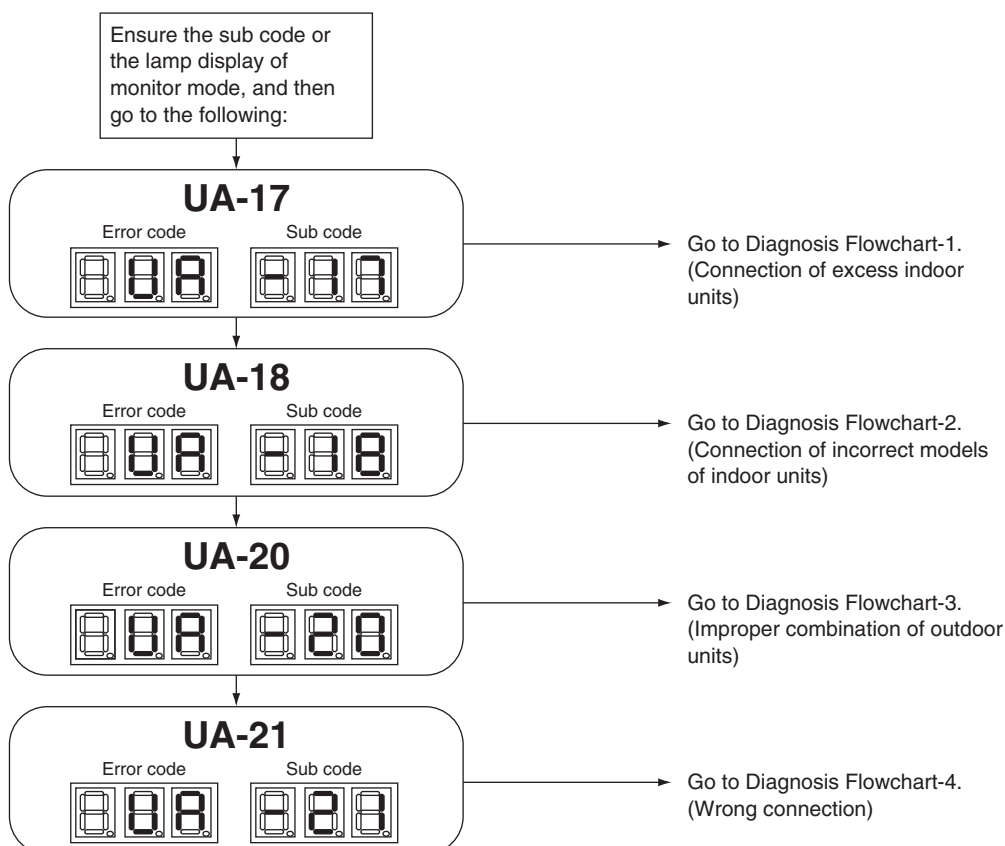



Diagnosis Flowchart-1

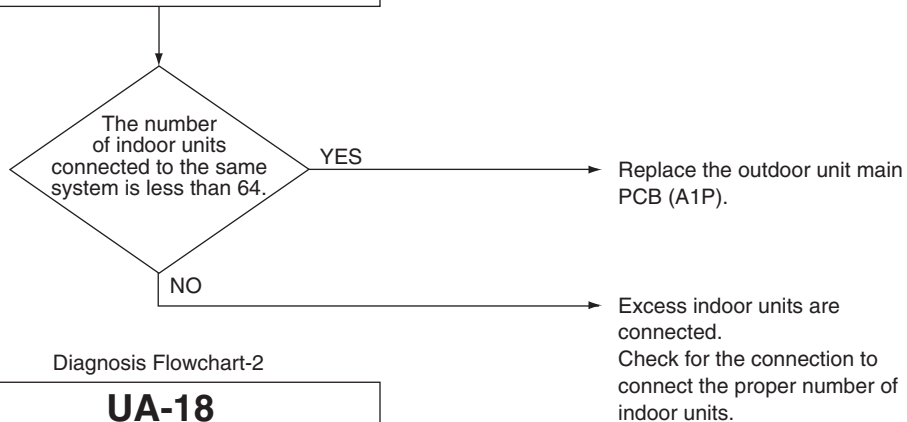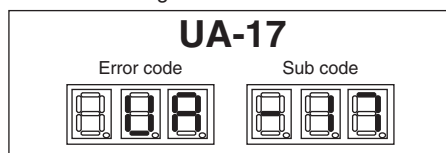


Diagnosis Flowchart-2

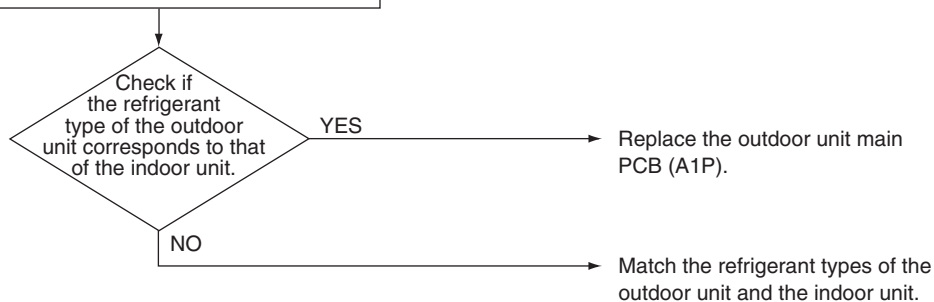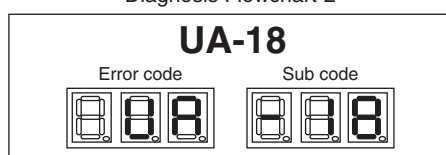

Diagnosis Flowchart-3

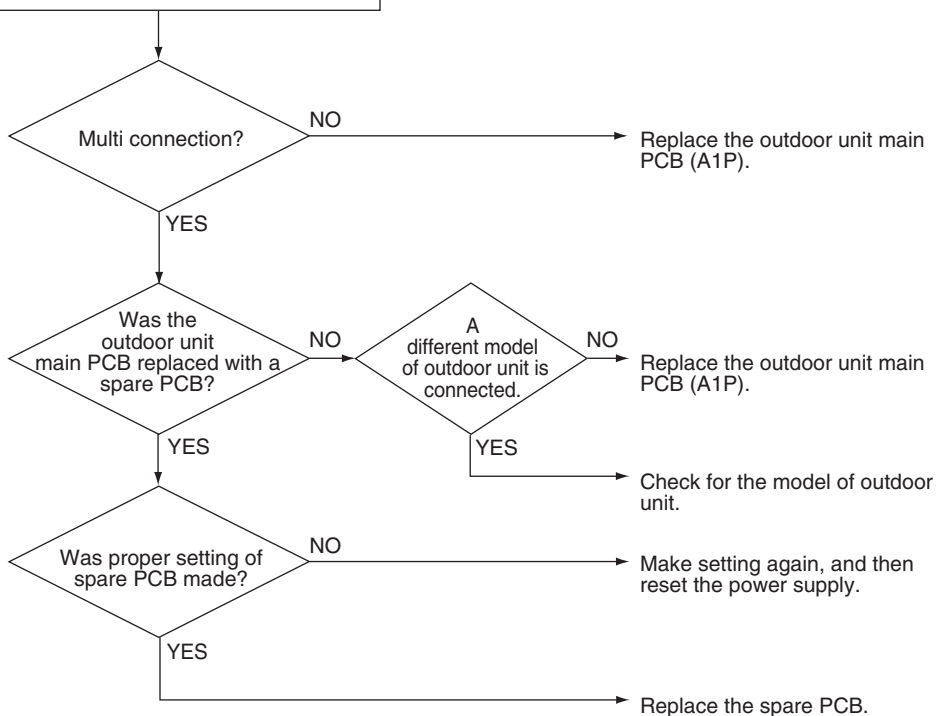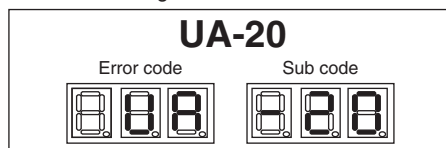

Diagnosis Flowchart-4

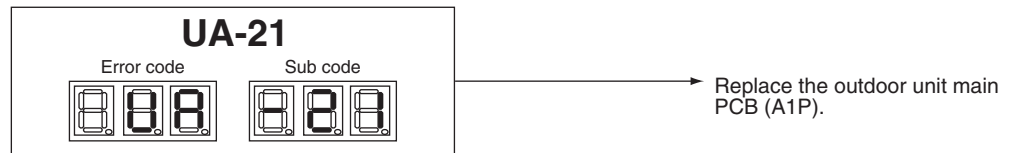

5.64 Address Duplication of Centralized Controller

Applicable Models	All indoor unit models Centralized controller
Error Code	UC
Method of Error Detection	The principal indoor unit detects the same address as that of its own on any other indoor unit.
Error Decision Conditions	The error decision is made as soon as the abnormality aforementioned is detected.
Supposed Causes	<ul style="list-style-type: none"> ■ Address duplication of centralized controller ■ Defective indoor unit PCB
Troubleshooting	


Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

The centralized address is duplicated.

→ Make setting change so that the centralized address will not be duplicated.

5.65 Transmission Error between Centralized Controller and Indoor Unit


Applicable Models	All indoor unit models Schedule timer Central remote controller
Error Code	UE
Method of Error Detection	Microcomputer checks if transmission between indoor unit and centralized controller is normal.
Error Decision Conditions	Transmission is not carried out normally for a certain amount of time
Supposed Causes	<ul style="list-style-type: none">■ Transmission error between optional controllers for centralized controller and indoor unit■ Connector for setting main controller is disconnected. (or disconnection of connector for independent / combined use changeover switch.)■ Defective PCB for central remote controller■ Defective indoor unit PCB


Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

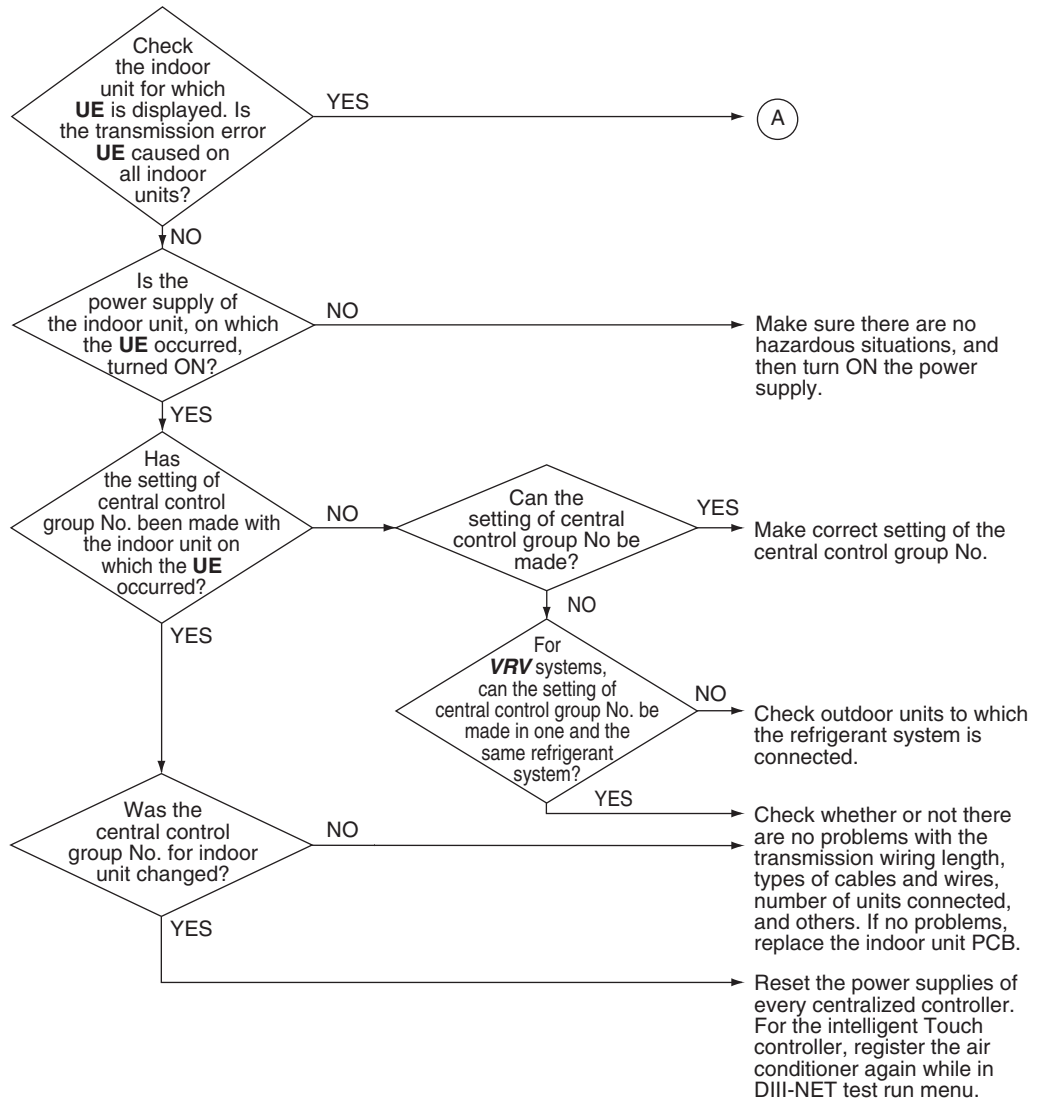

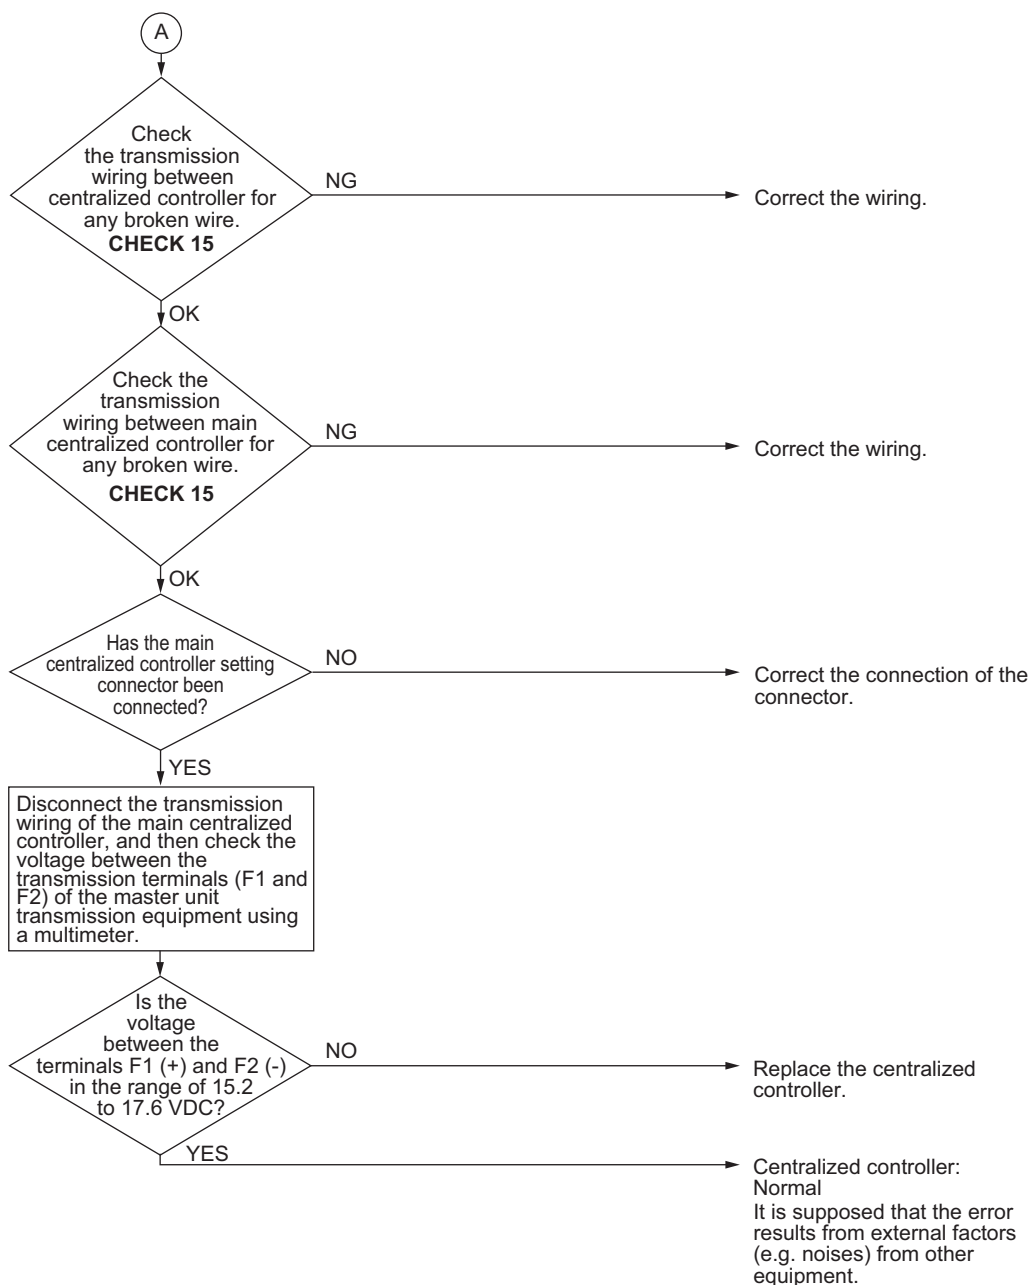


Reference

CHECK 15 Refer to page 285.

5.66 System Not Set Yet

Applicable Models	All indoor unit models All outdoor unit models
Error Code	UF
Method of Error Detection	On check operation, the number of indoor units in terms of transmission is not corresponding to that of indoor units that have made changes in temperature.
Error Decision Conditions	The error is determined as soon as the abnormality aforementioned is detected through checking the system for any erroneous connection of units on the check operation.
Supposed Causes	<ul style="list-style-type: none"> ■ Improper connection of transmission wiring between indoor-outdoor units ■ Failure to execute check operation ■ Defective indoor unit PCB ■ Stop valve is not opened

Troubleshooting

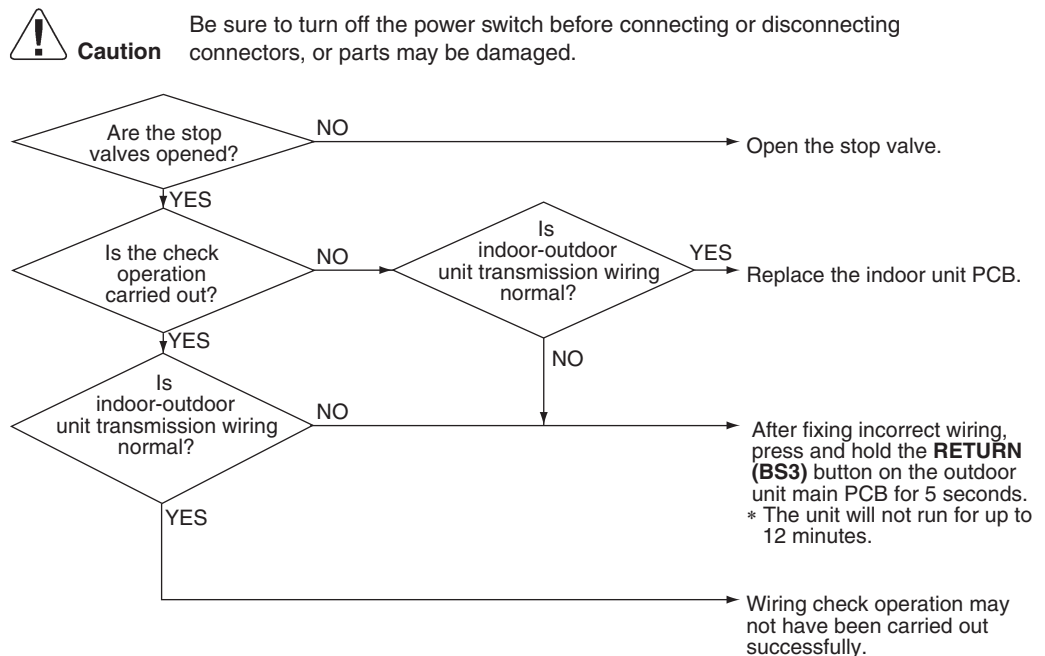

5.67 System Abnormality, Refrigerant System Address Undefined


Applicable Models	All indoor unit models All outdoor unit models
Error Code	UH
Method of Error Detection	Detect an indoor unit with no auto address setting.
Error Decision Conditions	The error decision is made as soon as the abnormality aforementioned is detected.
Supposed Causes	<ul style="list-style-type: none"> ■ Improper connection of transmission wiring between indoor-outdoor units ■ Defective indoor unit PCB ■ Defective outdoor unit main PCB

Troubleshooting



Caution

Be sure to turn off the power switch before connecting or disconnecting connectors, or parts may be damaged.

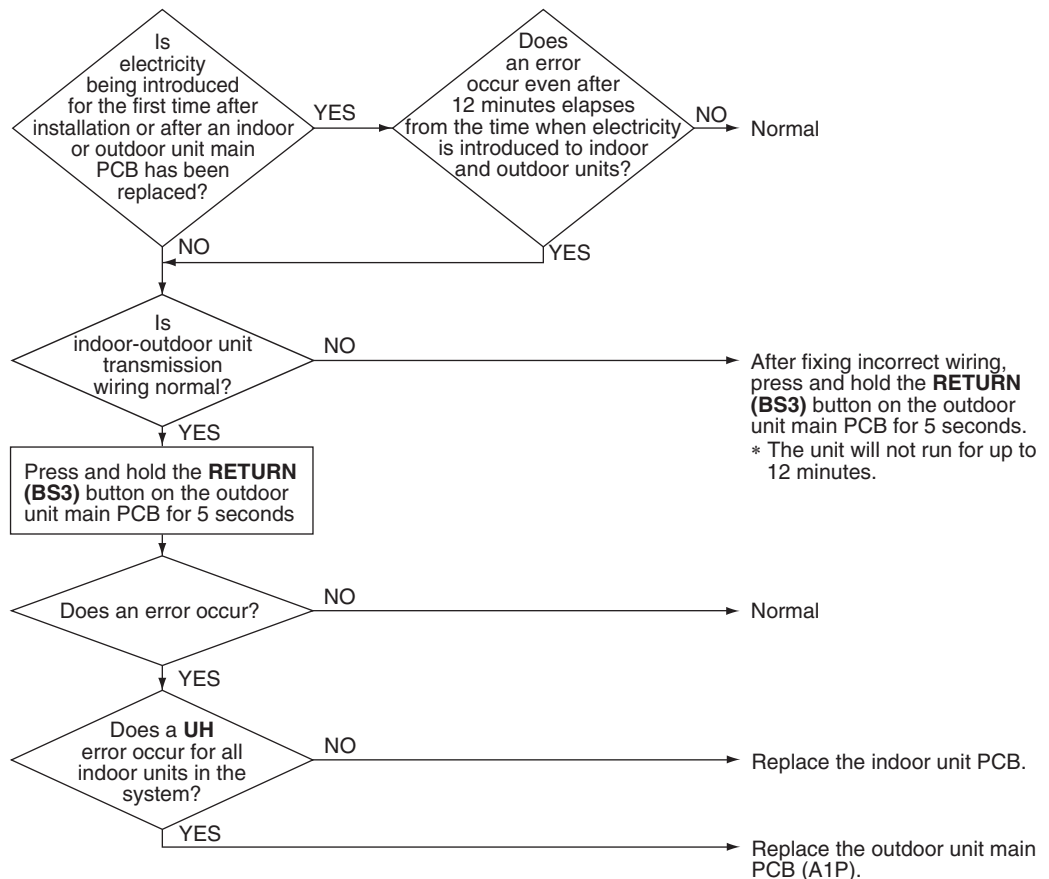


6. Check

6.1 High Pressure Check

CHECK 1

Referring to the Fault Tree Analysis (FTA) shown below, probe the defective points.

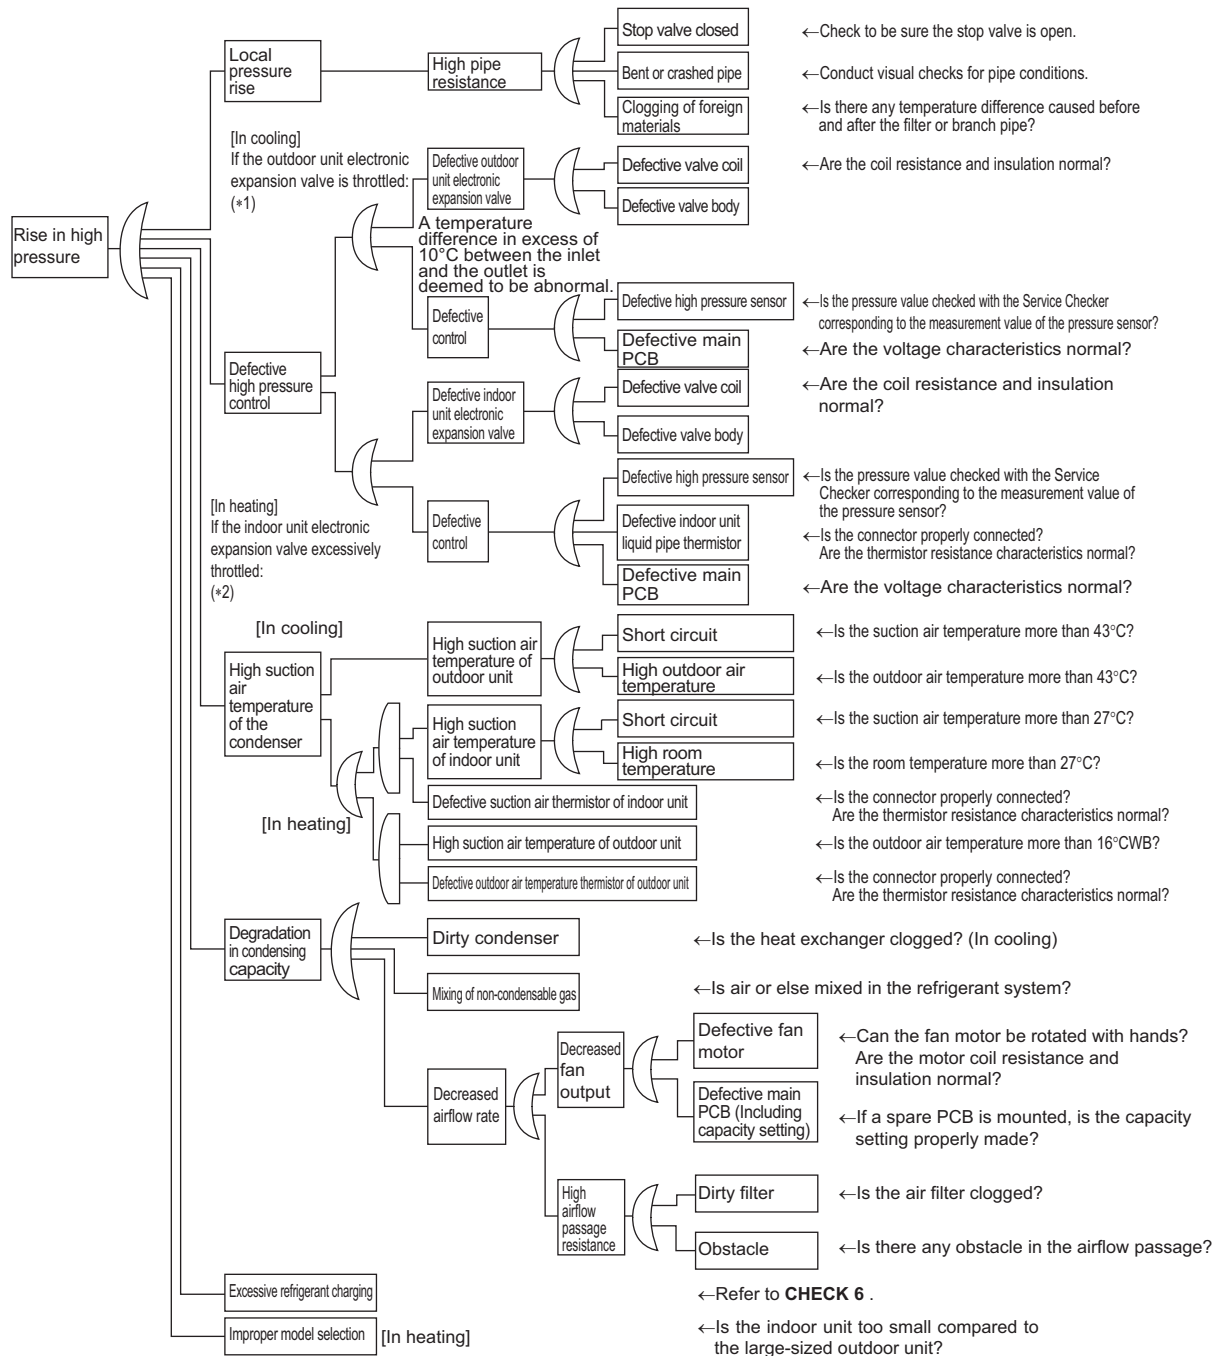

Note(s)

- *1. In cooling, it is normal if the outdoor unit electronic expansion valve (main) is fully open.
- *2. In heating, the indoor unit electronic expansion valve is used for subcooling degree control.




Reference

CHECK 6 Refer to page 278.

6.2 Low Pressure Check

CHECK 2

Referring to the Fault Tree Analysis (FTA) shown below, probe the defective points

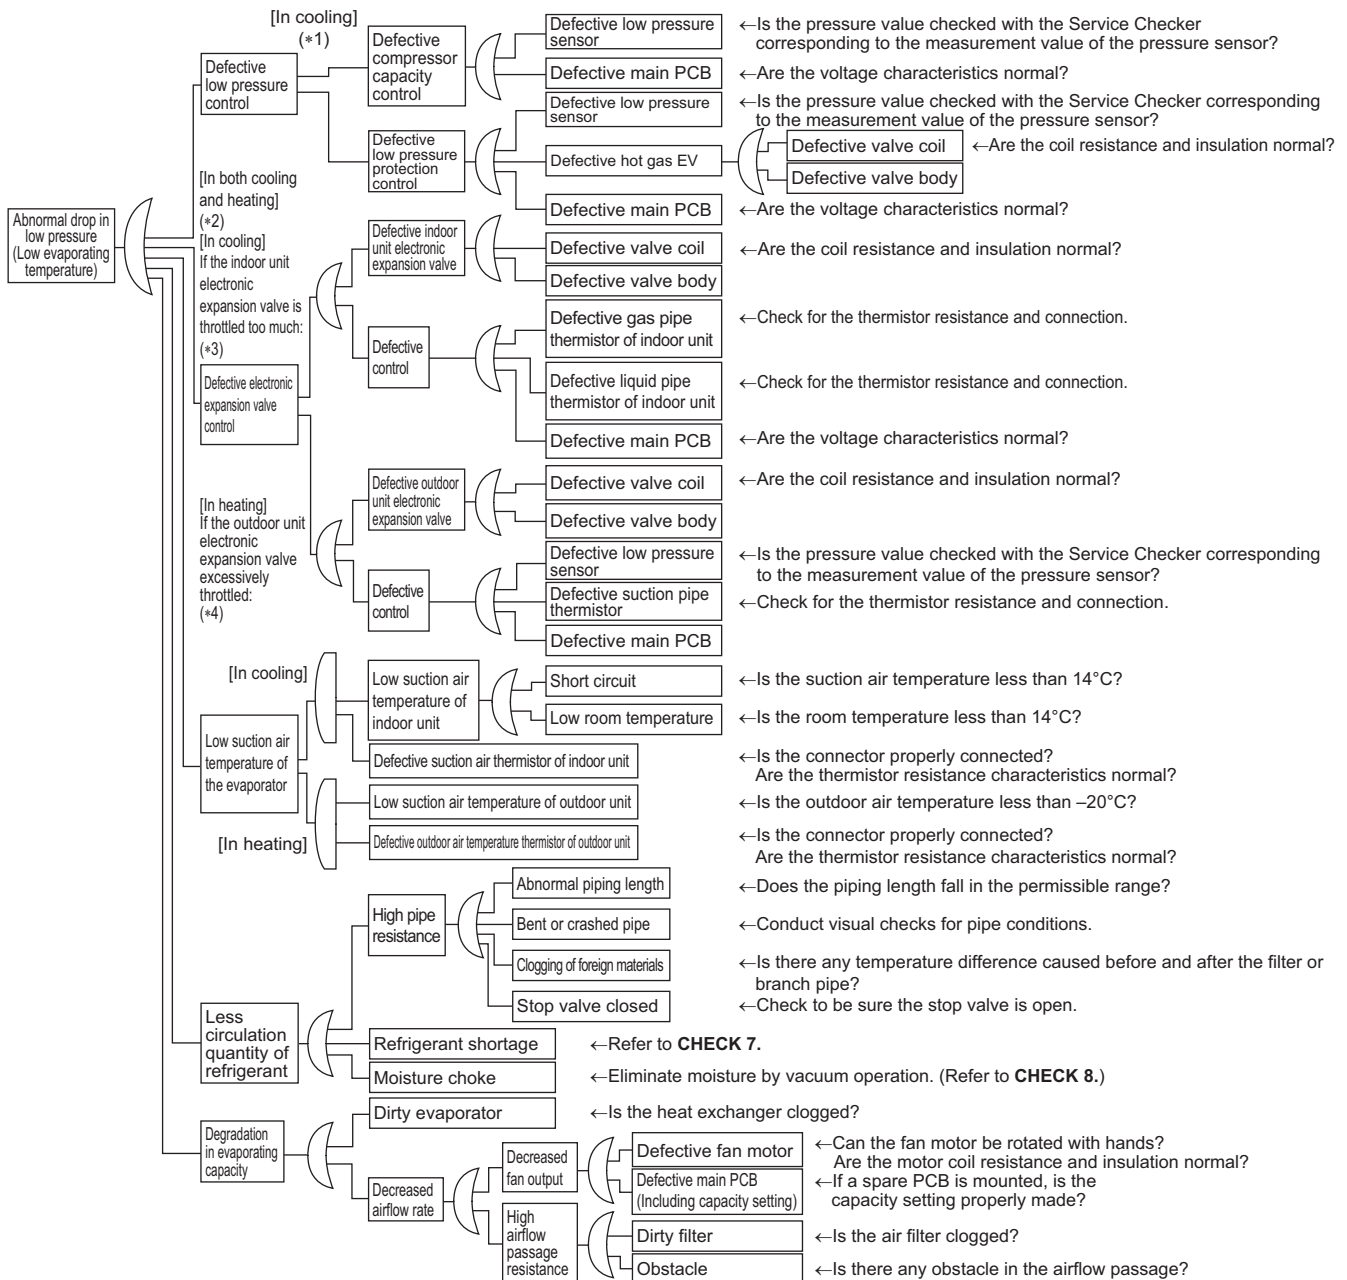

Note(s)

- *1. For details of compressor capacity control while in cooling refer to Compressor Capacity Control on page 56.
- *2. The “low pressure protection control” includes low pressure protection control and hot gas bypass control.
- *3. In cooling, the indoor unit electronic expansion valve is used for “superheating degree control”.
- *4. In heating, the outdoor unit electronic expansion valve is used for “superheating degree control of outdoor heat exchanger”.



Reference

CHECK 7 Refer to page 279.




Reference

CHECK 8 Refer to page 280.

6.3 Superheat Operation Check

CHECK 3

Referring to the Fault Tree Analysis (FTA) shown below, probe the defective points

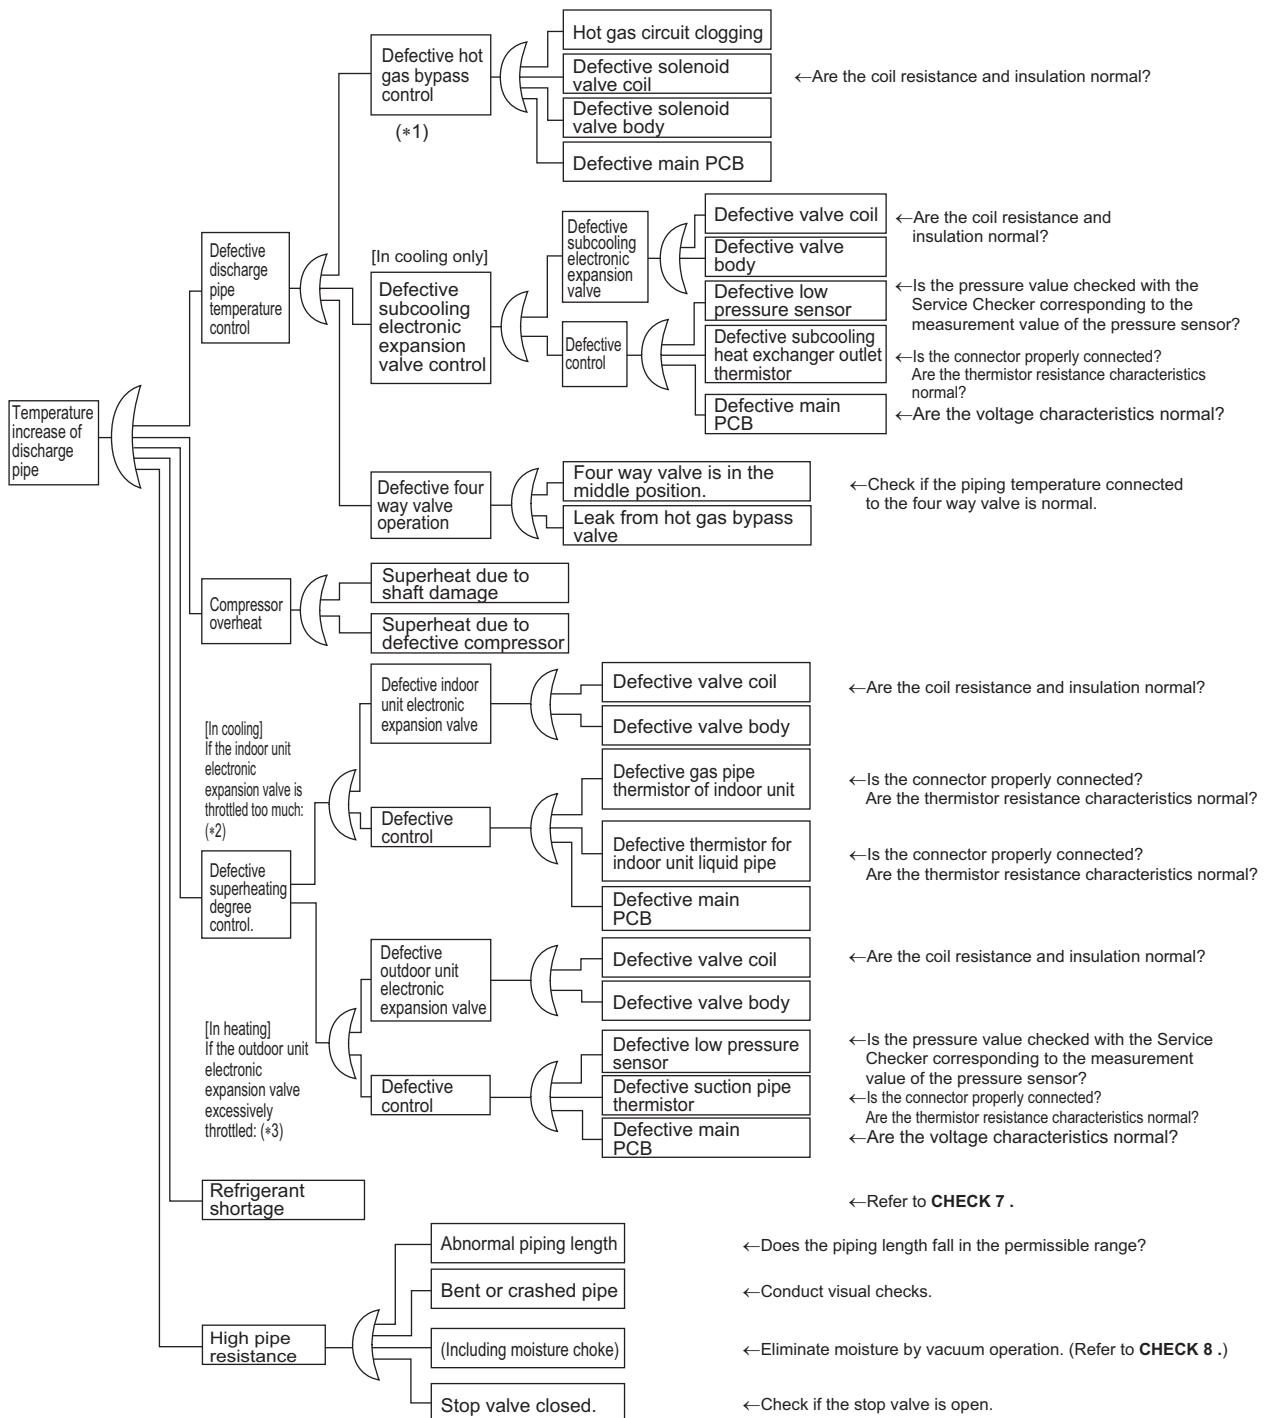

Note(s)

- *1. Refer to "Low pressure protection control" for hot gas bypass control.
- *2. "Superheating temperature control" in cooling is conducted by indoor unit electronic expansion valve.
- *3. Superheating temperature control in heating is conducted by outdoor unit electronic expansion valve (main).

- *4. Judgment criteria of superheat operation:
- (1) Suction gas superheating degree: 10°C and over.
 - (2) Discharge gas superheating degree: 45°C and over, except immediately after compressor starts up or is running under dropping control.
- (Use the above values as a guide. Depending on the other conditions, the unit may be normal despite the values within the above range.)



Reference **CHECK 7** Refer to page 279.



Reference **CHECK 8** Refer to page 280.


6.4 Power Transistor Check

CHECK 4

RXYMQ4AVMK


Use a multimeter to measure the resistance to determine if the power transistor is defective or not.

1. Do not touch live parts (high voltage parts) within 10 minutes after turning off the power supply.
2. Touch the earth terminal with your hand to release static electricity. (This is to avoid damaging the PCB.)
3. Use a multimeter to measure the C+ and C- on the PCB to make sure that the residual voltage of the power transistor is under 50 VDC.

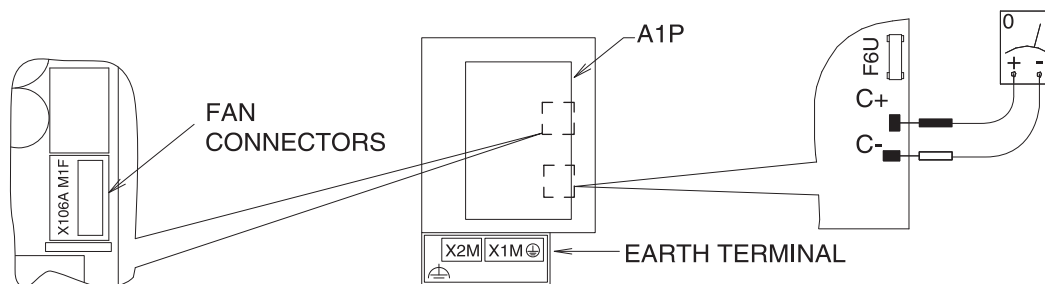

4. After verifying the residual voltage, pull out the outdoor fan motor connector.
If a strong wind causes the outdoor fan to rotate, the capacitor may store electricity. Therefore, make sure that the fan is still and then pull out the outdoor fan motor connector.
5. Disconnect the connection wire between the power transistor and the compressor.
Remove the connection wire from the compressor.
At this point, make sure that there is no deformation of the Faston terminal at the front end of the connection wire.
6. Use a multimeter to measure the resistance listed in the table.
Among the three phases listed in the table, if there is one phase with unbalanced resistance (with a value five times higher than the other values), then the power transistor is defective.
When normal, all phases have the same resistance value.

Multimeter		Resistance	Multimeter		Resistance
Red (+)	Black (-)	Ω	Red (+)	Black (-)	Ω
C+	U		C-	U	
C+	V		C-	V	
C+	W		C-	W	
U	C+		U	C-	
V	C+		V	C-	
W	C+		W	C-	

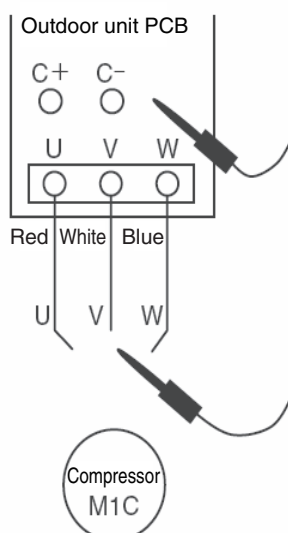


RXYMQ4-6AYFK

Perform the following procedures prior to check.

- (1) Power OFF.
- (2) Remove all the wiring connected to the PCB where power transistors are mounted on.

Preparation

Multimeter

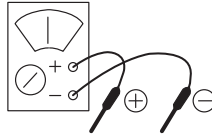

- * Prepare the analog type of multimeter.
For the digital type of multimeter, those with diode check function are available for the checking.

Point of Measurement and Judgment Criteria

Turn OFF the power supply. Then, after a lapse of 10 minutes or more, make measurement of resistance.


When using the analog type of multimeter,
make measurement in resistance measurement mode in the x1 k Ω range.

No.	Measuring point		Judgment Criteria	Remarks
	+	-		
1	P2	U	2 ~ 15 k Ω	—
2	P2	V		
3	P2	W		
4	U	P2	15 k Ω and more (including ∞)	Due to condenser charge and so on, resistance measurement may require some time.
5	V	P2		
6	W	P2		
7	N32	U		
8	N32	V		
9	N32	W		
10	U	N32	2 ~ 15 k Ω	—
11	V	N32		
12	W	N32		

When using the digital type of multimeter, make measurement in diode check mode.

No.	Measuring point		Judgment Criteria	Remarks
	+	-		
1	P2	U	1.2 V and more	Due to condenser charge and so on, resistance measurement may require some time.
2	P2	V		
3	P2	W		
4	U	P2	0.3 ~ 0.7 V	—
5	V	P2		
6	W	P2		
7	N32	U		
8	N32	V		
9	N32	W		
10	U	N32	1.2 V and more	Due to condenser charge and so on, resistance measurement may require some time.
11	V	N32		
12	W	N32		

PCB and Circuit Diagram

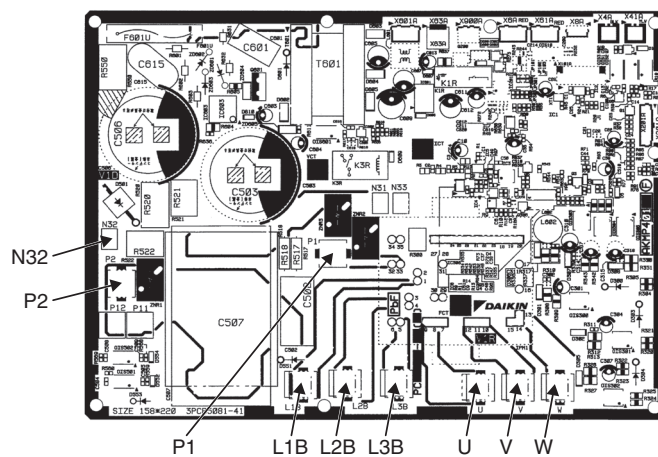



6.5 Refrigerant Overcharge Check

CHECK 6

In case of **VRV** Systems, the only way to judge as the overcharge of refrigerant is with operating conditions due to the relationship to pressure control and electronic expansion valve control. As information for making a judgment, refer to the information below.

Diagnosis of refrigerant overcharge

1. High pressure rises. Consequently, overload control is conducted to cause insufficient cooling capacity.
2. The superheating degree of suction gas lowers (or wet operation is performed). Consequently, the compressor becomes lower in discharge pipe temperature despite of pressure loads.
3. The subcooling degree of condensate rises. Consequently, in heating, the temperature of discharge air through the subcooled section decreases.

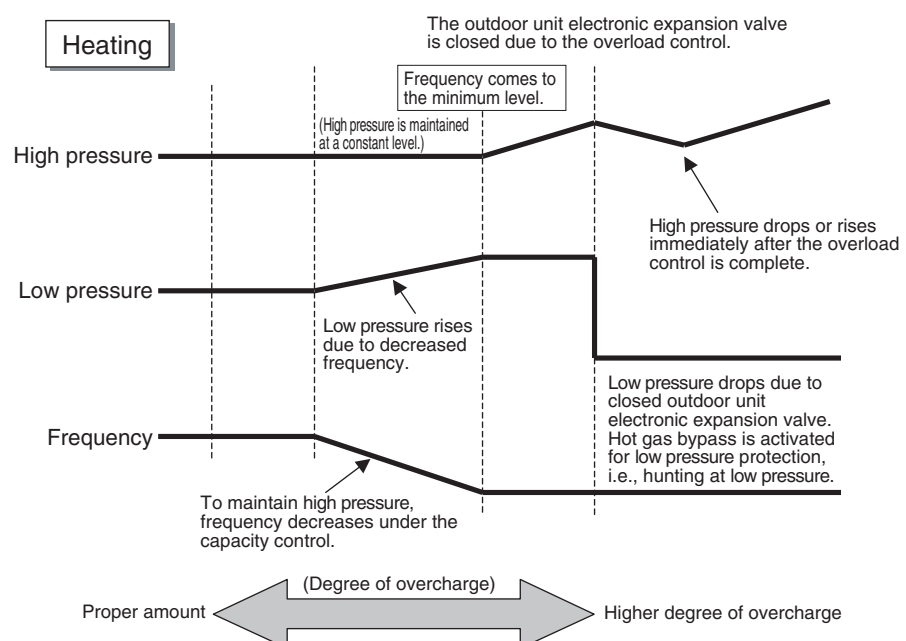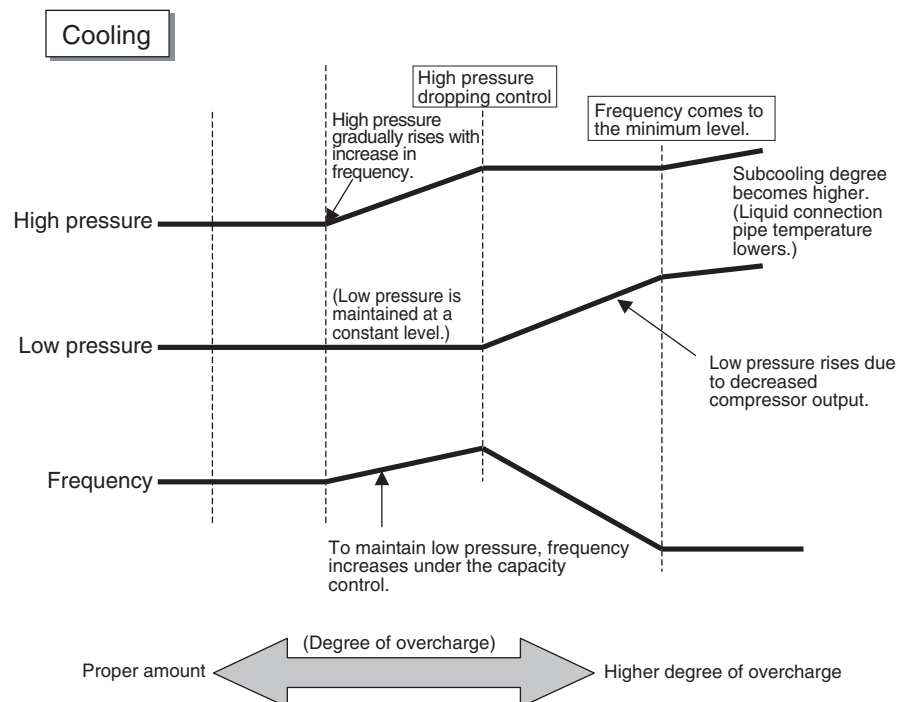


6.6 Refrigerant Shortage Check

CHECK 7

In case of **VRV** Systems, the only way to judge as the shortage of refrigerant is with operating conditions due to the relationship to pressure control and electronic expansion valve control. As information for making a judgement, refer to the information below.

Diagnosis of shortage of refrigerant

1. The superheating degree of suction gas rises. Consequently, the compressor discharge gas temperature becomes higher.
2. The superheating degree of suction gas rises. Consequently, the electronic expansion valve turns open.
3. Low pressure drops to cause the unit not to demonstrate cooling/heating capacity.

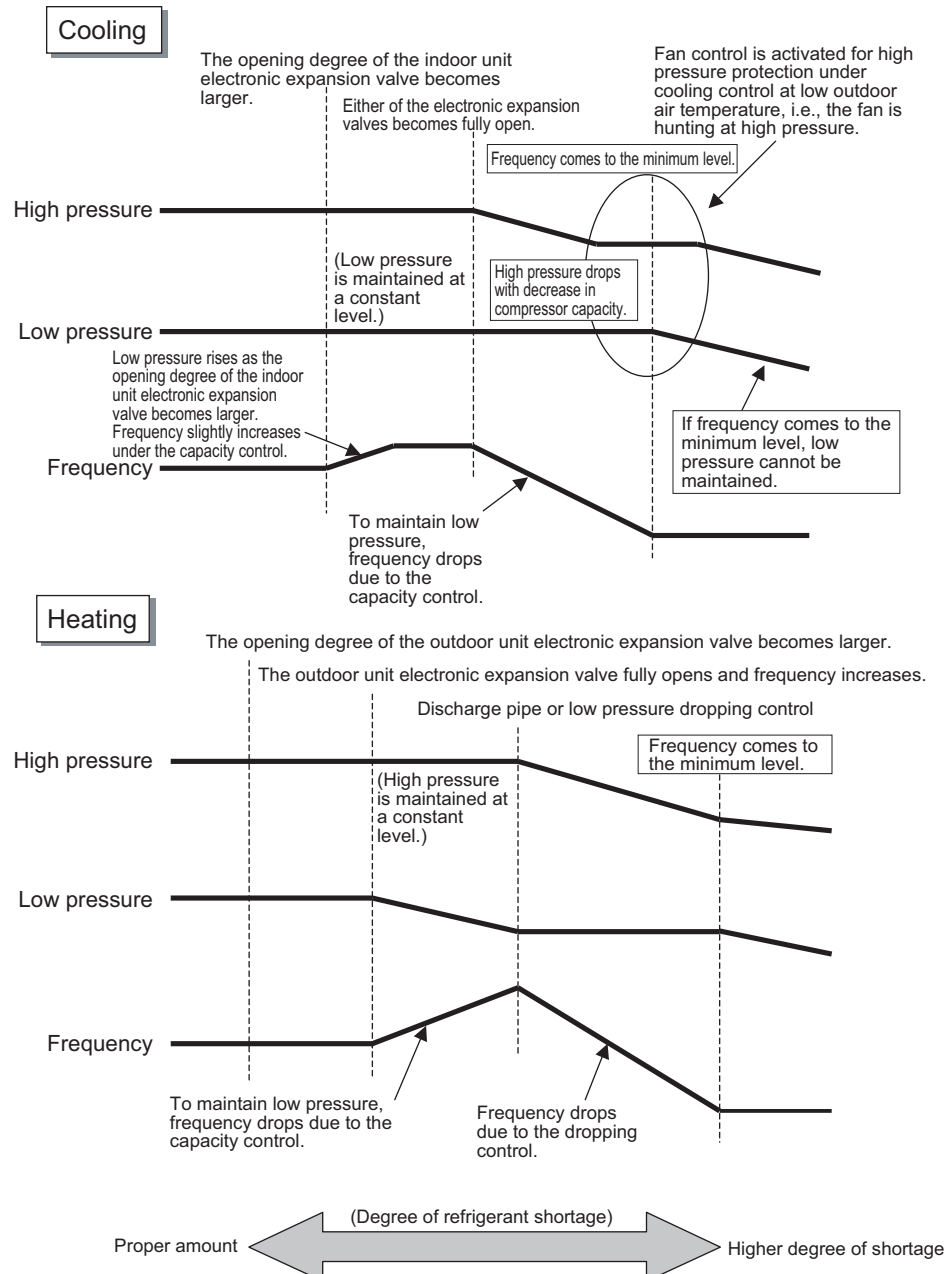

6.7 Vacuuming and Dehydration Procedure

CHECK 8

Conduct vacuuming and dehydration in the piping system following the procedure for Normal vacuuming and dehydration described below.

Furthermore, if moisture may get mixed in the piping system, follow the procedure for Special vacuuming and dehydration described below.

Normal vacuuming and dehydration

1. Vacuuming and dehydration
 - Use a vacuum pump that enables vacuuming up to -100.7 kPaG (5 Torr, -755 mmHgG).
 - Connect manifold gauges to the service ports of liquid pipe and gas pipe and run the vacuum pump for a period of two or more hours to conduct evacuation to -100.7 kPaG or less.
 - If the degree of vacuum does not reach -100.7 kPaG or less even though evacuation is conducted for a period of two hours, moisture will have entered the system or refrigerant leakage will have been caused. In this case, conduct evacuation for a period of another one hour.
 - If the degree of vacuum does not reach -100.7 kPaG or less even though evacuation is conducted for a period of three hours, conduct the leak tests.
2. Leaving in vacuum state
 - Leave the compressor at the degree of vacuum of -100.7 kPaG or less for a period of one hour or more, and then check to be sure that the vacuum gauge reading does not rise. (If the reading rises, moisture may have remained in the system or refrigerant leakage may have been caused.)
3. Additional refrigerant charge
 - Purge air from the manifold gauge connection hoses, and then charge a necessary amount of refrigerant.

Special vacuuming and dehydration

Use this procedure if moisture may get into the piping, such as construction during the rainy season (dew condensation may occur, or rainwater may enter the piping during construction work).

1. Vacuuming and dehydration
 - Follow the same procedure as that for Normal vacuuming and dehydration described above.
2. Vacuum break
 - Pressurize with nitrogen gas up to 0.05 MPaG.
3. Vacuuming and dehydration
 - Conduct vacuuming and dehydration for a period of one hour or more. If the degree of vacuum does not reach -100.7 kPaG or less even though evacuation is conducted for a period of two hours or more, repeat vacuum break - vacuuming and dehydration.
4. Leaving in vacuum state
 - Leave the compressor at the degree of vacuum of -100.7 kPaG or less for a period of one hour or more, and then check to be sure that the vacuum gauge reading does not rise.
5. Additional refrigerant charge
 - Purge air from the manifold gauge connection hoses, and then charge a necessary amount of refrigerant.

6.8 Thermistor Check

CHECK 11

Thermistor type of indoor units

Model	R1T Suction air thermistor	R2T Indoor heat exchanger (liquid) thermistor	R3T Indoor heat exchanger (gas) thermistor
FXFSQ-AR	Type C	Type A	Type A
FXDQ-PD	Type B		Type J
FXDQ-ND			
FXMQ-PB			
FXMQ-AR			
FXAQ-AR			

Thermistor type of outdoor units

Thermistor		Type
R1T	Outdoor air thermistor	E
R21T	Discharge pipe thermistor	H
R3T	Suction pipe thermistor	A
R4T	Heat exchanger liquid pipe thermistor	A
R5T	Subcooling heat exchanger liquid pipe thermistor	A
R6T	Subcooling heat exchanger gas pipe thermistor	A
R7T	Heat exchanger deicer	A
R10T	Radiation fin thermistor	K

Thermistor temperature (°C)	Resistance (kΩ)		
	Type A	Type B	Type C
−30	363.8	361.7719	—
−25	266.8	265.4704	—
−20	197.8	196.9198	—
−15	148.2	147.5687	—
−10	112.0	111.6578	111.8
−5	85.52	85.2610	85.42
0	65.84	65.6705	65.80
5	51.05	50.9947	51.07
10	39.91	39.9149	39.97
15	31.44	31.4796	31.51
20	24.95	25.0060	25.02
25	19.94	20.0000	20.00
30	16.04	16.1008	16.10
35	12.99	13.0426	13.04
40	10.58	10.6281	10.63
45	8.669	8.7097	8.711
50	7.143	7.1764	7.179
55	5.918	5.9407	—
60	4.928	4.9439	—
65	4.123	4.1352	—
70	3.467	3.4757	—
75	—	2.9349	—
80	—	2.4894	—
85	—	2.1205	—
90	—	1.8138	—
95	—	1.5575	—
100	—	1.3425	—
105	—	1.1614	—
Drawing No.	3SA48002 3SA48018 3S480003 (AD94A045)	3SA48001 3P283292 (AD87A001)	3SA48016 (AD100008) 3S480014 (AD150384)

*This data is for reference purposes only.

Thermistor temperature (°C)	Resistance (kΩ)			
	Type E	Type H	Type J	Type K
−30	362.4862	3407	352.1	350.6
−25	265.9943	2540	261.2	257.4
−20	197.3083	1910	195.4	191.0
−15	147.8597	1449	147.3	143.2
−10	111.8780	1108	111.8	108.4
−5	85.4291	853.8	85.49	82.83
0	65.8000	662.7	65.80	63.80
5	51.0954	517.9	51.15	49.53
10	39.9938	407.4	40.08	38.75
15	31.5417	322.5	31.64	30.56
20	25.0554	256.9	25.16	24.26
25	20.0395	205.7	20.14	19.40
30	16.1326	165.7	16.23	15.62
35	13.0683	134.3	13.16	12.65
40	10.6490	109.4	10.73	10.31
45	8.7269	89.58	8.800	8.447
50	7.1905	73.73	7.255	6.962
55	5.9524	60.98	6.012	5.769
60	4.9536	50.67	5.010	4.805
65	4.1434	42.29	4.196	4.021
70	3.4825	35.45	3.532	3.381
75	2.9407	29.84	2.987	2.856
80	2.4943	25.21	2.538	2.422
85	2.1247	21.38	2.166	2.063
90	1.8173	18.21	1.857	1.764
95	1.5605	15.57	1.598	1.515
100	1.3451	13.36	1.380	1.305
105	1.1636	11.49	1.196	1.128
110	—	9.92	1.041	0.9781
115	—	8.594	0.908	0.8506
120	—	7.465	0.795	0.7420
125	—	6.499	0.698	0.6495
130	—	5.675	0.615	0.5700
135	—	4.968	0.543	—
140	—	4.360	0.481	—
145	—	3.836	0.428	—
150	—	3.384	0.381	—
Drawing No.	3S480024 (AD180053) 3S480025 (AD180054)	3SA48006 (AD190115)	3SA48005 (AD190114)	3P204139 (AD070077)


*This data is for reference purposes only.

6.9 Pressure Sensor Check

CHECK 12

Pressure Sensor and Voltage Characteristics

Detected Pressure
P_H, P_L
(kg/cm²)(MPa)

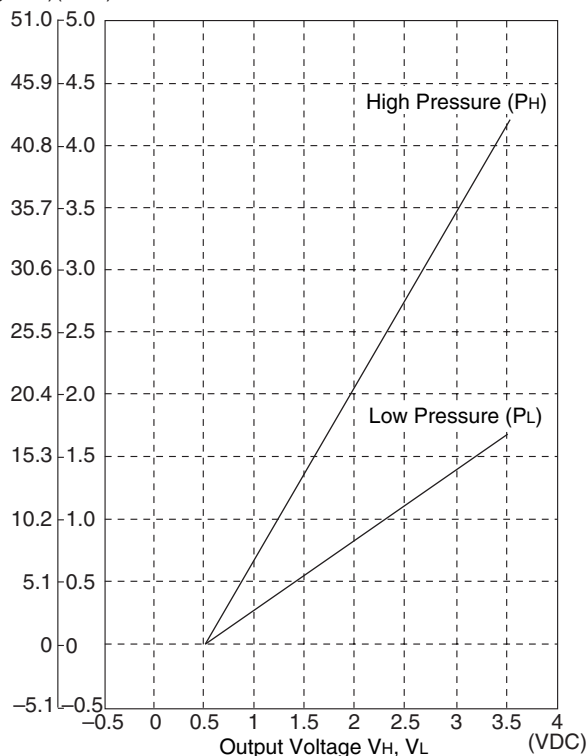

$$P_H \text{ (MPa)} = \frac{4.15}{3.0} \times V_H - \frac{4.15}{3.0} \times 0.5$$

$$P_L \text{ (MPa)} = \frac{1.7}{3.0} \times V_L - \frac{1.7}{3.0} \times 0.5$$


P_H : High pressure (MPa)

P_L : Low pressure (MPa)


V_H : Output Voltage (High Side) (VDC)

V_L : Output Voltage (Low Side) (VDC)

Voltage Measurement Point of the High Pressure Sensor

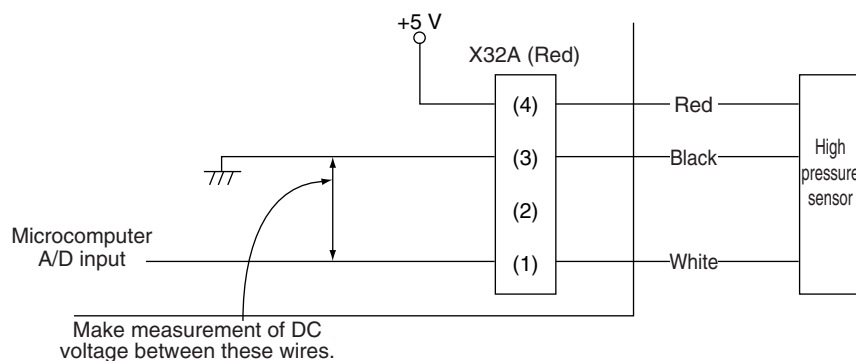

Voltage Measurement Point of the Low Pressure Sensor

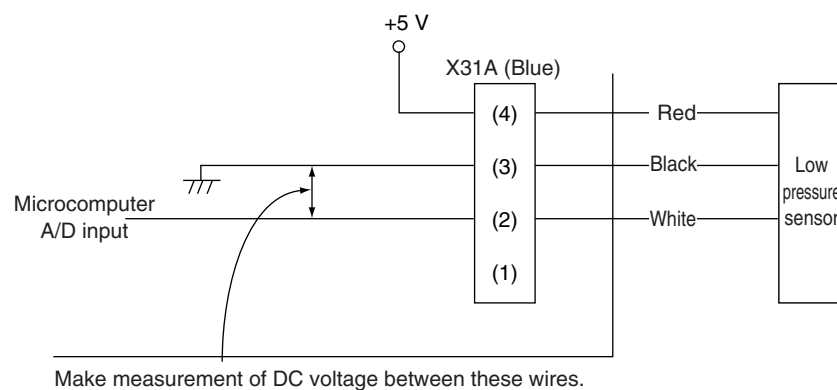

6.10 Broken Wire Check of the Relay Wires


CHECK 15

Procedure for checking indoor-outdoor unit transmission wiring for broken wires

Turn OFF the power supply to all equipment, short circuit between the indoor-outdoor unit terminal F1 and F2 in outdoor unit, and then conduct continuity checks between the transmission wiring F1 and F2 of "Indoor Unit a" farthest from outdoor unit using a multimeter. If there is continuity between the transmission wiring, the indoor-outdoor unit transmission wiring has no broken wires in it.

If there is no continuity, the transmission wiring may have broken wires. With the indoor-outdoor unit terminal of outdoor unit short circuited, identify the areas with continuity in the transmission wiring of "Indoor Unit b", transmission wiring of "Indoor Unit c", and transmission wiring of "Indoor Unit d" in the order described.

If the areas with continuity can be identified, there may be broken wires in places before those areas.

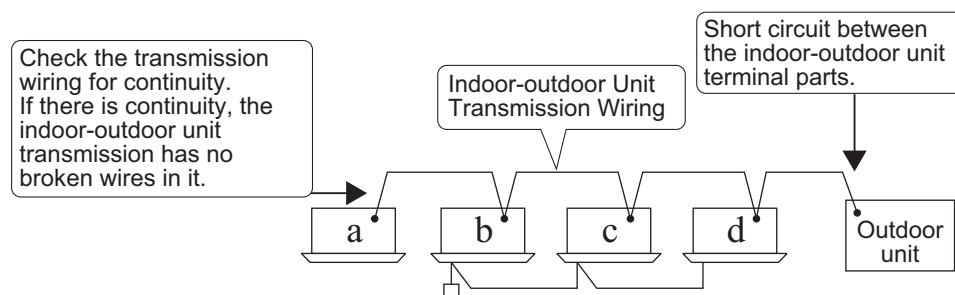


6.11 Fan Motor Connector Check (Power Supply Cable)

CHECK 16

Check the fan motor connector according to the following procedure.

Outdoor unit


1. Turn OFF the power supply.
2. Measure the resistance between phases of U, V, W at the motor side connectors (3-core wire) to check that the values are balanced and there is no short circuiting, while connector or relay connector is disconnected.

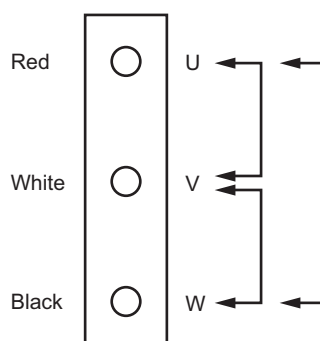

Indoor unit

FXDQ-PD, FXDQ-ND

1. Turn OFF the power supply.
2. Measure the resistance between phases of U, V, W at the motor side connectors (3-core wire) to check that the values are balanced and there is no short circuiting, while connector or relay connector is disconnected.

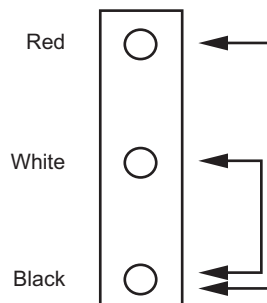


Model	Judgment	
	Black-Red	Black-White
FXDQ20-32PD	81.0 $\Omega \pm 10\%$	102.0 $\Omega \pm 10\%$
FXDQ40ND	81.0 $\Omega \pm 10\%$	102.0 $\Omega \pm 10\%$
FXDQ50/63ND	44.0 $\Omega \pm 10\%$	44.0 $\Omega \pm 10\%$

FXMQ50-140PB

Measurement of power wire connector.

Remove the X1A connector from the fan PCB (A2P) and measure the resistance between the U and V, V and W, and W and U phases of the motor connector (with five conductors) and check that each phase are balanced (within a permissible dispersion range of $\pm 20\%$)

Connector power wire use (X1A)

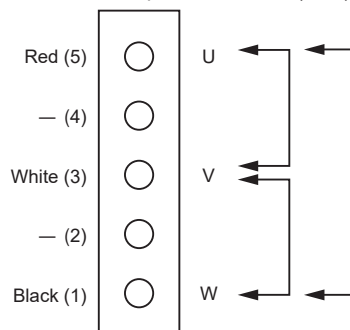


6.12 Fan Motor Connector Check (Signal Cable)

CHECK 17

Resistance measuring points and judgment criteria.

FXMQ40PB, FXAQ-AR

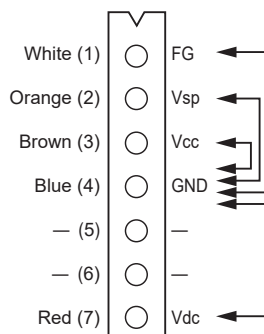


Measuring points	Judgment criteria
1-4	1 Ω or more
2-4	1 Ω or more
3-4	1 Ω or more
7-4	1 Ω or more

FXMQ50-140PB

Measurement of signal wire connector.

Remove the X2A connector and measure the resistance between GND and Vcc, Hw, Hv, or Hu terminals of the motor connector (with five conductors).

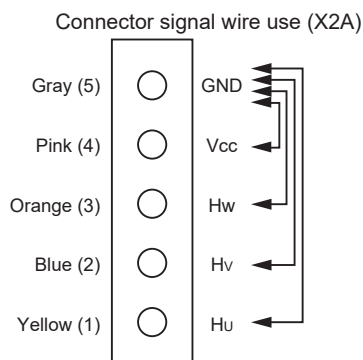


6.13 Electronic Expansion Valve Coil Check

CHECK 18

Remove the connector for electronic expansion valve from PCB. Measure the resistance value between pins and check the continuity to judge the condition.
The normal products will show the following conditions.


Outdoor unit

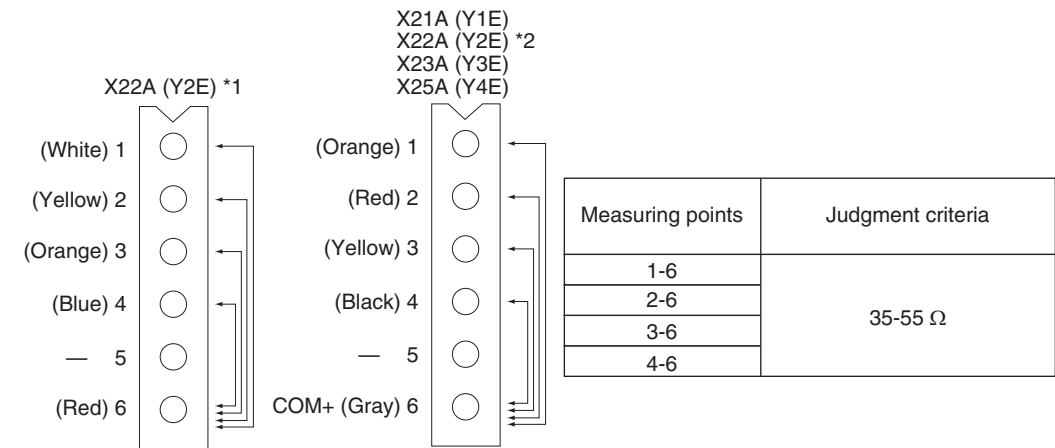


*1. For RXYMQ4AVMK
*2. For RXYMQ4-6AYFK

Indoor unit

FXFSQ-AR, FXMQ-PB

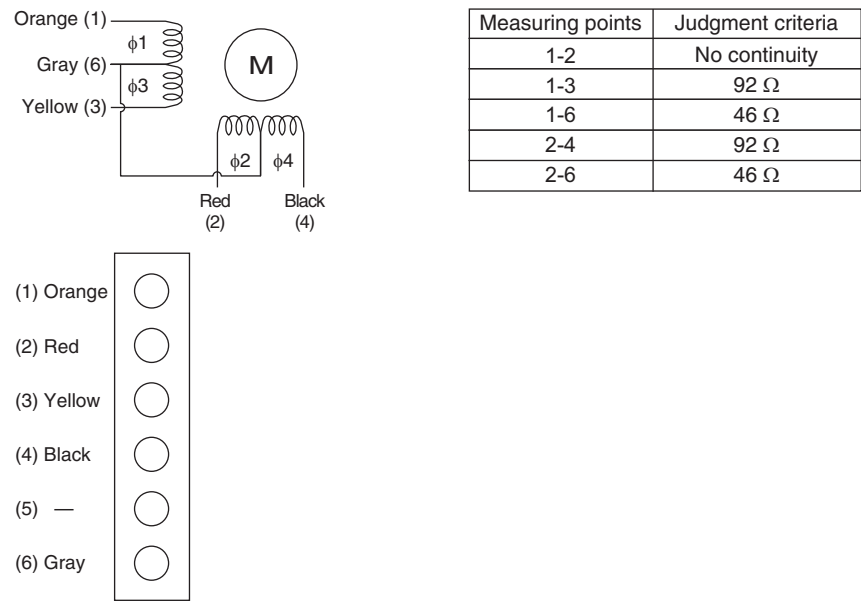


FXDQ-PD, FXDQ-ND

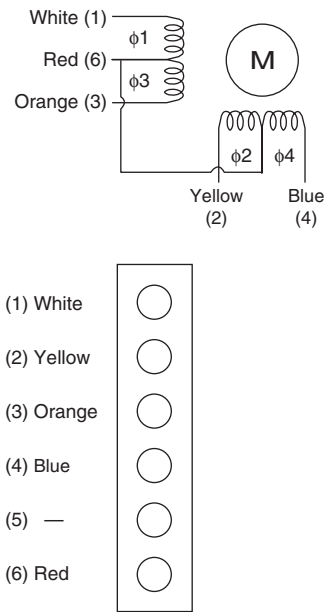


Measuring points	Judgment criteria
1-2	No continuity
1-3	92 Ω
1-6	46 Ω
2-4	92 Ω
2-6	46 Ω

FXMQ-AR

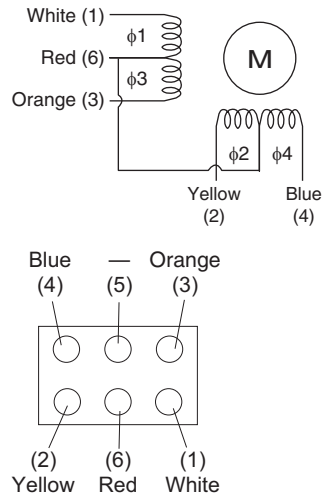

Measuring points	Judgment criteria
1-2	No continuity
1-3	300 Ω
1-6	150 Ω
2-4	300 Ω
2-6	150 Ω

FXAQ-AR

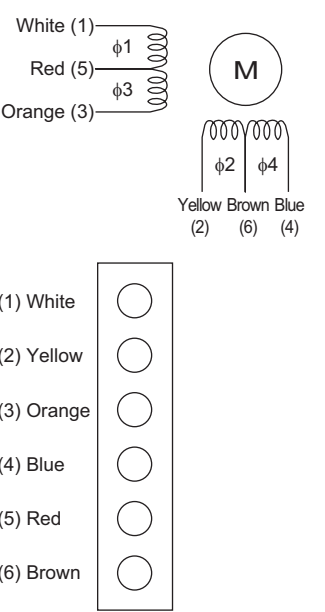

Measuring points	Judgment criteria
1-2	No continuity
1-3	300 Ω
1-5	150 Ω
2-4	300 Ω
2-6	150 Ω

Part 7


Appendix

1. Wiring Diagrams.....	291
1.1 Outdoor Unit.....	291
1.2 VRV Indoor Unit	293

1. Wiring Diagrams


1.1 Outdoor Unit

RXYMQ4AVMK

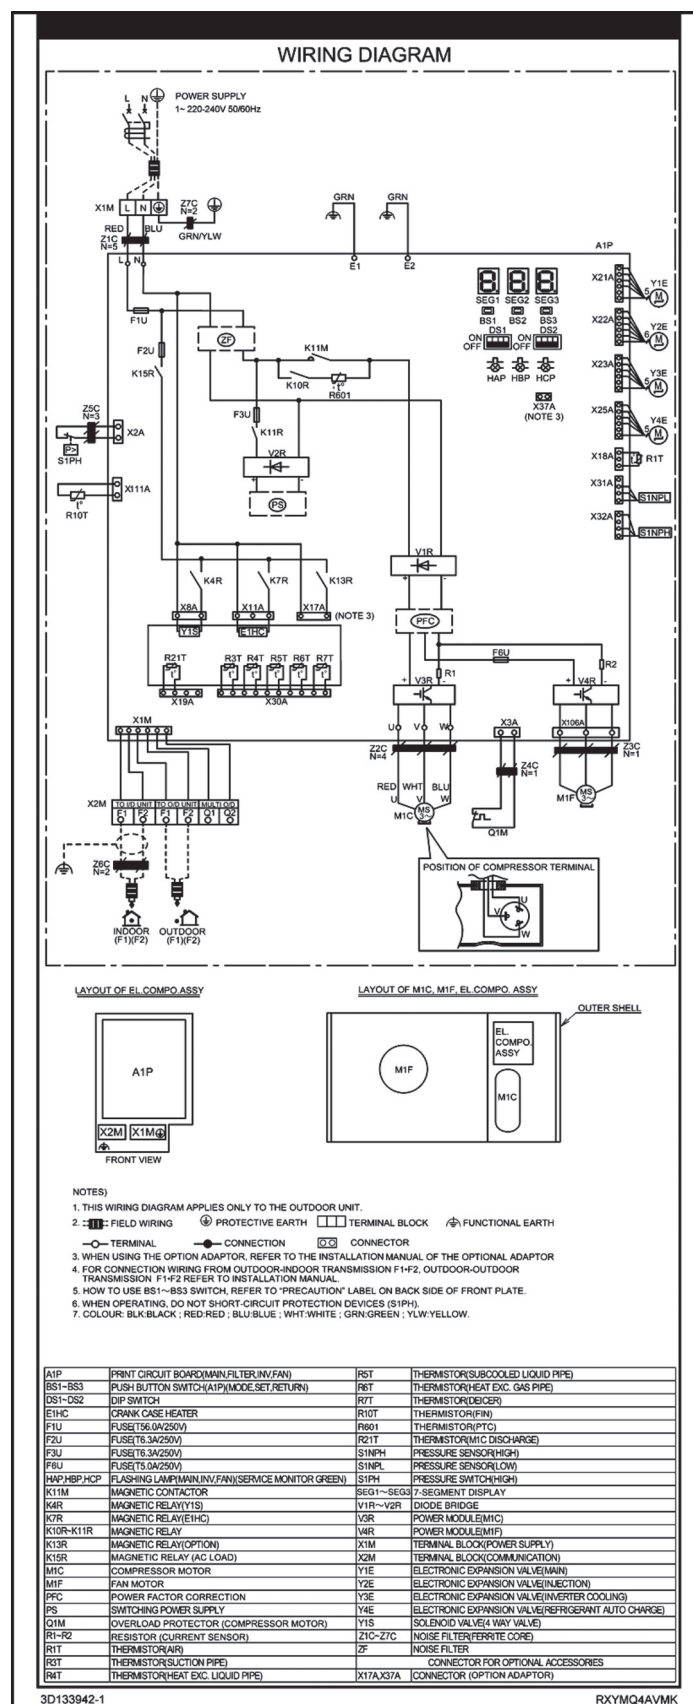

C: 3D133942

RXYMQ4/5/6AYFK

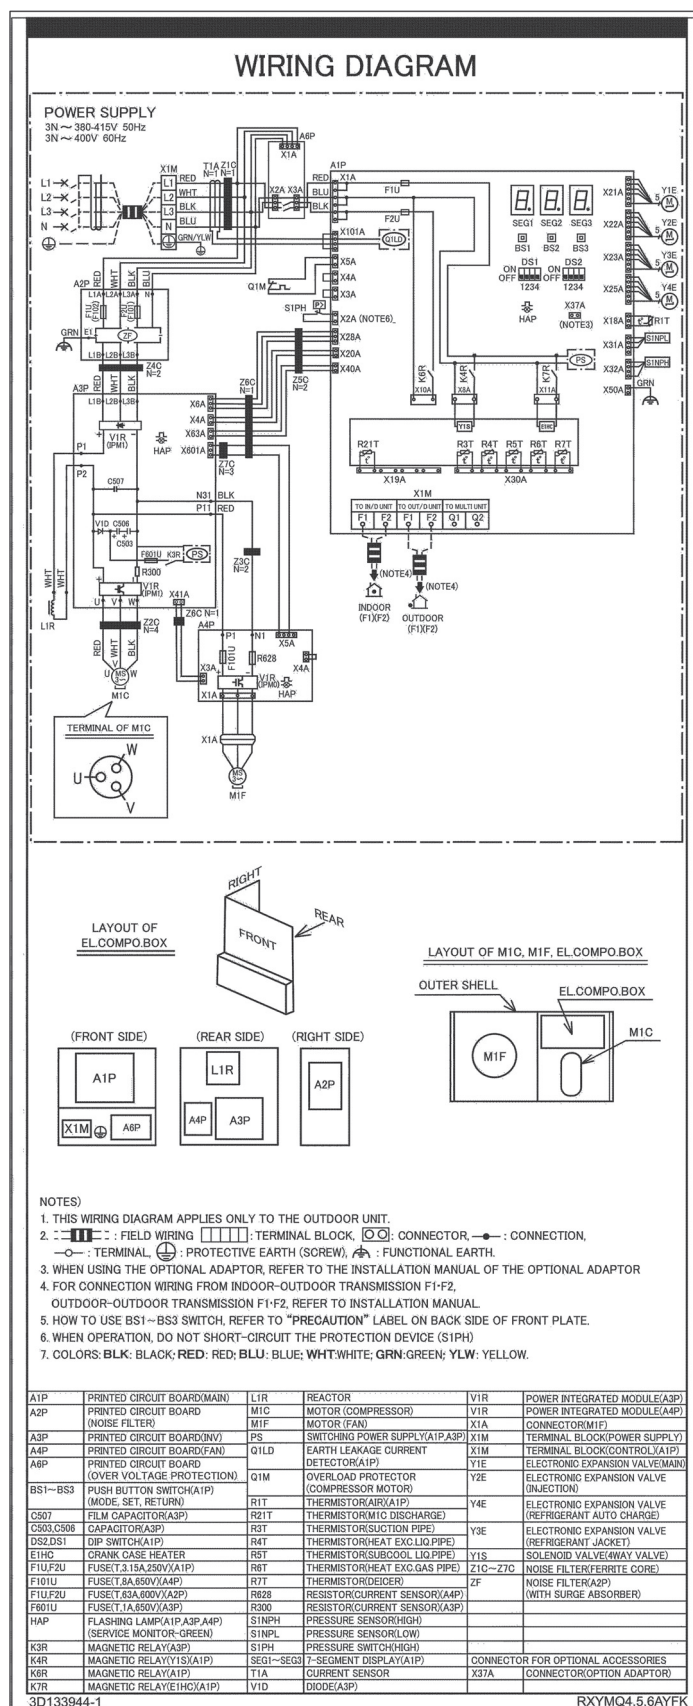


C: 3D133944A

1.2 VRV Indoor Unit

1.2.1 Round Flow Cassette with Sensing

FXFSQ25/32/40/50/63/80/100/125/140ARV1

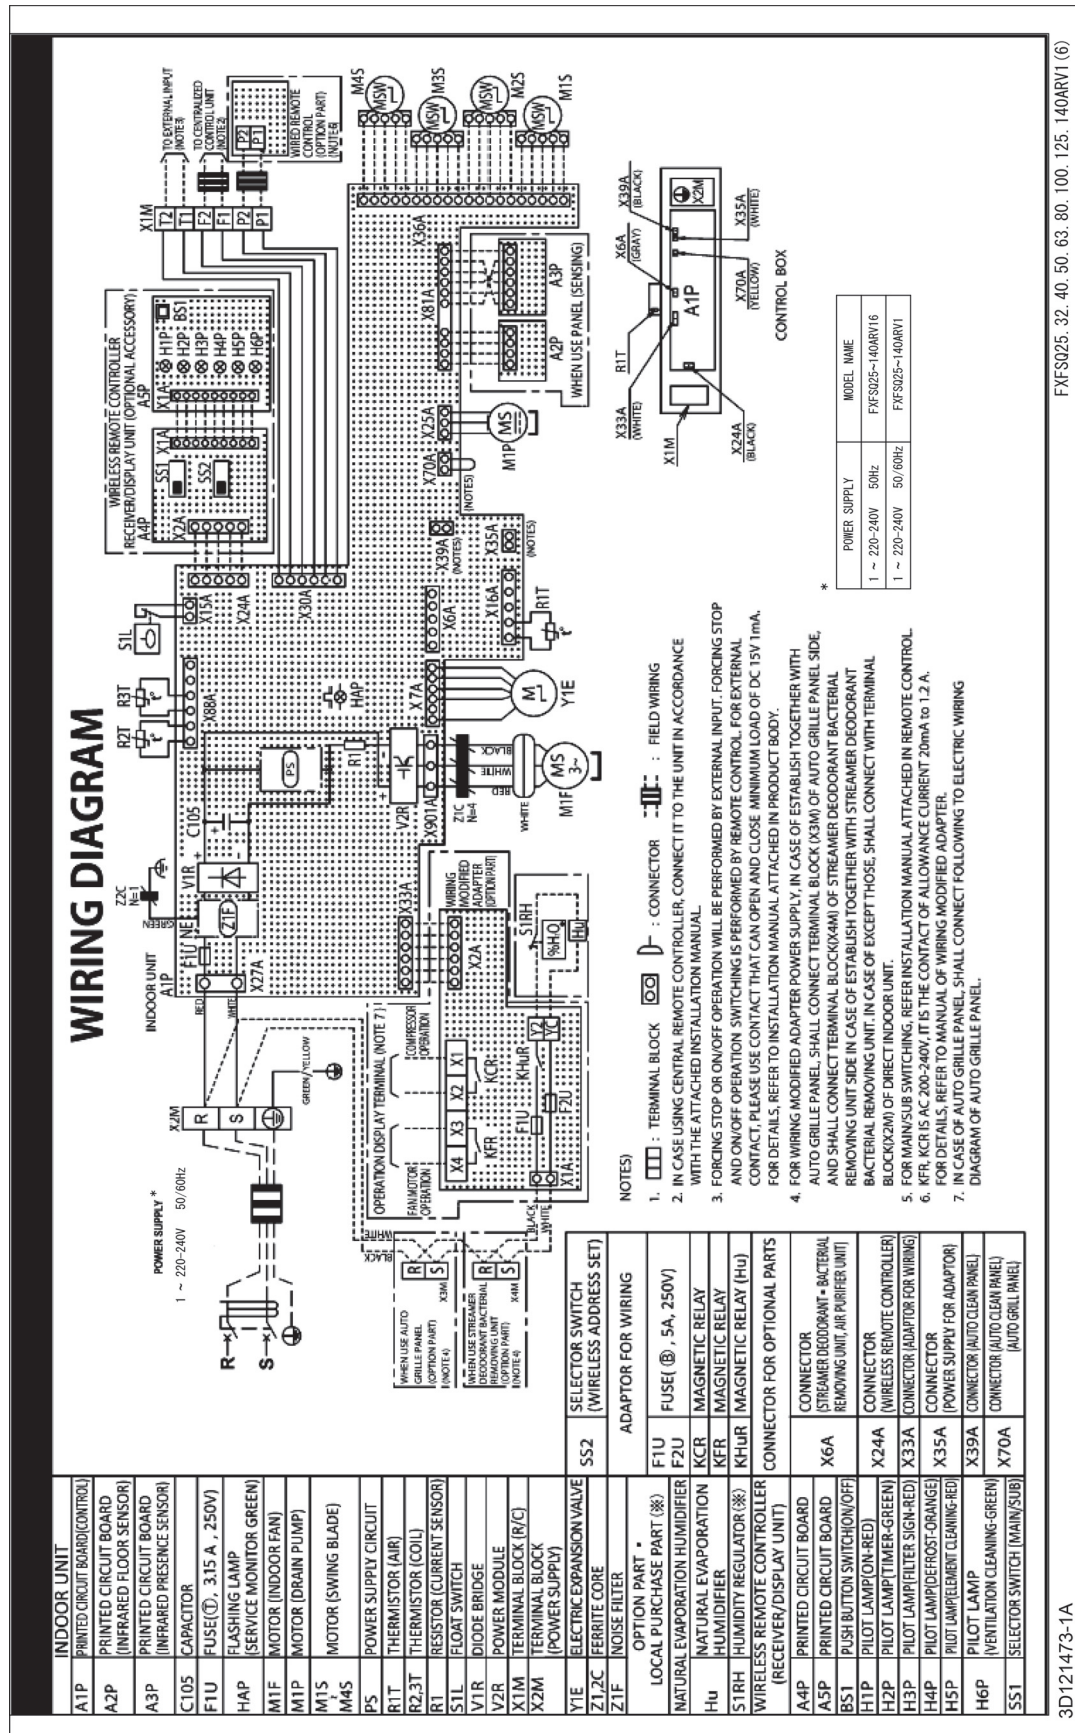


FXFSQ25/32/40/50/63/80/100/125/140ARV1 (6)

3D121473-1A

3D121473A

1.2.2 Auto Grille Panel

BYCQ125EBSF (Auto Grille Panel for FXFSQ-AR)

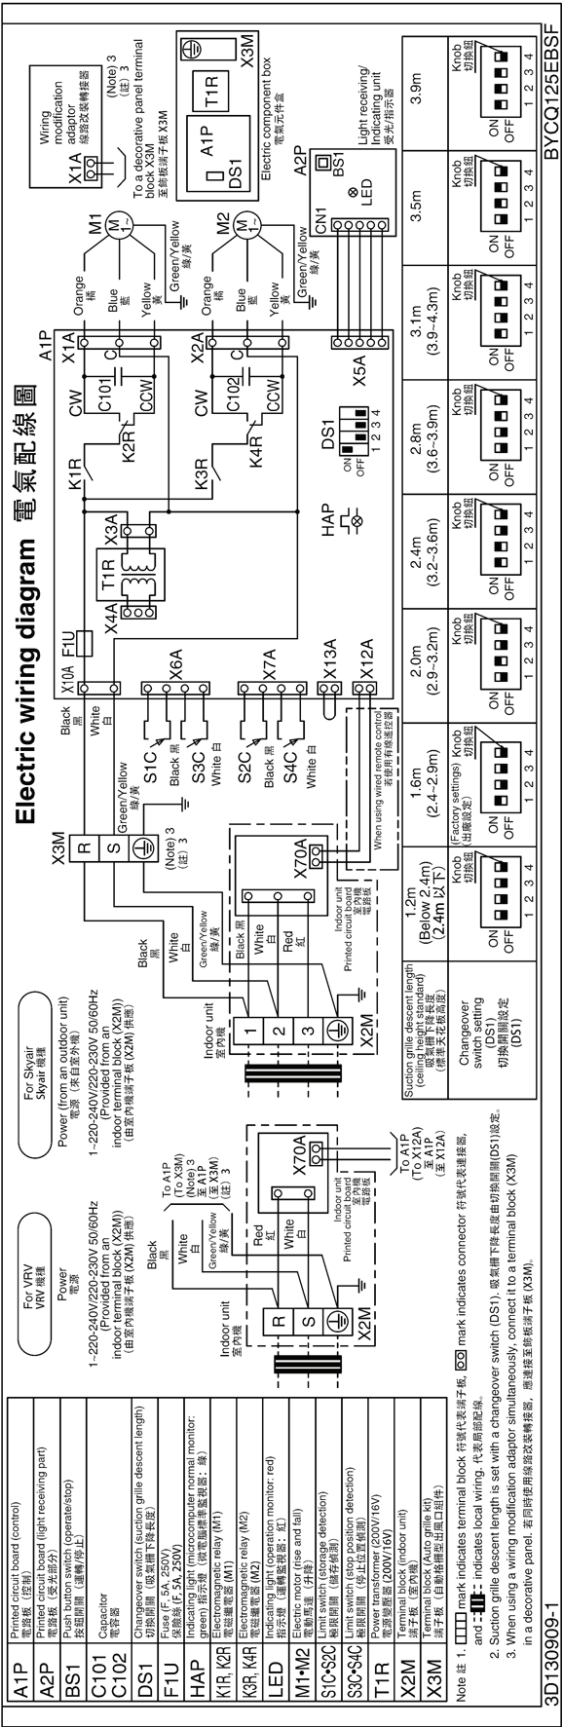


1.2.3 Slim Duct (Standard Type)

FXDQ20/25/32PDVM, FXDQ40/50/63NDVM

WIRING DIAGRAM

INDOOR UNIT	
A1P	PRINTED CIRCUIT BOARD
C1	CAPACITOR (FAN MOTOR)
C105	CAPACITOR
F1U	FUSE (T. 5A, 250V)
HAP	FLASHING LAMP (LED)
	(SERVICE MONITOR : GREEN)
KPR	MAGNETIC RELAY
M1F	MOTOR (FAN INDOOR)
M1P	MOTOR (DRAIN PUMP)
PS	SWITCHING POWER SUPPLY
R1T	THERMISTOR (SUCTION AIR)
R2T-R3T	THERMISTOR (HEAT EXCHANGER)
S1L	FLOAT SWITCH
V1R	DIODE BRIDGE
V1TR	PHASE CONTROL CIRCUIT
X1M	TERMINAL BLOCK (POWER SUPPLY)
X2M	TERMINAL BLOCK (CONTROL)
Y1E	ELECTRONIC EXPANSION VALVE
Z1F-Z2F	NOISE FILTER
Z1C-Z2C	NOISE FILTER (FERRITE CORE)
CONNECTOR FOR OPTIONAL PARTS	
X16A	CONNECTOR
	(ADAPTOR FOR WIRING)
X18A	CONNECTOR
	(WIRING ADAPTOR FOR ELECTRICAL APPENDICES)

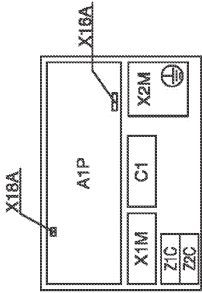

CONTROL BOX (INDOOR)

NOTE) 1. □ □ □ : TERMINAL BLOCK □ □ □ : CONNECTOR ■ ■ ■ : FIELD WIRING

2. COLORS RED : RED GRN : GREEN BLK : BLACK WHT : WHITE BLU : BLUE YLW : YELLOW

3. IN CASE USING CENTRAL REMOTE CONTROLLER, CONNECT IT TO THE UNIT IN ACCORDANCE WITH THE ATTACHED INSTALLATION MANUAL.

4. WHEN CONNECT THE INPUT WIRES FROM OUTSIDE, FORCED OFF OR ON/OFF CONTROL OPERATION CAN BE SELECTED BY REMOTE CONTROLLER. IN DETAIL, REFER TO THE INSTALLATION MANUAL ATTACHED THE UNIT.

5. IN CASE OFF MAINS SWITCHING, SEE THE INSTALLATION MANUAL ATTACHED TO REMOTE CONTROLLER.


6. X16A, X18A ARE CONNECTION WHEN THE OPTIONAL ACCESSORIES ARE BEING USE.

3D124914-1 A

FXDQ20.25.32PDVM, FXDQ40.50.63NDVM


3D124914B

1.2.4 Middle-high Static Pressure Duct

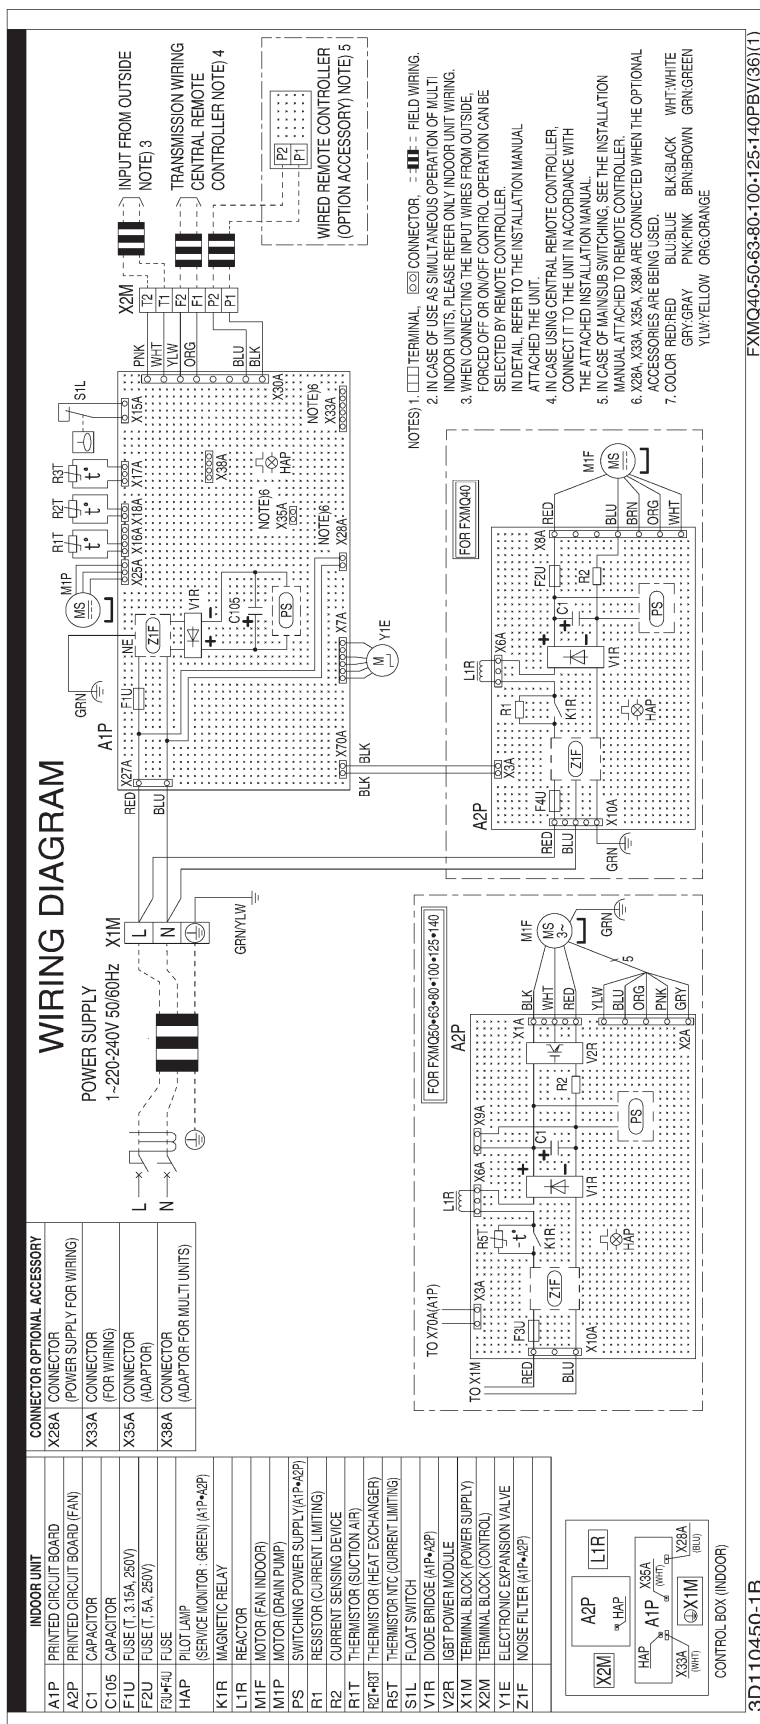FXMQ40/50/63/80/100/125/140PBV1

3D110450B


FXMQ40/50/63/80/100ARV1

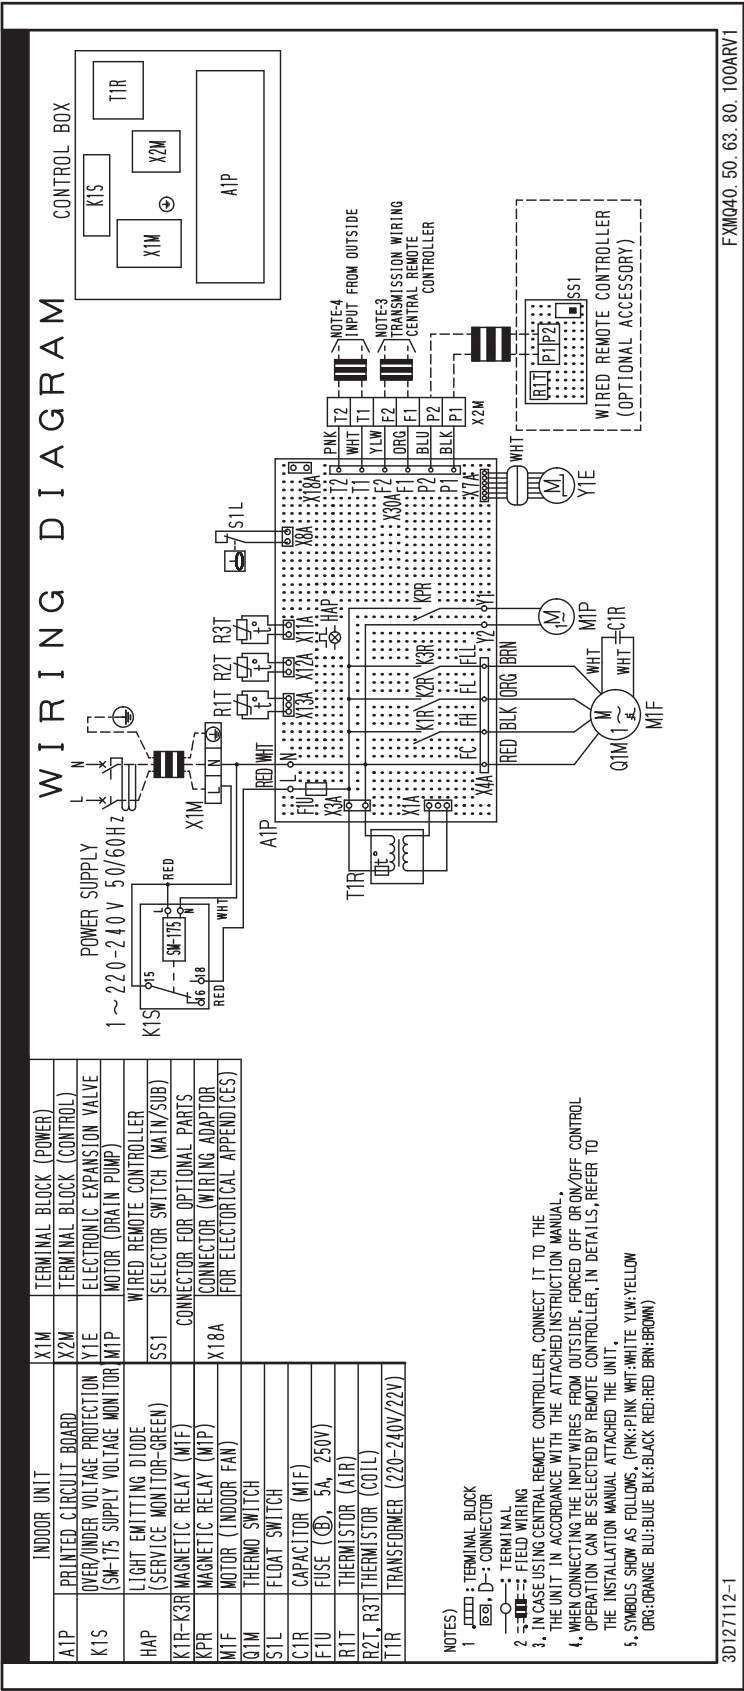

3D127112

1.2.5 Wall Mounted

FXAQ20/25/32/40/50/63ARVM

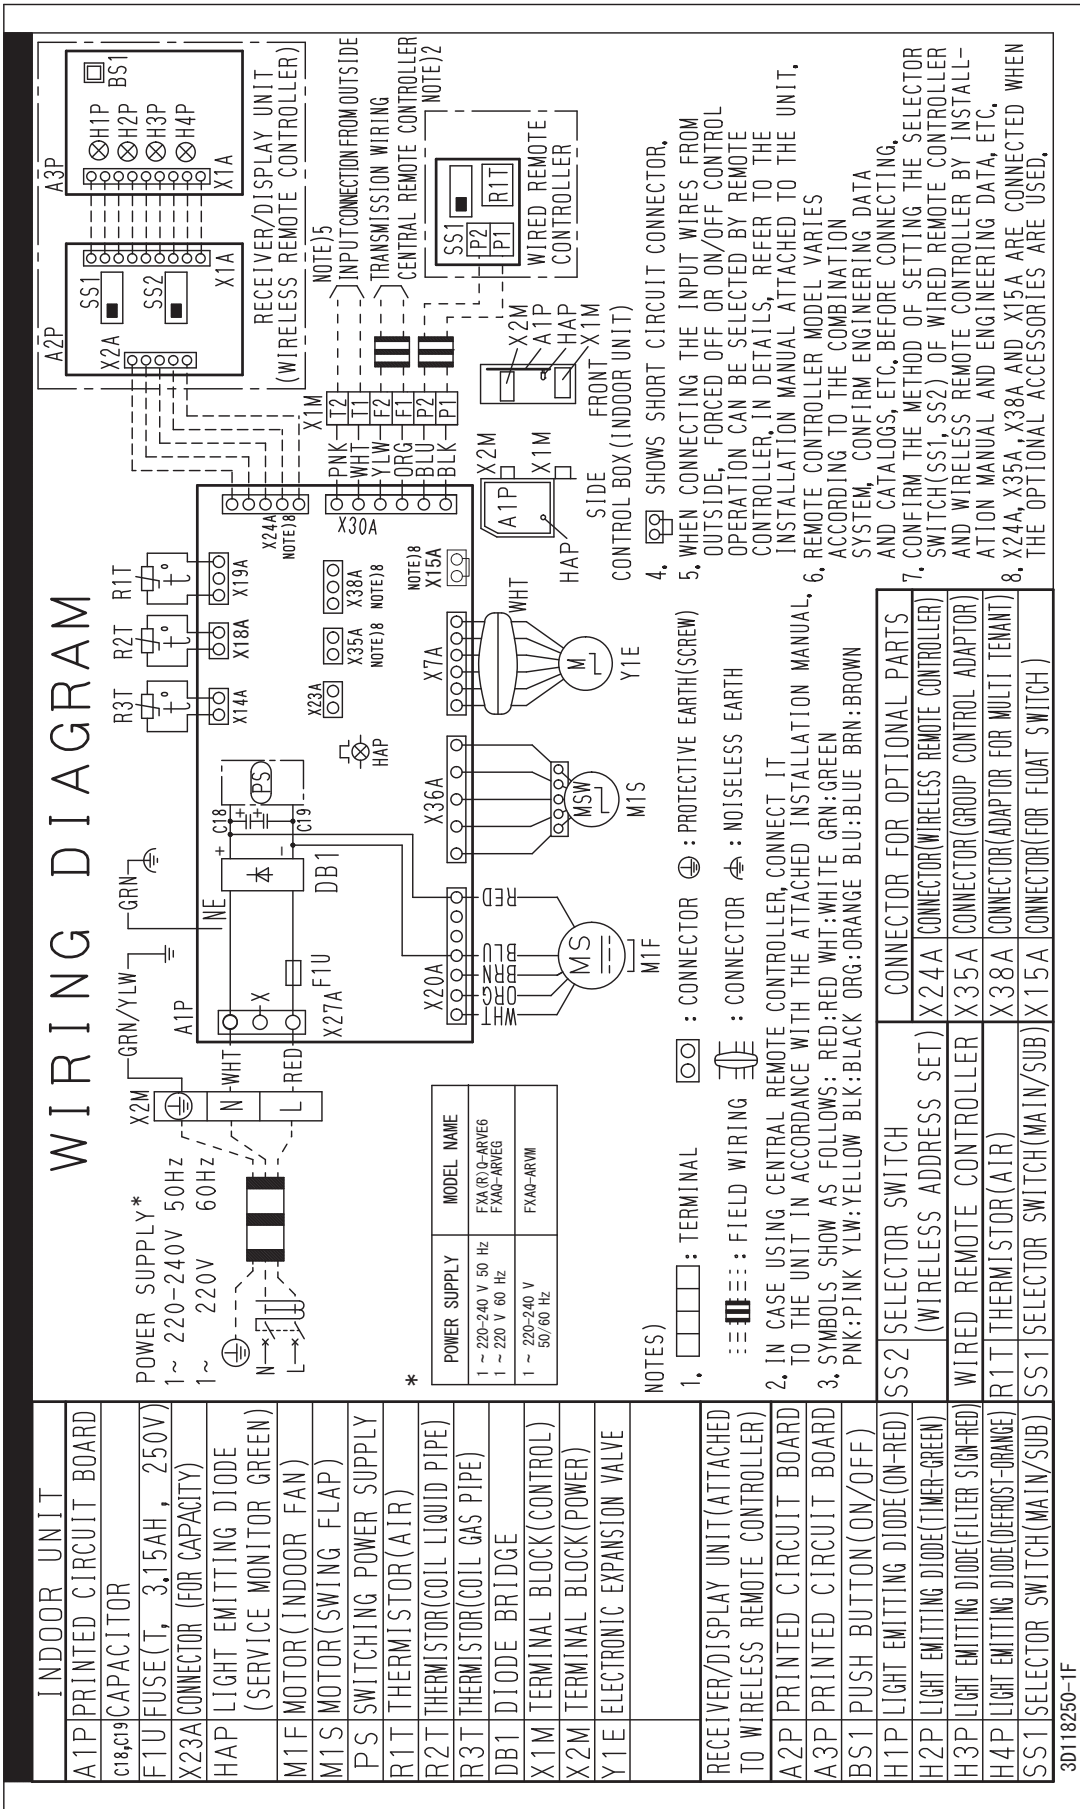

3D118250G

Warning

- Daikin products are manufactured for export to numerous countries throughout the world. Prior to purchase, please confirm with your local authorized importer, distributor and/or retailer whether this product conforms to the applicable standards, and is suitable for use, in the region where the product will be used. This statement does not purport to exclude, restrict or modify the application of any local legislation.
 - Ask a qualified installer or contractor to install this product. Do not try to install the product yourself. Improper installation can result in water or refrigerant leakage, electrical shock, fire or explosion.
 - Use only those parts and accessories supplied or specified by Daikin. Ask a qualified installer or contractor to install those parts and accessories. Use of unauthorized parts and accessories or improper installation of parts and accessories can result in water or refrigerant leakage, electrical shock, fire or explosion.
 - Read the user's manual carefully before using this product. The user's manual provides important safety instructions and warnings. Be sure to follow these instructions and warnings.
- If you have any inquiries, please contact your local importer, distributor and/or retailer.

Cautions on product corrosion

1. Air conditioners should not be installed in areas where corrosive gases, such as acid gas or alkaline gas, are produced.
2. If the outdoor unit is to be installed close to the sea shore, direct exposure to the sea breeze should be avoided. If you need to install the outdoor unit close to the sea shore, contact your local distributor.

DAIKIN INDUSTRIES, LTD.

Head Office:
Umeda Center Bldg., 2-4-12, Nakazaki-Nishi,
Kita-ku, Osaka, 530-8323 Japan

Tokyo Office:
JR Shinagawa East Bldg., 2-18-1, Konan,
Minato-ku, Tokyo, 108-0075 Japan

<https://www.daikin.com/products/ac/>

© All rights reserved